

For the complete PDF manual
please visit www.LaserPros.com.



Service Manual

Optra™ S

4059-XXX

- ***Table of Contents***
- ***Start Diagnostics***
- ***Safety and Notices***
- ***Trademarks***
- ***Index***

LEXMARK™

*Lexmark and Lexmark with diamond
design are trademarks of Lexmark
International, Inc., registered in the
United States and/or other countries.*

First Edition: November 2004

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC. PROVIDES THIS PUBLICATION “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time. Publications are not stocked at the address given below; requests for publications should be made to your point of purchase.

A form for reader's comments is provided at the back of this publication. If the form has been removed, comments may be addressed to Lexmark International, Inc., D22A/035-3, 740 New Circle Road NW, Lexington, Kentucky 40550, U.S.A. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Lexmark and Opra are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

**©Copyright Lexmark International, Inc. 1998, 2004
All rights reserved.**

UNITED STATES GOVERNMENT RESTRICTED RIGHTS

This software and documentation are provided with RESTRICTED RIGHTS. Use, duplication or disclosure by the Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 and in applicable FAR provisions: Lexmark International, Inc., Lexington, KY 40550.

Contents

Notices and Safety Information	1-ix
Laser Notices	1-ix
Safety Information	1-xvii
Preface	1-xxii
General Information	1-1
Options	1-4
Maintenance Approach	1-5
Tools Required For Service	1-5
Acronyms	1-6
Diagnostic Information	2-1
Start	2-1
Service Error Codes	2-2
User Status Messages	2-12
User Error Messages	2-16
Power-On Self Test (POST)	2-24
Symptom Tables	2-25
Service Checks	2-28
Charge Roll Service Check	2-29
Cover Open Switch/Cable Service Check	2-31
Dead Machine Service Check	2-32
Duplex Option Service Check	2-35
Envelope Feeder Option Service Check	2-39
Erase Lamp Service Check	2-46
Fan Service Check	2-47
Fuser Service Check	2-48
Fuser Envelope Conditioner Solenoid Service Check	2-51
Input Sensor Service Check	2-57
Input Tray(s) Option Service Check	2-58
High Capacity Feeder Input Tray Service Check	2-61
Main Drive Service Check	2-73
Operator Panel Service Check	2-74
Options Service Check	2-76
Output Bin Sensor Standard Tray Service Check	2-78
Output Expander Service Check	2-79
Paper Feed Service Check	2-86
Parallel Port Service Check	2-89
Printhead Service Check	2-89
Print Quality Service Check	2-91

Smart Cartridge Service Check	2-102
Serial Port Service Check	2-104
Toner Sensor Service Check	2-104
Transfer Roll Service Check	2-105
Diagnostic Aids	3-1
Diagnostic Mode	3-1
Device Tests	3-2
Quick Disk Test	3-2
Disk Test/Clean	3-2
Flash Test	3-3
Disabling Download Emulations	3-3
Duplex Tests	3-4
Duplex Quick Test	3-4
Duplex Sensor Test	3-5
Duplex Motor Test	3-5
Duplex Feed 1 Test	3-7
Duplex Feed 2 Test	3-7
Error Log	3-8
Viewing the Error Log	3-8
Clearing the Error Log	3-8
Hardware Tests	3-9
LCD Test	3-9
Button Test	3-9
DRAM Memory Test	3-10
ROM Memory Test	3-10
Parallel Wrap Test	3-11
Serial Wrap Test	3-12
Input Tray Tests	3-14
Input Tray Feed Test	3-14
Input Tray Sensor Test	3-14
Output Bin Test - Standard Bin	3-15
Output Bin Feed Test	3-15
Output Bin Sensor Test	3-16
Output Bin X Sensor Test	3-16
Base Sensor Test	3-17
Print Registration	3-18
Printer Setup	3-19
Setting the Page Count	3-19
Viewing the Permanent Page Count	3-19
Maintenance Page Count (2420/2450/2455/3455)	3-20
Setting Configuration ID	3-20
Restore EP Factory Defaults	3-21

Print Tests	3-22
Print Quality Test Pages	3-23
Printing Menu Settings Page	3-24
Autocompensator Operation	3-25
Autoconnect System, Paper Tray Options, Envelope Feeder and Output Expander Operations	3-26
Fuser Operation	3-27
Paper Feed Jams	3-29
Repair Information	4-1
Handling ESD-Sensitive Parts	4-1
Adjustment Procedures	4-2
Duplex Motor Drive Belts	4-2
Fuser Solenoid Adjustment	4-3
Gap Adjustment	4-3
Printhead Assembly Adjustment	4-4
Paper Alignment Assembly Adjustment	4-5
Screw Identification Table	4-7
Removal Procedures	4-12
Covers	4-12
Center Pan Assembly	4-18
Controller Board	4-19
Developer Drive Assembly	4-20
Duplex Board	4-21
Duplex Front Cover Assembly	4-21
Duplex Front Cover Door	4-21
Duplex Front Cover Door Switch	4-21
Duplex Motor	4-22
Engine Board	4-23
EP Frame Assembly	4-23
Fans	4-24
Fuser	4-26
Fuser Board	4-27
Fuser Cover	4-28
Fuser Detack Fingers	4-29
Fuser Detack Housing Assembly	4-29
Fuser Transfer Plate	4-30
Fuser Envelope Conditioner Solenoid	4-31
Fuser Exit Flag Assembly	4-31
Fuser Exit Roll Assembly	4-32
Fuser Lamp	4-33
Fuser Lower Exit Guide Assembly	4-33
High Voltage Power Supply	4-34

Inner EMC Shield	4-35
Inner Paper Deflector Assembly	4-36
Integrated Tray Compensator Assembly	4-37
Integrated Tray Compensator Pick Roll Assembly	4-38
Interconnect Board Assembly	4-39
Left Side Frame	4-41
Low Voltage Power Supply	4-43
Main Drive Assembly	4-44
Main Drive Motor	4-45
Multipurpose Tray/Lower Deflector Assembly	4-46
Operator Panel	4-48
Operator Panel Cable/Cover Open Switch Assembly	4-49
Optional 250/500 Paper Tray Assembly	4-50
Outer EMC Shield	4-51
Paper Alignment Assembly	4-52
Paper Input Sensor	4-53
Paper Size Sensing Board	4-54
Pick Roll	4-54
Printhead	4-55
Redrive Assembly	4-56
Right Side Frame	4-57
Smart Cartridge Contacts	4-58
Toner Sensor	4-59
Transfer Roll Assembly	4-60
Upper Paper Deflector Assembly	4-60
Upper Front Cover Hinge Assembly	4-61
Upper Front Cover Interlock Switch Assembly	4-62
Connector Locations	5-1
Low Voltage Power Supply	5-1
High Voltage Power Supply	5-3
Engine Board	5-4
Fuser Board	5-11
Interconnect Board	5-14
Envelope Option Board	5-17
Duplex Option Board	5-19
Autoconnect - Top	5-21
Output Expander Control Board - Level 1 Stepper Motor	5-22
Output Expander Control Board - Level 2 DC Motor	5-24
Preventive Maintenance	6-1
Safety Inspection Guide	6-1
Lubrication Specifications	6-1
Scheduled Maintenance (2420/2450/2455/3455)	6-2

Parts Catalog	7-1
How To Use This Parts Catalog	7-1
Assembly 1: Covers	7-2
Assembly 2: Frame	7-6
Assembly 3: Printhead	7-10
Assembly 4: Paper Feed (Autocompensator).....	7-12
Assembly 5: Paper Feed - Multipurpose Unit.....	7-14
Assembly 6: Paper Feed - Alignment	7-16
Assembly 7: Paper Feed - Output	7-18
Assembly 8: Integrated Paper Tray - 250 Sheet	7-20
Assembly 9: Main Drive	7-22
Assembly 10: Developer Drive	7-24
Assembly 11: Fuser	7-26
Assembly 12: Transfer	7-32
Assembly 13: Charging	7-34
Assembly 14: Electronics	7-36
Assembly 15: 250 Sheet Tray	7-48
Assembly 16: 500 Sheet Tray	7-52
Assembly 17: 500/500 Dual Tray	7-56
Assembly 18: Duplex	7-60
Assembly 19: Output Expander	7-66
Assembly 20: Envelope Feeder	7-70
Assembly 21: High Capacity Feeder	7-74
Assembly 22: Kiosk - Vertical Paper Adapter.....	7-84
Assembly 23: Kiosk - Horizontal Paper Adapter.....	7-86
Assembly 24: Options	7-88
Assembly 25: Miscellaneous	7-90
 Index	 I-1

For the complete PDF manual
please visit www.LaserPros.com.