



# *ND Series Service Manual*



## Contents

Introduction.....	i	ND50 .....	53
Changes and Additions .....	ii	ND53 .....	54
Lock Assembly Drawing Index.....	1	ND60 .....	55
ND10 .....	8	ND60 with closed outside lever.....	56
ND12 and ND80.....	9	ND66 .....	57
ND12 and ND80 RX.....	10	ND70 .....	58
ND12EL and ND80EL.....	11	ND70X80 .....	59
ND12EL and ND80EL RX.....	12	ND72 .....	60
ND12EU and ND80EU.....	13	ND72 Vandlgard® .....	61
ND12EU and ND80EU RX.....	14	ND73 .....	62
ND170 .....	15	ND75 .....	63
ND25 .....	16	ND80 .....	64
ND25X70.....	17	ND80 RX .....	65
ND25X80.....	18	ND80EL.....	66
ND30, ND40 and ND44.....	19	ND80EL RX.....	67
ND50 and ND53.....	20	ND80EU .....	68
ND60 .....	21	ND80EU RX .....	69
ND66 .....	22	ND82 .....	70
ND70 .....	23	ND85 .....	71
ND70X80.....	24	ND91 .....	72
ND72 .....	25	ND92 .....	73
ND72 Vandlgard®.....	26	ND93 .....	74
ND73 .....	27	ND94 .....	75
ND75 .....	28	ND95 .....	76
ND82 .....	29	ND96 .....	77
ND85 .....	30	ND96EL.....	78
ND91 and ND92.....	31	ND96EU .....	79
ND93 .....	32	ND97 .....	80
ND94 .....	33	Full Size IC and SFIC Configurations .....	81
ND95 .....	34	Lever Designs .....	82
ND96 .....	35	Tactile Warning .....	82
ND96EL.....	36	Competitor Cylinder Options .....	83
ND96EU .....	37	Spring Cage and Tailpiece for	
ND97 .....	38	Competitor Cylinder Options .....	83
ND10 .....	39	Roses.....	84
ND12 .....	40	Cylinders .....	84
ND12 RX .....	41	Latches .....	85
ND12EL.....	42	Installation Tools and Kits .....	85
ND12EL RX.....	43	Strikes.....	87
ND12EU .....	44	Screws, Screw Packs and Special Parts .....	87
ND12EU RX .....	45	ND-Series Standard Installation Instructions ....	88
ND170 .....	46	ND25 Exit Lock Installation Instructions .....	92
ND25 .....	47	ND170 Dummy Lock Installation Instructions ...	94
ND25X70.....	48	Finishes.....	99
ND25X80.....	49	Ordering Procedures.....	99
ND30 .....	50	Limited Warranty.....	100
ND40 .....	51		
ND44 .....	52		



Introduction

This manual contains a complete listing of ND-Series (Grade 1) cylindrical lock parts and assemblies manufactured by the Schlage Lock Company. This edition lists components of ND-Series locks manufactured after November, 2003. This manual provides exploded views of each lock chassis and trim assembly with an accompanying chart to identify parts for replacement purposes, along with lock trim ordering procedures, general cylinder information, and all auxiliary components of the ND-Series cylindrical locks.

Standard Features\*


Certifications	ANSI A156.2, 2003, Series 4000, Grade 1, UL Listed for 3-hour fire door
Latch	1 1/8" x 2 1/4", Square corner faceplate, 1" housing diameter, 1/2" throw
Strike	1 1/4" x 4 7/8", ANSI, Square corner, no box
Backset	2 3/4"
Cylinder	6-Pin solid brass, keyed 6-pin, C123 keyway, keyed different (KD)**
Door Range	Standard Lock Functions: 1 5/8" – 2 1/8" Vandlgard® Lock Functions: 1 5/8" – 2 1/8" ND85: 1 3/4" – 2"
Keys	Two nickel silver cut keys per lock, 6-pin, C123 section**

\* Locks are furnished with standard features unless otherwise specified.

\*\* Items specified in C keyway will be furnished with cylinder keyed 5-pin and with 5-pin keys unless otherwise specified.

Lock Assembly Drawing Index

The Lock Assembly Drawing Index provides illustrations and textual descriptions of available functions. Page numbers for full trim and chassis drawings are referenced.

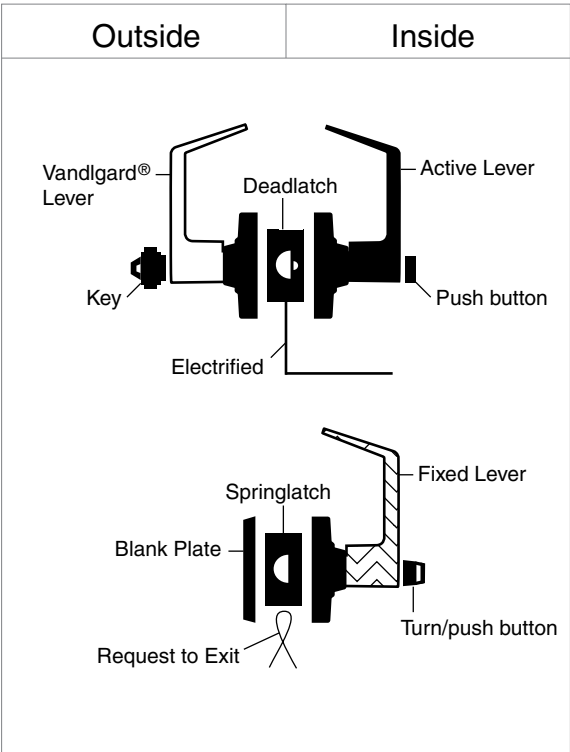



## Changes and Additions


 
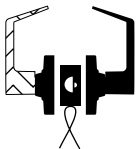

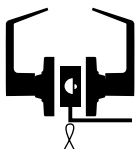

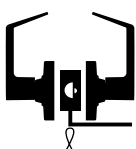
### Additions

Lock Function	Additional Available Feature	Notes
All functions	Hassle free inside anti-rotation plate installation Improved door thickness adjustment Lever catch wear remedy	Installation of the inside anti-rotation plate is aided by an insert on the inside hub allowing for hands-free installation. Door thickness adjustment is more straightforward with the redesign of the outside housing and the addition of a gauge insert. A spacer is added on inside and outside spring cage assemblies to provide a more firm lever fit, thereby reducing wear on the lever catch.




 





### Changes

Lock Function	Amended Text	Notes
All functions	ND-Series levers mechanical warranty is changed from seven (7) to ten (10) years.	A 10-year limited mechanical warranty is provided for ND-Series locks manufactured after October 1, 2012. Refer to "Limited Warranty" on page 100 for complete details.


 


 

 


# Lock Assembly Drawing Index

Function		ANSI A156.2, 1996, Series 4000, Grade 1			Trim	Chassis
SCHLAGE	ANSI	DESCRIPTION	OUTSIDE FUNCTION	INSIDE FUNCTION	Page	Page
ND10	F75	Passage Latch	Lever is always unlocked.	 Lever is always unlocked and is always free for immediate egress.	39	8
ND12	F89	Exit Lock	Lever is fixed.	 Lever is always unlocked and is always free for immediate egress.	40	9
ND12-RX		Exit Lock with Request to Exit	Same as ND12.	 Same as ND12. A microswitch attached to the chassis is activated when the lever is rotated. The switch signals use of the lever to security systems allowing non-disruptive egress.	41	10
ND12EL		Exit Lock—Electrically Locked (Fail Safe)	Lever is continuously locked by electric current until unlocked by switch or power failure.	 Lever is always unlocked and is always free for immediate egress.	42	11
ND12EL-RX		Exit Lock—Electrically Locked (Fail Safe) with Request to Exit	Same as ND12EL.	 Same as ND12EL. A microswitch attached to the chassis is activated when the lever is rotated. The switch signals use of the lever to security systems allowing non-disruptive egress.	43	12
ND12EU		Exit Lock—Electrically Unlocked (Fail Secure)	Lever is continuously locked mechanically until unlocked by electric current.	 Lever is always unlocked and is always free for immediate egress.	44	13
ND12EU-RX		Exit Lock—Electrically Unlocked (Fail Secure) with Request to Exit	Same as ND12EU.	 Same as ND12EU. A microswitch attached to the chassis is activated when the lever is rotated. The switch signals use of the lever to security systems allowing non-disruptive egress.	45	14

 
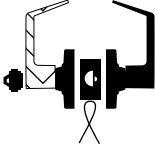

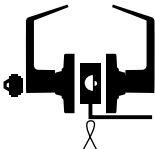

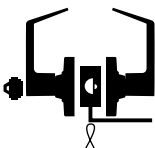
 
Note: Any function with a deadlatch locks the latchbolt when door is closed. See page i for identification.

Function		ANSI A156.2, 1996, Series 4000, Grade 1			Trim	Chassis
SCHLAGE	ANSI	DESCRIPTION	OUTSIDE FUNCTION	INSIDE FUNCTION	Page	Page
ND170		<b>Single Dummy Trim</b>	Inactive trim for one side of door. Use for door pull or as matching inactive trim. 		46	15
ND25		<b>Exit Lock with Blank Plate</b>	Blank plate. 	Inside lever is always unlocked and is always free for immediate egress.	47	16
ND25 x 70		<b>Classroom Exit Lock† Per XN12-004</b>	Blank plate. 	Key locks or unlocks lever.	48	17
ND25 x 80		<b>Storeroom Exit Lock† Per XN12-005</b>	Blank plate. 	Key retracts latch. Lever is fixed.	49	18
ND30		<b>Patio Lock Per XN12-007</b>		Push-button locks outside lever. Turning inside lever or closing door releases button.	50	19
ND40	F76	<b>Bath/Bedroom Privacy Lock</b>	Can be opened from outside with small screwdriver or emergency release tool. 	Push-button locks outside lever. Turning inside lever or closing door releases button. Inside lever is always free for immediate egress.	51	19
ND44		<b>Hospital Privacy Lock</b>	Unlocked from outside by turning emergency turn-button. 	Push-button locks outside lever. Turning inside lever or closing door releases button. Inside lever is always free for immediate egress.	52	19
ND50	F82	<b>Entrance/Office Lock*</b>	Lever is unlocked with key when push-button is pushed. 	Push-button locks outside lever. Turning inside lever releases button. Inside lever is always free for immediate egress.	53	20
ND53	F109	<b>Entrance Lock*</b>	Key retracts latch when button pushed and turned. Lever is unlocked with key when push-button is pushed. 	Turn/push-button: Pushing and turning button locks outside lever until manually unlocked. Push-button: pushing button locks outside lever until unlocked by turning inside lever. Inside always free for immediate egress.	54	20








Note: Any function with a deadlatch locks the latchbolt when door is closed. See page i for identification.

Function		ANSI A156.2, 1996, Series 4000, Grade 1				Trim	Chassis
SCHLAGE	ANSI	DESCRIPTION	OUTSIDE FUNCTION		INSIDE FUNCTION	Page	Page
ND60	F88	Vestibule Lock*	Latch retracted by key when locked by inside key.		Inside lever is always unlocked and is always free for immediate egress. Key locks and unlocks outside lever.	55	21
ND60		Vestibule Lock With Closed Lever Outside Per XN12-001	Same as ND60 except outside lever is closed.		Same as ND60. Inside lever is always free for immediate egress.	56	21
ND66	F91	Store Lock*†	Key locks or unlocks both levers simultaneously.		Key locks or unlocks both levers simultaneously.	57	22
ND70	F84	Classroom Lock*	Outside lever locked or unlocked by key.		Inside lever is always unlocked and always free for immediate egress.	58	23
ND70 x 80		Classroom by Storeroom Lock† Per XN12-006	Outside lever locked or unlocked by key.		Key in fixed inside lever retracts latch.	59	24
ND72		Communicating Lock*† Per XN12-002	Outside lever only locked or unlocked by key.		Inside lever only locked or unlocked by key.	60	25
ND72		Communicating Lock with Vandlgard®*† Per XN12-003	Same as ND72. Vandlgard allows outside spindle to disengage from latch when locked.		Same as ND72. Vandlgard allows inside spindle to disengage from latch when locked.	61	26
ND73	F90	Corridor Lock*	Locked or unlocked by outside key. When locked by key it can only be unlocked by key.		Push-button locks outside lever. Turning lever or closing door releases button. Inside lever is always unlocked and is always free for immediate egress.	62	27
ND75		Classroom Security Lock*	Outside lever locked or unlocked by key in either lever.		Key locks or unlocks outside lever. Inside lever is always unlocked and is always free for immediate egress.	63	28




Note: Any function with a deadlatch locks the latchbolt when door is closed. See page i for identification.

Function		ANSI A156.2, 1996, Series 4000, Grade 1			Trim	Chassis
SCHLAGE	ANSI	DESCRIPTION	OUTSIDE FUNCTION	INSIDE FUNCTION	Page	Page
ND80	F86	Storeroom Lock*	Lever is fixed. Entrance by key only.	 Inside lever is always unlocked and is always free for immediate egress.	64	9
ND80-RX		Storeroom Lock* with Request to Exit	Same as ND80.	 Same as ND80. A microswitch attached to the chassis is activated when the lever is rotated. The switch signals use of the lever to security systems allowing non-disruptive egress.	65	10
ND80EL		Storeroom Lock—Electrically Locked (Fail Safe)*	Lever is continuously locked electrically. Unlocked by switch or power failure. When locked, key retracts latch.	 Inside lever is always unlocked and is always free for immediate egress.	66	11
ND80EL-RX		Storeroom Lock—Electrically Unlocked (Fail Safe)* with Request to Exit	Same as ND80EL-RX.	 Same as ND80EL. A microswitch attached to the chassis is activated when the lever is rotated. The switch signals use of the lever to security systems allowing non-disruptive egress.	67	12
ND80EU		Storeroom Lock—Electrically Locked (Fail Secure)*	Lever is continuously locked mechanically until unlocked by electric current. When locked, key retracts latch.	 Inside lever is always unlocked and is always free for immediate egress.	68	13
ND80EU-RX		Storeroom Lock—Electrically Locked (Fail Secure) with Request to Exit*	Same as ND80EU-RX.	 Same as ND80EU. A microswitch attached to the chassis is activated when the lever is rotated. The switch signals use of the lever to security systems allowing non-disruptive egress.	69	14
ND82	F87	Institution Lock*†	Lever is fixed. Entrance by key only.	 Lever is fixed. Exit by key only.	70	29

       Note: Any function with a deadlatch locks the latchbolt when door is closed. See page i for identification.

Function		ANSI A156.2, 1996, Series 4000, Grade 1			Trim	Chassis
SCHLAGE	ANSI	DESCRIPTION	OUTSIDE FUNCTION	INSIDE FUNCTION	Page	Page
ND85		<b>Faculty Restroom Lock</b>	Lever is fixed. Entrance by key only.	 Push-button activates occupancy indicator, allowing only emergency master key to operate. Turning lever or closing door releases indicator. Spanner-button rotation provides lock-out feature. Inside lever is always free for immediate egress.	71	30
ND91	F82	<b>Entrance/Office Lock with Vandlgard®*</b>	Lever is unlocked with key when push-button is pushed. Vandlgard allows outside spindle to disengage from latch when locked.	 Push-button locks outside lever. Turning inside lever releases button. Inside lever is always free for immediate egress.	72	31
ND92	F109	<b>Entrance Lock with Vandlgard®*</b>	Key retracts latch when button pushed and turned. Lever is unlocked with key when push-button is pushed. Vandlgard allows outside spindle to disengage from latch when locked.	 Turn/push-button: Pushing and turning button locks outside lever until manually unlocked. Push-button: pushing button locks outside lever until unlocked by turning inside lever. Inside always free for immediate egress.	73	31
ND93	F88	<b>Vestibule Lock with Vandlgard®*</b>	Latch retracted by key when locked by inside key. Key locks and unlocks lever. Vandlgard allows outside spindle to disengage from latch when locked.	 Inside lever is always unlocked and is always free for immediate egress.	74	32
ND94	F84	<b>Classroom Lock with Vandlgard®*</b>	Outside lever locked or unlocked by key. Vandlgard allows outside spindle to disengage from latch when locked.	 Inside lever is always unlocked and is always free for immediate egress.	75	33
ND95		<b>Classroom Security Lock with Vandlgard®*</b>	Outside lever locked or unlocked by key in either lever. Vandlgard allows outside spindle to disengage from latch when locked.	 Key locks or unlocks outside lever. Inside lever is always unlocked and is always free for immediate egress.	76	34
ND96	F86	<b>Storeroom Lock with Vandlgard®*</b>	Lever always disengaged. Entrance by key only. Vandlgard allows outside spindle to disengage from latch when locked.	 Inside lever is always unlocked and is always free for immediate egress.	77	35

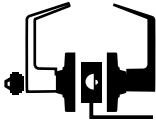  Note: Any function with a deadlatch locks the latchbolt when door is closed. See page i for identification.

Function		ANSI A156.2, 1996, Series 4000, Grade 1			Trim	Chassis
SCHLAGE	ANSI	DESCRIPTION	OUTSIDE FUNCTION	INSIDE FUNCTION	Page	Page
ND96EL		<b>Storeroom Lock with Vandlgard®—Electrically Locked (Fail Safe)*</b>	Lever is continuously locked electrically. Unlocked by key or power failure or switch. Auxiliary latch deadlocks latchbolt when door is closed. Vandlgard allows outside spindle to disengage from latch when locked.	 Inside is always unlocked and free for immediate egress.	78	36
ND96EU		<b>Storeroom Lock with Vandlgard®—Electrically Unlocked (Fail Secure)*</b>	Lever is continuously locked until unlocked by key or electric current. Auxiliary latch deadlocks latchbolt when door is closed. Vandlgard allows outside spindle to disengage from latch when locked.	 Inside is always unlocked and free for immediate egress.	79	37
ND97		<b>Corridor Lock with Vandlgard®*</b>	Locked or unlocked by key. When locked by key, outside lever can only be unlocked by key. Vandlgard allows outside spindle to disengage from latch when locked.	 Push-button locking. Turning lever or closing door releases button. Inside is always unlocked and free for immediate egress.	80	38


Note: Any function with a deadlatch locks the latchbolt when door is closed. See page i for identification.





## ND10
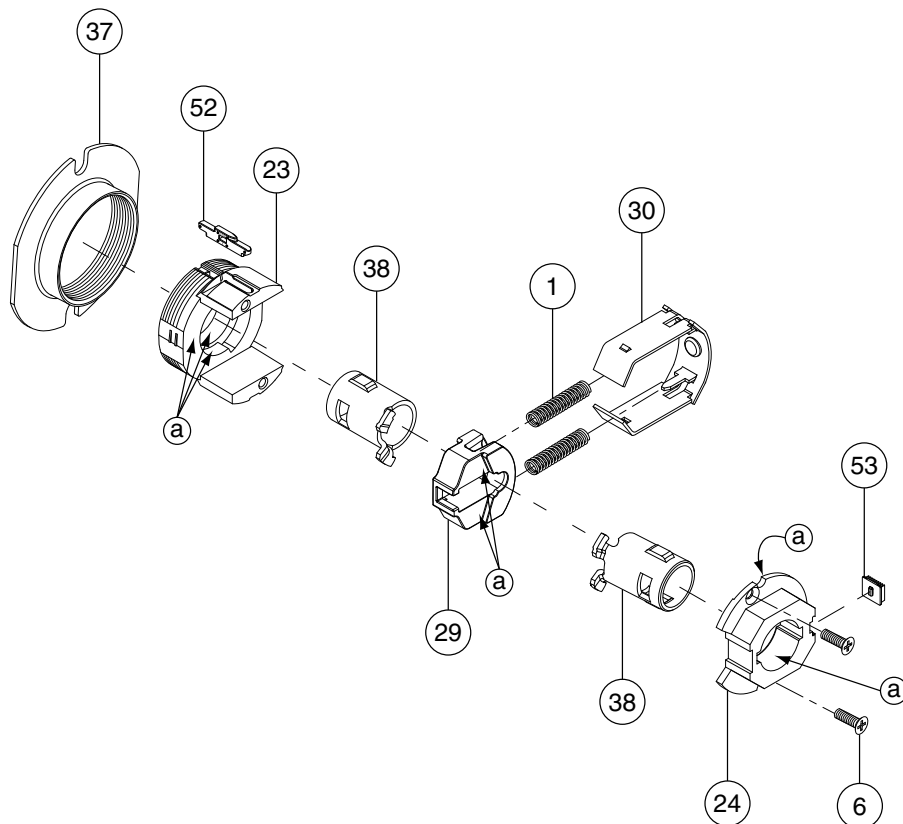
### Passage Latch




Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.

Number	Description	Part Number
1	Slide Spring	C503-019
6	Chassis Screw	L583-454
23	Outside Housing	24088544
24	Inside Hub	24085037
29	Slide	N523-149

\* Not sold separately as a part.

Number	Description	Part Number
30	Slide Clip	N523-025
37	Adjustment Plate	N523-054
38	Spindle	N523-056
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

## ND12 and ND80 Exit Lock/Storeroom Lock

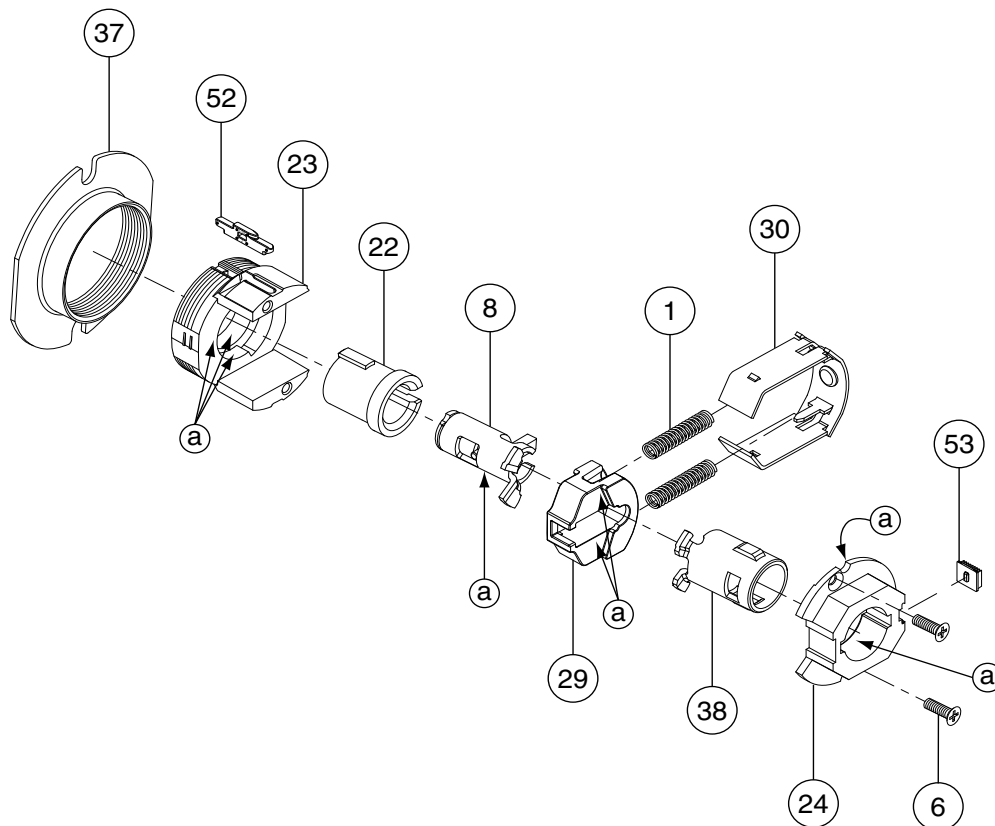

Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.


Number	Description	Part Number
1	Slide Spring	C503-019
6	Chassis Screw	L583-454
8	Keycam Assembly	N123-008
22	Spindle	N523-013
23	Outside Housing	24088544
24	Inside Hub	24085037

\* Not sold separately as a part.

Number	Description	Part Number
29	Slide	N523-149
30	Slide Clip	N523-025
37	Adjustment Plate	N523-054
38	Spindle	N523-056
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

## ND12 and ND80 RX
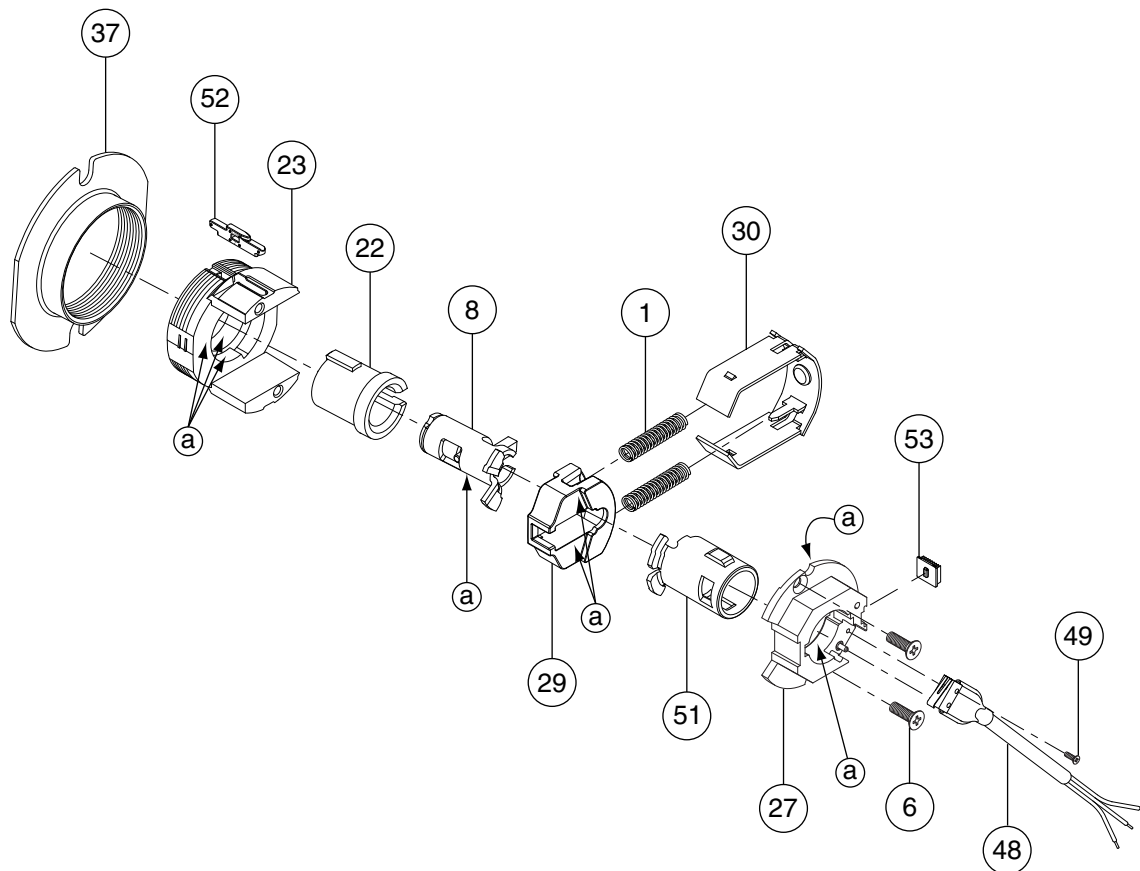
### Exit Lock/Storeroom Lock with Request-to-Exit



Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.


Number	Description	Part Number
1	Slide Spring	C503-019
6	Chassis Screw	L583-454
8	Keycam Assembly	N123-008
22	Spindle	N523-013
23	Outside Housing	24088544
27	Inside Hub, Electrified and RX	24085078
29	Slide	N523-149

\* Not sold separately as a part.

Number	Description	Part Number
30	Slide Clip	N523-025
37	Adjustment Plate	N523-054
48	RX Harness	N523-134
49	RX Harness Screw	N523-135
51	RX Inside Spindle	N523-138
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

# ND12EL and ND80EL

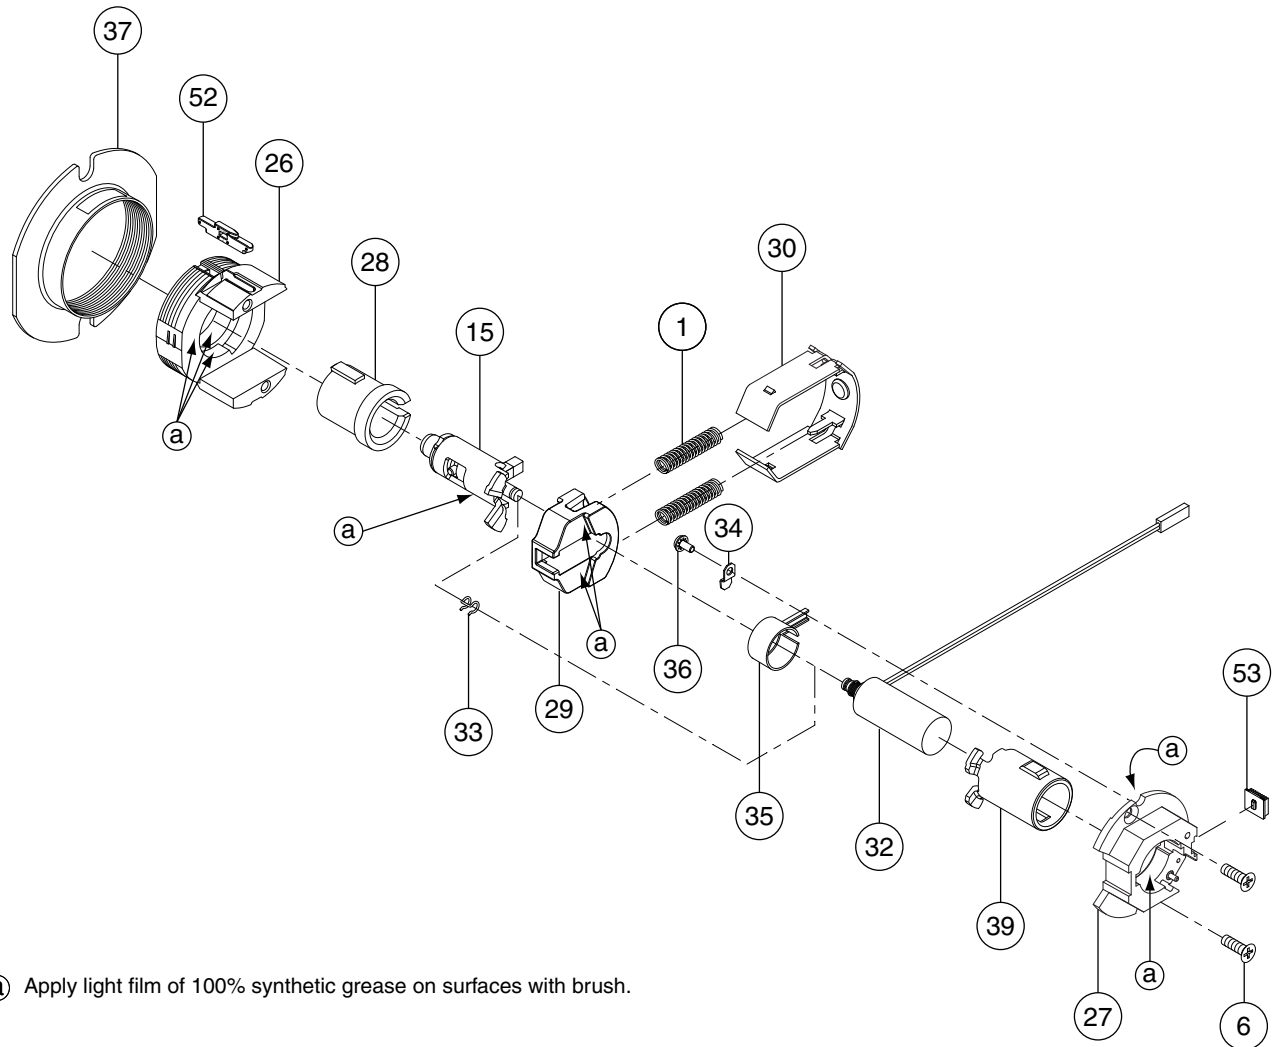Exit Lock and Storeroom Lock—Electrically Locked (Fail Safe)



Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.


Number	Description	Part Number
1	Slide Spring	C503-019
6	Chassis Screw	L583-454
15	Electrified Keycam Assembly	N123-024
26	Outside Electrified Housing	24088551
27	Inside Hub, Electrified and RX	24085078
28	Outside Electrified Spindle	N523-019
29	Slide	N523-149
30	Slide Clip	N523-025
32	Solenoid—EL	N523-027

Number	Description	Part Number
33	Clip	N523-028
34	Wire Clamp	N523-029
35	Sleeve	N523-031
36	Wire Clamp Screw	N523-033
37	Adjustment Plate	N523-054
39	Inside Electrified Spindle	N523-057
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

\* Not sold separately as a part.

## ND12EL and ND80EL RX

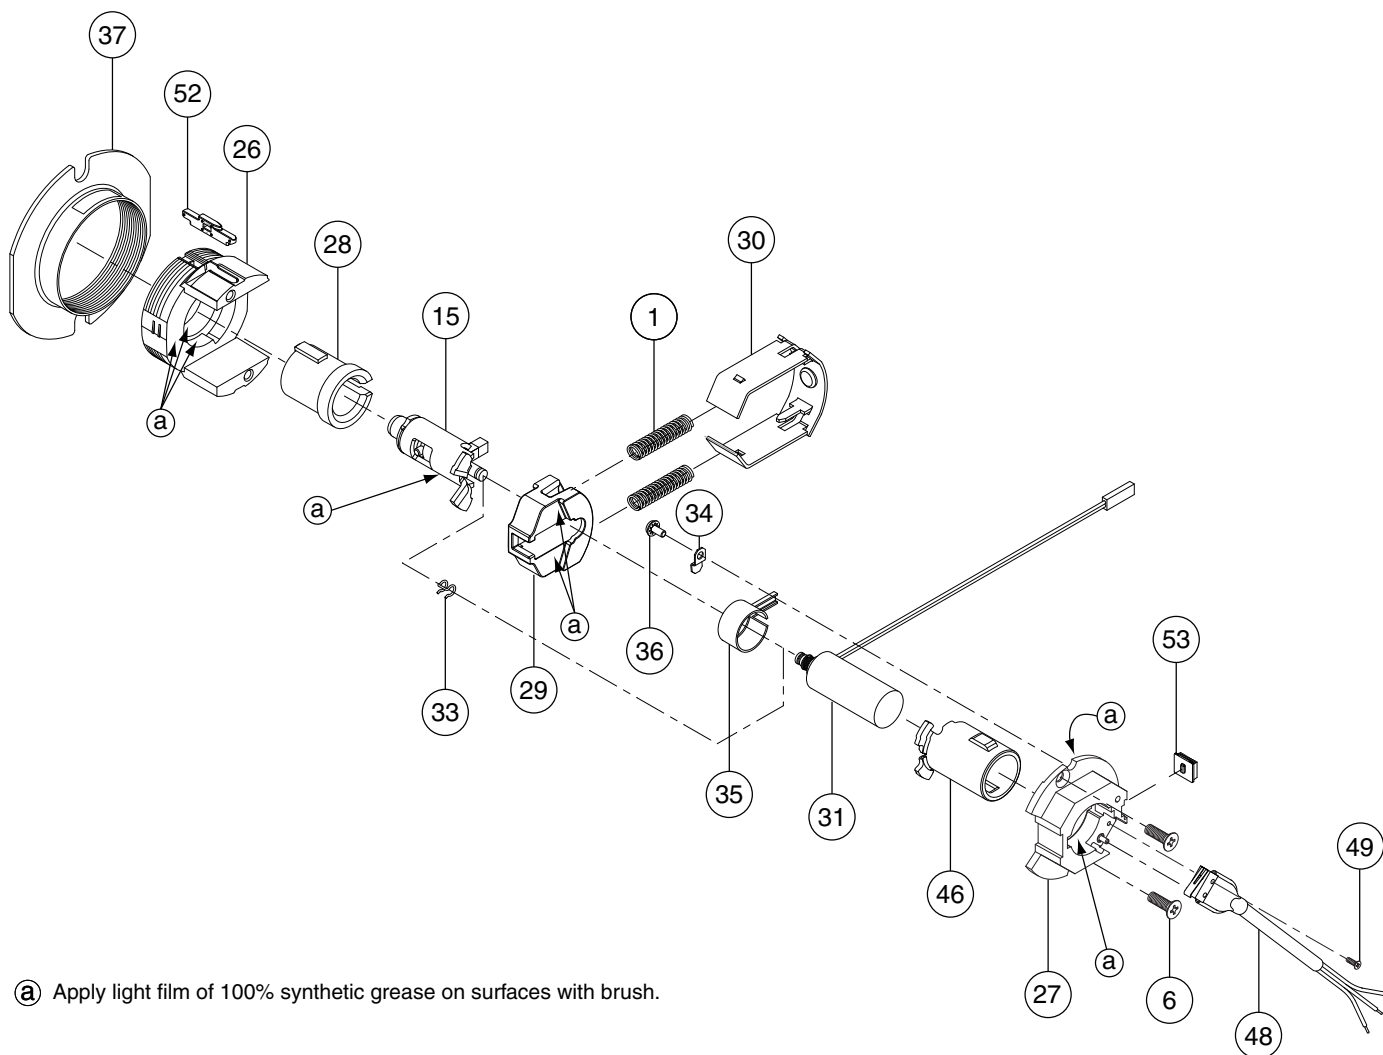Exit Lock and Storeroom Lock—Electrically Locked (Fail Safe) with Request-to-Exit



**a** Apply light film of 100% synthetic grease on surfaces with brush.


Number	Description	Part Number
1	Slide Spring	C503-019
6	Chassis Screw	L583-454
15	Electrified Keycam Assembly	N123-024
26	Outside Electrified Housing	24088551
27	Inside Hub, Electrified and RX	24085078
28	Outside Electrified Spindle	N523-019
29	Slide	N523-149
30	Slide Clip	N523-025
32	Solenoid—EL	N523-027
33	Clip	N523-028

Number	Description	Part Number
34	Wire Clamp	N523-029
35	Sleeve	N523-031
36	Wire Clamp Screw	N523-033
37	Adjustment Plate	N523-054
46	Inside Spindle Electrified	N523-132
48	RX Harness	N523-134
49	RX Harness Screw	N523-135
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

\* Not sold separately as a part.

# ND12EU and ND80EU

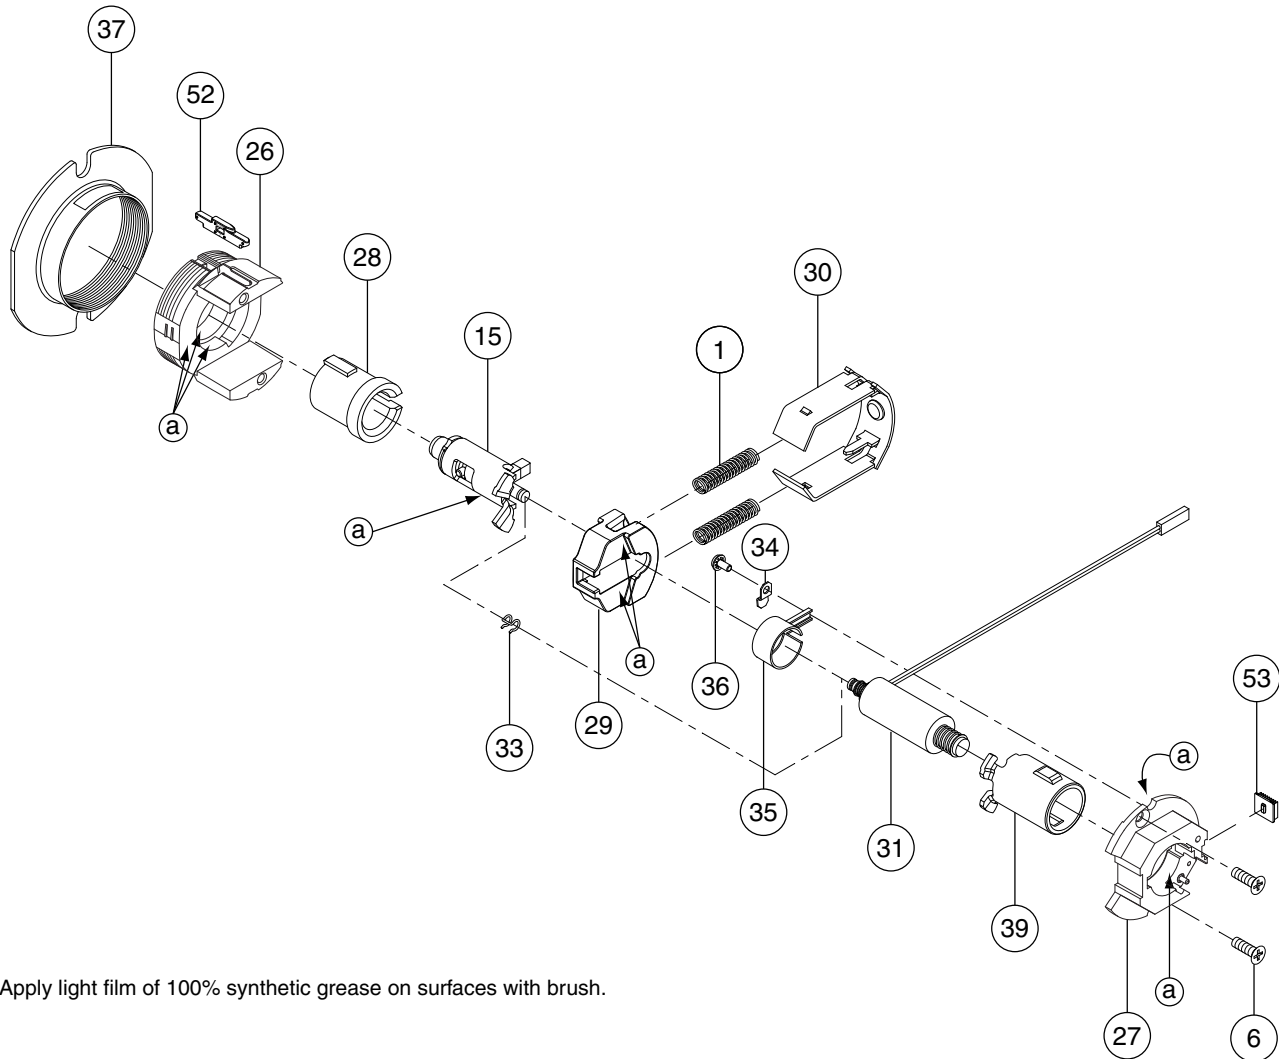Exit Lock and Storeroom Lock—Electrically Unlocked (Fail Secure)



Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.


Number	Description	Part Number
1	Slide Spring	C503-019
6	Chassis Screw	L583-454
15	Electrified Keycam Assembly	N123-024
26	Outside Electrified Housing	24088551
27	Inside Hub, Electrified and RX	24085078
28	Outside Electrified Spindle	N523-019
29	Slide	N523-149
30	Slide Clip	N523-025
31	Solenoid—EU	N523-026

\* Not sold separately as a part.

Number	Description	Part Number
33	Clip	N523-028
34	Wire Clamp	N523-029
35	Sleeve	N523-031
36	Wire Clamp Screw	N523-033
37	Adjustment Plate	N523-054
39	Inside Electrified Spindle	N523-057
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

## ND12EU and ND80EU RX

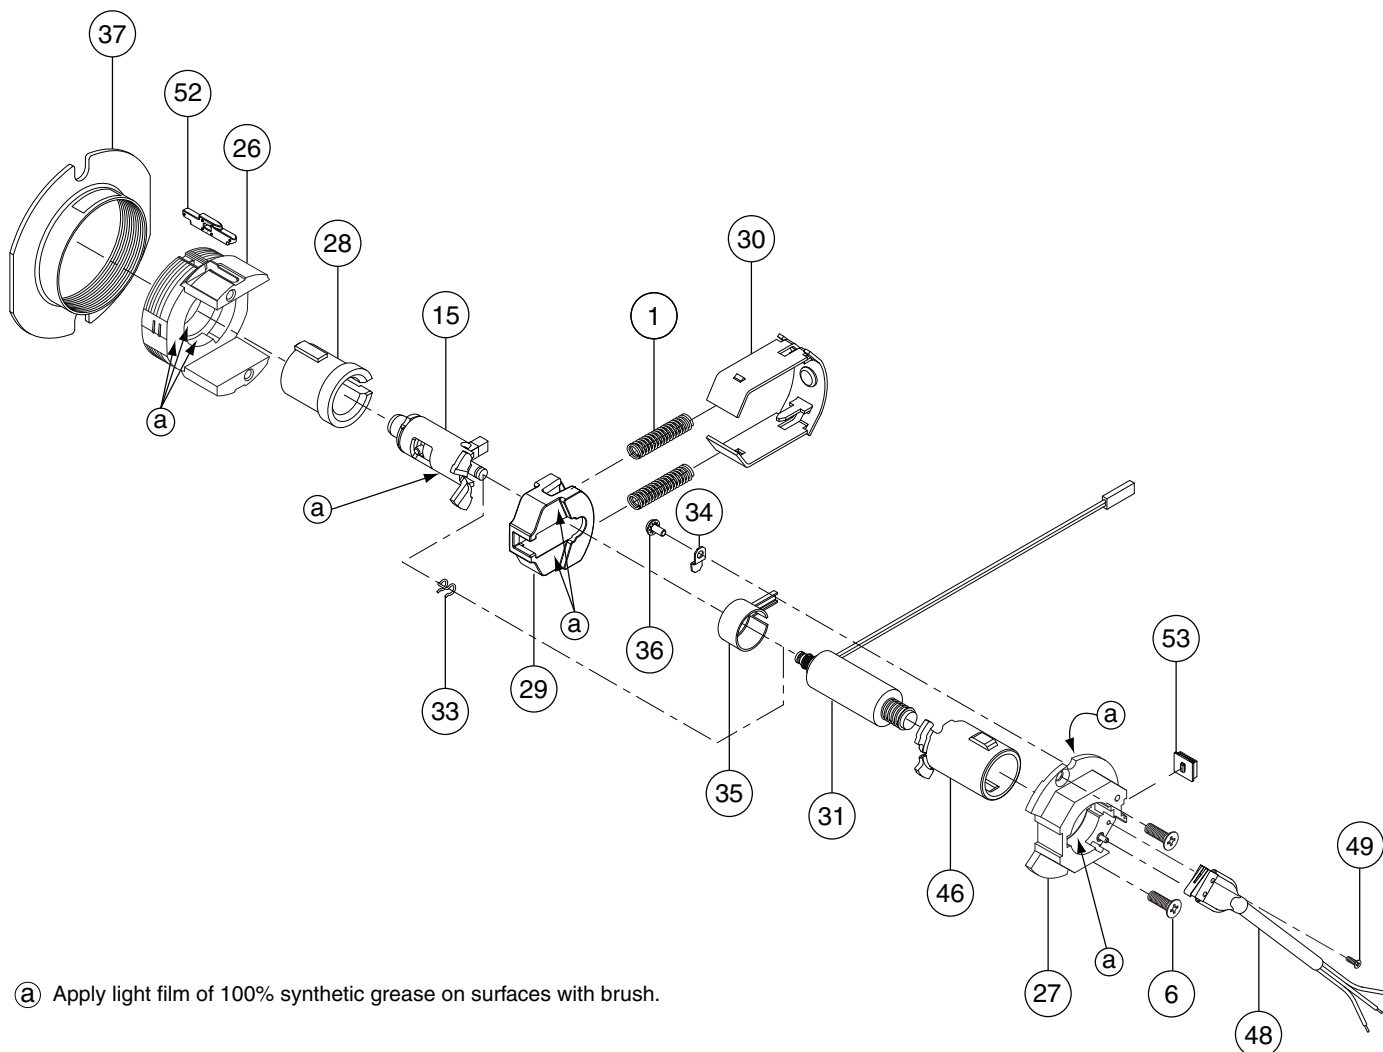Exit Lock and Storeroom Lock—Electrically Unlocked (Fail Secure) with Request-to-Exit




Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.

Number	Description	Part Number
1	Slide Spring	C503-019
6	Chassis Screw	L583-454
15	Electrified Keycam Assembly	N123-024
26	Outside Electrified Housing	24088551
27	Inside Hub, Electrified and RX	24085078
28	Outside Electrified Spindle	N523-019
29	Slide	N523-149
30	Slide Clip	N523-025
31	Solenoid—EU	N523-026
33	Clip	N523-028

Number	Description	Part Number
34	Wire Clamp	N523-029
35	Sleeve	N523-031
36	Wire Clamp Screw	N523-033
37	Adjustment Plate	N523-054
46	Inside Spindle Electrified	N523-132
48	Harness, RX	N523-134
49	Screw, Harness, RX	N523-135
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

\* Not sold separately as a part.

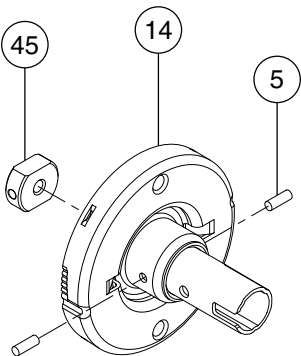**ND170**  
Single Dummy Trim




Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.

Number	Description	Part Number
5	Spindle Pin	C604-340
14	Spring Cage Assembly	N123-019
45	Dummy Insert	N523-069

*For mounting two ND170 as double trim, see page 46.*



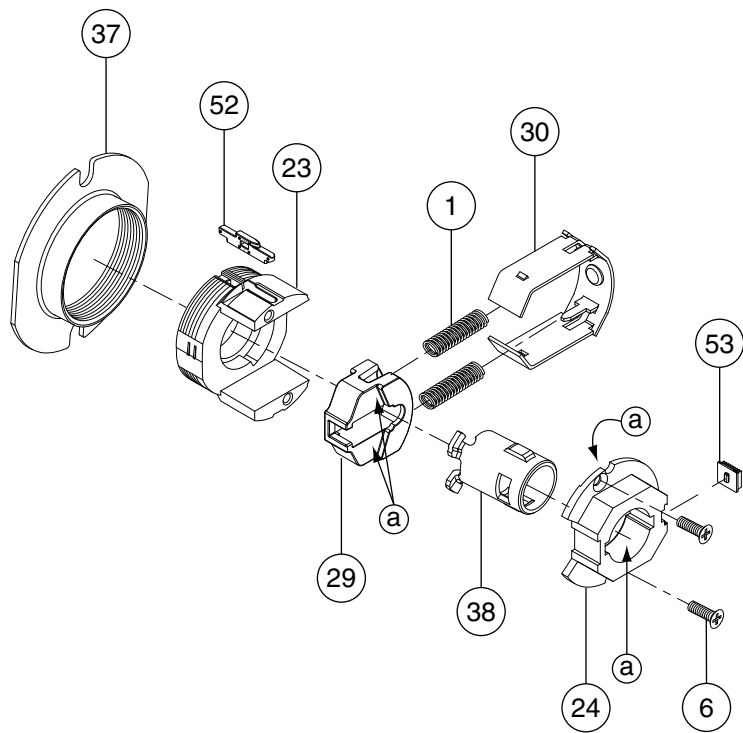ND25  
Exit Lock with Blank Plate



Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.


Number	Description	Part Number
1	Slide Spring	C503-019
6	Chassis Screw	L583-454
23	Outside Housing	24088544
24	Inside Hub	24085037
29	Slide	N523-149

*\* Not sold separately as a part.*

Number	Description	Part Number
30	Slide Clip	N523-025
37	Adjustment Plate	N523-054
38	Spindle	N523-056
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

# ND25X70

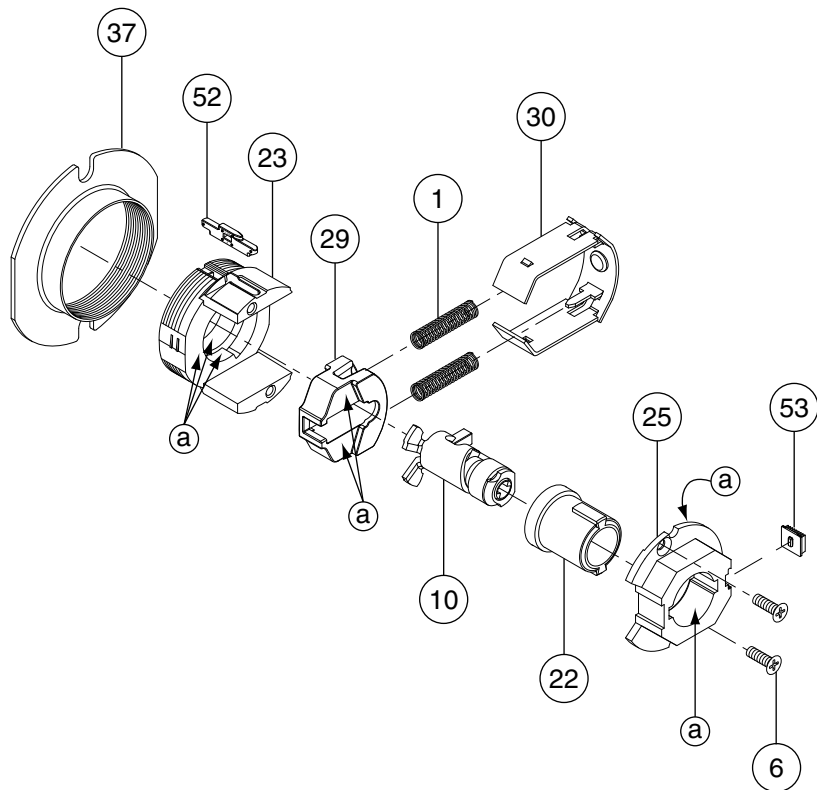Special—Classroom Exit Lock




Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.

Number	Description	Part Number
1	Slide Spring	C503-019
6	Chassis Screw	L583-454
10	Keycam Assembly	N123-010
22	Spindle	N523-013
23	Outside Housing	24088544
25	Inside Hub	24085060

\* Not sold separately as a part.

Number	Description	Part Number
29	Slide	N523-149
30	Slide Clip	N523-025
37	Adjustment Plate	N523-054
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

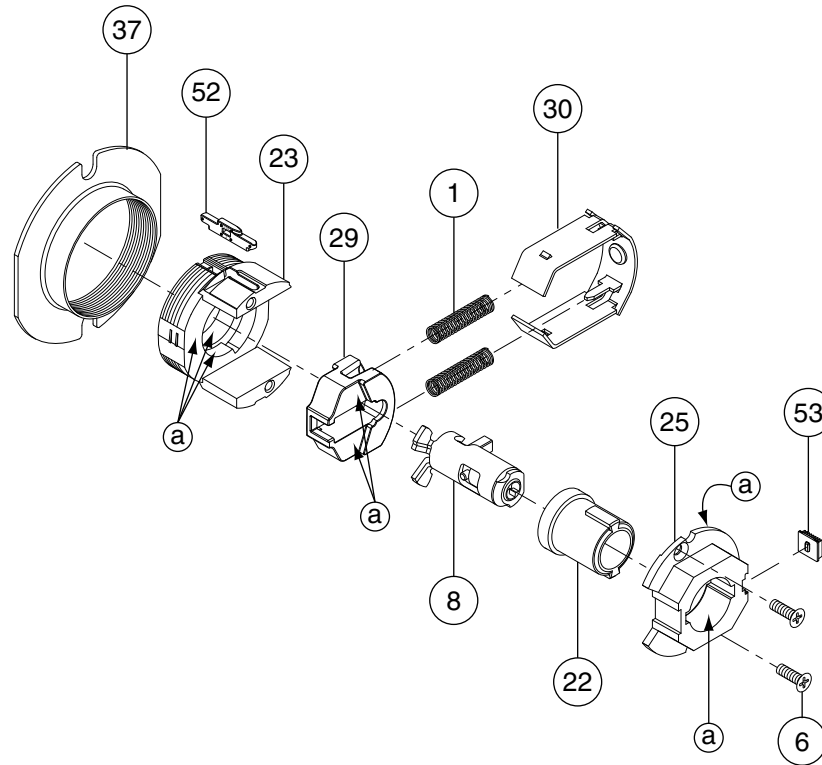**ND25X80****Special—Storeroom Exit Lock**

Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.


Number	Description	Part Number
1	Slide Spring	C503-019
6	Chassis Screw	L583-454
8	Keycam Assembly	N123-008
22	Spindle	N523-013
23	Outside Housing	24088544
25	Inside Hub	24085060

\* Not sold separately as a part.

Number	Description	Part Number
29	Slide	N523-149
30	Slide Clip	N523-025
37	Adjustment Plate	N523-054
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

## ND30, ND40 and ND44

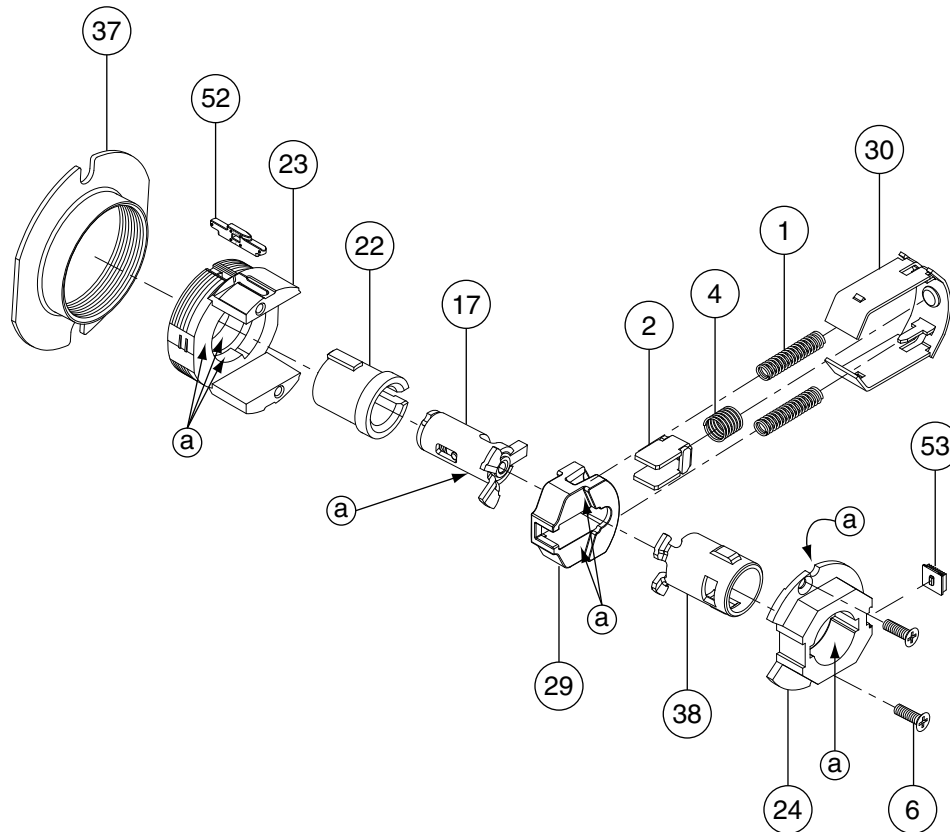Patio, Bath/Bedroom Privacy and Hospital Privacy Lock



Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.


Number	Description	Part Number
1	Slide Spring	C503-019
2	Restoring Slide Catch	C604-187
4	Slide Catch Spring	C604-191
6	Chassis Screw	L583-454
17	Keycam Assembly	N123-045
22	Spindle	N523-013
23	Outside Housing	24088544

\* Not sold separately as a part.

Number	Description	Part Number
24	Inside Hub	24085037
29	Slide	N523-149
30	Slide Clip	N523-025
37	Adjustment Plate	N523-054
38	Spindle	N523-056
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

## ND50 and ND53
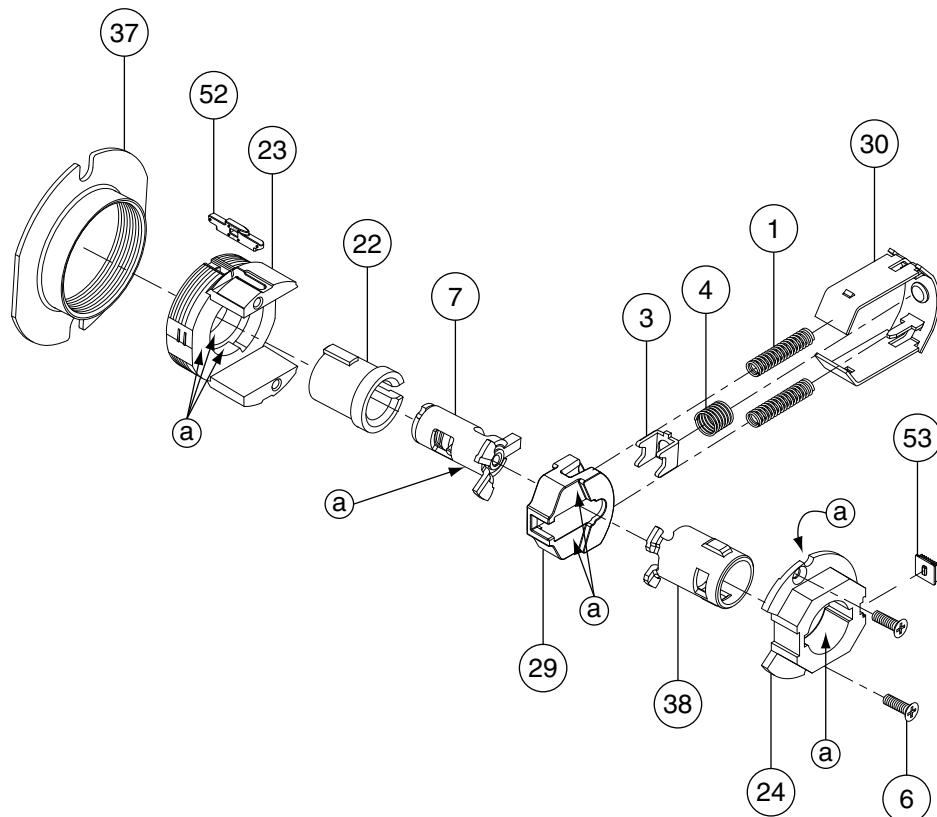
### Entrance/Office and Entrance Lock



Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.


Number	Description	Part Number
1	Slide Spring	C503-019
3	Slide Catch	C604-188
4	Slide Catch Spring	C604-191
6	Chassis Screw	L583-454
7	Keycam Assembly	N123-007
22	Spindle	N523-013
23	Outside Housing	24088544

\* Not sold separately as a part.

Number	Description	Part Number
24	Inside Hub	24085037
29	Slide	N523-149
30	Slide Clip	N523-025
37	Adjustment Plate	N523-054
38	Spindle	N523-056
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

# ND60

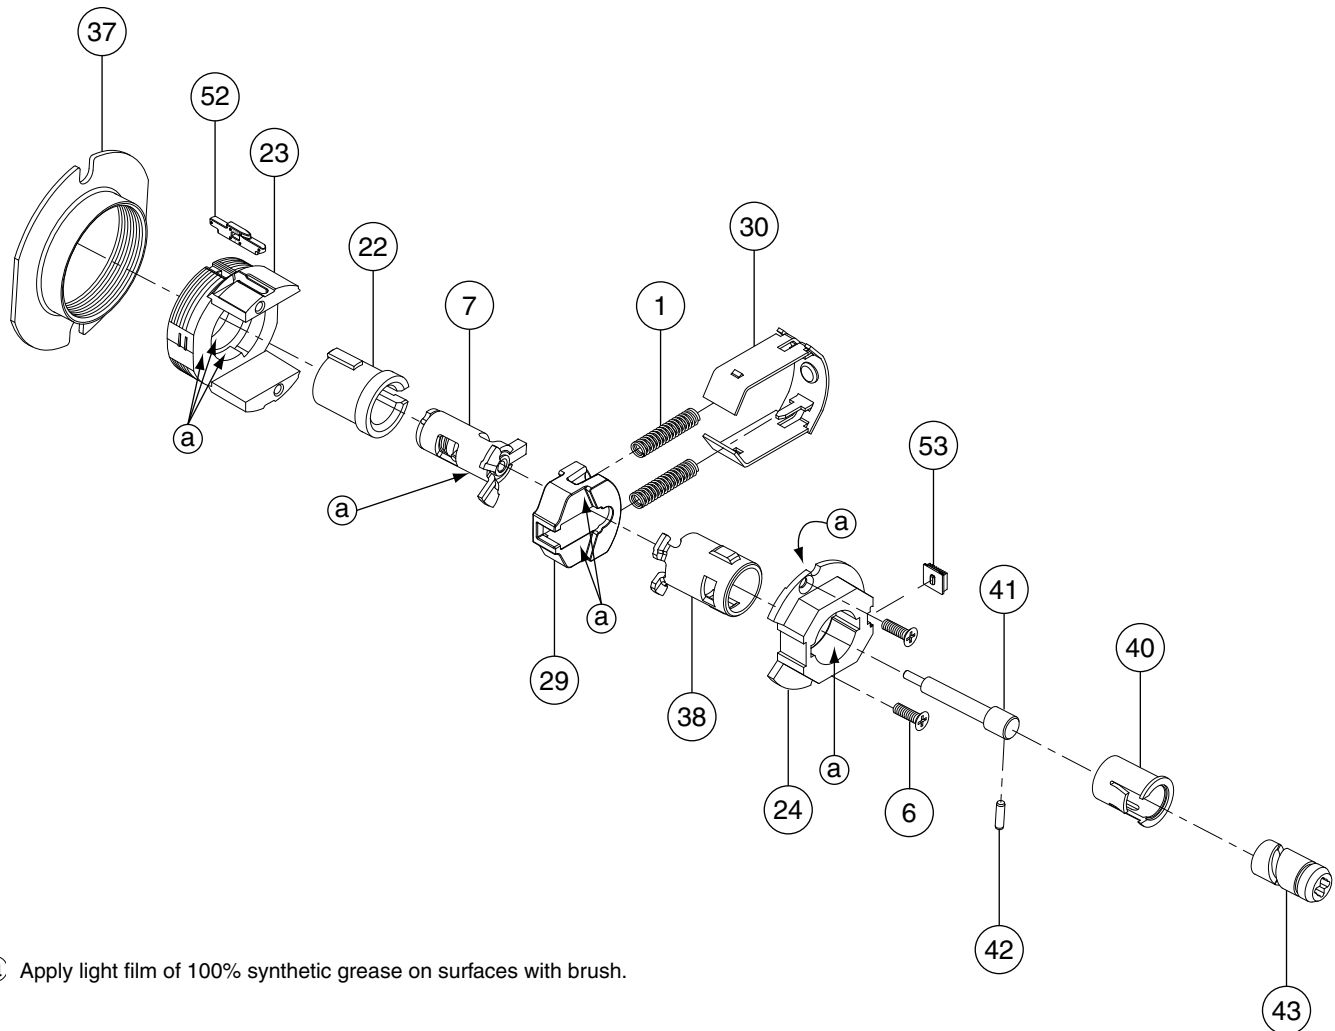
## Vestibule Lock



Number	Description	Part Number
1	Slide Spring	C503-019
6	Chassis Screw	L583-454
7	Keycam Assembly	N123-007
22	Spindle	N523-013
23	Outside Housing	24088544
24	Inside Hub	24085037
29	Slide	N523-149
30	Slide Clip	N523-025

\* Not sold separately as a part.

Number	Description	Part Number
37	Adjustment Plate	N523-054
38	Spindle	N523-056
40	Plunger Sleeve	N523-063
41	Plunger	N523-064
42	Cam Pin	N523-065
43	Cam	N523-066
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

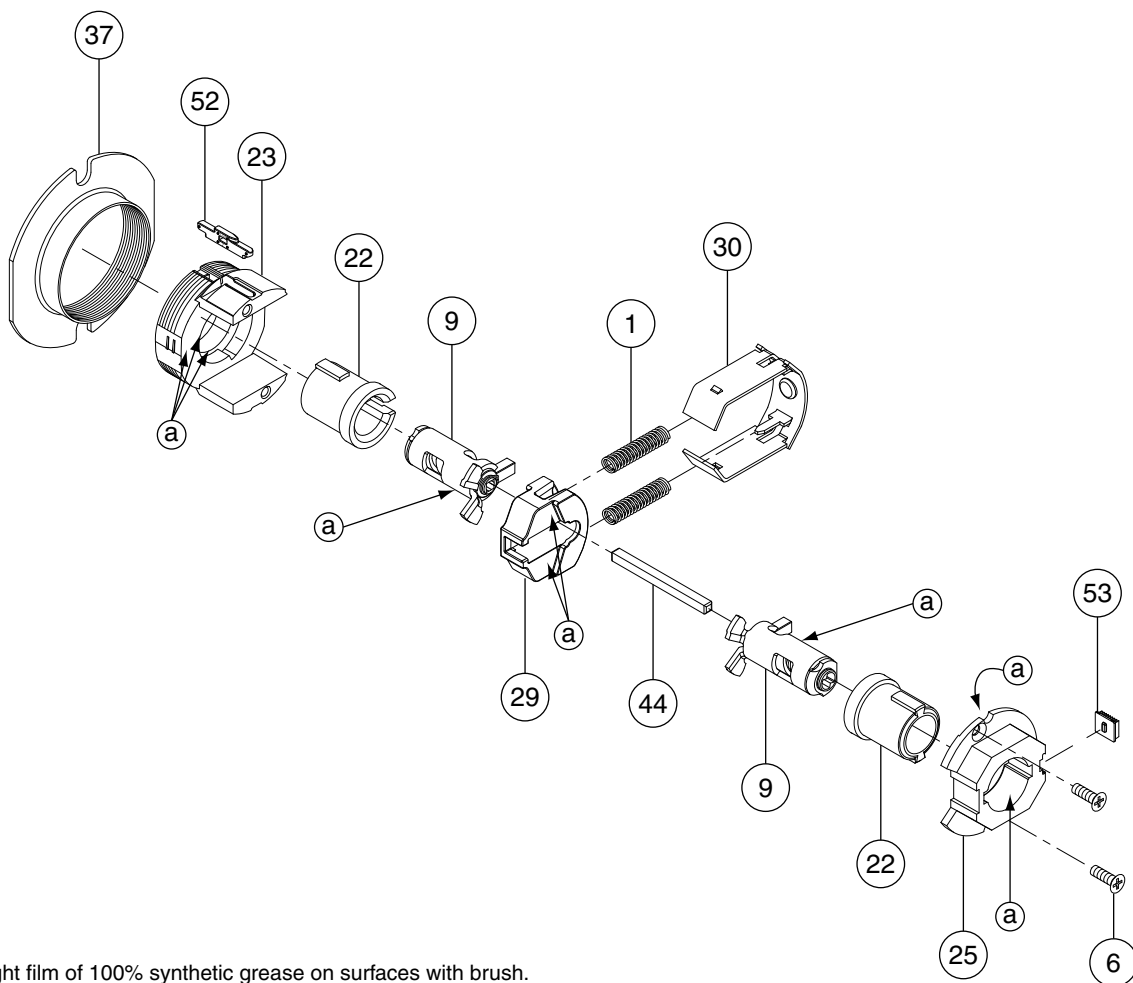**ND66****Store Lock**

Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.


Number	Description	Part Number
1	Slide Spring	C503-019
6	Chassis Screw	L583-454
9	Keycam Assembly	N123-009
22	Spindle	N523-013
23	Outside Housing	24088544
25	Inside Hub	24085060

\* Not sold separately as a part.

Number	Description	Part Number
29	Slide	N523-149
30	Slide Clip	N523-025
37	Adjustment Plate	N523-054
44	Plunger Bar	N523-067
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

ND70

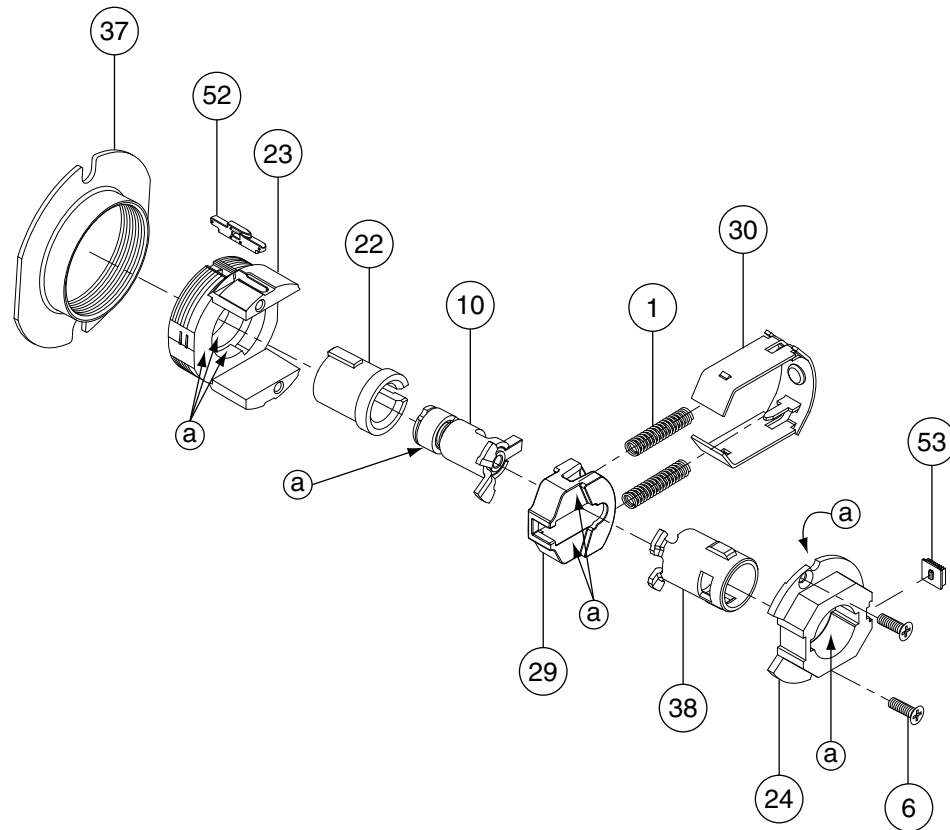Classroom Lock




Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.

Number	Description	Part Number
1	Slide Spring	C503-019
6	Chassis Screw	L583-454
10	Keycam Assembly	N123-010
22	Spindle	N523-013
23	Outside Housing	24088544
24	Inside Hub	24085037

\* Not sold separately as a part.

Number	Description	Part Number
29	Slide	N523-149
30	Slide Clip	N523-025
37	Adjustment Plate	N523-054
38	Spindle	N523-056
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

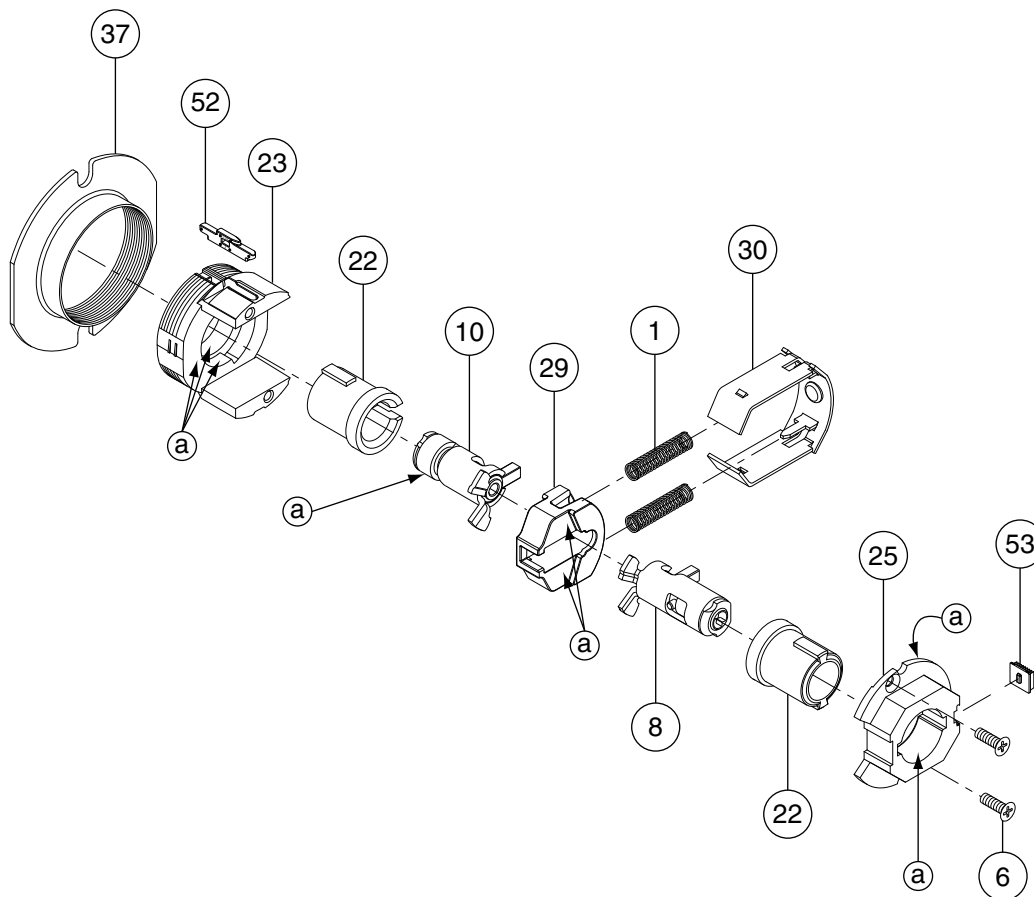

**ND70X80****Special—Classroom by Storeroom Lock**

Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.


Number	Description	Part Number
1	Slide Spring	C503-019
6	Chassis Screw	L583-454
8	Keycam Assembly	N123-008
10	Keycam Assembly	N123-010
22	Spindle	N523-013
23	Outside Housing	24088544

\* Not sold separately as a part.

Number	Description	Part Number
25	Inside Hub	24085060
29	Slide	N523-149
30	Slide Clip	N523-025
37	Adjustment Plate	N523-054
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

ND72

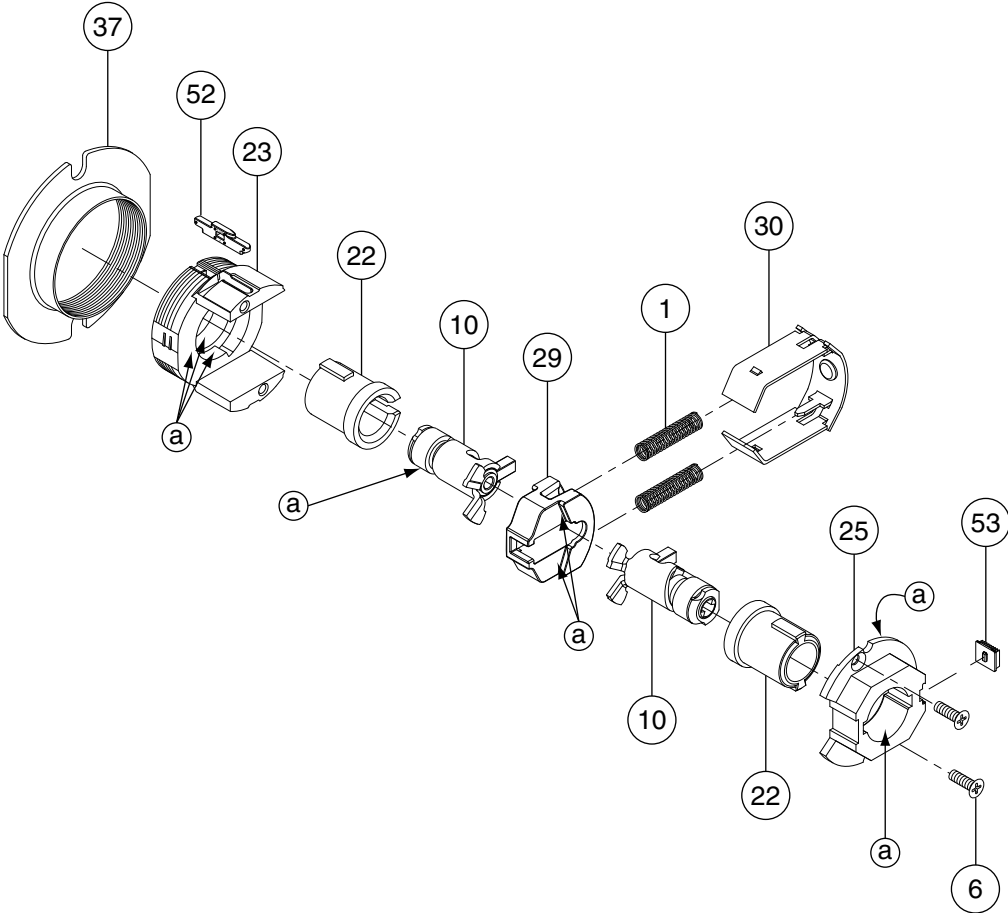Special—Communicating Lock




Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.

Number	Description	Part Number
1	Slide Spring	C503-019
6	Chassis Screw	L583-454
10	Keycam Assembly	N123-010
22	Spindle	N523-013
23	Outside Housing	24088544
25	Inside Hub	24085060

\* Not sold separately as a part.

Number	Description	Part Number
29	Slide	N523-149
30	Slide Clip	N523-025
37	Adjustment Plate	N523-054
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

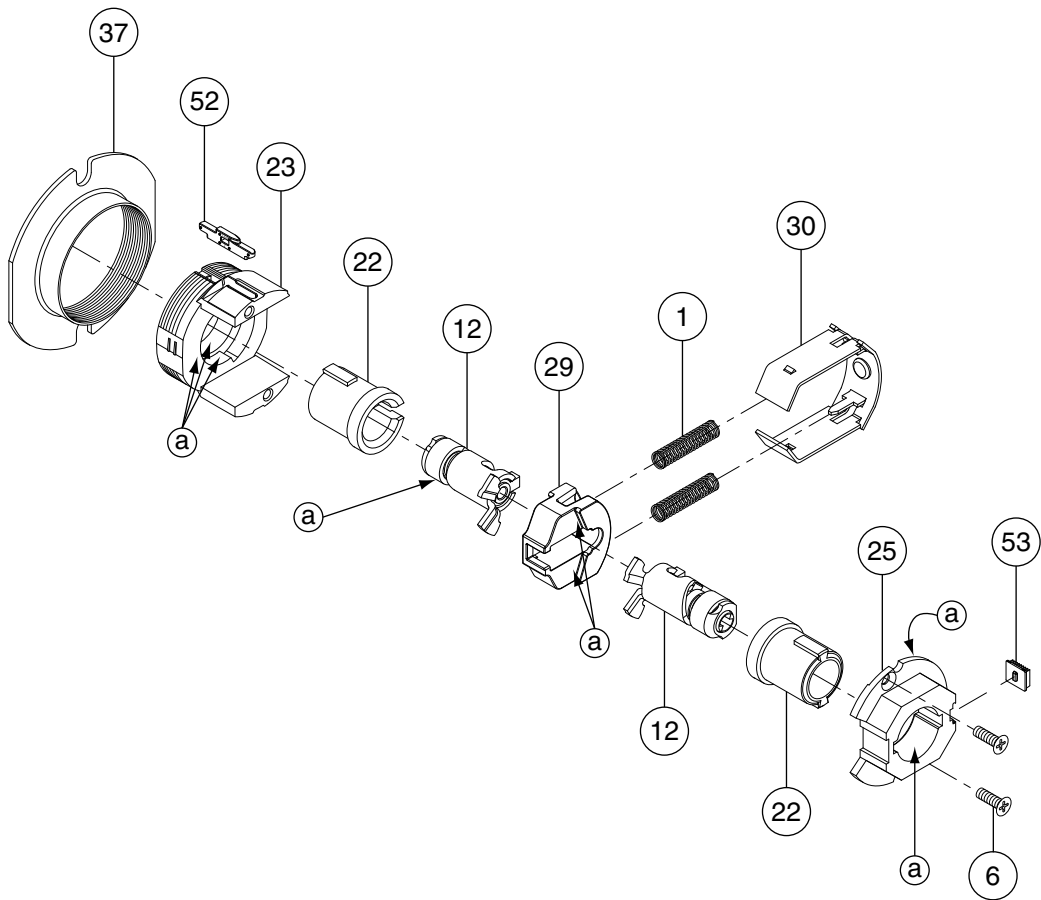ND72 Vandlgard®  
Special—Communicating Lock with Vandlgard®



Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.


Number	Description	Part Number
1	Slide Spring	C503-019
6	Chassis Screw	L583-454
12	Keycam Assembly	N123-012
22	Spindle	N523-013
23	Outside Housing	24088544
25	Inside Hub	24085060

\* Not sold separately as a part.

Number	Description	Part Number
29	Slide	N523-149
30	Slide Clip	N523-025
37	Adjustment Plate	N523-054
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

# ND73
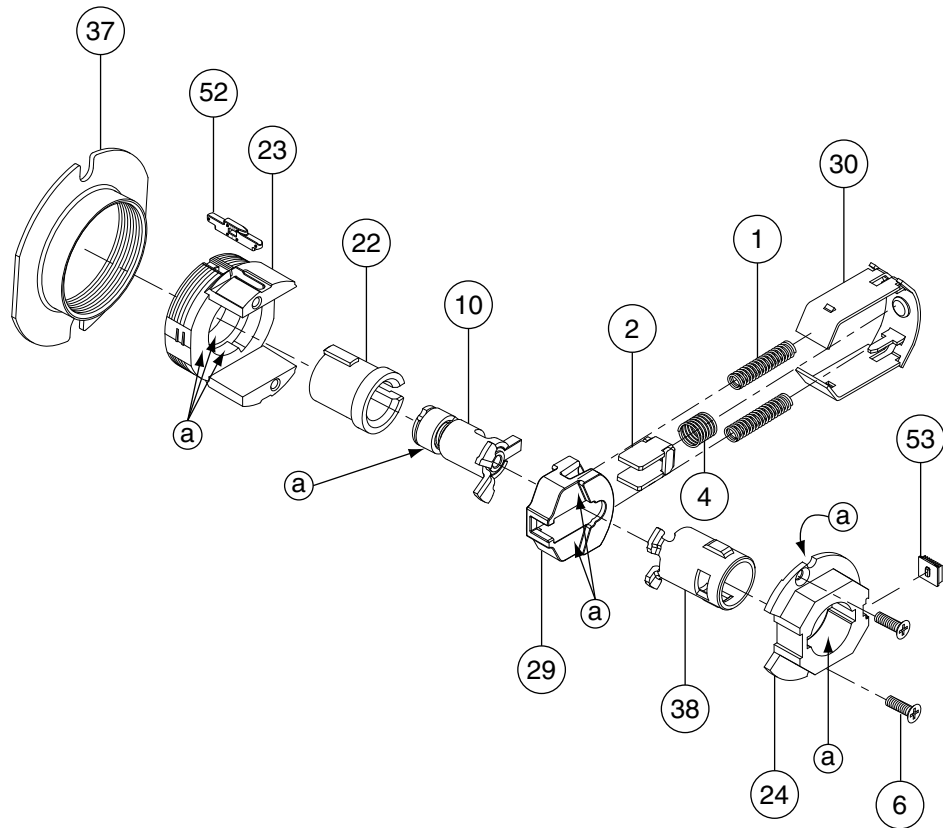
## Corridor Lock




Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.

Number	Description	Part Number
1	Slide Spring	C503-019
2	Restoring Slide Catch	C604-187
4	Slide Catch Spring	C604-191
6	Chassis Screw	L583-454
10	Keycam Assembly	N123-010
22	Spindle	N523-013
23	Outside Housing	24088544

\* Not sold separately as a part.

Number	Description	Part Number
24	Inside Hub	24085037
29	Slide	N523-149
30	Slide Clip	N523-025
37	Adjustment Plate	N523-054
38	Spindle	N523-056
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

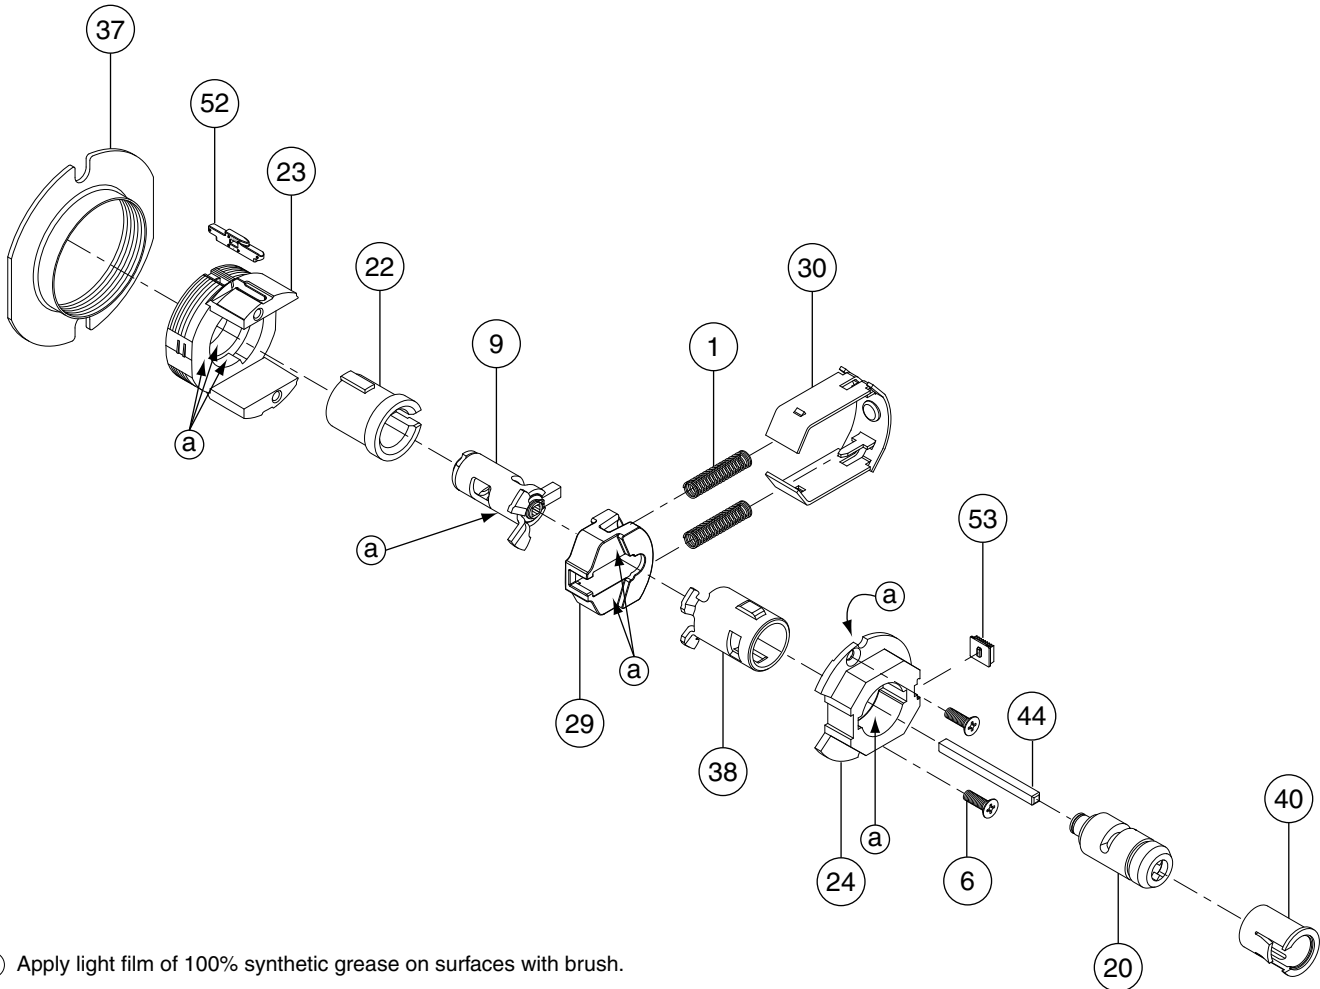**ND75****Classroom Security Lock**

(a) Apply light film of 100% synthetic grease on surfaces with brush.


Number	Description	Part Number
1	Slide Spring	C503-019
6	Chassis Screw	L583-454
9	Keycam Assembly	N123-009
20	Inside Cam	N123-059
22	Spindle	N523-013
23	Outside Housing	24088544
24	Inside Hub	24085037
29	Slide	N523-149

\* Not sold separately as a part.

Number	Description	Part Number
30	Slide Clip	N523-025
37	Adjustment Plate	N523-054
38	Spindle	N523-056
40	Plunger Sleeve	N523-063
44	Plunger Bar	N523-067
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

# ND82
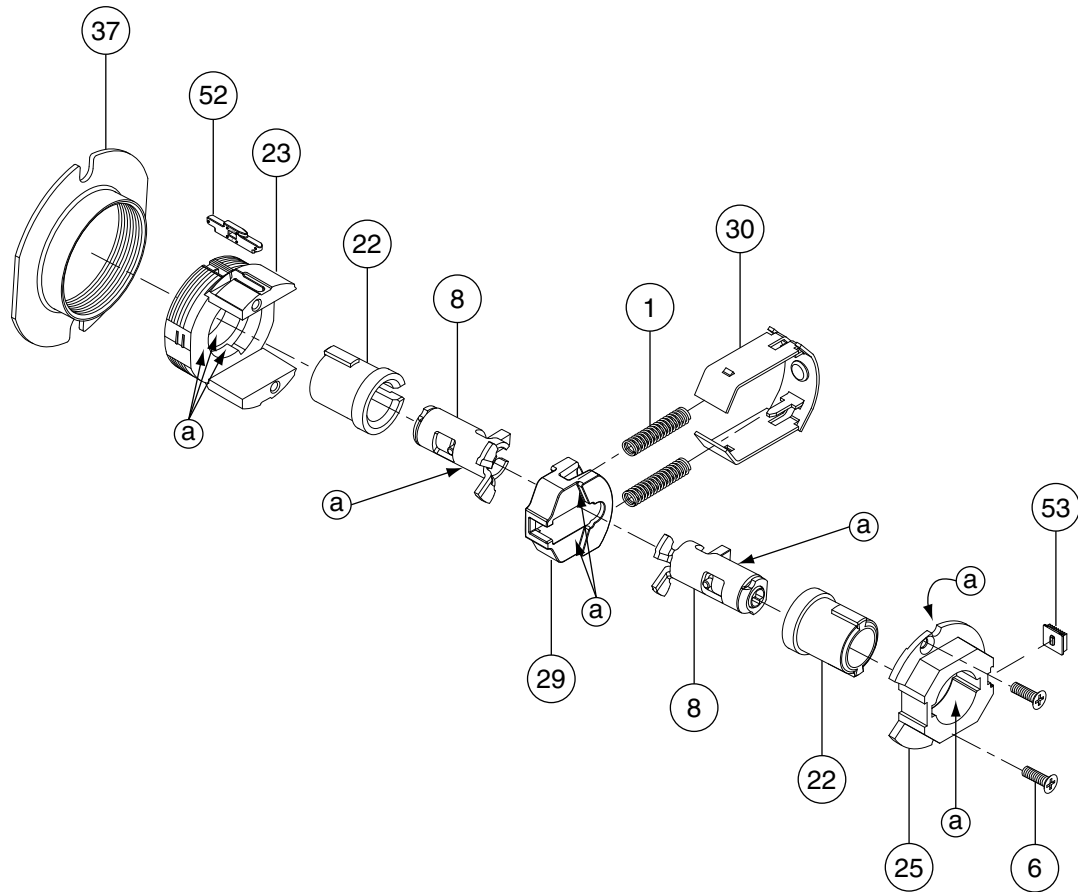
## Institution Lock




Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.

Number	Description	Part Number
1	Slide Spring	C503-109
6	Chassis Screw	L583-454
8	Keycam Assembly	N123-008
22	Spindle	N523-013
23	Outside Housing	24088544
25	Inside Hub	24085060

\* Not sold separately as a part.

Number	Description	Part Number
29	Slide	N523-149
30	Slide Clip	N523-025
37	Adjustment Plate	N523-054
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

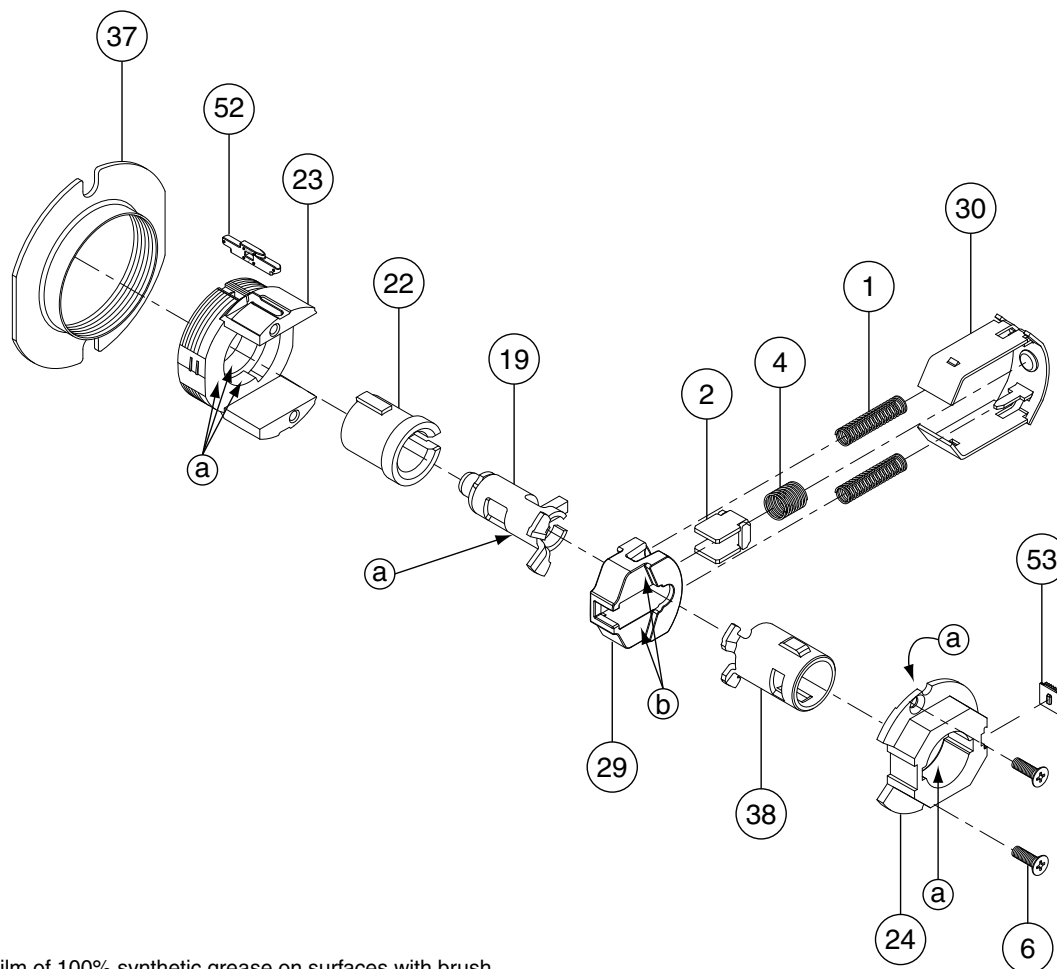**ND85****Faculty Restroom Lock**

(a) Apply light film of 100% synthetic grease on surfaces with brush.


Number	Description	Part Number
1	Slide Spring	C503-019
2	Restoring Slide Catch	C604-187
4	Slide Catch Spring	C604-191
6	Chassis Screw	L583-454
19	Keycam Assembly	N123-055
22	Spindle	N523-013
23	Outside Housing	24088544

\* Not sold separately as a part.

Number	Description	Part Number
24	Inside Hub	24085037
29	Slide	N523-149
30	Slide Clip	N523-025
37	Adjustment Plate	N523-054
38	Spindle	N523-056
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

## ND91 and ND92

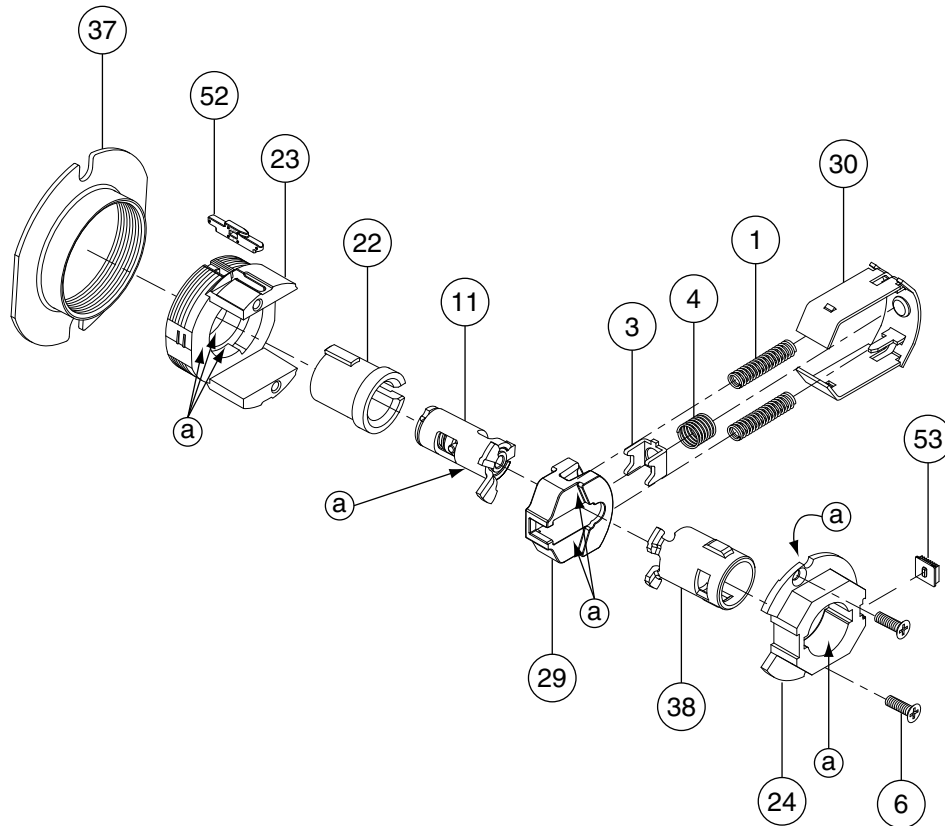Entrance/Office and Entrance Lock with Vandlgard®



Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.

Number	Description	Part Number
1	Slide Spring	C503-019
3	Slide Catch	C604-188
4	Slide Catch Spring	C604-191
6	Chassis Screw	L583-454
11	Keycam Assembly	N123-011
22	Spindle	N523-013
23	Outside Housing	24088544


\* Not sold separately as a part.

Number	Description	Part Number
24	Inside Hub	24085037
29	Slide	N523-149
30	Slide Clip	N523-025
37	Adjustment Plate	N523-054
38	Spindle	N523-056
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*



## ND93
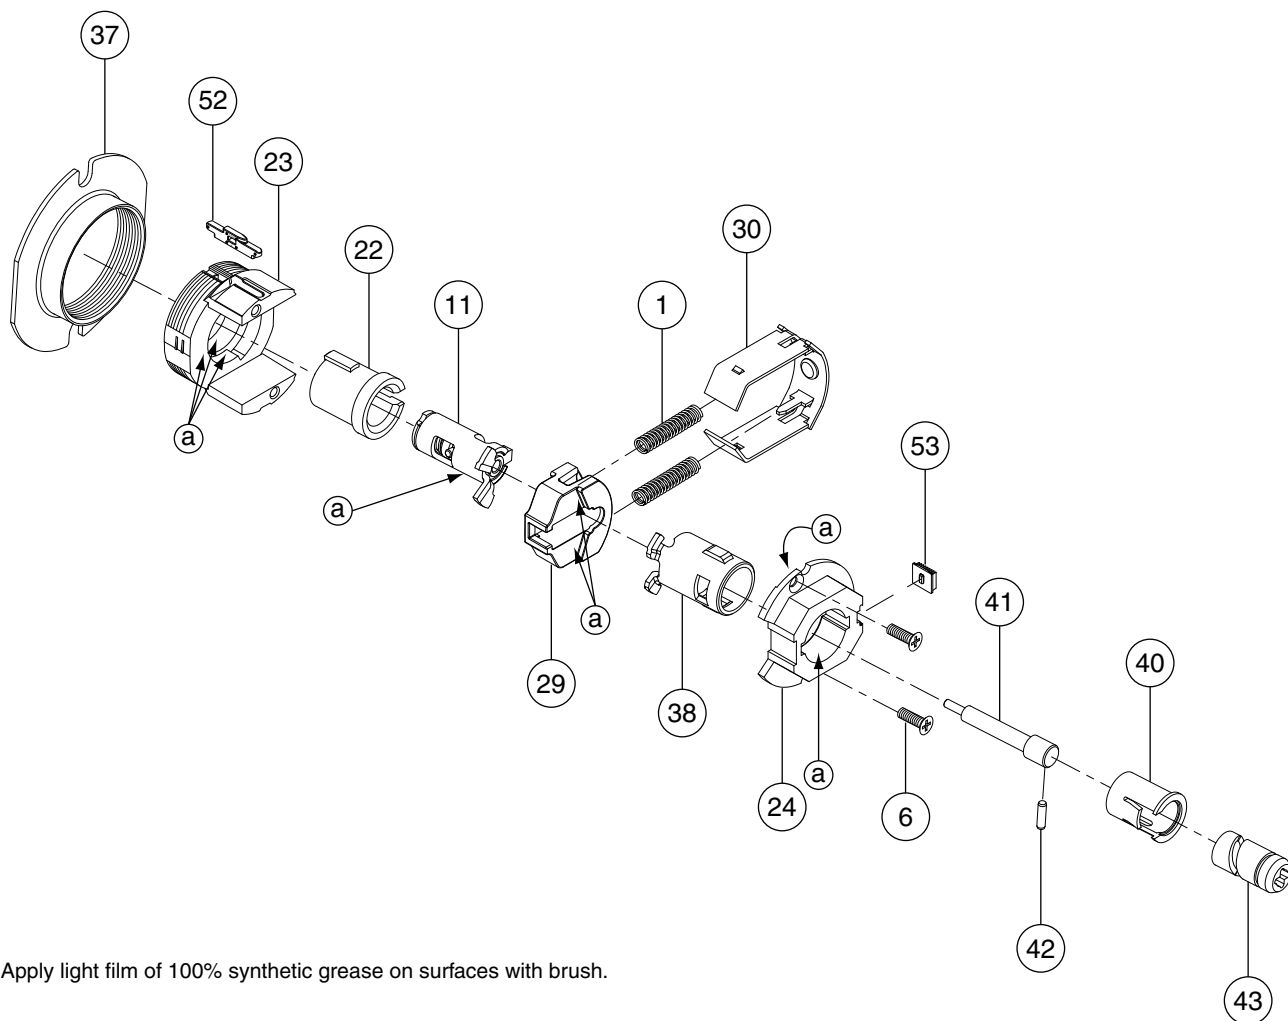
### Vestibule Lock with Vandlgard®



Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.


Number	Description	Part Number
1	Slide Spring	C503-019
6	Chassis Screw	L583-454
11	Keycam Assembly	N123-011
22	Spindle	N523-013
23	Outside Housing	24088544
24	Inside Hub	24085037
29	Slide	N523-149
30	Slide Clip	N523-025

\* Not sold separately as a part.

Number	Description	Part Number
37	Adjustment Plate	N523-054
38	Spindle	N523-056
40	Plunger Sleeve	N523-063
41	Plunger	N523-064
42	Cam Pin	N523-065
43	Cam	N523-066
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

# ND94
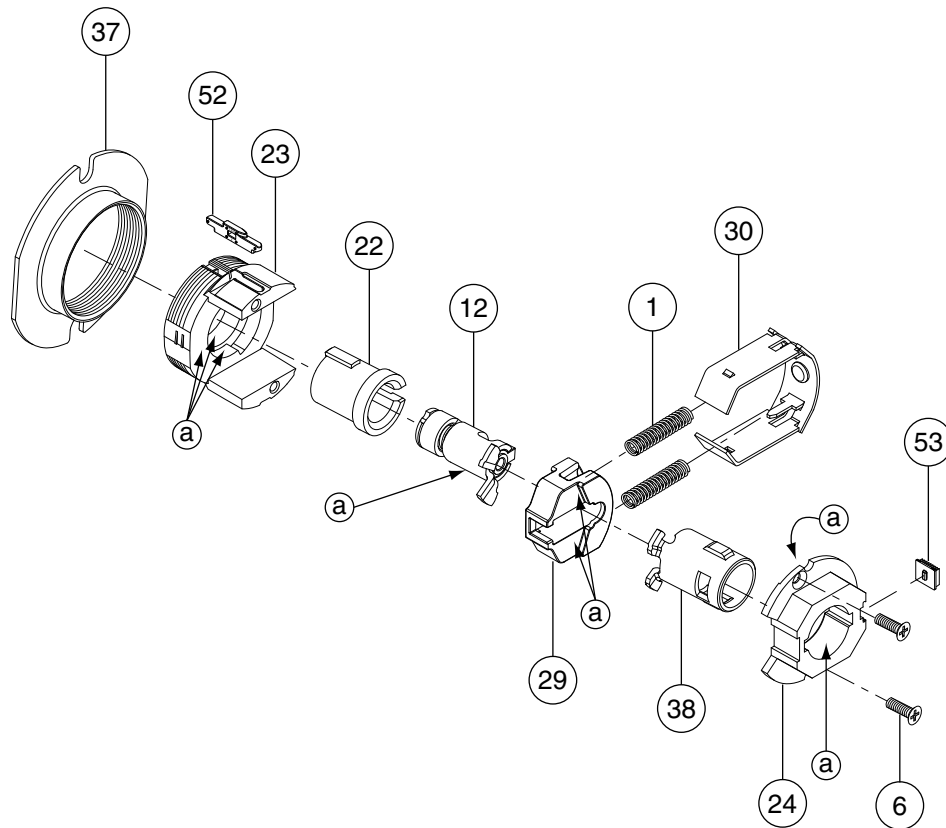
## Classroom Lock with Vandlgard®




Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.

Number	Description	Part Number
1	Slide Spring	C503-019
6	Chassis Screw	L583-454
12	Keycam Assembly	N123-012
22	Spindle	N523-013
23	Outside Housing	24088544
24	Inside Hub	24085037

\* Not sold separately as a part.

Number	Description	Part Number
29	Slide	N523-149
30	Slide Clip	N523-025
37	Adjustment Plate	N523-054
38	Spindle	N523-056
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

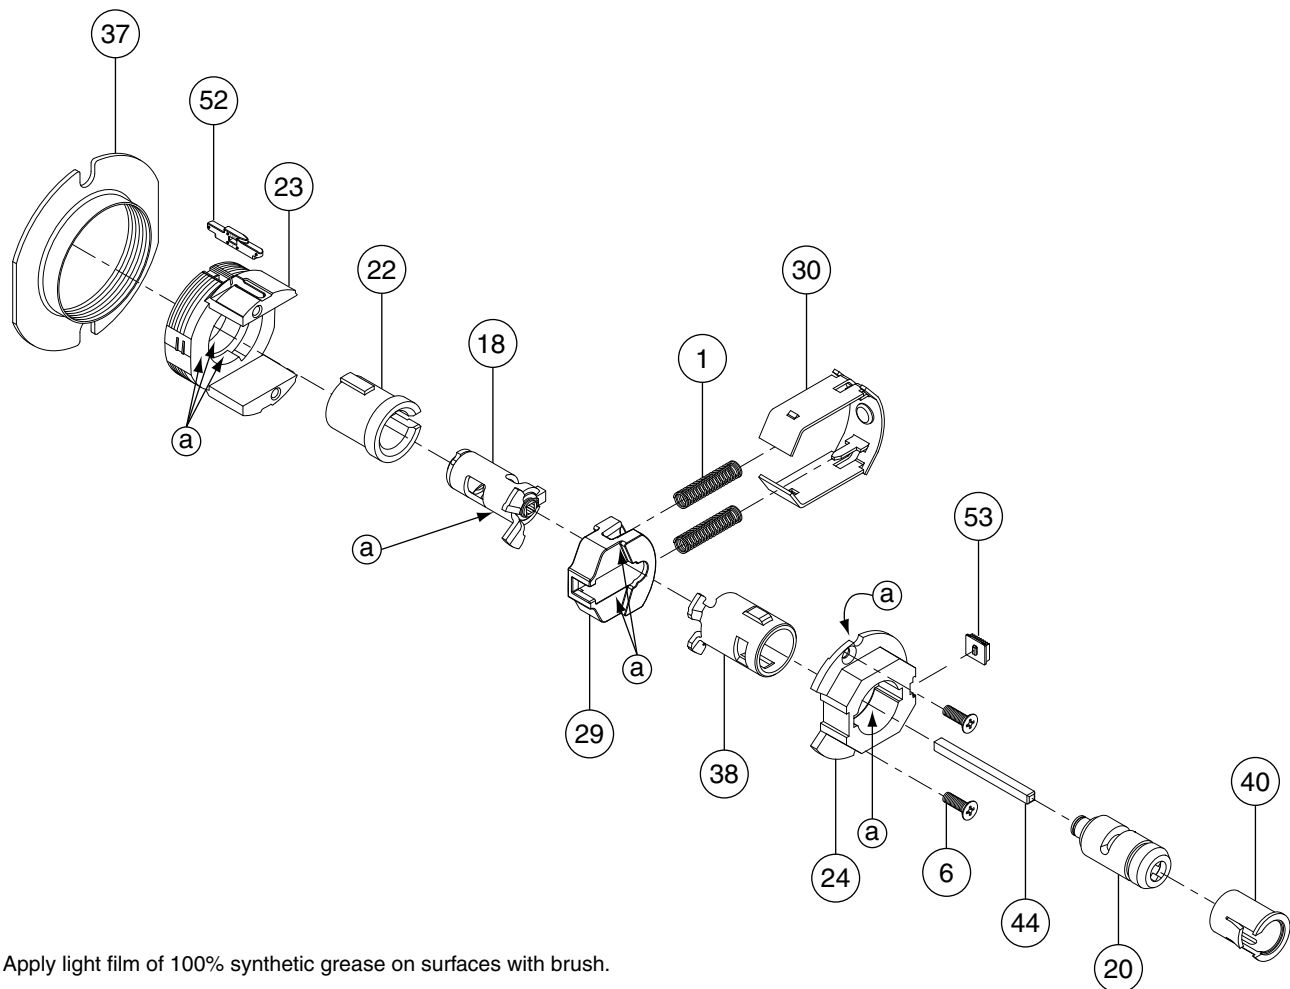**ND95****Classroom Security Lock with Vandlgard®**

Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.


Number	Description	Part Number
1	Slide Spring	C503-019
6	Chassis Screw	L583-454
18	Keycam Assembly	N123-054
20	Inside Cam	N123-059
22	Spindle	N523-013
23	Outside Housing	24088544
24	Inside Hub	24085037
29	Slide	N523-149

Number	Description	Part Number
30	Slide Clip	N523-025
37	Adjustment Plate	N523-054
38	Spindle	N523-056
40	Plunger Sleeve	N523-063
44	Plunger Bar	N523-067
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

\* Not sold separately as a part.

# ND96

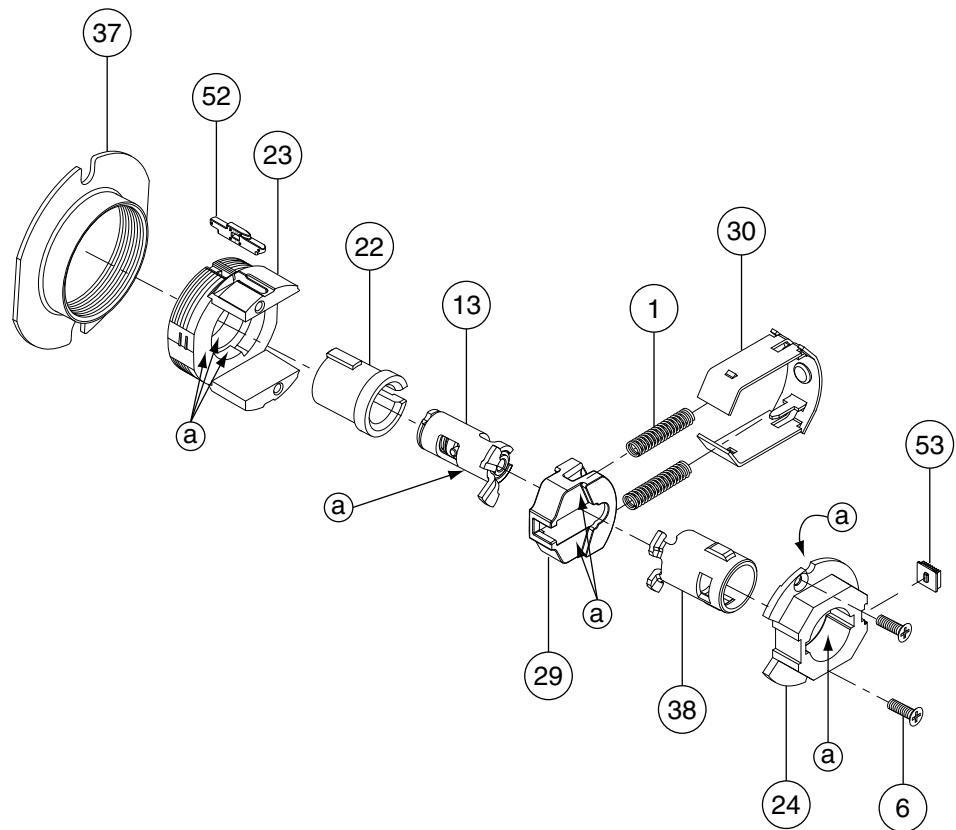Storeroom Lock with Vandlgard®




Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.

Number	Description	Part Number
1	Slide Spring	C503-019
6	Chassis Screw	L583-454
13	Keycam Assembly	N123-013
22	Spindle	N523-013
23	Outside Housing	24088544
24	Inside Hub	24085037

\* Not sold separately as a part.

Number	Description	Part Number
29	Slide	N523-149
30	Slide Clip	N523-025
37	Adjustment Plate	N523-054
38	Spindle	N523-056
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

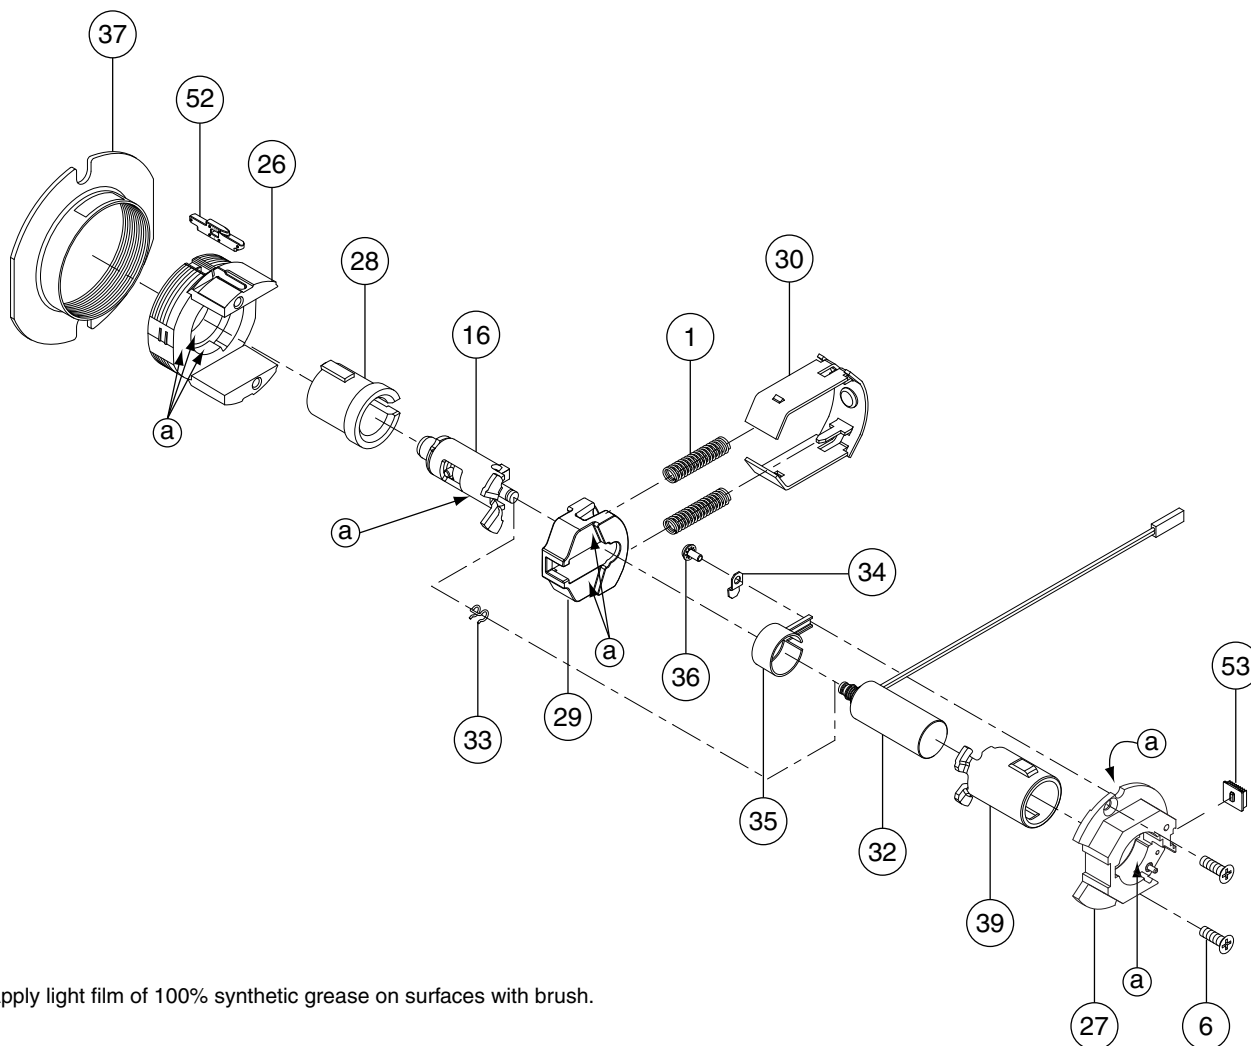**ND96EL****Storeroom Lock with Vandlgard® — Electrically Locked (Fail Safe)**

Ⓐ Apply light film of 100% synthetic grease on surfaces with brush.


Number	Description	Part Number
1	Slide Spring	C503-019
6	Chassis Screw	L583-454
16	Electrified Keycam Assembly—Vandlgard®	N123-025
26	Outside Electrified Housing	24088551
27	Inside Hub—Electrified Functions	24085078
28	Outside Electrified Spindle	N523-019
29	Slide	N523-149
30	Slide Clip	N523-025
32	Solenoid-EL	N523-027

Number	Description	Part Number
33	Clip	N523-028
34	Wire Clamp	N523-029
35	Sleeve	N523-031
36	Wire Clamp Screw	N523-033
37	Adjustment Plate	N523-054
39	Inside Electrified Strike	N523-057
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

\* Not sold separately as a part.

# ND96EU

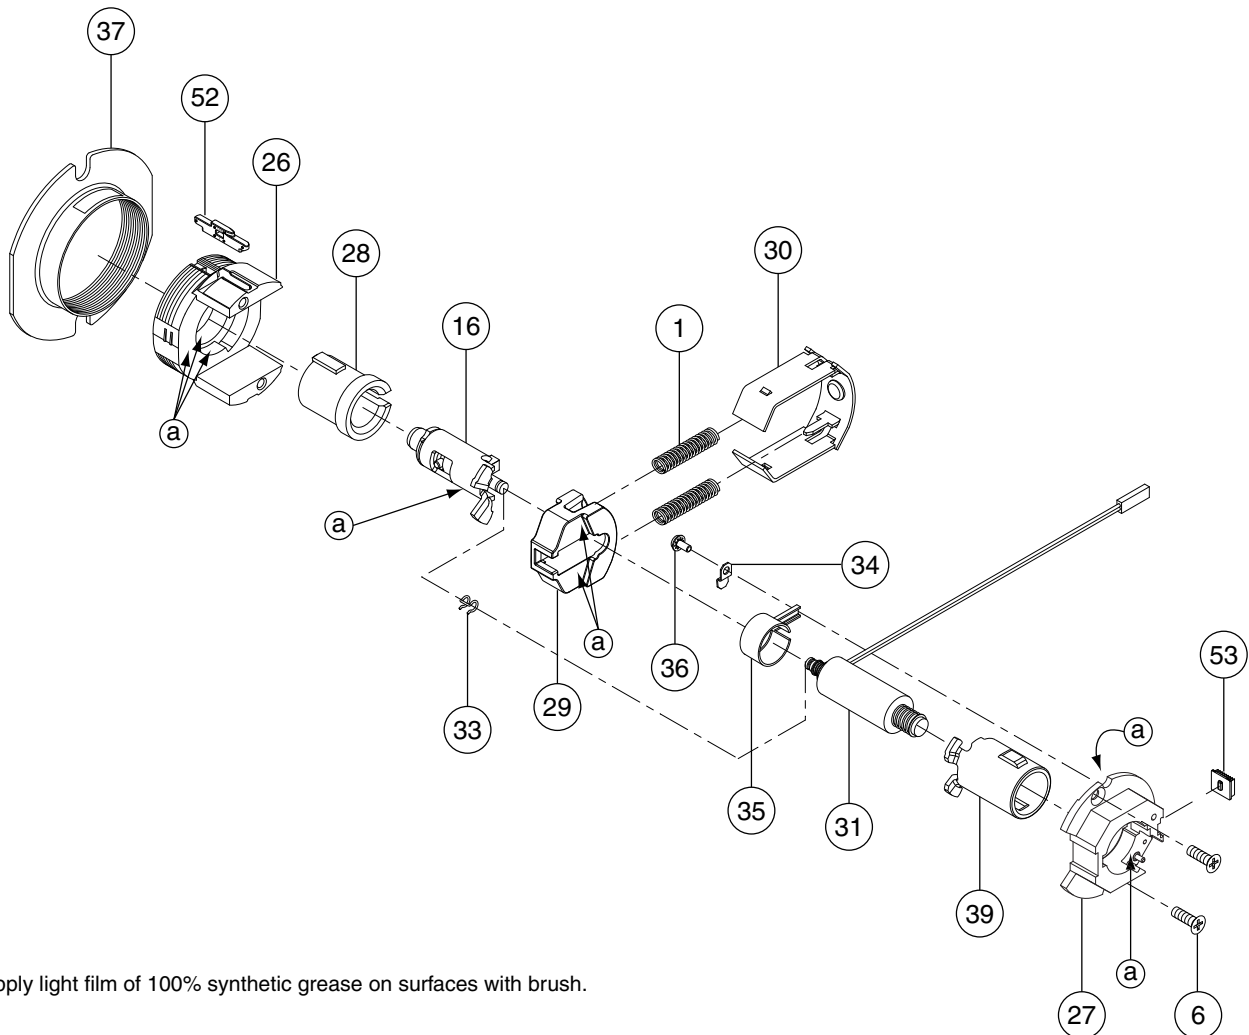Storeroom Lock with Vandlgard® — Electrically Unlocked (Fail Secure)




a Apply light film of 100% synthetic grease on surfaces with brush.

Number	Description	Part Number
1	Slide Spring	C503-019
6	Chassis Screw	L583-454
16	Electrified Keycam Assembly—Vandlgard®	N123-025
26	Outside Electrified Housing	24088551
27	Inside Hub—Electrified Functions	24085078
28	Outside Electrified Spindle	N523-019
29	Slide	N523-149
30	Slide Clip	N523-025
31	Solenoid—EU	N523-026

\* Not sold separately as a part.

Number	Description	Part Number
33	Clip	N523-028
34	Wire Clamp	N523-029
35	Sleeve	N523-031
36	Wire Clamp Screw	N523-033
37	Adjustment Plate	N523-054
39	Inside Electrified Spindle	N523-057
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

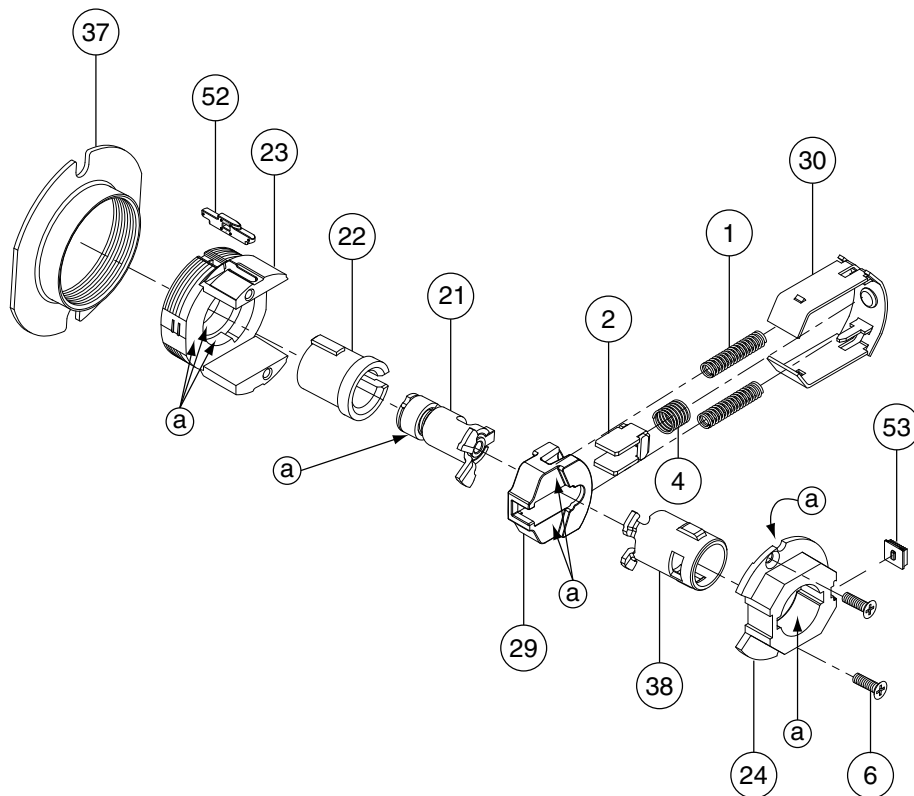**ND97****Corridor Lock with Vandlgard®**


(a) Apply light film of 100% synthetic grease on surfaces with brush.

Number	Description	Part Number
1	Slide Spring	C503-019
2	Restoring Slide Catch	C604-187
4	Slide Catch Spring	C604-191
6	Chassis Screw	L583-454
21	Keycam Assembly	N123-097
22	Spindle	N523-013
23	Outside Housing	24088544

\* Not sold separately as a part.

Number	Description	Part Number
24	Inside Hub	24085037
29	Slide	N523-149
30	Slide Clip	N523-025
37	Adjustment Plate	N523-054
38	Spindle	N523-056
52	Gauge Insert	23988066
53	Insert, Inside Hub	N523-160*

# **ND10** **Passage Latch**

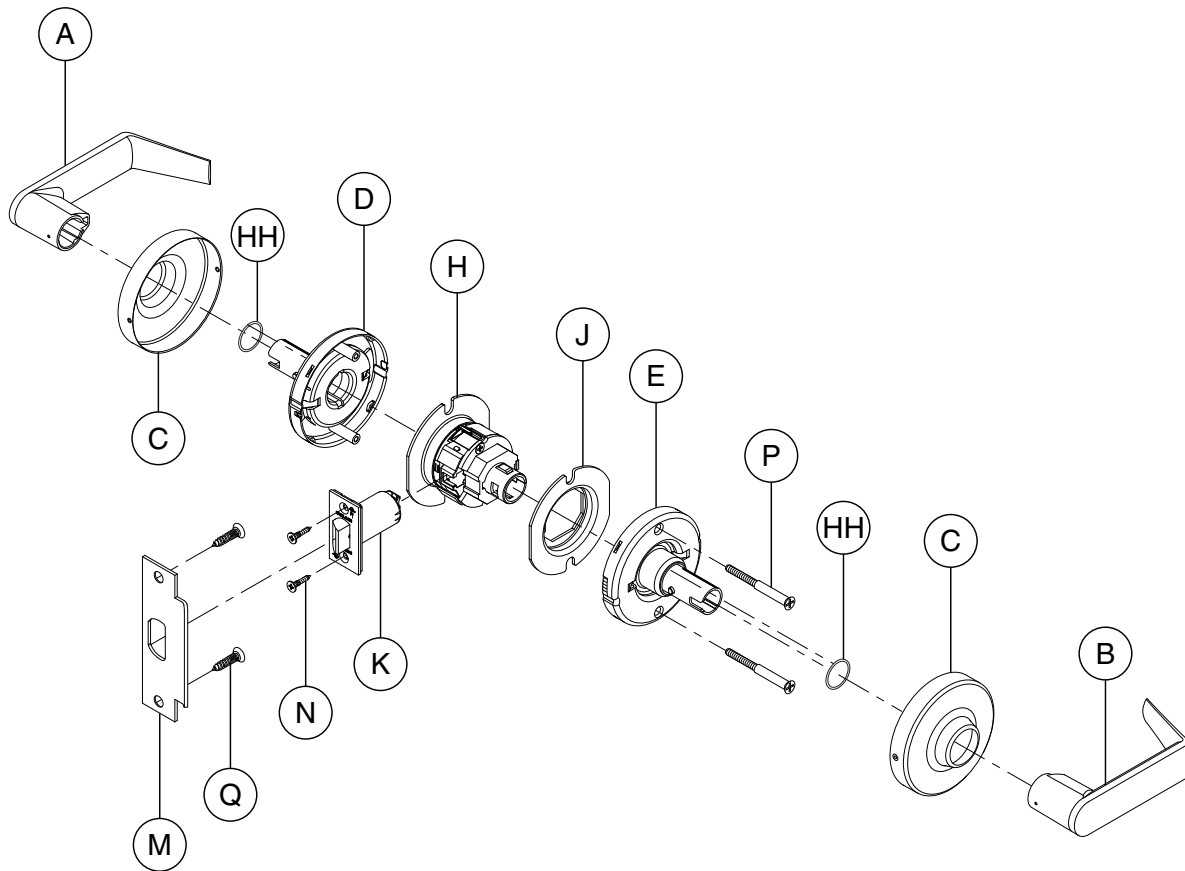

Letter	Description	Part Number
A	Outside Lever—Closed	03-030
B	Inside Lever—Closed	03-030
C	Rose	03-042
D	Outside Spring Cage—Passage	N123-043
E	Inside Spring Cage—Standard	N123-032
H	Chassis	24088254 ♦
J	Anti-Rotation Plate	N523-055


♦ Chassis part number is for reference only.

Letter	Description	Part Number
K	Springlatch	13-048
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
HH	Soft Durometer Spacer	24055246



## ND12
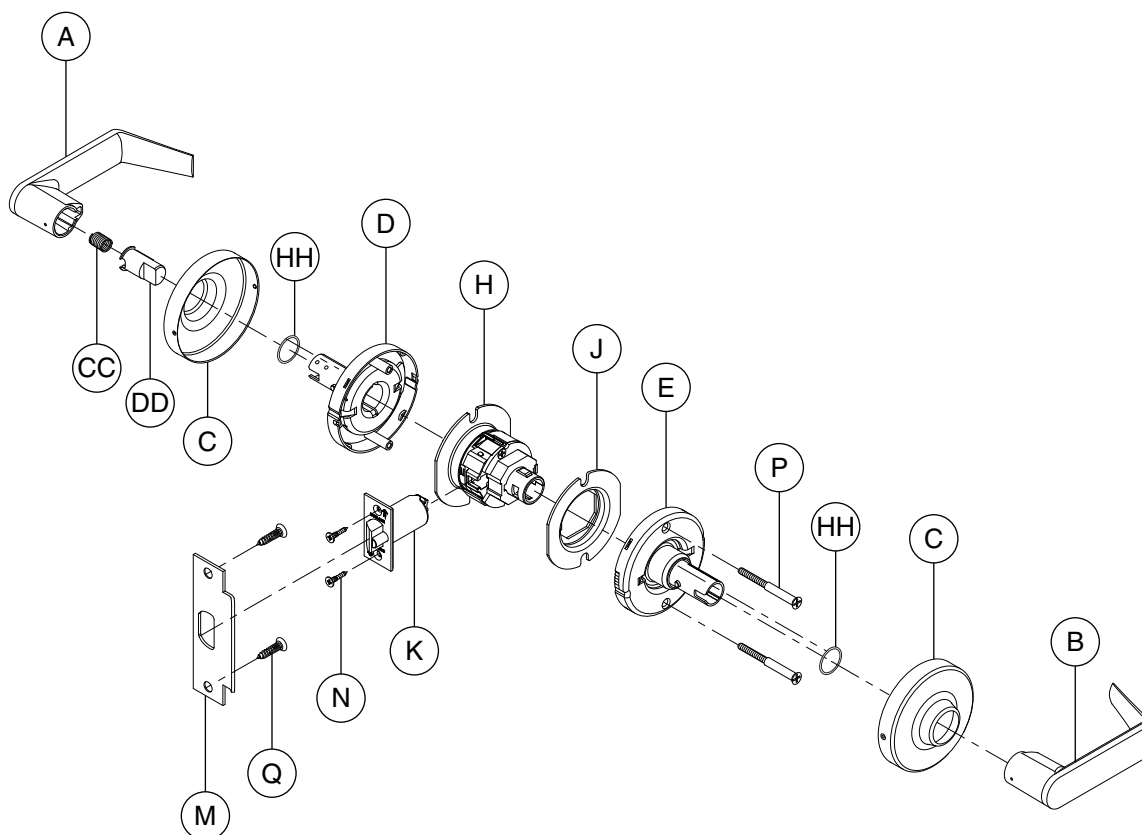
### Exit Lock




Letter	Description	Part Number
A	Outside Lever—Closed	03-030
B	Inside Lever—Closed	03-030
C	Rose	03-042
D	Outside Spring Cage—Passage	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	24088262 ♦
J	Anti-Rotation Plate	N523-055
K	Springlatch	13-048

♦ Chassis part number is for reference only.

Letter	Description	Part Number
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
CC	Spring	C503-331
DD	Catch Stop	N523-041
HH	Soft Durometer Spacer	24055246

# ND12 RX

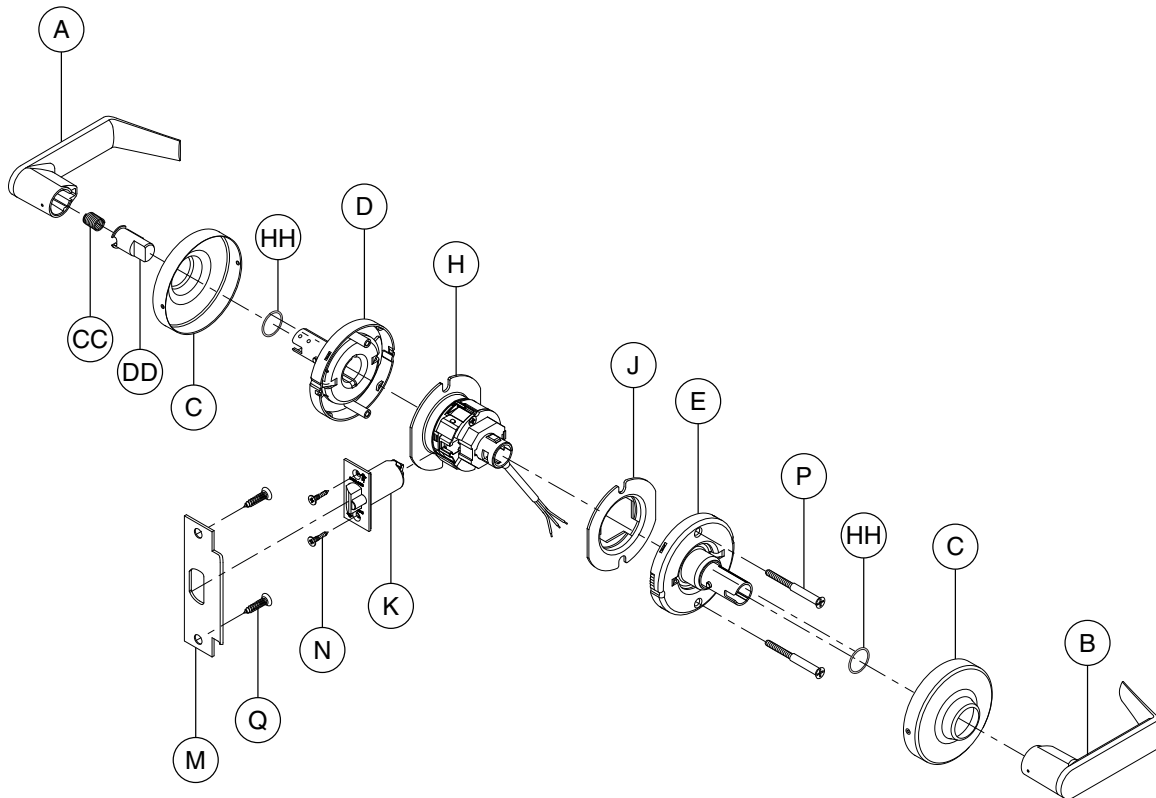
## Exit Lock Request-to-Exit



Letter	Description	Part Number
A	Outside Lever—Closed	03-030
B	Inside Lever—Closed	03-030
C	Rose	03-042
D	Outside Spring Cage—Passage	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	24088437 ♦
J	Anti-Rotation Plate	N523-131
K	Springlatch	13-048

♦ Chassis part number is for reference only.

Letter	Description	Part Number
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
CC	Spring	C503-331
DD	Catch Stop	N523-041
HH	Soft Durometer Spacer	24055246

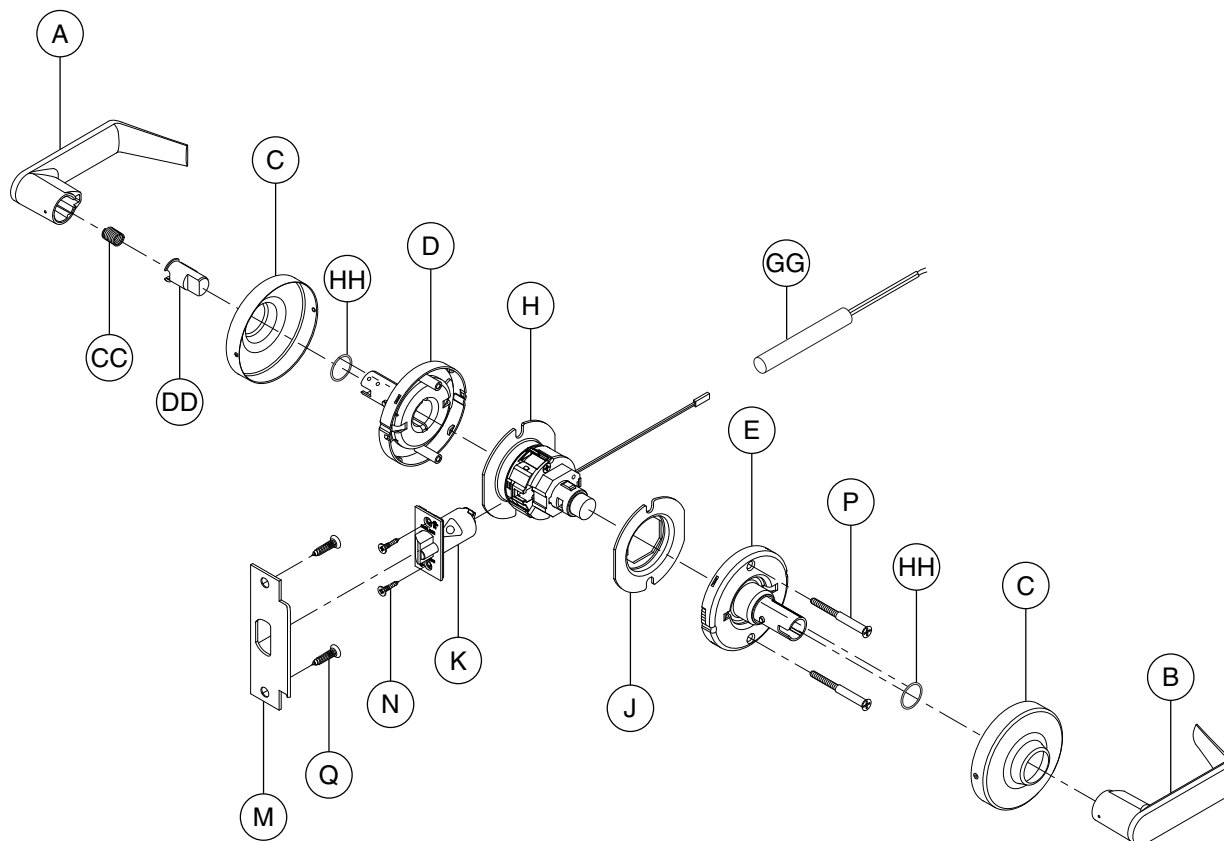**ND12EL****Exit Lock—Electrically Locked (Fail Safe)**

Letter	Description	Part Number
A	Outside Lever—Closed	03-030
B	Inside Lever—Closed	03-030
C	Rose	03-042
D	Outside Spring Cage—Passage	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	63-106 ♦
J	Anti-Rotation Plate	N523-055
K	Electrified Latch	**


\*\* Not sold separately as a part.

♦ Chassis part number is for reference only.

Letter	Description	Part Number
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
CC	Spring	C503-331
DD	Catch Stop	N523-041
GG	AC Rectifier Circuit	C303-439
HH	Soft Durometer Spacer	24055246

# ND12EL RX
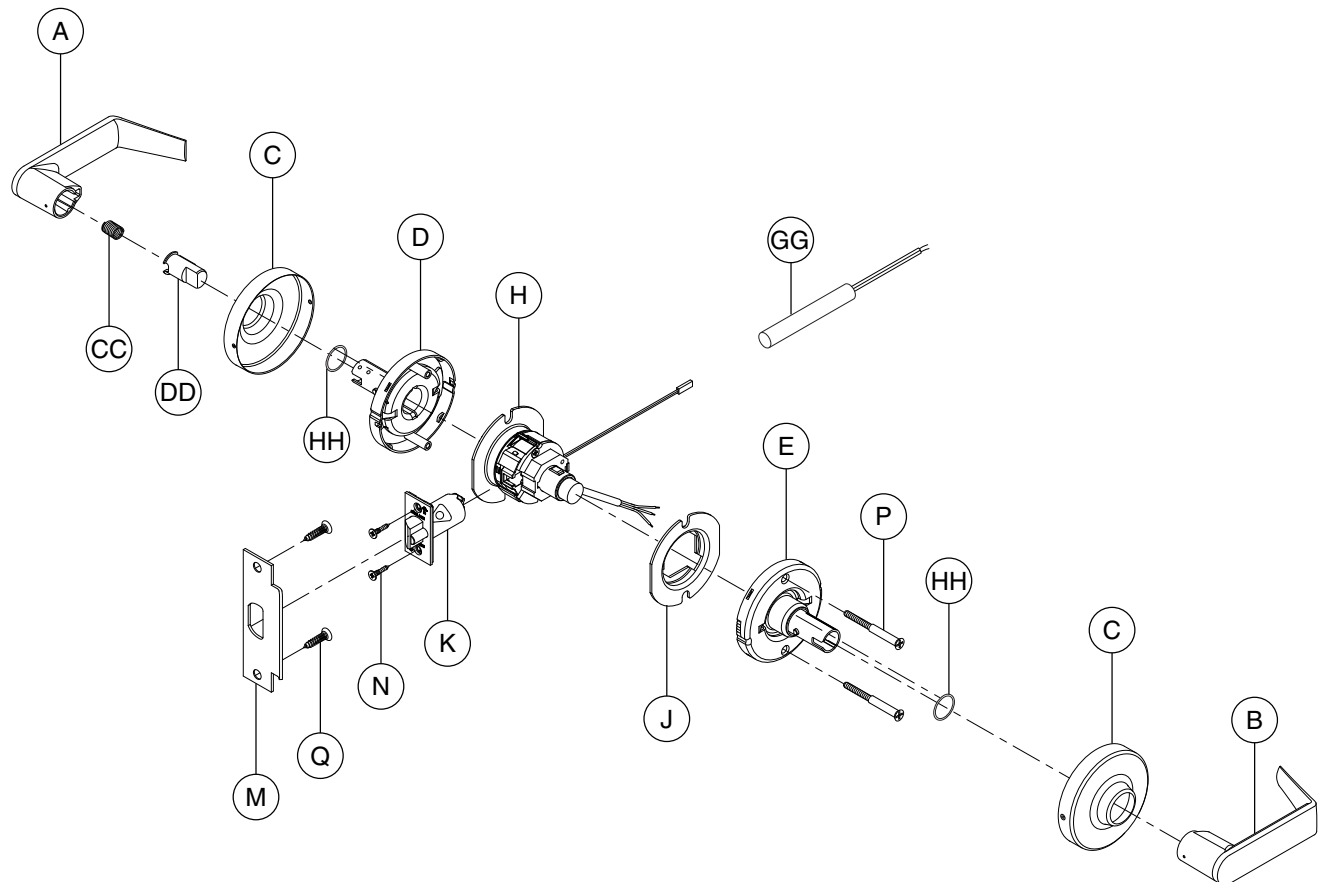
## Exit Lock—Electrically Locked (Fail Safe) Request-to-Exit




Letter	Description	Part Number
A	Outside Lever—Closed	03-030
B	Inside Lever—Closed	03-030
C	Rose	03-042
D	Outside Spring Cage—Passage	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	63-215♦
J	Anti-Rotation Plate	N523-131
K	Electrified Latch	**

\*\* Not sold separately as a part.

♦ Chassis part number is for reference only.

Letter	Description	Part Number
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
CC	Spring	C503-331
DD	Catch Stop	N523-041
GG	AC Rectifier Circuit	C303-439
HH	Soft Durometer Spacer	24055246

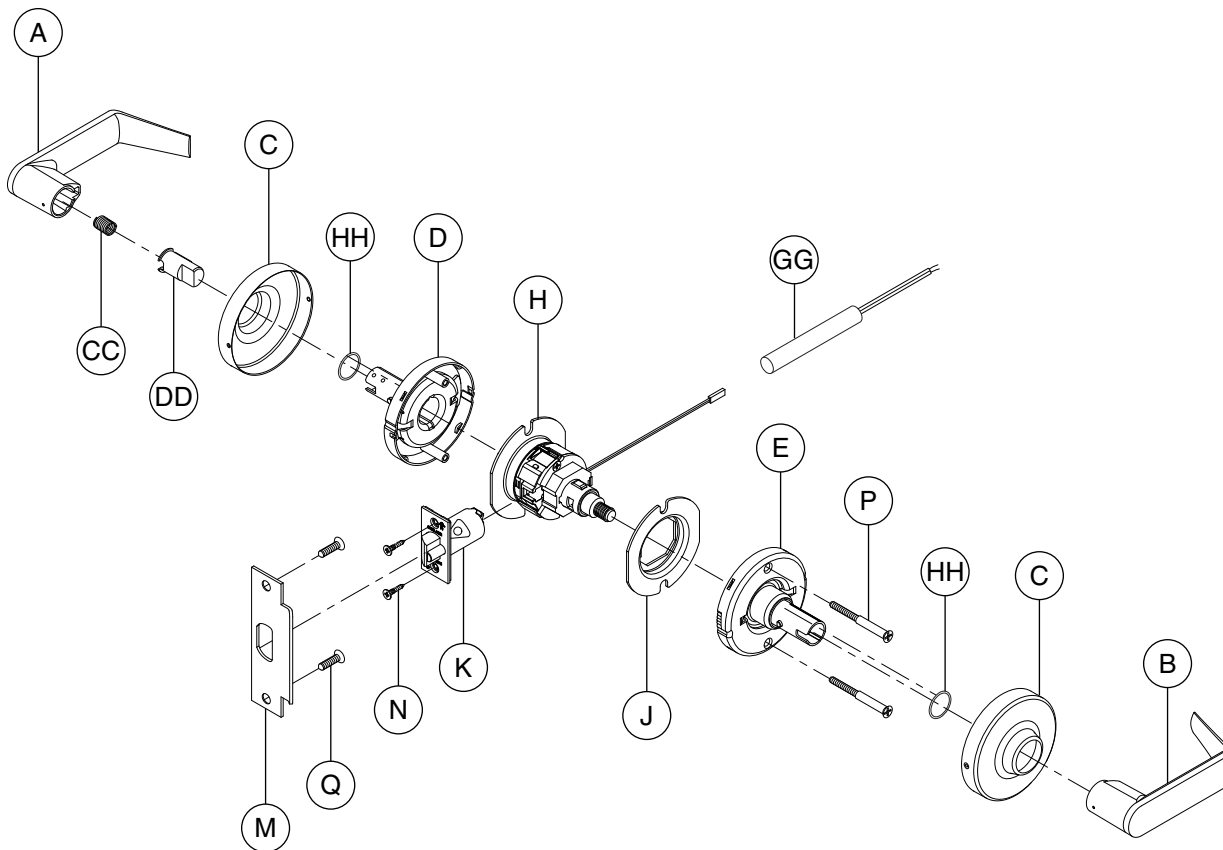**ND12EU****Exit Lock and Storeroom Lock—Electrically Unlocked (Fail Secure)**

Letter	Description	Part Number
A	Outside Lever—Closed	03-030
B	Inside Lever—Closed	03-030
C	Rose	03-042
D	Outside Spring Cage—Passage	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	63-105♦
J	Anti-Rotation Plate	N523-055
K	Electrified Latch	**


\*\* Not sold separately as a part.

♦ Chassis part number is for reference only.

Letter	Description	Part Number
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
CC	Spring	C503-331
DD	Catch Stop	N523-041
GG	AC Rectifier Circuit	C303-439
HH	Soft Durometer Spacer	24055246

# ND12EU RX

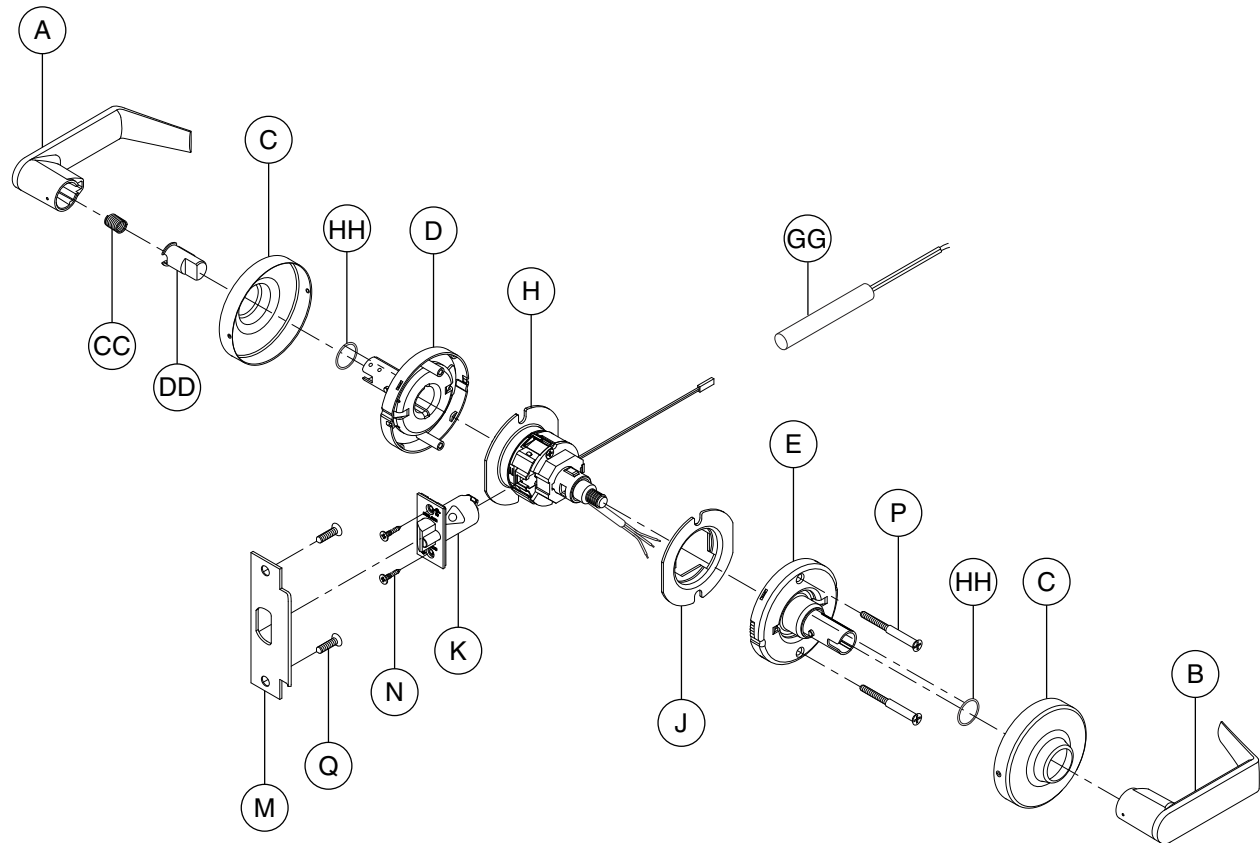Exit Lock and Storeroom Lock—Electrically Unlocked (Fail Secure) Request-to-Exit




Letter	Description	Part Number
A	Outside Lever—Closed	03-030
B	Inside Lever—Closed	03-030
C	Rose	03-042
D	Outside Spring Cage—Passage	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	63-216♦
J	Anti-Rotation Plate	N523-131
K	Electrified Latch	**

\*\* Not sold separately as a part.

♦ Chassis part number is for reference only.

Letter	Description	Part Number
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
CC	Spring	C503-331
DD	Catch Stop	N523-041
GG	AC Rectifier Circuit	C303-439
HH	Soft Durometer Spacer	24055246

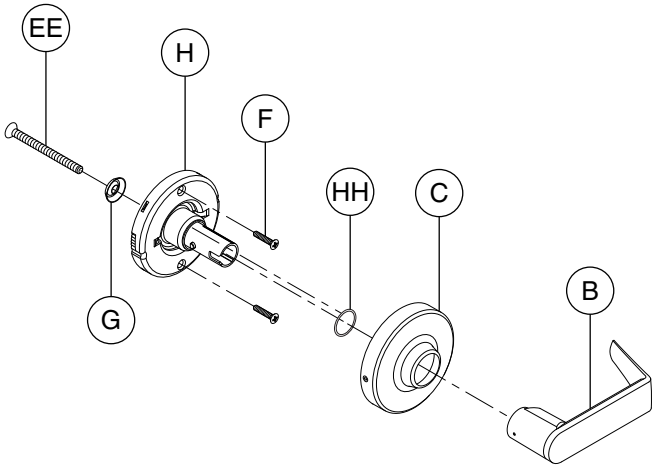ND170  
Single Dummy Trim



**N523-105 Threaded Mounting Rod**  
Use for mounting two (2) ND170 sets  
as double dummy set.


Letter	Description	Part Number
B	Inside Lever—Closed	03-030
C	Rose	03-042
F	Dummy Mounting Screws	L583-133
G	Washer	A501-171

♦ Chassis part number is for reference only.

Letter	Description	Part Number
H	Chassis	63-104 ♦
EE	Dummy Through Bolt	N523-092
HH	Soft Durometer Spacer	24055246

# ND25
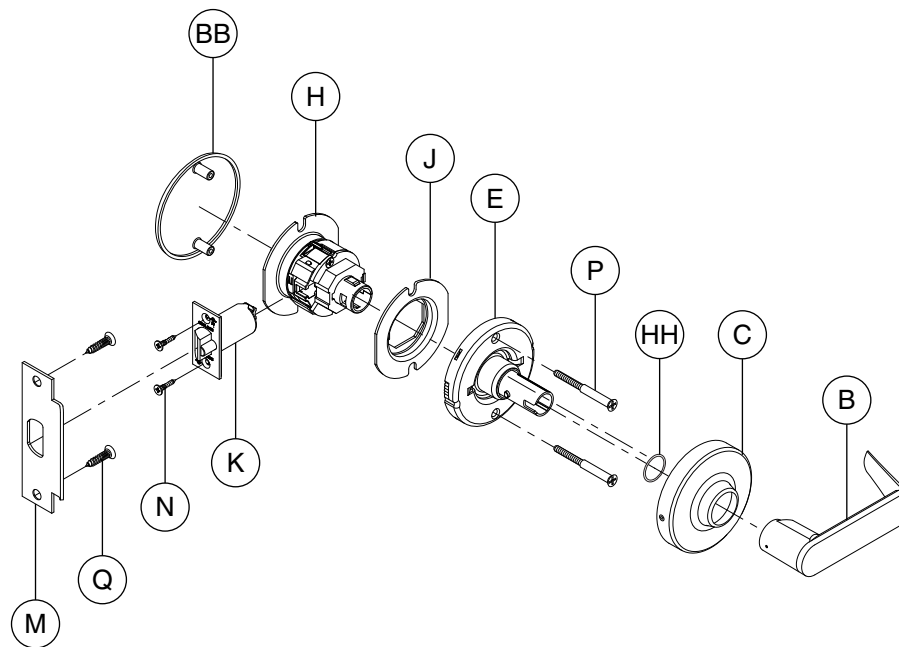
## Exit Lock with Blank Plate




Letter	Description	Part Number
B	Inside Lever—Closed	03-030
C	Rose	03-042
E	Inside Spring Cage—Standard	N123-032
H	Chassis	24088296 ♦
J	Anti-Rotation Plate	N523-055
K	Deadlatch	13-047

♦ Chassis part number is for reference only.

Letter	Description	Part Number
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
BB	Blank Plate	N523-002
HH	Soft Durometer Spacer	24055246

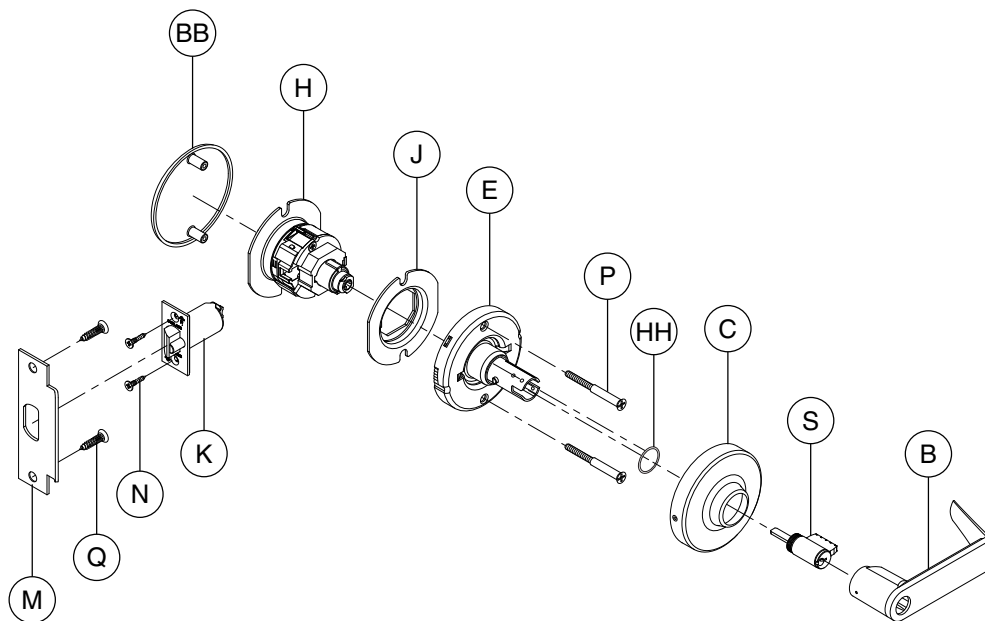

**ND25X70****Special—Classroom Exit Lock****ND25X70PD (shown), ND25X70RD\*, ND25X70GD\***

Letter	Description	Part Number
B	Inside Lever—Open	03-031
C	Rose	03-042
E	Inside Spring Cage—Keyed Inside except SFIC	N123-021
H	Chassis	24088213♦
J	Anti-Rotation Plate	N523-055
K	Deadlatch	13-047
M	Strike	10-025

\* For RD (Full Size Interchangeable Core) and GD (SFIC) inside trim configurations, see page 81.

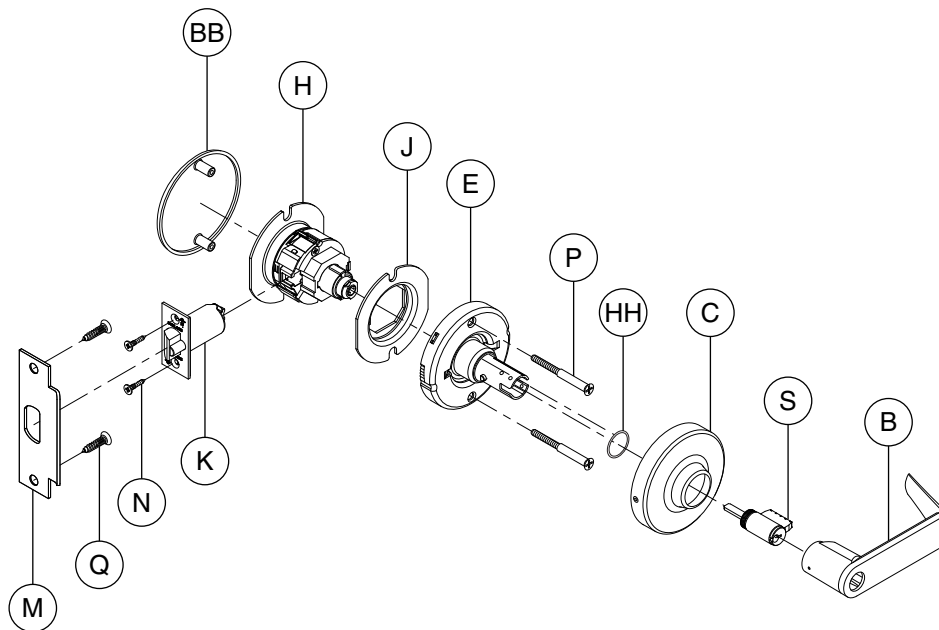
♦ Chassis part number is for reference only.

Letter	Description	Part Number
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
S	Cylinder—6-Pin	23-065
BB	Blank Plate	N523-002
HH	Soft Durometer Spacer	24055246

# ND25X80

Special—Storeroom Exit Lock

ND25X80PD (shown), ND25X80RD\*, ND25X80GD\*




Letter	Description	Part Number
B	Inside Lever—Open	03-031
C	Rose	03-042
E	Inside Spring Cage—Keyed Inside except SFIC	N123-021
H	Chassis	24088221 ♦
J	Anti-Rotation Plate	N523-055
K	Deadlatch	13-047
M	Strike	10-025

Letter	Description	Part Number
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
S	Cylinder—6-Pin	23-065
BB	Blank Plate	N523-002
HH	Soft Durometer Spacer	24055246

\* For RD (Full Size Interchangeable Core) and GD (SFIC) inside trim configurations, see page 81.

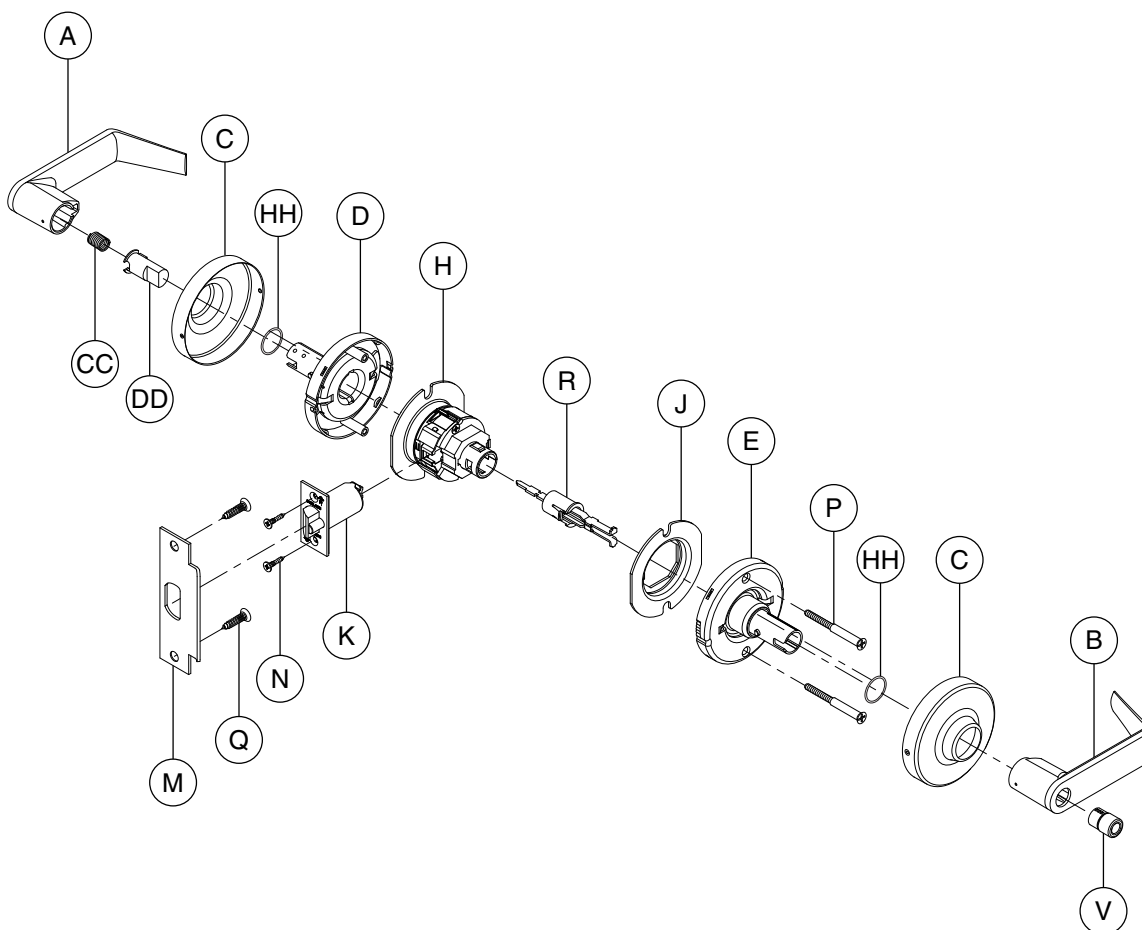♦ Chassis part number is for reference only.

**ND30****Special—Patio Lock**


Letter	Description	Part Number
A	Outside Lever—Closed	03-030
B	Inside Lever—Open	03-031
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	24088304♦
J	Anti-Rotation Plate	N523-055
K	Deadlatch	13-047
Mt	Strike	10-025

♦ Chassis part number is for reference only.

Letter	Description	Part Number
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
R	Plunger—Push Button	N123-028
V	Push Button	N523-000
CC	Spring	C503-331
DD	Catch Stop	N523-041
HH	Soft Durometer Spacer	24055246

# ND40

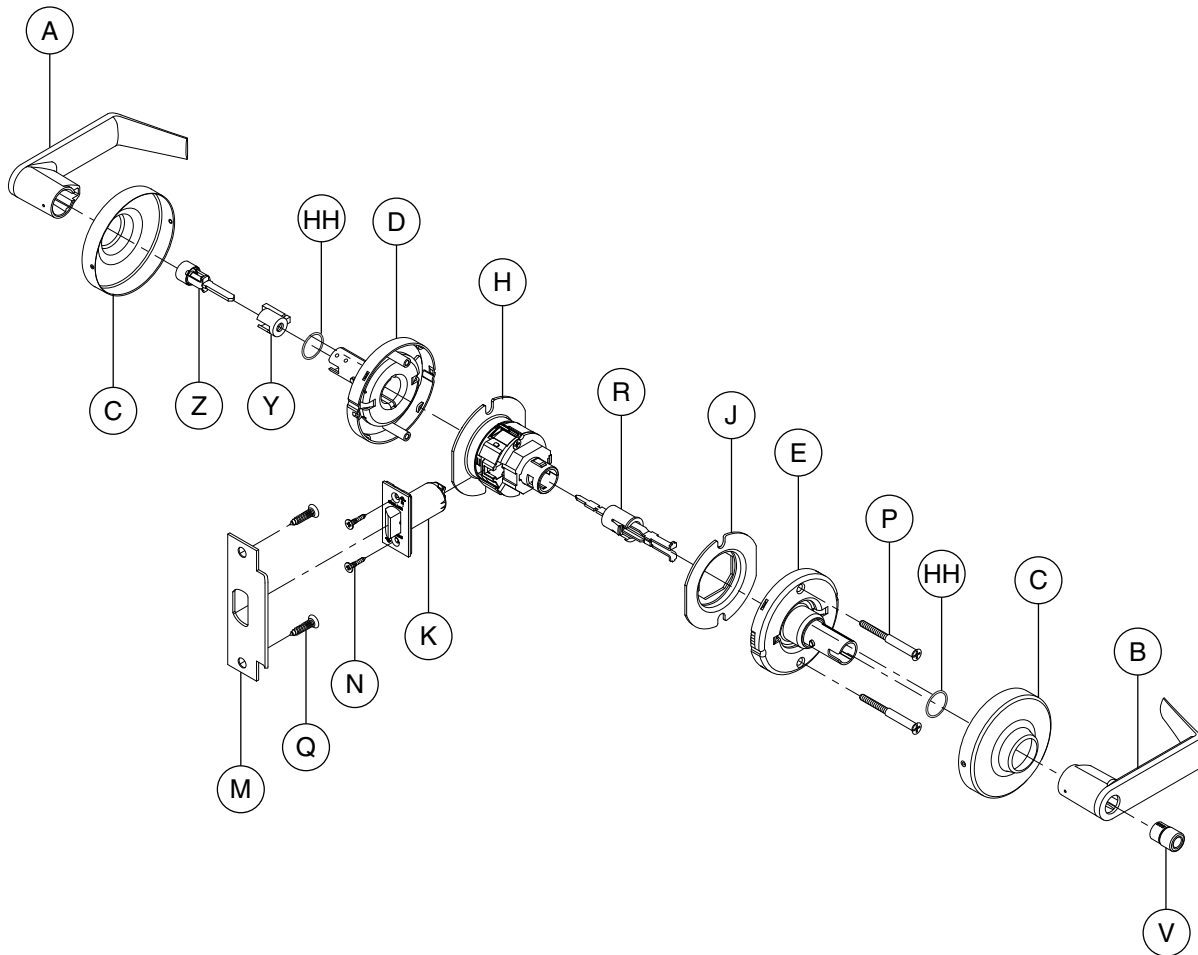
## Bath/Bedroom Privacy Lock



Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Open	03-031
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	24088304 ♦
J	Anti-Rotation Plate	N523-055
K	Springlatch	13-048
M	Strike	10-025

♦ Chassis part number is for reference only.

Letter	Description	Part Number
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
R	Plunger—Push Button	N123-028
V	Push Button	N523-000
Y	Emergency Cylinder	N523-020
Z	Emergency Button and Plunger	N123-034
HH	Soft Durometer Spacer	24055246

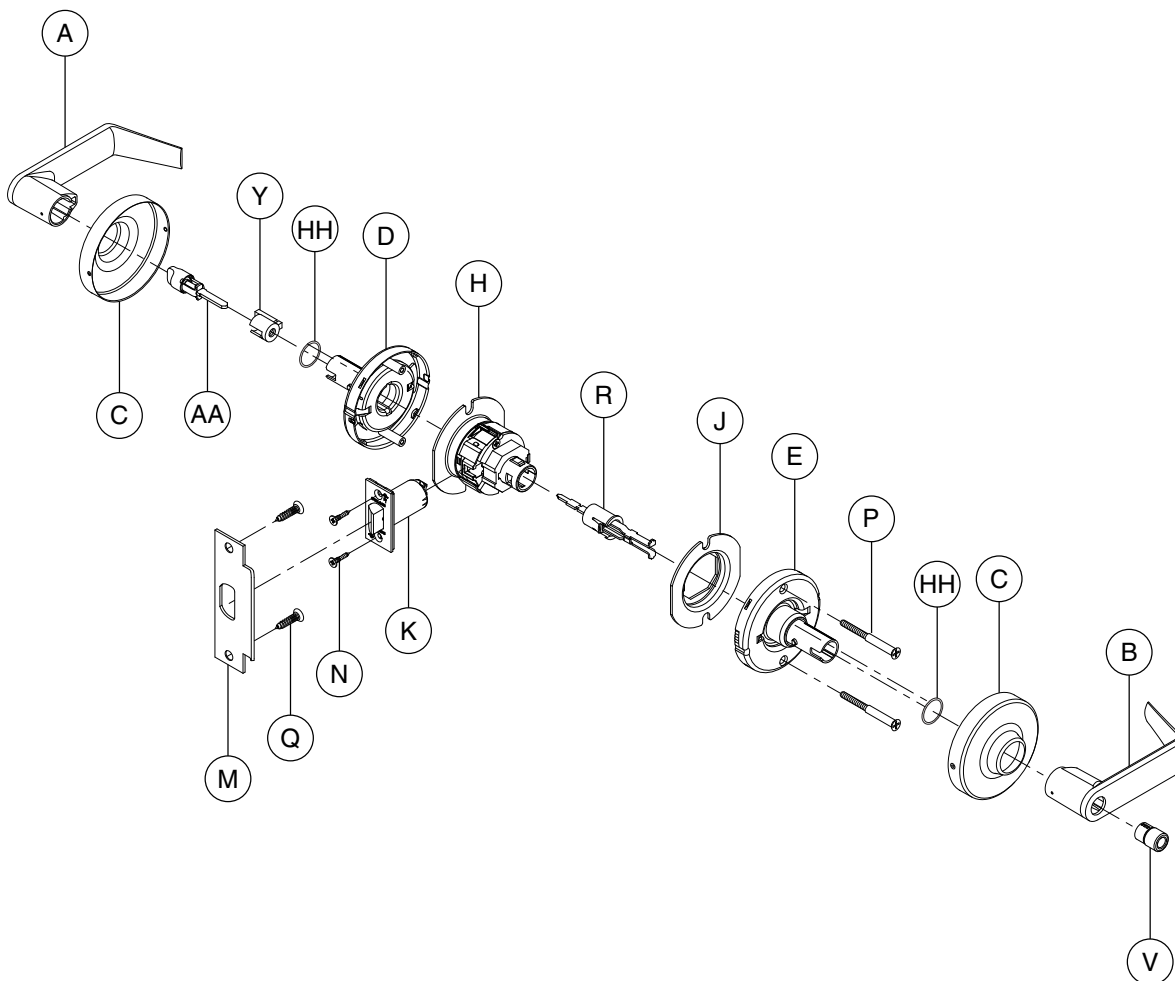**ND44****Hospital Privacy Lock**

Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Open	03-031
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	24088304 ♦
J	Anti-Rotation Plate	N523-055
K	Springlatch	13-048
M	Strike	10-025


♦ Chassis part number is for reference only.

Letter	Description	Part Number
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
R	Plunger—Push Button	N123-028
V	Push Button	N523-000
Y	Emergency Cylinder	N523-020
AA	Emergency Turn Button and Plunger	N123-035
HH	Soft Durometer Spacer	24055246

# ND50
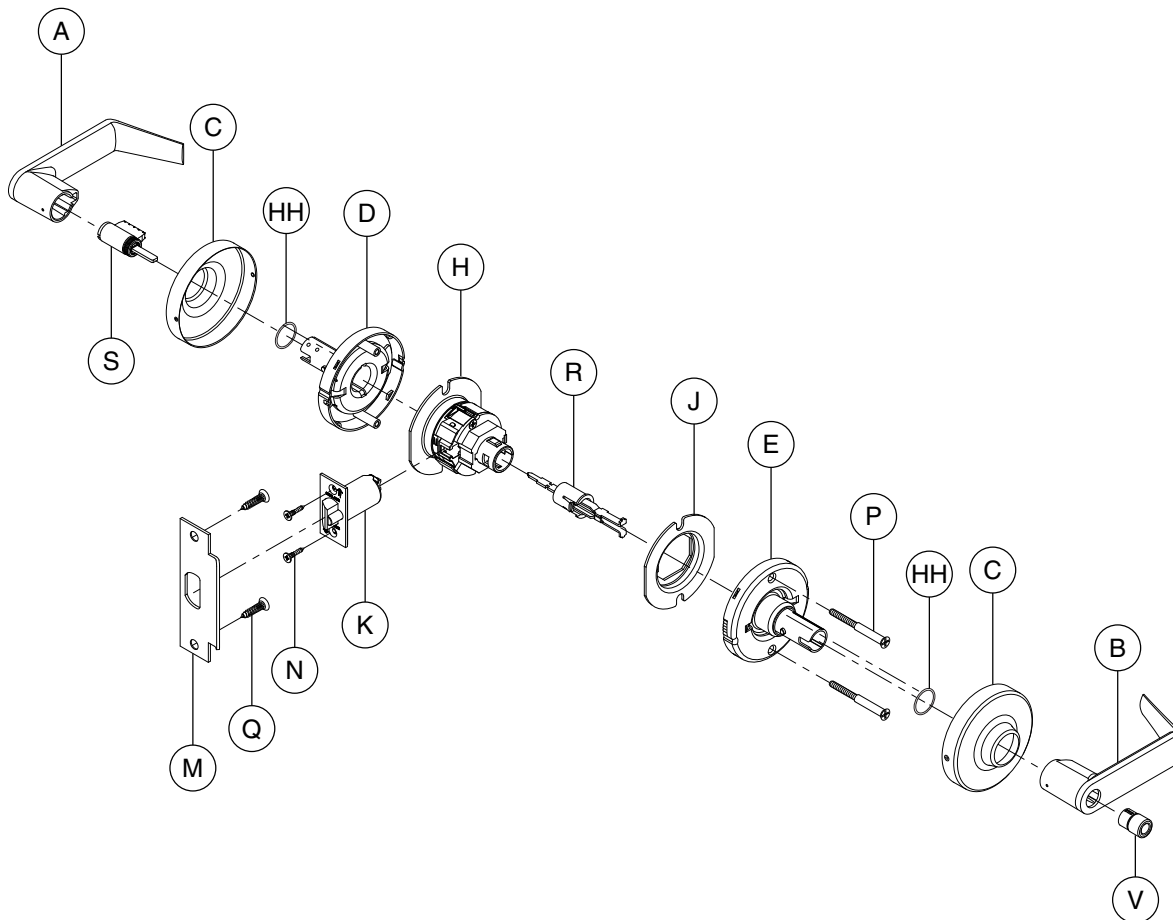
## Entrance/Office Lock

ND50PD (shown), ND50RD\*, ND50GD\*




Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Open	03-031
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	24088247 ♦
J	Anti-Rotation Plate	N523-055
K	Deadlatch	13-047

Letter	Description	Part Number
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
R	Plunger—Push Button	N123-028
S	Cylinder—6-Pin	23-065
V	Push Button	N523-000
HH	Soft Durometer Spacer	24055246

\* For RD (Full Size Interchangeable Core) and GD (SFIC) inside trim configurations, see page 81.

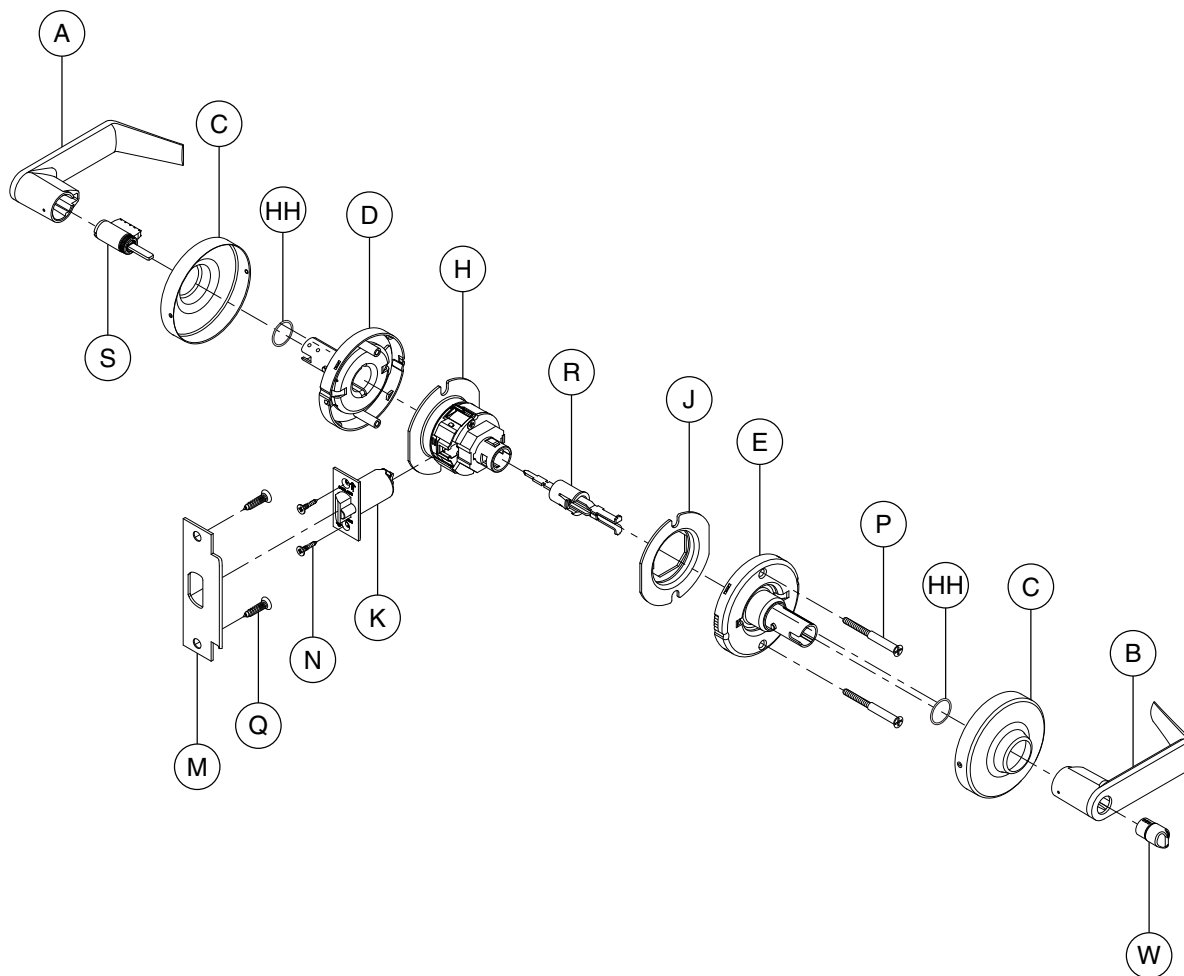♦ Chassis part number is for reference only.

**ND53****Entrance Lock****ND53PD (shown), ND53RD\*, ND53GD\***

Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Open	03-031
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	24088247 ♦
J	Anti-Rotation Plate	N523-055
K	Deadlatch	13-047

\* For RD (Full Size Interchangeable Core) and GD (SFIC) inside trim configurations, see page 81.


♦ Chassis part number is for reference only.

Letter	Description	Part Number
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
R	Plunger—Push and Turn	N123-017
S	Cylinder—6-Pin	23-065
W	Push and Turn Button	N523-001
HH	Soft Durometer Spacer	24055246

# ND60
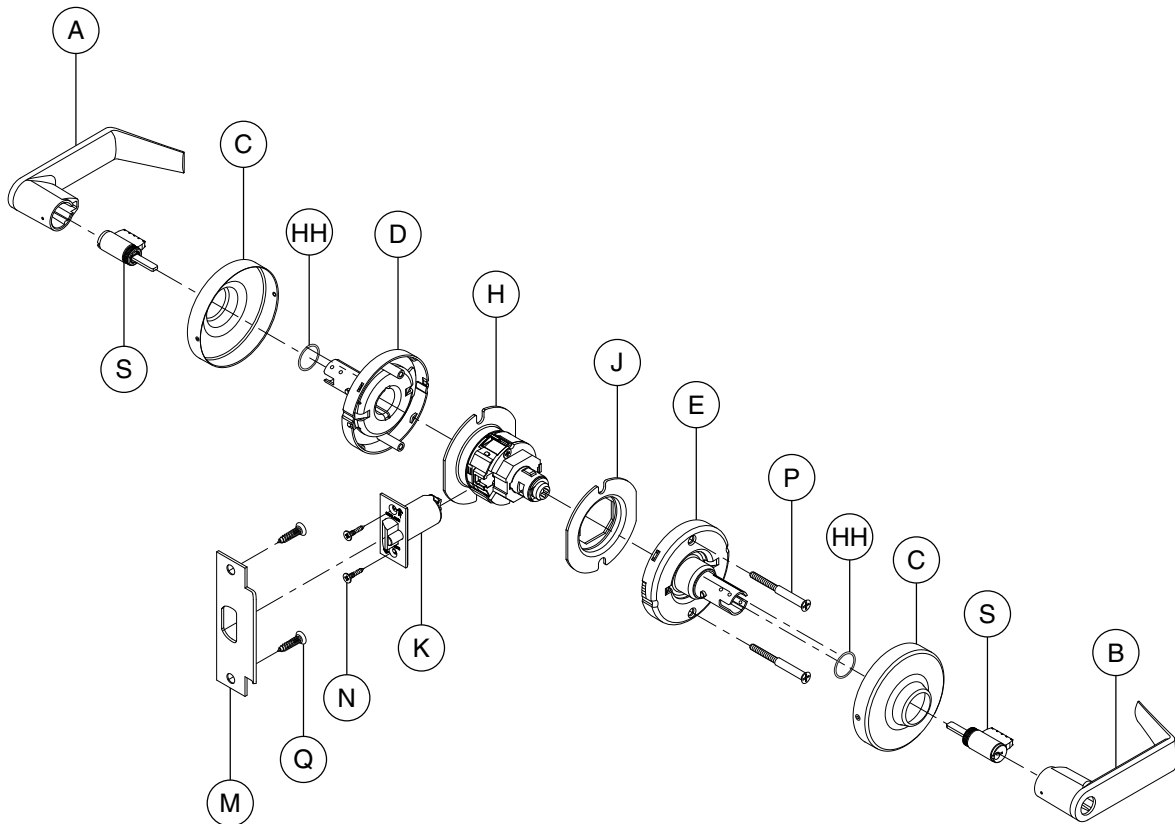
## Vestibule Lock

ND60PD (shown), ND60RD\*, ND60GD\*




Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Open	03-031
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Keyed Inside except SFIC	N123-021
H	Chassis	24088320 ♦
J	Anti-Rotation Plate	N523-055

Letter	Description	Part Number
K	Deadlatch	13-047
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
S	Cylinder—6-Pin	23-065
HH	Soft Durometer Spacer	24055246

\* For RD (Full Size Interchangeable Core) and GD (SFIC) inside trim configurations, see page 81.

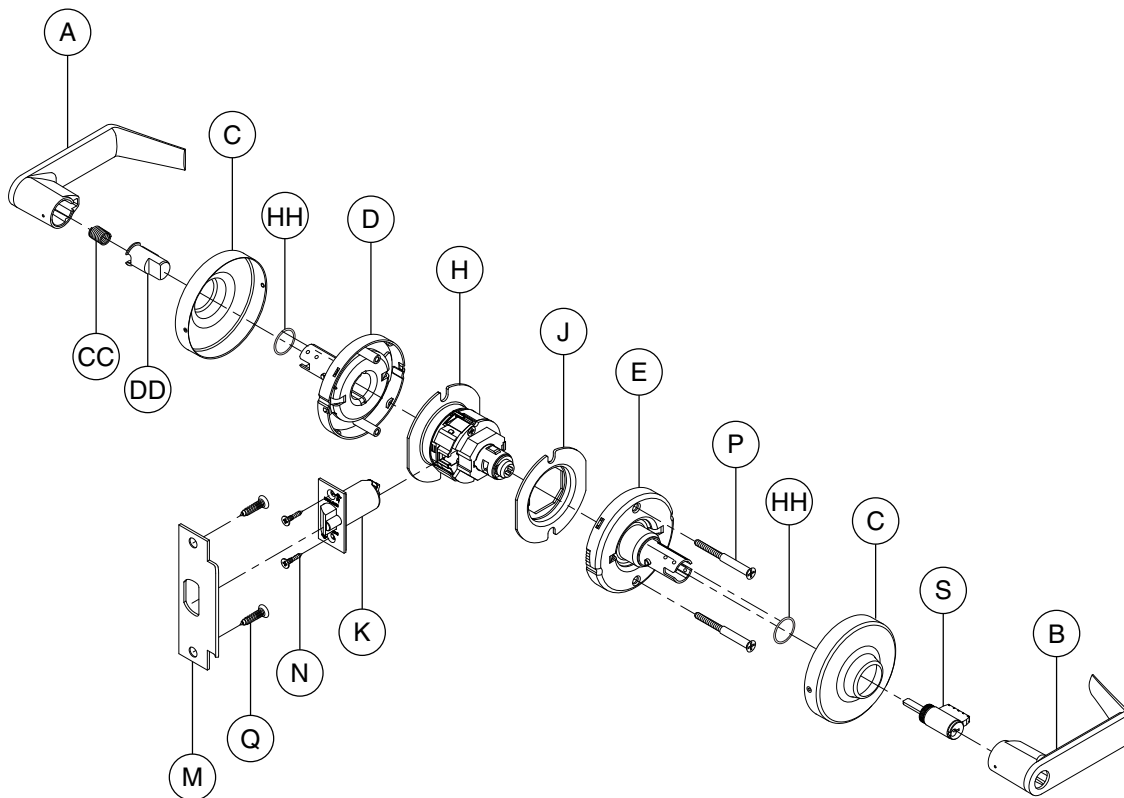♦ Chassis part number is for reference only.



**ND60 with closed outside lever****Special****ND60PD with closed outside lever (shown), ND60RD\*, ND60GD\***

Letter	Description	Part Number
A	Outside Lever—Closed	03-030
B	Inside Lever—Open	03-031
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Keyed Inside except SFIC	N123-021
H	Chassis	24088320 ♦
J	Anti-Rotation Plate	N523-055
K	Deadlatch	13-047

\* For RD (Full Size Interchangeable Core) and GD (SFIC) inside trim configurations, see page 81.

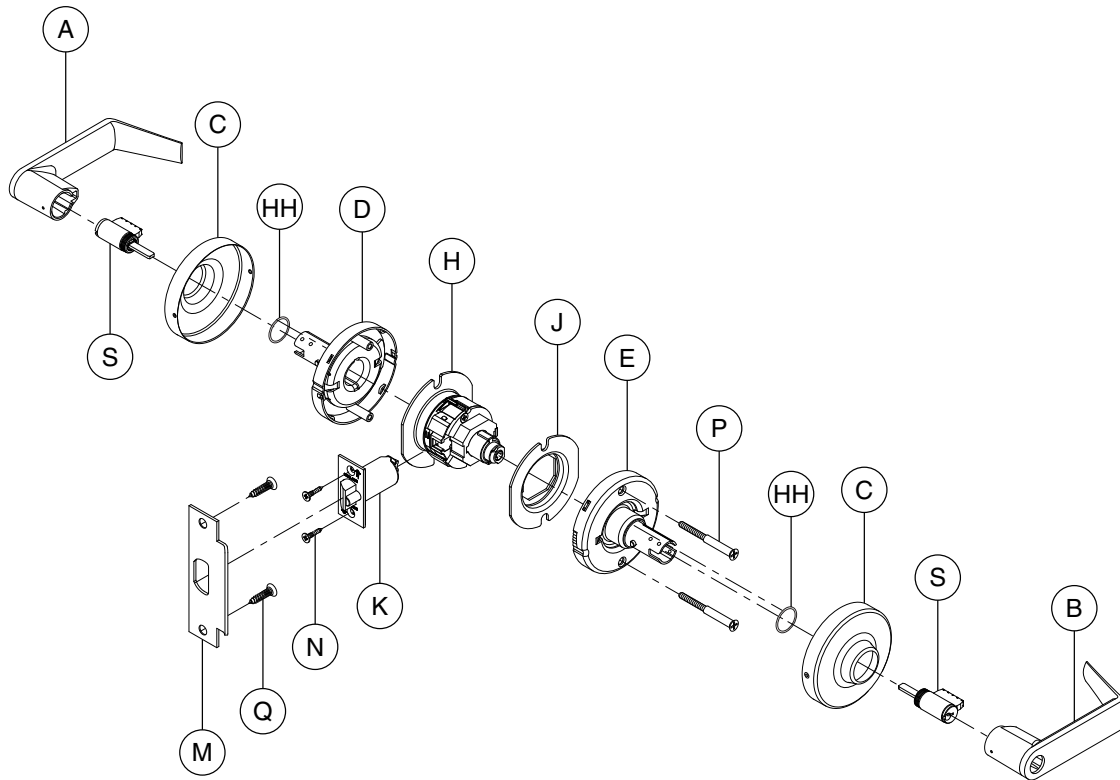
♦ Chassis part number is for reference only.

Letter	Description	Part Number
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
S	Cylinder—6-Pin	23-065
CC	Spring	C503-331
DD	Catch Stop	N523-041
HH	Soft Durometer Spacer	24055246

# ND66

## Store Lock

ND66PD (shown), ND66RD\*, ND66GD\*




Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Open	03-031
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Keyed Inside except SFIC	N123-021
H	Chassis	24088338 ♦
J	Anti-Rotation Plate	N523-055

\* For RD (Full Size Interchangeable Core) and GD (SFIC) inside trim configurations, see page 81.

♦ Chassis part number is for reference only.

Letter	Description	Part Number
K	Deadlatch	13-047
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
S	Cylinder—6-Pin	23-065
HH	Soft Durometer Spacer	24055246

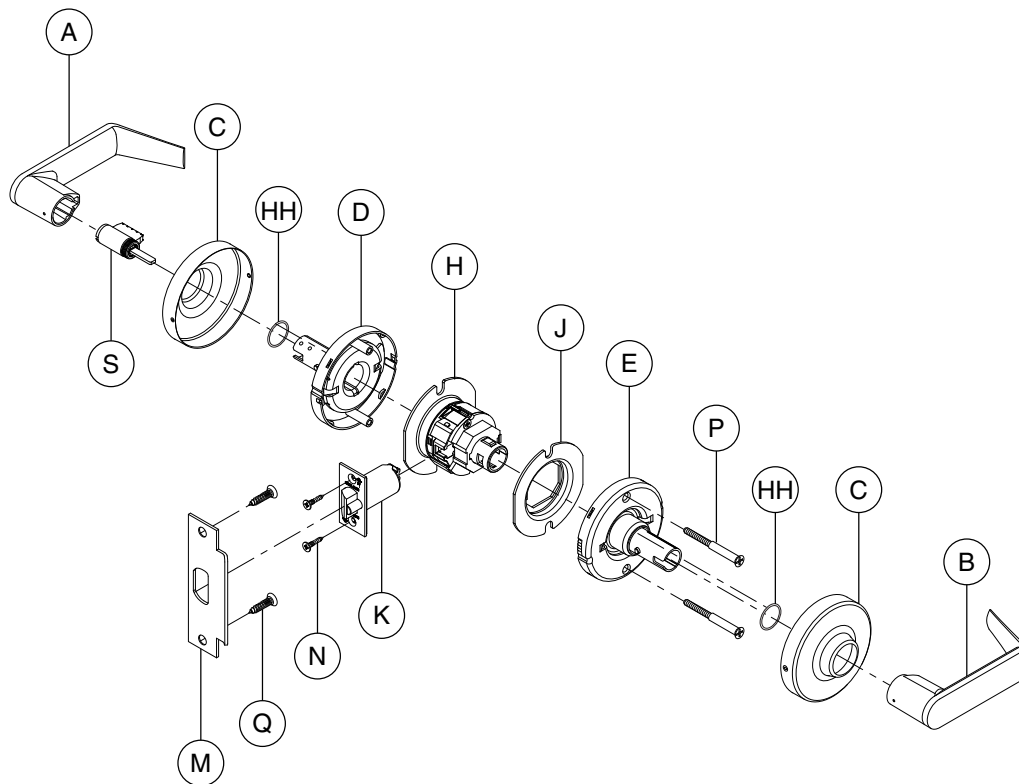**ND70****Classroom Lock****ND70PD (shown), ND70RD\*, ND70GD\***

Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Closed	03-030
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	24088346 ♦
J	Anti-Rotation Plate	N523-055

\* For RD (Full Size Interchangeable Core) and GD (SFIC) inside trim configurations, see page 81.


♦ Chassis part number is for reference only.

Letter	Description	Part Number
K	Deadlatch	13-047
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
S	Cylinder—6-Pin	23-065
HH	Soft Durometer Spacer	24055246

## ND70X80

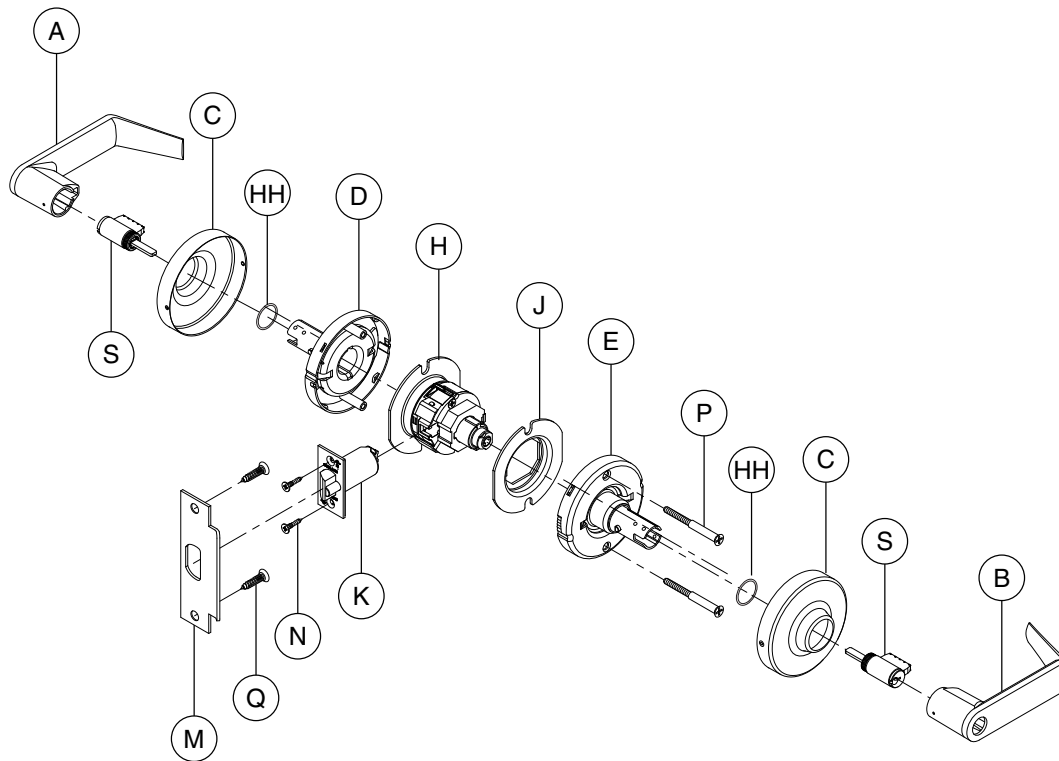Special—Classroom by Storeroom Lock

ND70X80PD (shown), NDX80RD\*, ND70X80GD\*




Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Open	03-031
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Keyed Inside except SFIC	N123-021
H	Chassis	24088239 ♦
J	Anti-Rotation Plate	N523-055

Letter	Description	Part Number
K	Deadlatch	13-047
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
S	Cylinder—6-Pin	23-065
HH	Soft Durometer Spacer	24055246

\* For RD (Full Size Interchangeable Core) and GD (SFIC) inside trim configurations, see page 81.

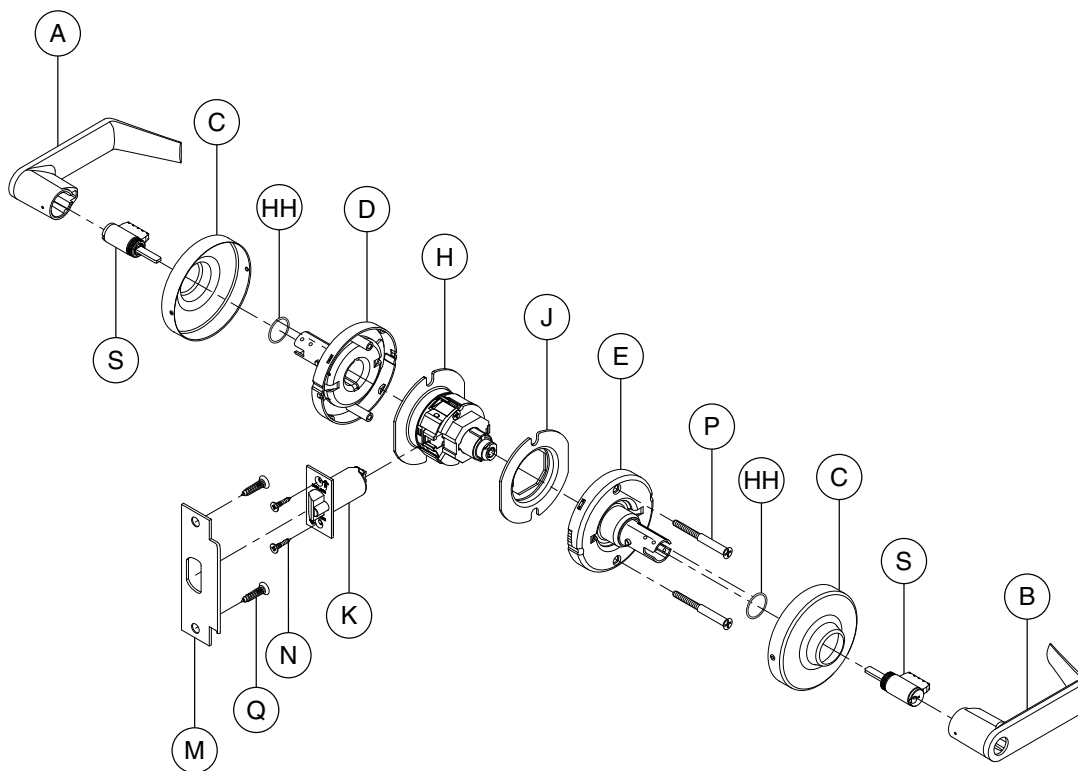♦ Chassis part number is for reference only.

**ND72****Special—Communicating Lock****ND72PD (shown), ND72RD\*, ND72GD\***

Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Open	03-031
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Keyed Inside except SFIC	N123-021
H	Chassis	24088197 ♦
J	Anti-Rotation Plate	N523-055

\* For RD (Full Size Interchangeable Core) and GD (SFIC) inside trim configurations, see page 81.


♦ Chassis part number is for reference only.

Letter	Description	Part Number
K	Deadlatch	13-047
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
S	Cylinder—6-Pin	23-065
HH	Soft Durometer Spacer	24055246

## ND72 Vandlgard®

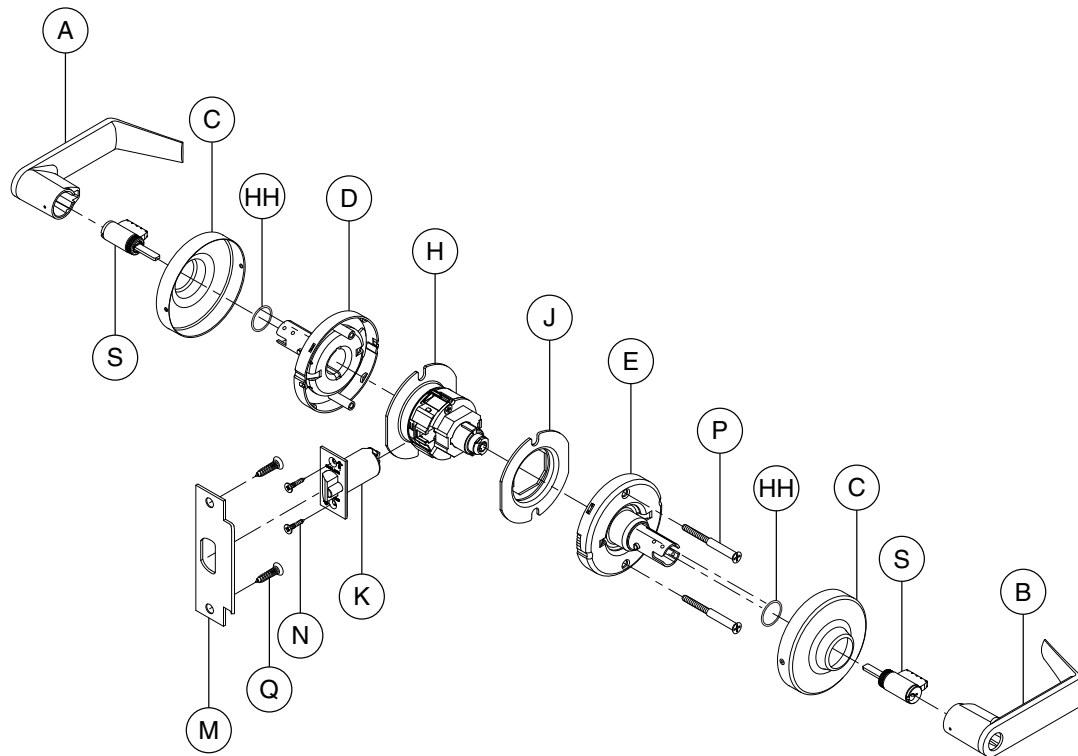Special—Communicating Lock with Vandlgard®

ND72PD Vandlgard® (shown), ND72RD Vandlgard®\*, ND72GD Vandlgard®\*




Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Open	03-031
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Keyed Inside except SFIC	N123-021
H	Chassis	24088205 ♦
J	Anti-Rotation Plate	N523-055

Letter	Description	Part Number
K	Deadlatch	13-047
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
S	Cylinder—6-Pin	23-065
HH	Soft Durometer Spacer	24055246

\* For RD (Full Size Interchangeable Core) and GD (SFIC) inside trim configurations, see page 81.

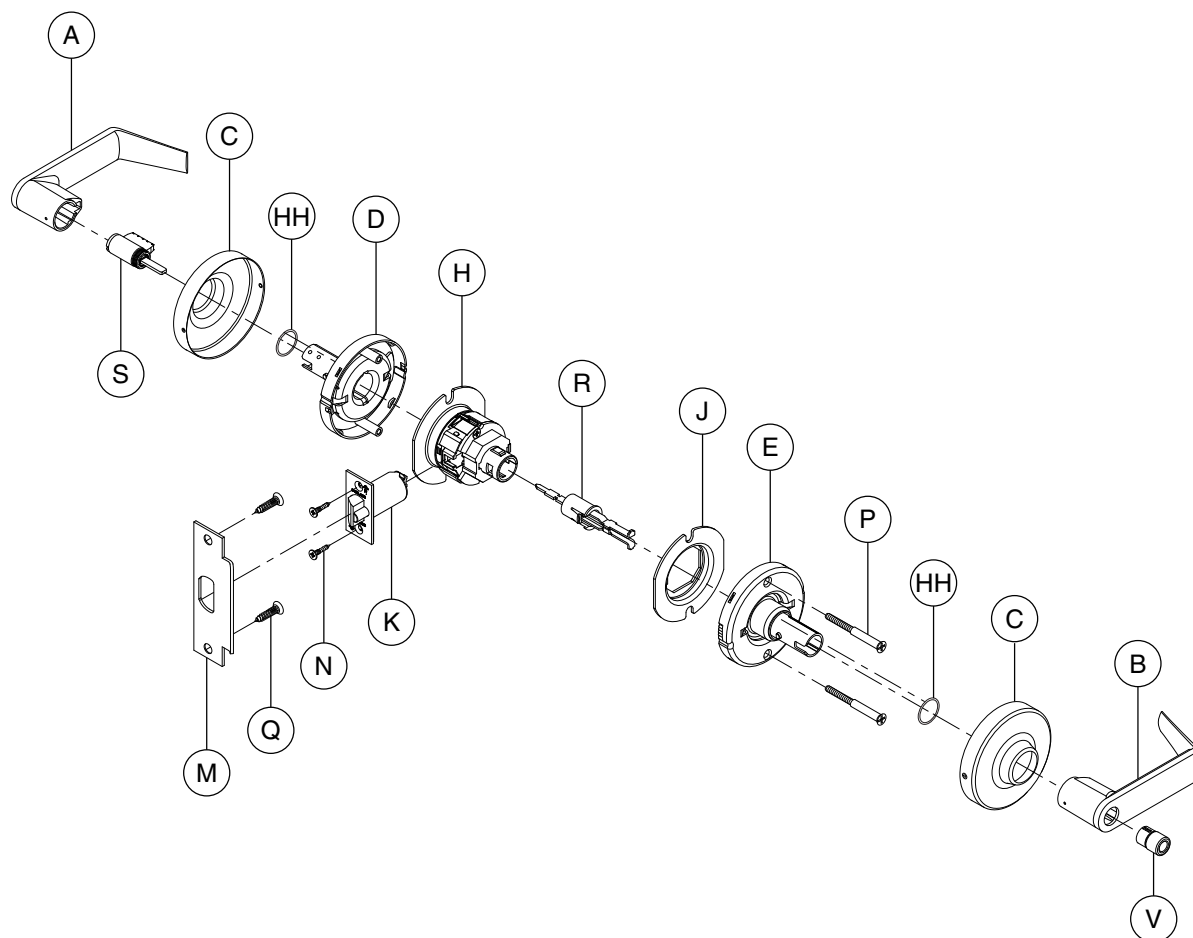♦ Chassis part number is for reference only.

**ND73****Corridor Lock****ND73PD (shown), ND73RD\*, ND73GD\***

Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Open	03-031
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	24088353 ♦
J	Anti-Rotation Plate	N523-055
K	Deadlatch	13-047

Letter	Description	Part Number
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
R	Plunger—Push Button	N123-028
S	Cylinder—6-Pin	23-065
V	Push Button	N523-000
HH	Soft Durometer Spacer	24055246


\* For RD (Full Size Interchangeable Core) and GD (SFIC) inside trim configurations, see page 81.

♦ Chassis part number is for reference only.

# ND75
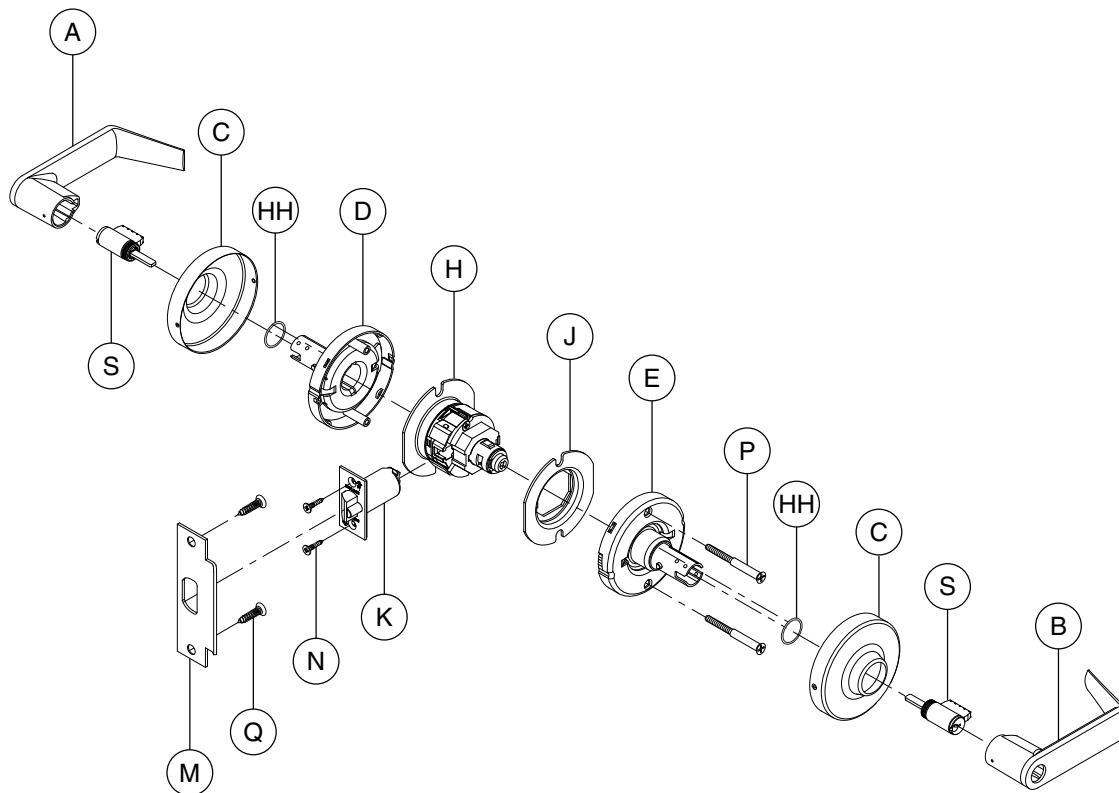
## Classroom Security Lock

ND75PD (shown), ND75RD\*, ND75GD\*




Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Open	03-031
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Keyed Inside except SFIC	N123-021
H	Chassis	24088163 ♦
J	Anti-Rotation Plate	N523-055

\* For RD (Full Size Interchangeable Core) and GD (SFIC) inside trim configurations, see page 81.

♦ Chassis part number is for reference only.

Letter	Description	Part Number
K	Deadlatch	13-047
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
S	Cylinder—6-Pin	23-065
HH	Soft Durometer Spacer	24055246

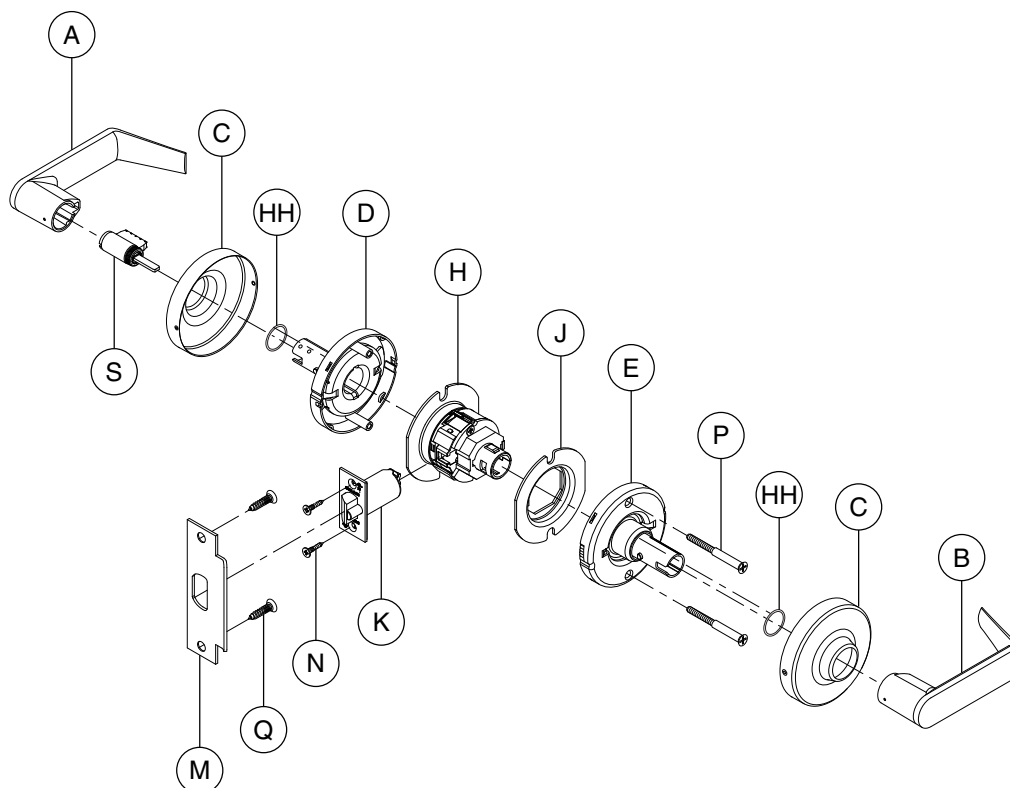

**ND80****Storeroom Lock****ND80PD (shown), ND80RD\*, ND80GD\***

Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Closed	03-030
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	24088262 ♦
J	Anti-Rotation Plate	N523-055

\* For RD (Full Size Interchangeable Core) and GD (SFIC) inside trim configurations, see page 81.

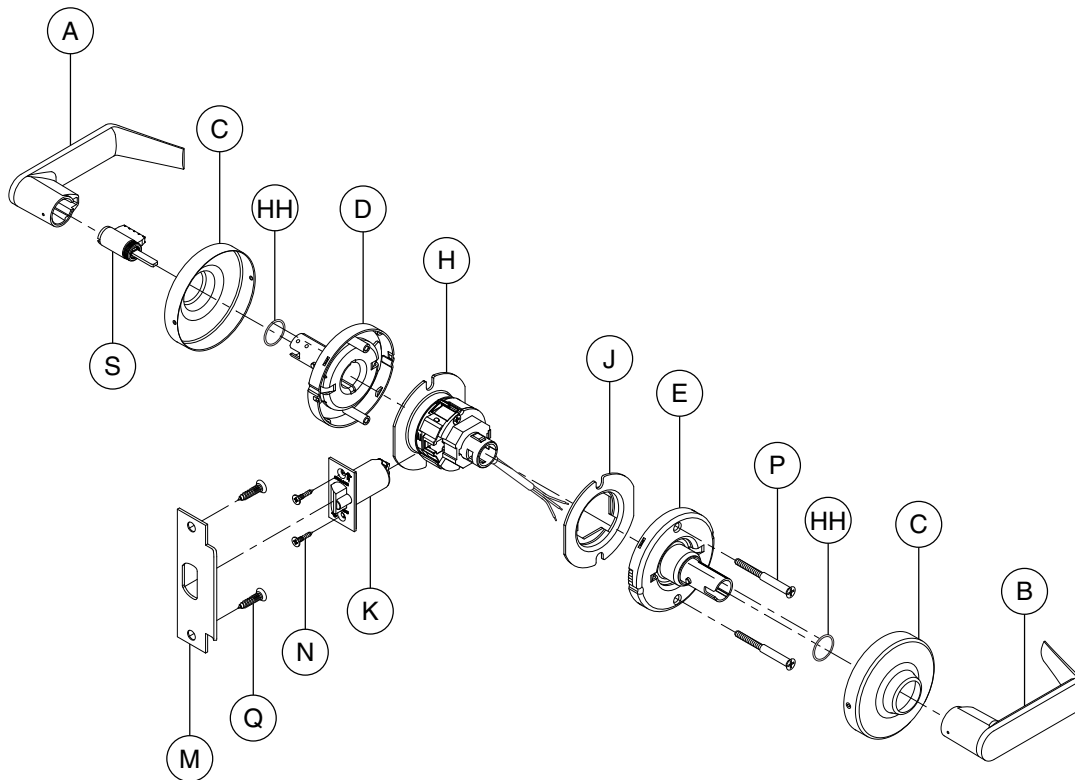
♦ Chassis part number is for reference only.

Letter	Description	Part Number
K	Deadlatch	13-047
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
S	Cylinder—6-Pin	23-065
HH	Soft Durometer Spacer	24055246

# ND80 RX

## Storeroom Lock with Request-to-Exit

ND80PD RX (shown), ND80RD RX, ND80GD RX




Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Closed	03-030
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	24088437 ♦
J	Anti-Rotation Plate	N523-131

Letter	Description	Part Number
K	Deadlatch	13-047
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
S	Cylinder—6-Pin	23-065
HH	Soft Durometer Spacer	24055246

\* For RD (Full Size Interchangeable Core) and GD (SFIC) inside trim configurations, see page 81.

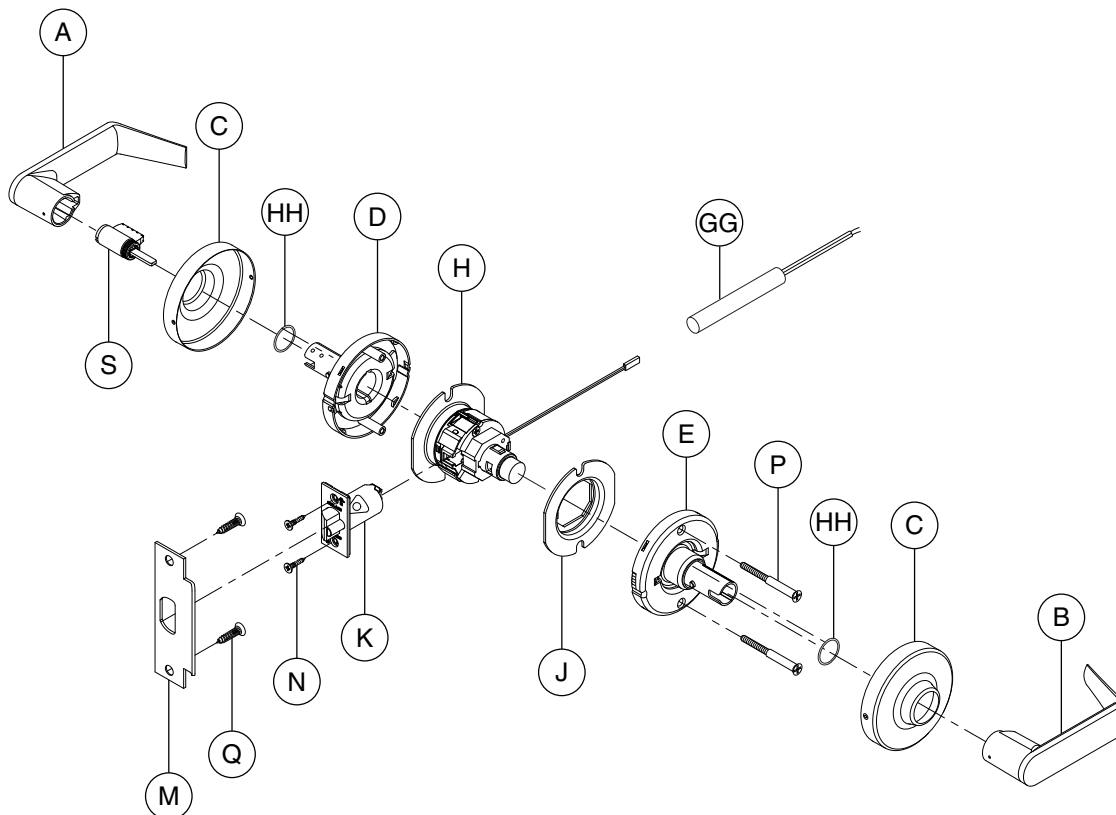♦ Chassis part number is for reference only.

**ND80EL****Storeroom Lock—Electrically Locked (Fail Safe)****ND80ELPD (shown), ND80ELRD\*, ND80ELGD\***

Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Closed	03-030
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	63-106 ♦
J	Anti-Rotation Plate	N523-055

\* For RD (Full Size Interchangeable Core) and GD (SFIC) outside trim configurations, see page 81.


\*\* Not sold separately as a part.

♦ Chassis part number is for reference only.

Letter	Description	Part Number
K	Electrified Latch	**
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
S	Cylinder—6-Pin	23-065
GG	AC Rectifier Circuit	C303-439
HH	Soft Durometer Spacer	24055246

## ND80EL RX

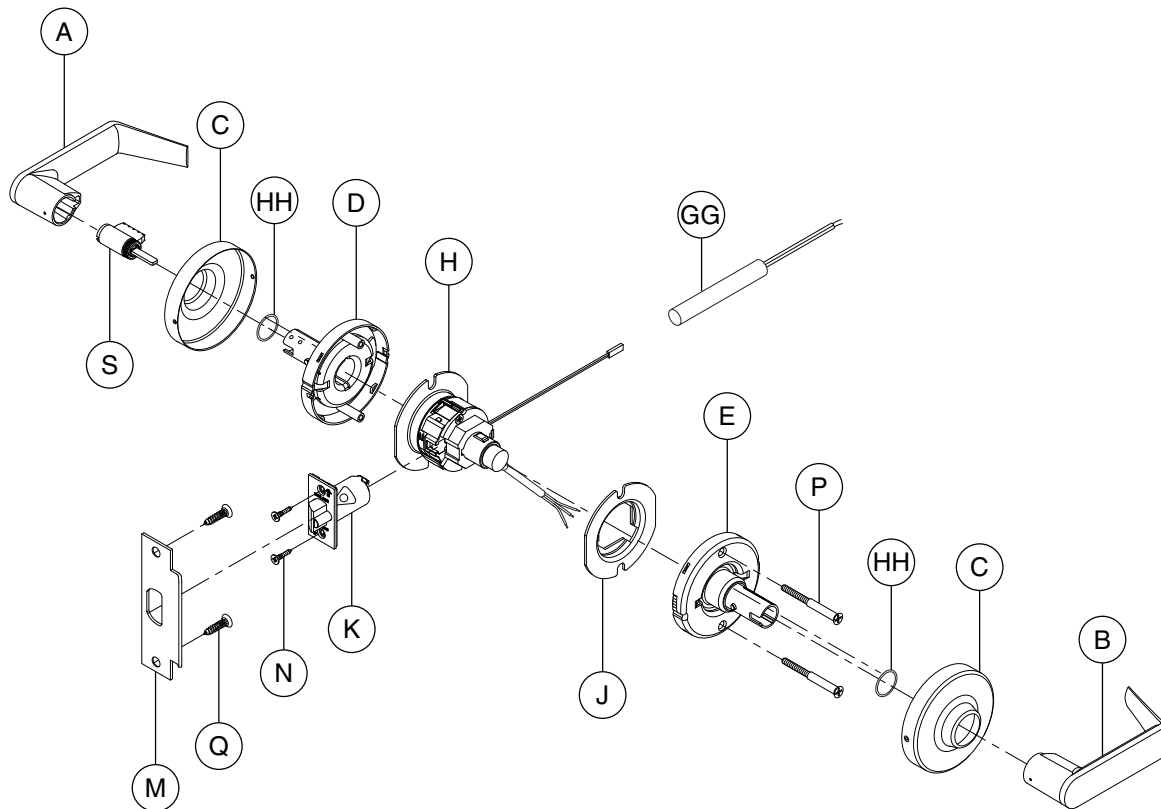Storeroom Lock—Electrically Locked (Fail Safe) with Request-to-Exit  
 ND80ELPD RX (shown), ND80ELRD RX, ND80ELGD RX




Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Closed	03-030
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	63-215♦
J	Anti-Rotation Plate	N523-131

\* For RD (Full Size Interchangeable Core) and GD (SFIC) outside trim configurations, see page 81.

\*\* Not sold separately as a part.

♦ Chassis part number is for reference only.

Letter	Description	Part Number
K	Electrified Latch	**
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
S	Cylinder—6-Pin	23-065
GG	AC Rectifier Circuit	C303-439
HH	Soft Durometer Spacer	24055246

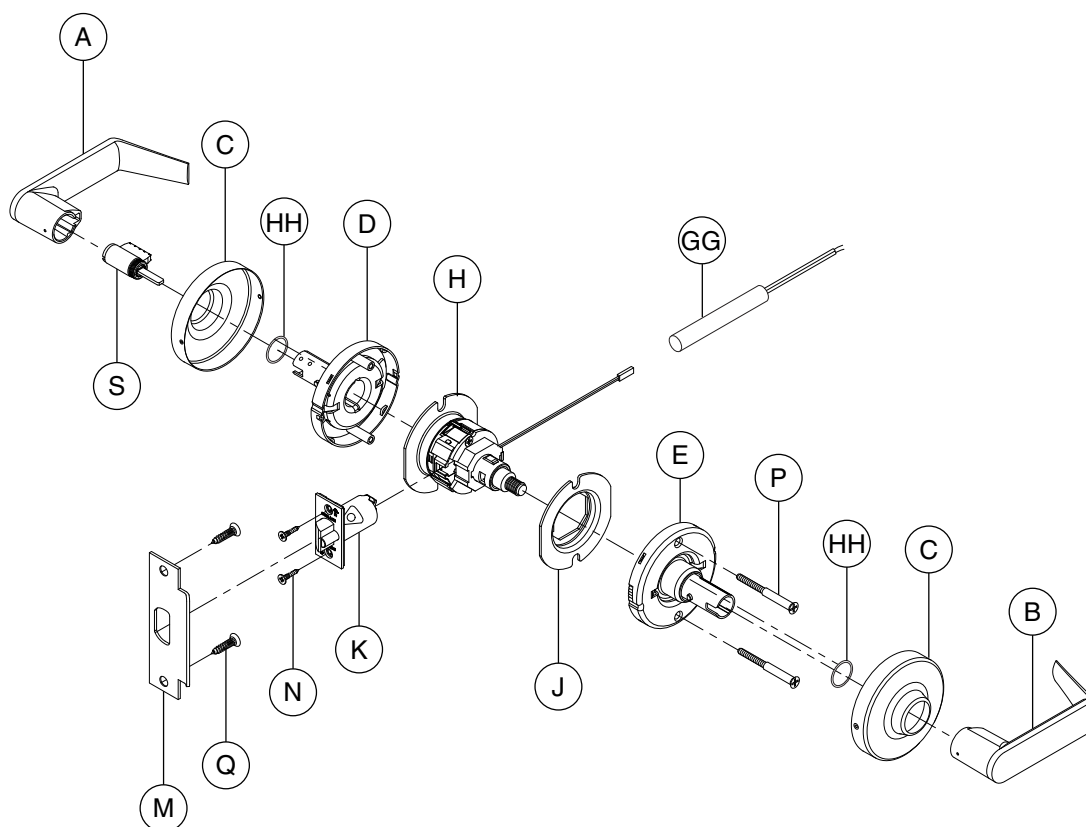**ND80EU****Storeroom Lock—Electrically Unlocked (Fail Secure)****ND80EUPD (shown), ND80EURD\*, ND80EUGD\***

Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Closed	03-030
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	63-105♦
J	Anti-Rotation Plate	N523-055

\* For RD (Full Size Interchangeable Core) and GD (SFIC) outside trim configurations, see page 81.


\*\* Not sold separately as a part.

♦ Chassis part number is for reference only.

Letter	Description	Part Number
K	Electrified Latch	**
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
S	Cylinder—6-Pin	23-065
GG	AC Rectifier Circuit	C303-439
HH	Soft Durometer Spacer	24055246

# ND80EU RX

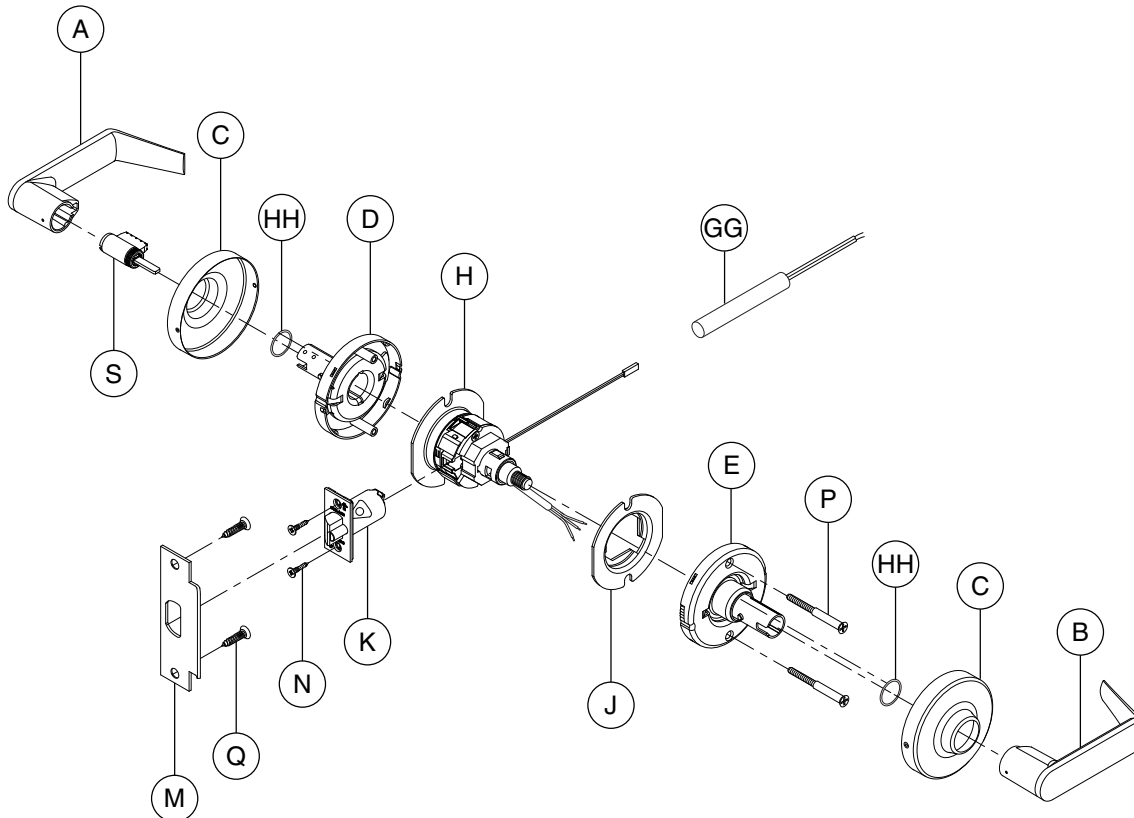Storeroom Lock—Electrically Unlocked (Fail Secure) with Request-to-Exit  
ND80EUPD RX (shown), ND80EURD RX, ND80EUGD RX




Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Closed	03-030
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	63-216♦
J	Anti-Rotation Plate	N523-131

\* For RD (Full Size Interchangeable Core) and GD (SFIC) outside trim configurations, see page 81.

\*\* Not sold separately as a part.

♦ Chassis part number is for reference only.

Letter	Description	Part Number
K	Electrified Latch	**
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
S	Cylinder—6-Pin	23-065
GG	AC Rectifier Circuit	C303-439
HH	Soft Durometer Spacer	24055246

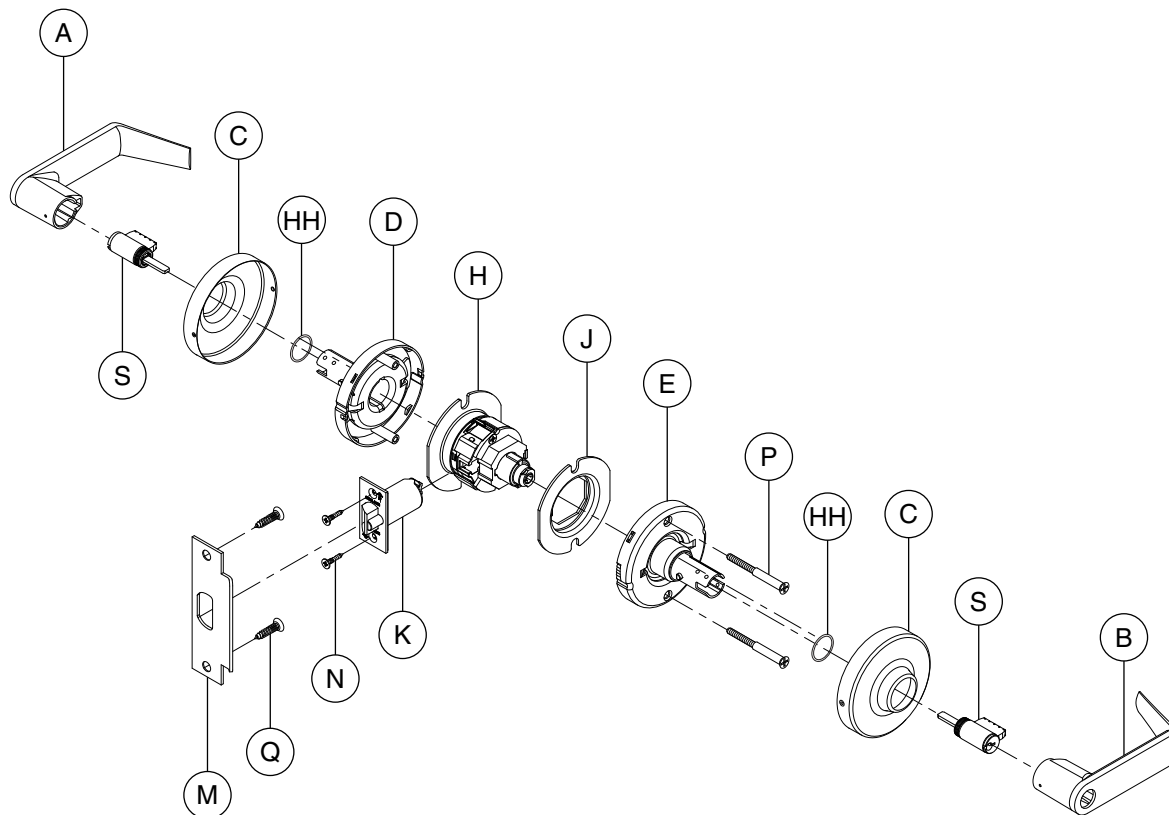**ND82****Institution Lock****ND82PD (shown), ND82RD\*, ND82GD\***

Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Open	03-031
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Keyed Inside except SFIC	N123-021
H	Chassis	24088361 ♦
J	Anti-Rotation Plate	N523-055

\* For RD (Full Size Interchangeable Core) and GD (SFIC) outside trim configurations, see page 81.


♦ Chassis part number is for reference only.

Letter	Description	Part Number
K	Deadlatch	13-047
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
S	Cylinder—6 Pin	23-065
HH	Soft Durometer Spacer	24055246

# ND85
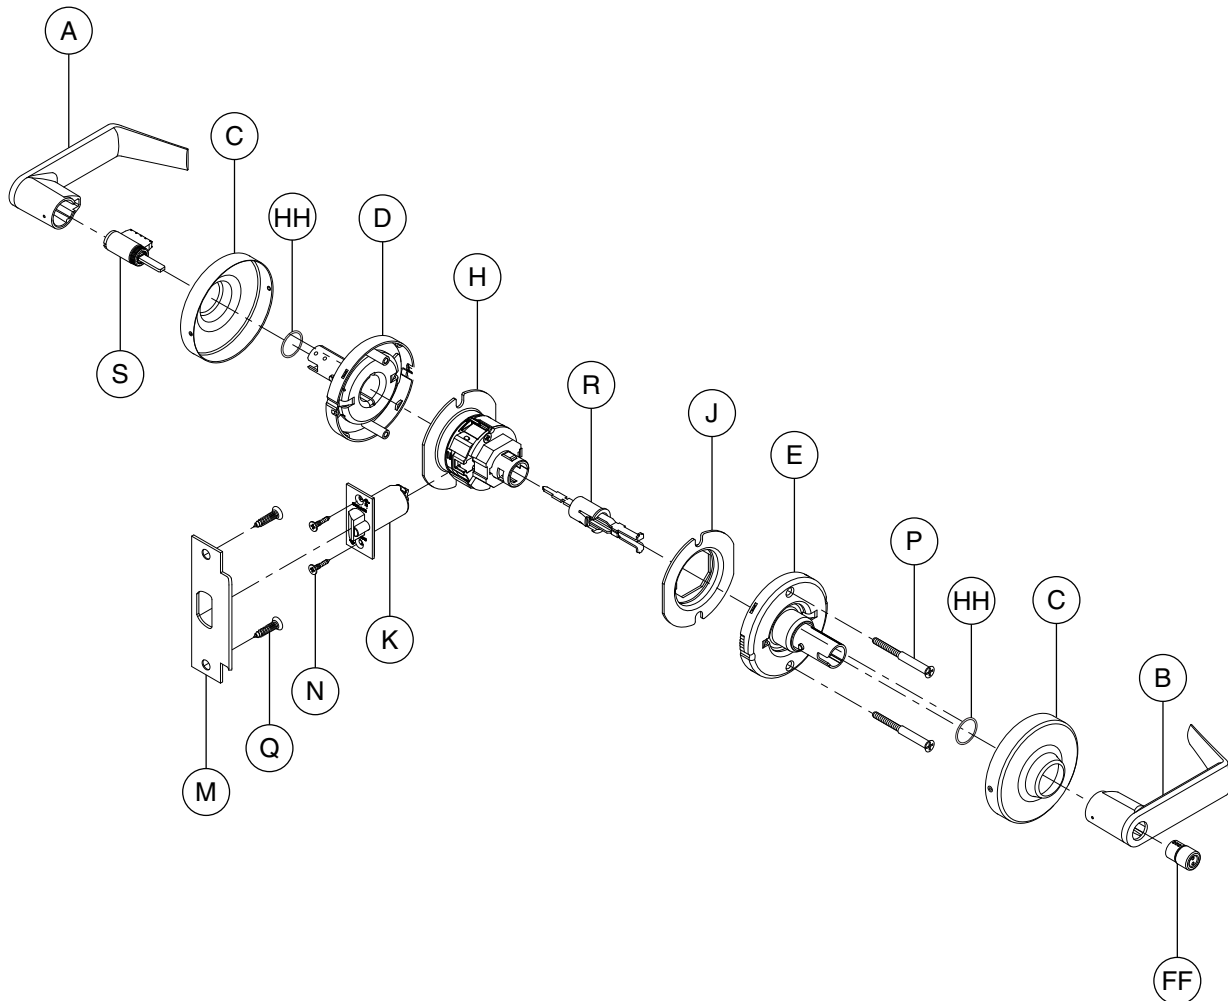
## Faculty Restroom Lock

### ND85PD




Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Open	03-031
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	24088411 ♦
J	Anti-Rotation Plate	N523-055
K	Deadlatch	13-047

♦ Chassis part number is for reference only.

Letter	Description	Part Number
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
R	Plunger—Push and Turn	N123-017
S	Cylinder—6-Pin Indicator	23-003
FF	Push Button with Spanner Access	N523-124
HH	Soft Durometer Spacer	24055246

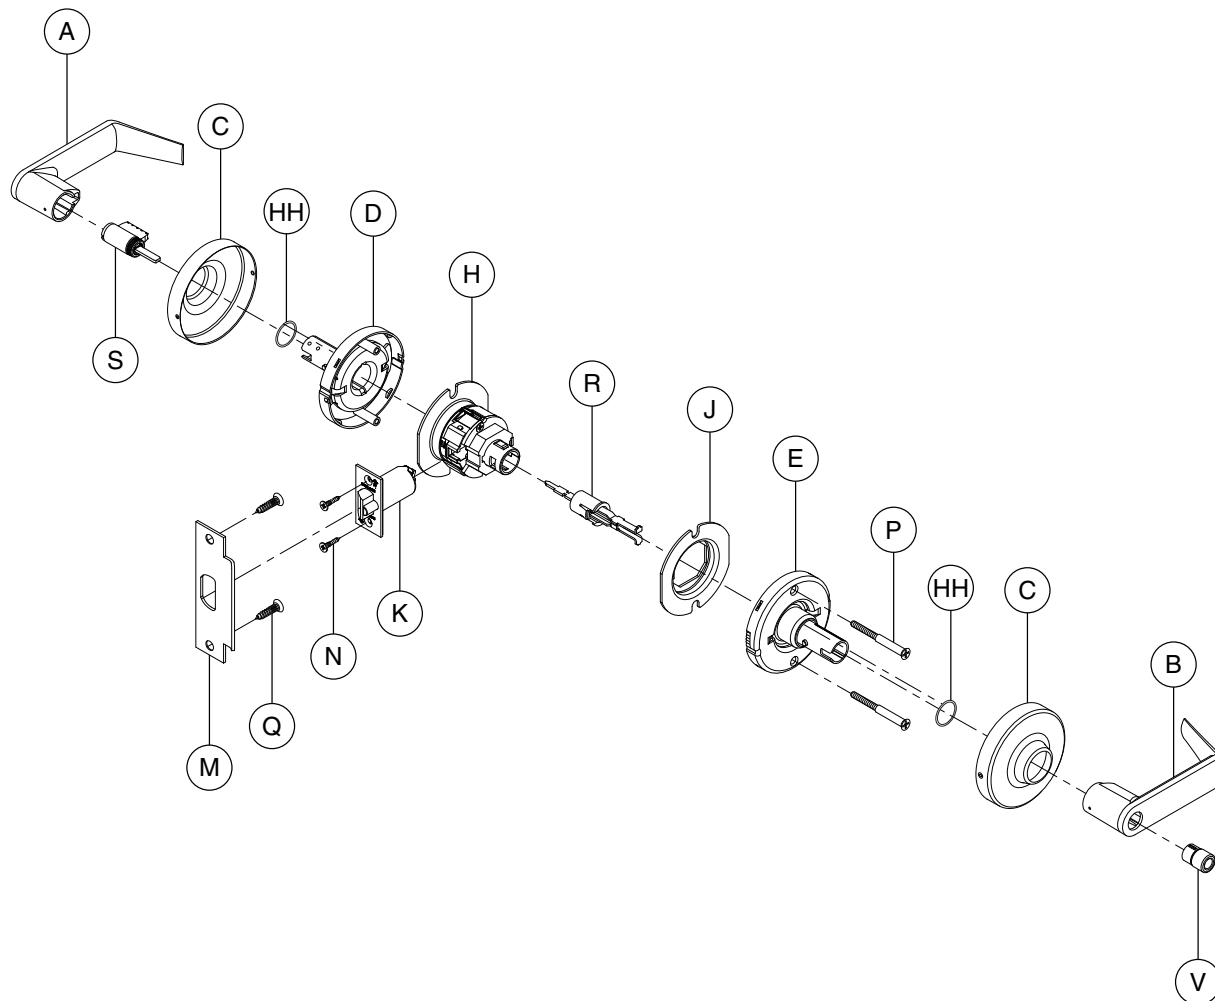

**ND91****Entrance/Office Lock with Vandlgard®****ND91PD (shown), ND91RD\*, ND91GD\***

Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Open	03-031
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	24088379 ♦
J	Anti-Rotation Plate	N523-055
K	Deadlatch	13-047

\* For RD (Full Size Interchangeable Core) and GD (SFIC) outside trim configurations, see page 81.

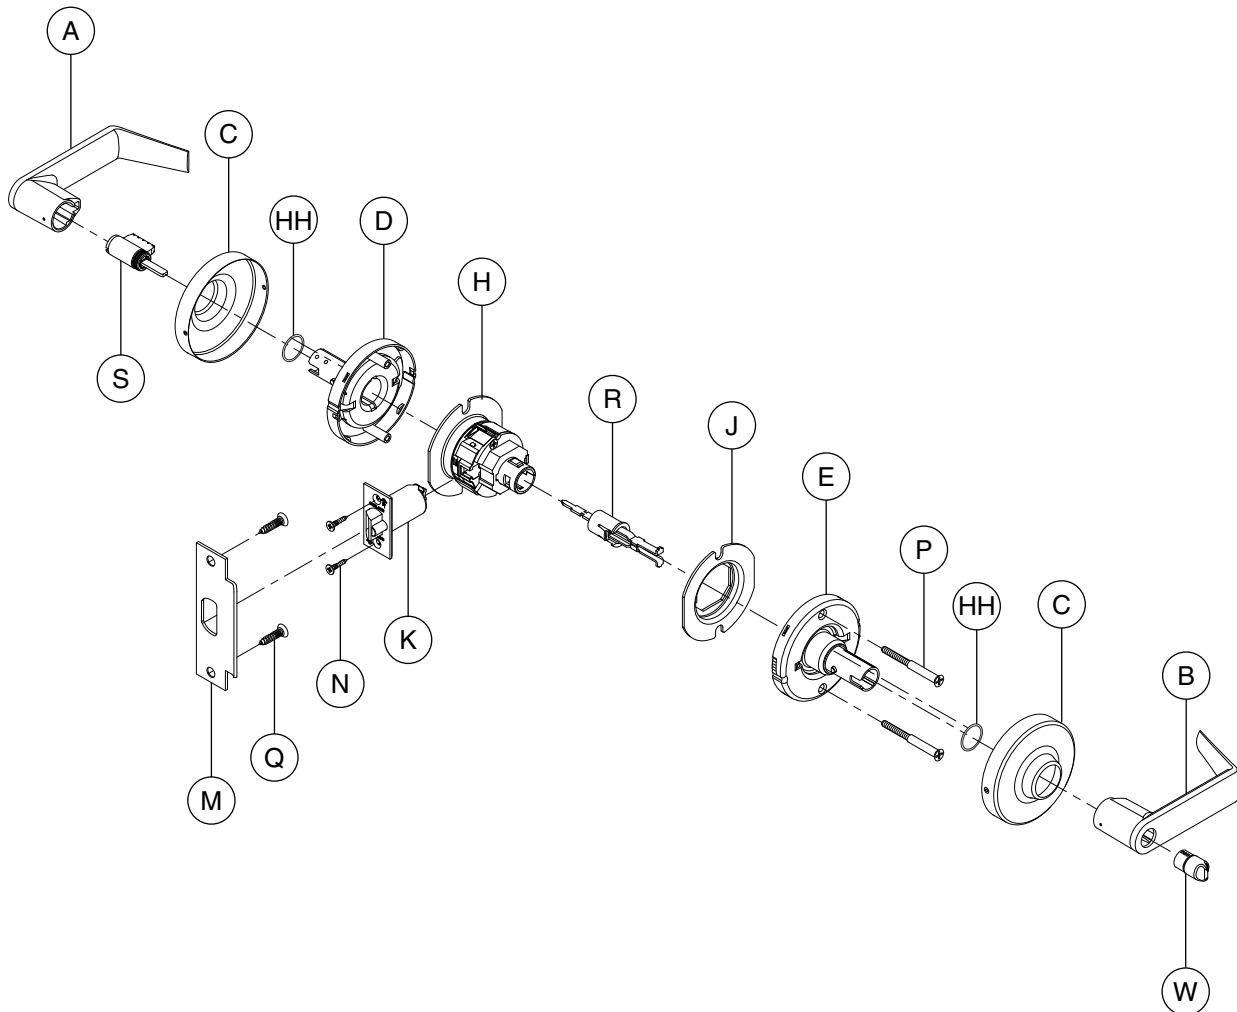
♦ Chassis part number is for reference only.

Letter	Description	Part Number
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
R	Plunger—Push Button	N123-028
S	Cylinder—6-Pin	23-065
V	Push Button	N523-000
HH	Soft Durometer Spacer	24055246

## ND92

### Entrance Lock with Vandlgard®

ND92PD (shown), ND92RD\*, ND92GD\*




Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Open	03-031
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	24088379 ♦
J	Anti-Rotation Plate	N523-055
K	Deadlatch	13-047

Letter	Description	Part Number
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
R	Plunger—Push and Turn	N123-017
S	Cylinder—6-Pin	23-065
W	Push and Turn Button	N523-001
HH	Soft Durometer Spacer	24055246

\* For RD (Full Size Interchangeable Core) and GD (SFIC) outside trim configurations, see page 81.

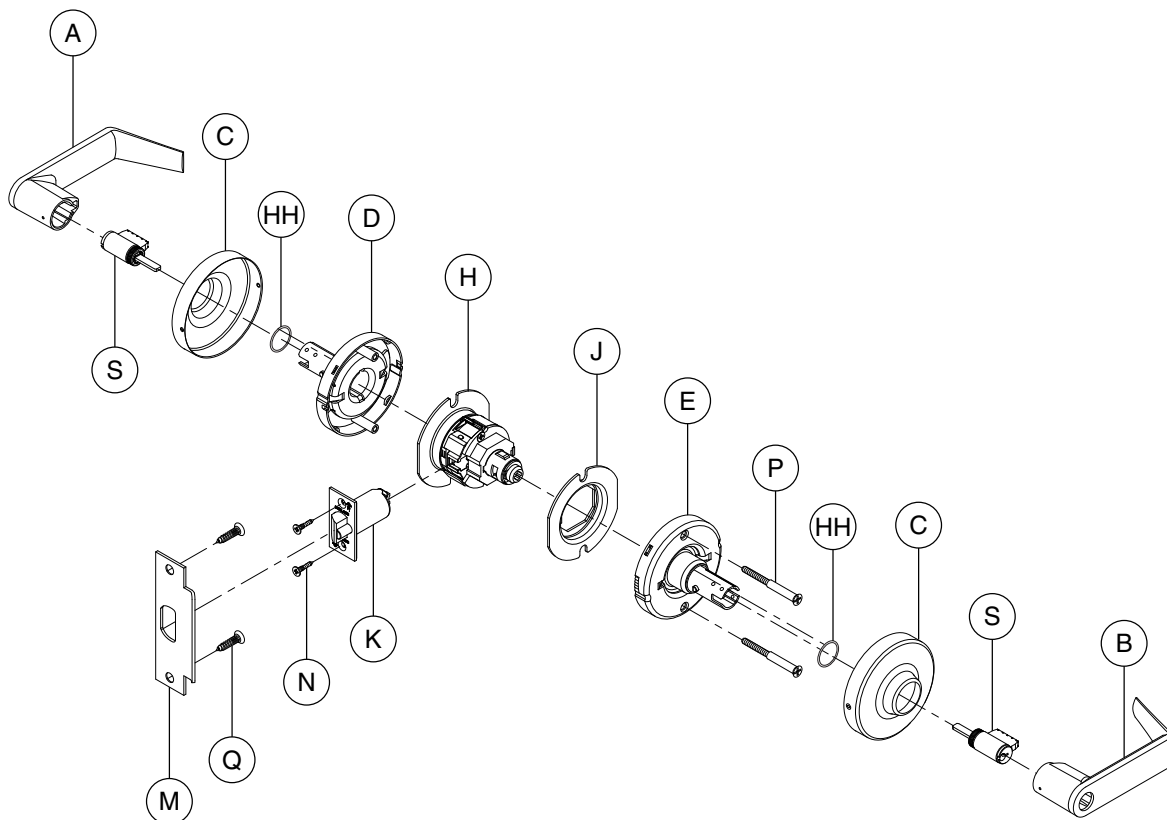♦ Chassis part number is for reference only.

**ND93****Vestibule with Vandlgard®****ND93PD (shown), ND93RD\*, ND93GD\***

Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Open	03-031
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Keyed Inside except SFIC	N123-021
H	Chassis	24088387 ♦
J	Anti-Rotation Plate	N523-055


♦ Chassis part number is for reference only.

Letter	Description	Part Number
K	Deadlatch	13-047
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
S	Cylinder—6-Pin	23-065
HH	Soft Durometer Spacer	24055246

## ND94
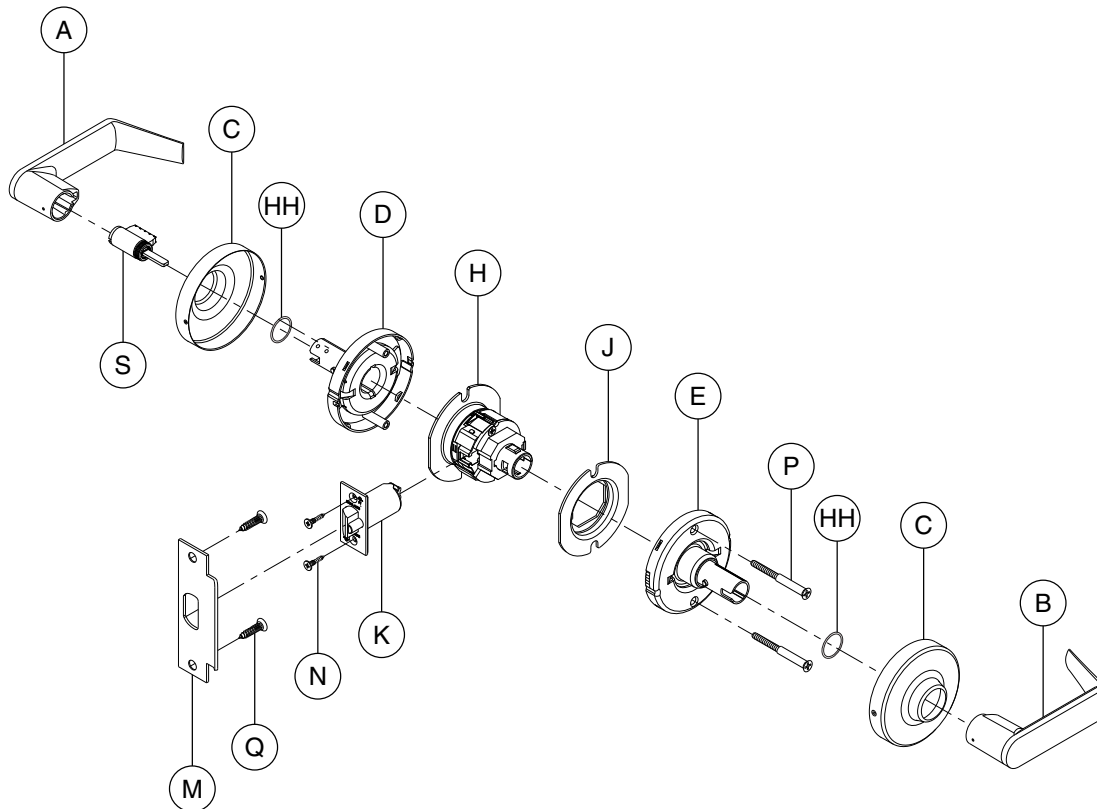
### Classroom Lock with Vandlgard®

ND94PD (shown), ND94RD\*, ND94GD\*




Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Closed	03-030
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	24088395 ♦
J	Anti-Rotation Plate	N523-055

Letter	Description	Part Number
K	Dead Latch	13-047
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
S	Cylinder—6-Pin	23-065
HH	Soft Durometer Spacer	24055246

\* For RD (Full Size Interchangeable Core) and GD (SFIC) outside trim configurations, see page 81.

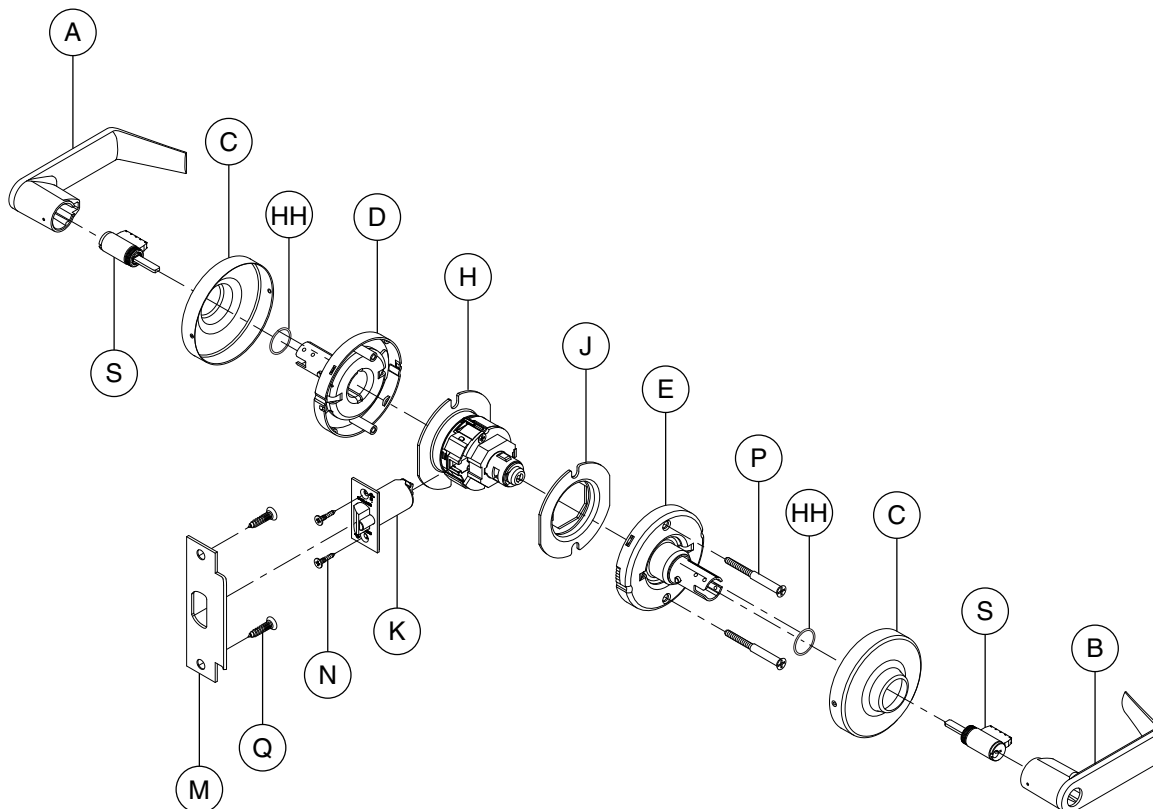♦ Chassis part number is for reference only.

**ND95****Classroom Security Lock with Vandlgard®****ND95PD (shown), ND95RD\*, ND95GD\***

Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Open	03-031
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Keyed Inside except SFIC	N123-021
H	Chassis	24088171 ♦
J	Anti-Rotation Plate	N523-055

\* For RD (Full Size Interchangeable Core) and GD (SFIC) outside trim configurations, see page 81.


♦ Chassis part number is for reference only.

Letter	Description	Part Number
K	Deadlatch	13-047
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
S	Cylinder—6-Pin	23-065
HH	Soft Duromater Spacer	24055246

## ND96

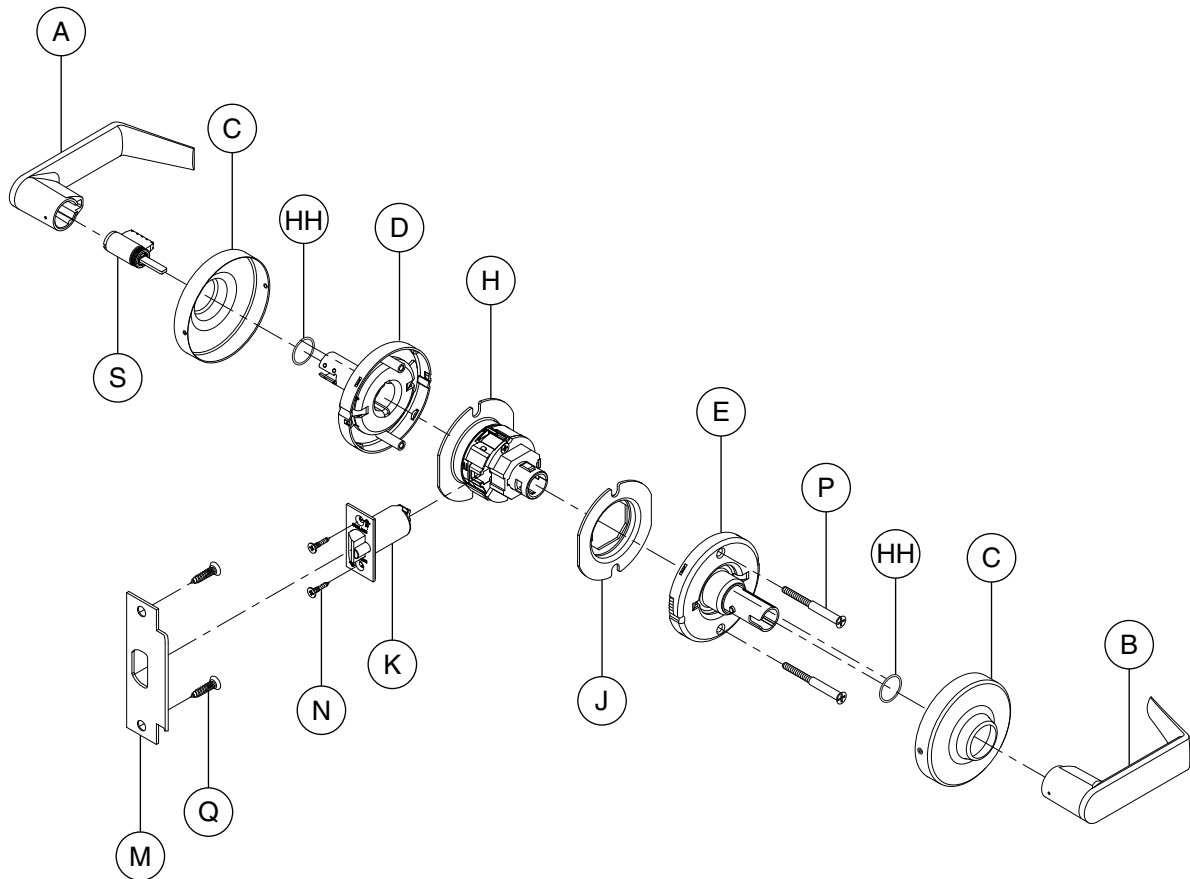Storeroom Lock with Vandlgard®

ND96PD (shown), ND96RD\*, ND96GD\*




Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Closed	03-030
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	24088403♦
J	Anti-Rotation Plate	N523-055

Letter	Description	Part Number
K	Deadlatch	13-047
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
S	Cylinder—6-Pin	23-065
HH	Soft Durometer Spacer	24055246

\* For RD (Full Size Interchangeable Core) and GD (SFIC) outside trim configurations, see page 81.

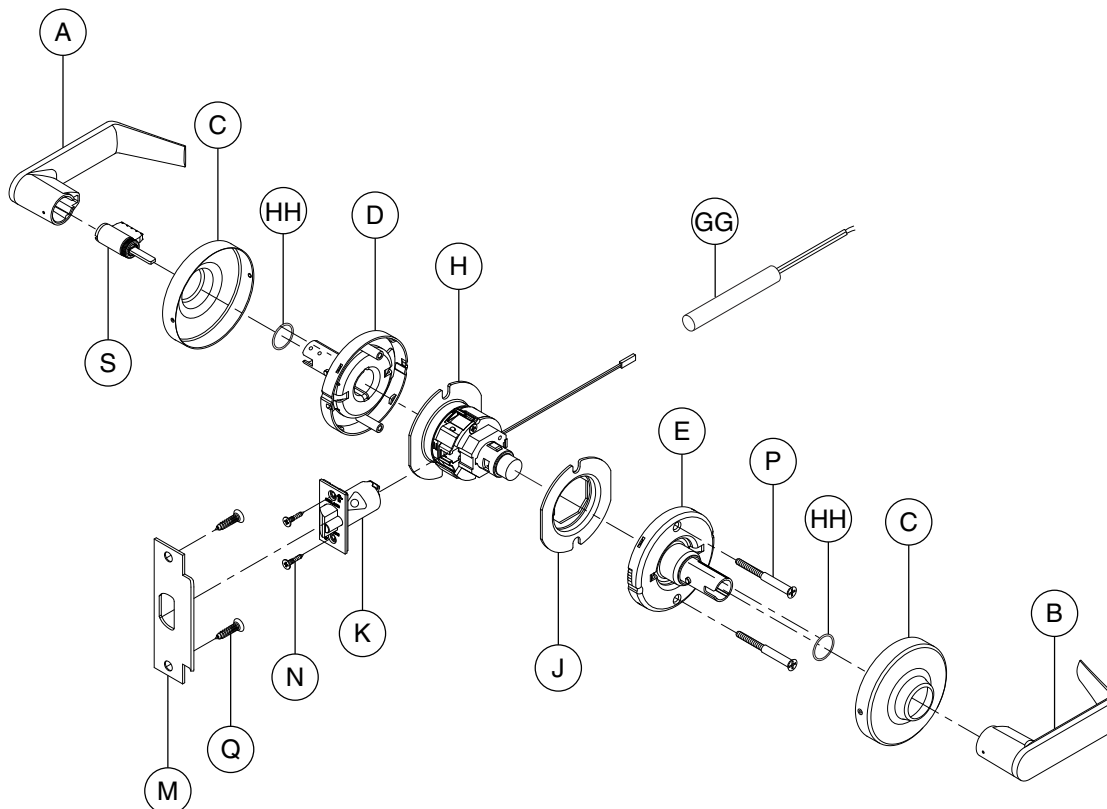♦ Chassis part number is for reference only.

**ND96EL****Storeroom Lock with Vandlgard®—Electrically Locked (Fail Safe)****ND96ELPD (shown), ND96ELRD\*, ND96ELGD\***

Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Closed	03-030
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	63-108 ♦
J	Anti-Rotation Plate	N523-055

\* For RD (Full Size Interchangeable Core) and GD (SFIC) outside trim configurations, see page 81.

\*\* Not sold separately as a part.


♦ Chassis part number is for reference only.

Letter	Description	Part Number
K	Electrified Latch	**
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
S	Cylinder—6-Pin	23-065
GG	AC Rectifier Circuit	C303-439
HH	Soft Durometer Spacer	24055246

# ND96EU

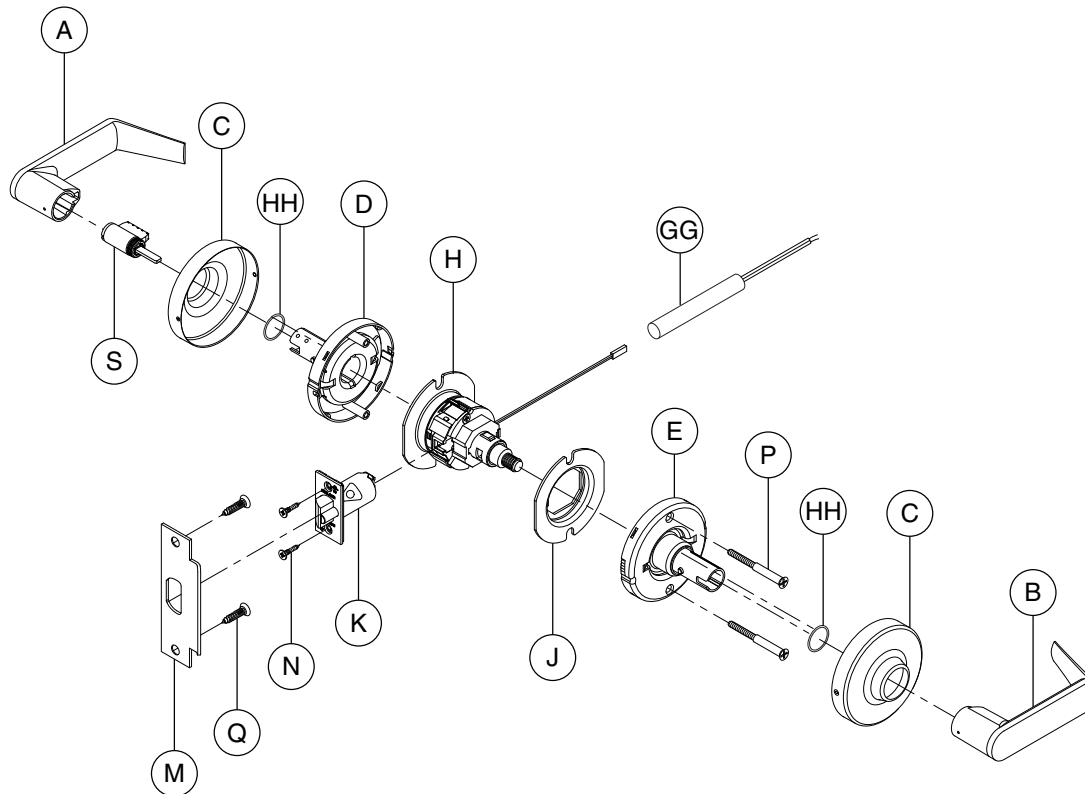Storeroom Lock with Vandlgard®—Electrically Unlocked (Fail Secure)

ND96EUPD (shown), ND96EURD\*, ND96EUGD\*



Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Closed	03-030
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	63-107 ♦
J	Anti-Rotation Plate	N523-055


\* For RD (Full Size Interchangeable Core) and GD (SFIC) outside trim configurations, see page 81.

\*\* Not sold separately as a part.

♦ Chassis part number is for reference only.

Letter	Description	Part Number
K	Electrified Latch	**
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
S	Cylinder—6-Pin	23-065
GG	AC Rectifier Circuit	C303-439
HH	Soft Durometer Spacer	24055246

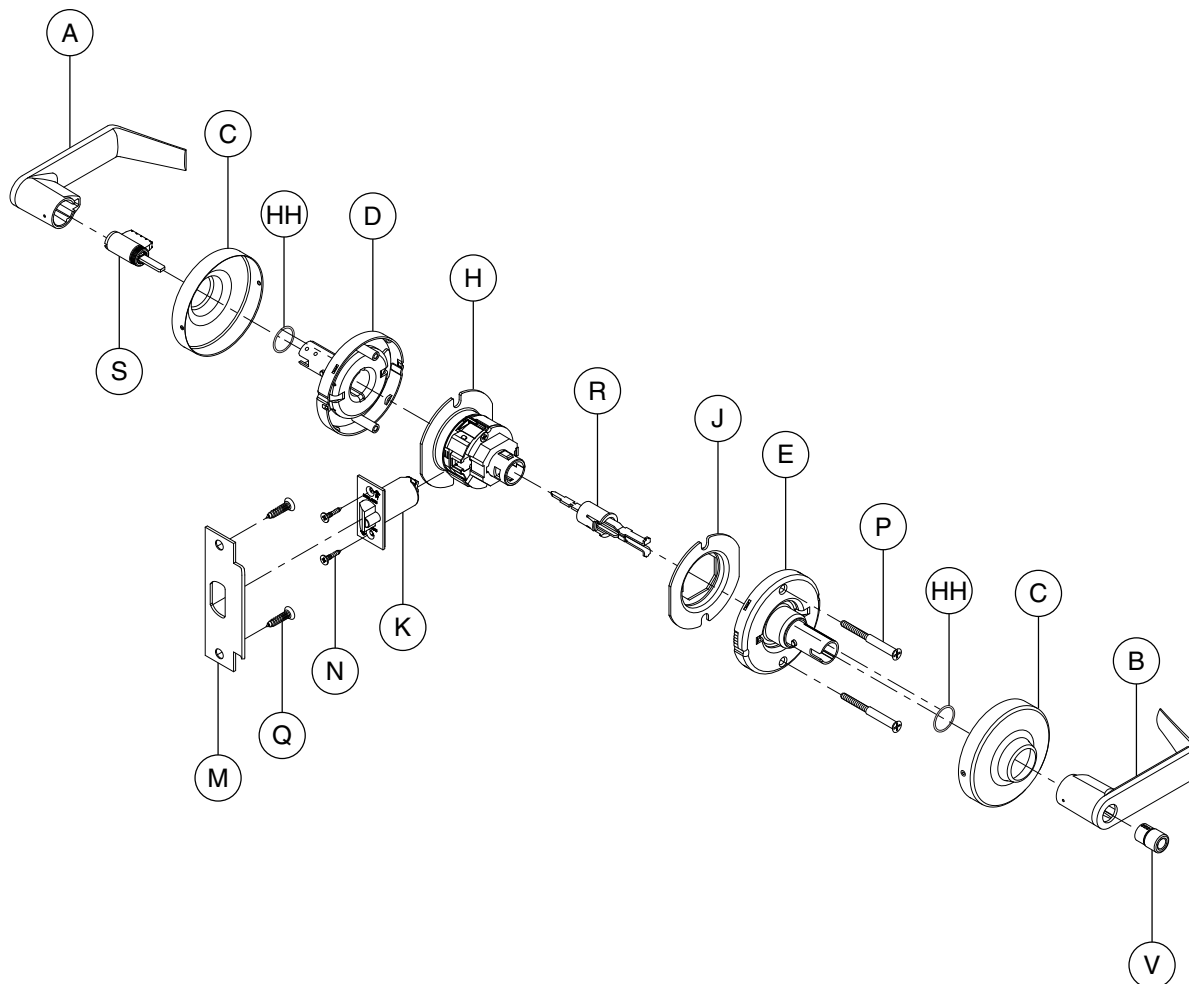

**ND97****Corridor Lock with Vandlgard®****ND97PD (shown), ND97RD\*, ND97GD\***

Letter	Description	Part Number
A	Outside Lever—Open	03-031
B	Inside Lever—Open	03-031
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
E	Inside Spring Cage—Standard	N123-032
H	Chassis	24088189♦
J	Anti-Rotation Plate	N523-055
K	Deadlatch	13-047

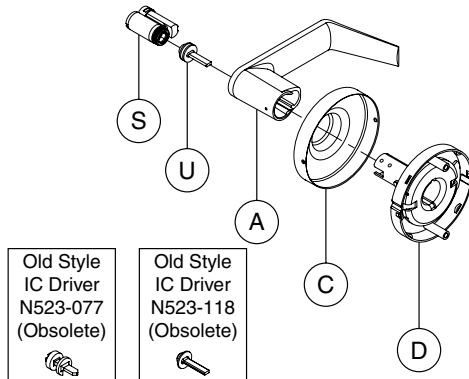
\* For RD (Full Size Interchangeable Core) and GD (SFIC) outside trim configurations, see page 81.

♦ Chassis part number is for reference only.

Letter	Description	Part Number
M	Strike	10-025
N	Latch Screw	C603-897
P	Mounting Screw	N523-021
Q	Strike Screw	C603-256
R	Plunger—Push Button	N123-028
S	Cylinder—6-Pin	23-065
V	Push Button	N523-000
HH	Soft Durometer Spacer	24055246


# Full Size IC and SFIC (Small Format Interchangeable Core) Configurations

## Full Size IC—Outside




Letter	Description	Part Number
A	Outside Lever—Full Size IC	03-032
C	Rose	03-042
D	Outside Spring Cage—Standard	N123-022
S	Cylinder—Full Size IC	23-030
U	IC Driver	N523-127

## SFIC—Outside

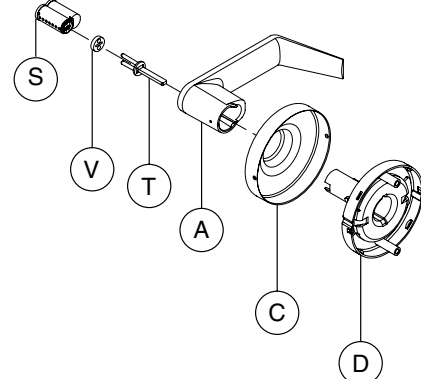


Letter	Description	Part Number
A	Outside Lever—SFIC	03-000
C	Rose	03-042
D	Outside Spring cage—SFIC	N123-056
S	Cylinder—SFIC	80-037
T	SFIC Driver	N523-091
V	Small Format IC Spacer (6-pin only)	D500-000

## Full Size IC—Outside

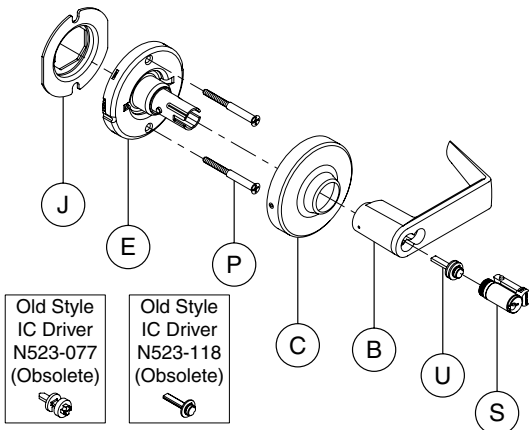

Letter	Description	Part Number
B	Inside Lever—Full Size IC	03-032
C	Rose	03-042
E	Inside Spring cage —Keyed Inside Except SFIC	N123-021
J	Anti-Rotation Plate	N523-055
P	Mounting Screw	N523-021
S	Cylinder—Full Size IC	23-030
U	IC Driver	N523-127














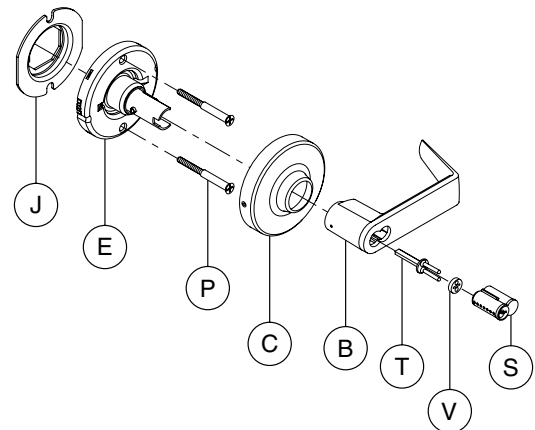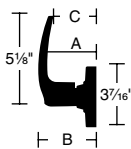    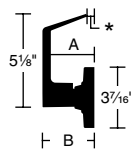    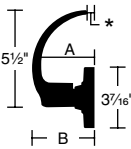











## SFIC—Outside

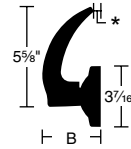

Letter	Description	Part Number
B	Inside Lever—SFIC	03-000
C	Rose	03-042
E	Inside Spring cage—SFIC	N123-057
J	Anti-Rotation Plate	N523-055
P	Mounting Screw	N523-021
S	Cylinder—SFIC	80-037
V	Small Format IC Spacer (6-pin only)	D500-000
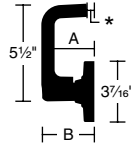
## Lever Designs

All lever designs are available in finishes 605, 606, 612, 613, 619, 625, 626 and 626AM.



	Closed Levers	Open Levers	Interchangeable Core Levers**	SFIC Levers
<b>Athens (ATH)</b> 	03-030 ATH A=2 3/4" B=3 5/16" C=2 1/2" 	03-031 ATH A=2 3/4" B=3 5/16" C=2 1/2" 	03-032 ATH A=3" B=3 1/2" C=2 1 1/16" 	03-000 ATH A=2 7/8" B=3 3/8" C=2 1/2" 
<b>Rhodes (RHO)</b> 	03-030 RHO A=2 7/16" B=3 1/4" 	03-031 RHO A=2 7/16" B=2 15/16" 	03-032 RHO A=2 3/4" B=3 1/4" 	03-000 RHO A=2 1/2" B=3" 
<b>Sparta (SPA)</b> 	03-030 SPA A=3" B=3 1/2" 	03-031 SPA A=3" B=3 1/2" 	03-032 SPA A=3 1/4" B=3 3/4" 	03-000 SPA A=3" B=3 1/2" 
<b>Omega (OME)</b> 	03-030 OME B=3 5/16" 	03-031 OME B=3 5/16" 	03-032 OME B=3 1/2" 	03-000 OME B=3 3/8" 
<b>Tubular (TLR)</b> 	03-030 TLR A=2 1/4" B=3" 	03-031 TLR A=2 1/4" B=3" 	03-032 TLR A=2 1/2" B=3 3/16" 	03-000 TLR A=2 1/4" B=3" 

\* Meets California Fire Code for 1/2" or less return to the door.

\*\* Lever sizes available for Competitor Cylinder Options, see page 83. Not available on Omega lever style.

## Tactile Warning



  




Not available on Omega levers

Rhodes lever shown	Tubular lever shown	Preface Design Code for Tactile Warning Levers			
		Athens	Rhodes	Sparta	Tubular
		8AT	8RH	8SP	8TR

## Competitor Cylinder Options

Competitor lever designs are available in finishes 613, 626 and 626AM.

Tactile warning is available. See page 82 for details.

Cylinder	Order Suffix	Description	Lever Design			
			Athens	Rhodes	Sparta	Tubular
	LD SAR	Sargent Key In Lever	03-044-ATH	03-044-RHO	03-044-SPA	03-044-TLR
	JD SAR	Sargent Full Size Interchangeable Core Cylinder	03-077-ATH	03-077-RHO	03-077-SPA	03-077-TLR
	JD CO6	Corbin Russwin Full Size Interchangeable Core 6 Pin Cylinder	03-066-ATH	03-066-RHO	03-066-SPA	03-066-TLR
	JD YA6	Yale Full Size Interchangeable Core 6 Pin Cylinder	03-055-ATH	03-055-RHO	03-055-RHO	03-055-TLR
	JD CO7	Corbin Russwin Full Size Interchangeable Core 7 Pin Cylinder	UNDER DEVELOPMENT			
	LD CO6	Corbin Russwin Key in Lever 6 Pin Cylinder				
	JD YA7	Yale Full Size Interchangeable Core 7 Pin Cylinder				

## Spring Cage and Tailpiece for Competitor Cylinder Options

Available for the following functions: ND50D, ND53D, ND60D, ND66D, ND70D, ND73D, ND75D, ND80D, ND80EL/EU, ND80EL/EU-RX, ND82D, ND91D, ND92D, ND93D, ND94D, ND95D, ND96D, ND96DEL/EU, ND96DEL/EU-RX, and ND97D.

Order Suffix	Description	Spring Cage		Cylinder Tailpiece
		Outside	Inside (Double Cylinder Locks)	
LD SAR	Sargent Key In Lever	N123-064	N123-067	N523-146
JD SAR	Sargent Full Size Interchangeable Core Cylinder	N123-066	N123-069	N523-148
JD CO6	Corbin Russwin Full Size Interchangeable Core 6 Pin Cylinder			
JD YA6	Yale Full Size Interchangeable Core 6 Pin Cylinder	N123-065	N123-068	N523-147
JD CO7	Corbin Russwin Full Size Interchangeable Core 7 Pin Cylinder	UNDER DEVELOPMENT		
LD CO6	Corbin Russwin Key in Lever 6 Pin Cylinder			
JD YA7	Yale Full Size Interchangeable Core 7 Pin Cylinder			

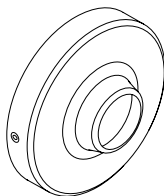
## Roses

### Inside/Outside Rose, 03-042 RHO

Standard inside/outside rose for use with ATH, SPA or RHO levers.

Size:  $3\frac{7}{16}$ " dia.

Available in 605, 606, 612, 613, 619, 625, 626.




### Omega Inside/Outside Rose, 03-042 OME

Standard inside/outside rose for use with OME levers.

Size:  $3\frac{7}{16}$ " dia.

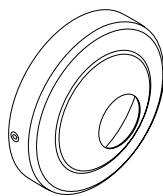Available in 605, 606, 612, 613, 619, 625, 626.




### Blank Outside Rose, N523-002

Outside blank plate for use with ND25, ND25x70 and ND25x80.

Size:  $3\frac{1}{2}$ " dia.

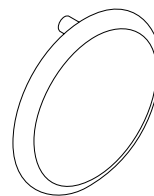Available in 605, 606, 612, 613, 619, 625, 626.




### Engraved Inside Rose (Rhodes) XN12-035

Inside rose engraved with "LOCK". For use with classroom security function locks with ATH, SPA or RHO levers.

Size:  $3\frac{7}{16}$ " dia.

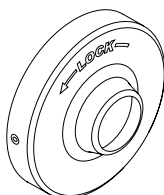Available in 626 only.




### Engraved Inside Rose (Omega) XN12-045

Inside rose engraved with "LOCK". For use with classroom security function locks with OME levers.

Size:  $3\frac{7}{16}$ " dia.

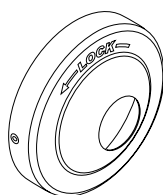
Available in 626 only.




## Cylinders

### Standard

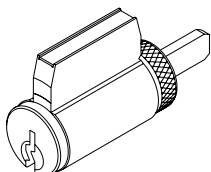
#### Conventional Classic or Everest, 23-065




#### Primus® Controlled Access, 20-765

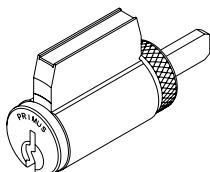

#### Primus® High Security, 23-565. UL 437 Listed

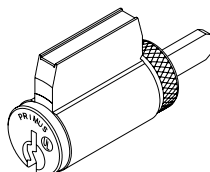


#### Indicator, 23-000

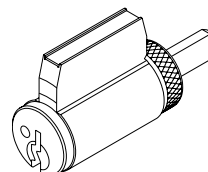


### Full Size Interchangeable Cores

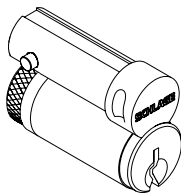
#### Conventional with Logo Classic or Everest, 23-030




#### Conventional without Logo Classic or Everest, 23-031

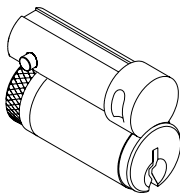

#### Primus® with Logo, 20-740

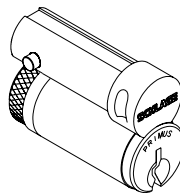


#### Primus® without Logo, 20-741

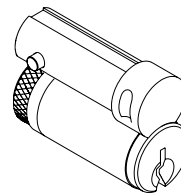

### Small Format Interchangeable Cores


#### Everest® Combined, 80-037

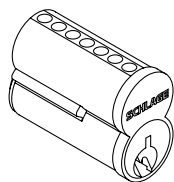Also available in uncombined (80-036)




#### Best® Keyway 7-Pin Uncombined, 80-033

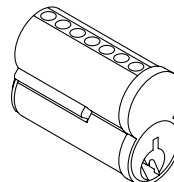Also available in 6-pin uncombined (80-043)




## Latches

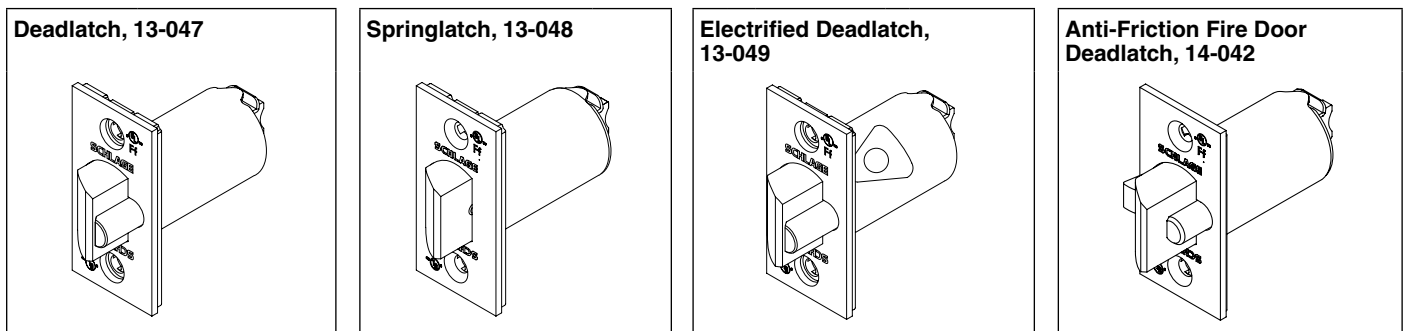All ND-Series latches have one-inch diameter housing and adjustable faceplates for flat or beveled doors.



Backset	Description	Springlatch	Deadlatch
2 $\frac{3}{8}$ "	Square corner, 1 $\frac{1}{8}$ " x 2 $\frac{1}{4}$ "	—	14-047
	Square corner, 1" x 2 $\frac{1}{4}$ "	—	14-048
2 $\frac{3}{4}$ "	Square corner, 1 $\frac{1}{8}$ " x 2 $\frac{1}{4}$ ", standard	13-048	13-047
2 $\frac{3}{4}$ "	Square corner, electrified latch, 1 $\frac{1}{8}$ " x 2 $\frac{1}{4}$ "	—	13-049
2 $\frac{3}{4}$ "	Anti-friction fire door latch, square corner, 1 $\frac{1}{8}$ " x 2 $\frac{1}{4}$ ", $\frac{3}{4}$ " throw	—	14-042
3 $\frac{3}{4}$ "	Square corner, 1 $\frac{1}{8}$ " x 2 $\frac{1}{4}$ "	14-010	14-028
5"	Backset extension link	—	43-005**
—	Rabbeted latch and strike kit, 605, 626 only	39-030*	

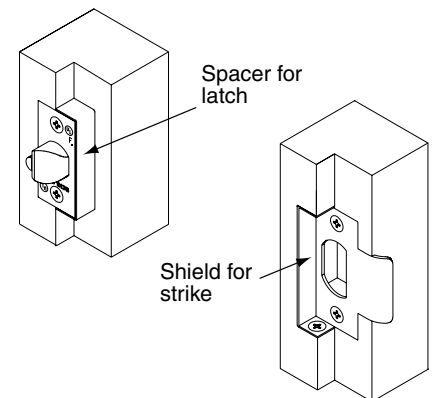
Rabbeted Latch and Strike Kit, 39-030




\* Adapts square corner latch and 2 $\frac{3}{4}$ " high square corner strike to  $\frac{1}{2}$ " rabbeted door and frame preparations.

## Installation Tools and Kits

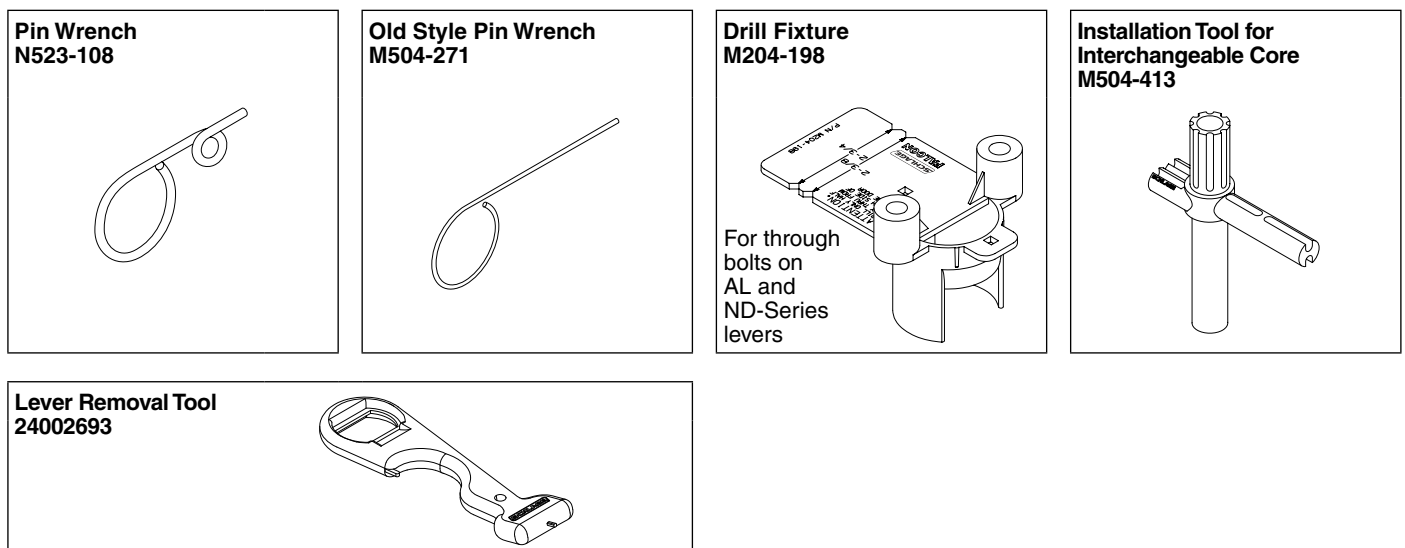Boring jigs and tools are designed to provide fast and accurate lock installation. Complete kits or individual tools can be ordered for preparing doors and jambs for Schlage products.




Lever Removal Tool  
24002693

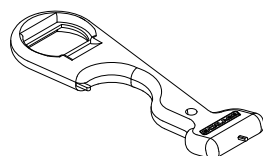

## Reinforcement Kit 37-001

Reinforcement kit 37-001 is used to reinforce and prevent the collapse of hollow metal doors when locksets are mounted. This kit should be used for installation in hollow metal doors to prevent lateral movement of the latch bolt. Extension link is included for long backset installations. Specify door thickness 1 $\frac{3}{8}$ " or 1 $\frac{3}{4}$ " when ordering.

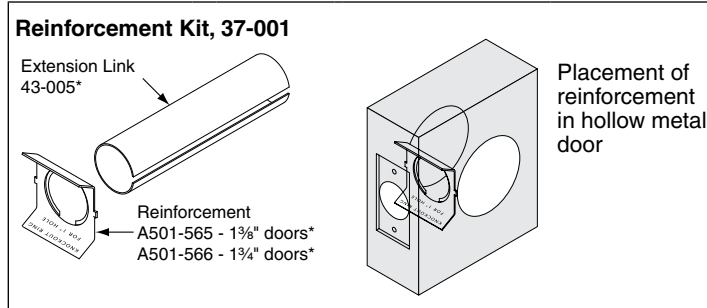\* Parts may be ordered separately.



## Installation Kit 40-147

Installation kit 40-147 for locksets and deadbolts is adjustable for 2 $\frac{3}{8}$ " and 2 $\frac{3}{4}$ " backsets. Includes a removable bushing adaptor for  $\frac{7}{8}$ " latch hole. For door thickness 1 $\frac{3}{8}$ " to 2 $\frac{1}{8}$ ".



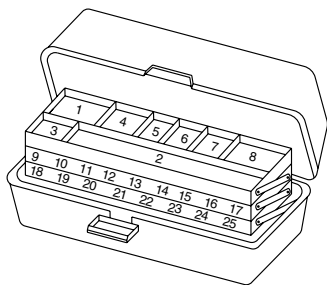
Part Number	Description
40-015	$\frac{7}{8}$ " Bit
40-029	Full Lip Strike Chisel
40-030	1 $\frac{1}{8}$ " x 2 $\frac{3}{4}$ " Latch Chisel
40-031	1" x 2 $\frac{1}{4}$ " Latch Chisel
40-032	1 $\frac{1}{8}$ " x 2 $\frac{1}{4}$ " Latch Chisel
40-035	$\frac{7}{8}$ " Strike Locator

Part Number	Description
40-148	Installation Jig *
40-175	1" Bit
40-176	2 $\frac{1}{8}$ " Multi Spur Bit
40-177	1 $\frac{1}{2}$ " Multi Spur Bit
40-178	Quick Change Bit Adapter
M504-497	Case *

\* May be ordered separately.

## Maintenance Kit 40-097






Maintenance kit for ND-Series lever locks contains: plunger sleeves, screw packs in various finishes, slide catches and service parts listed below.



Part Number	Description	Qty	Slot Number
N523-055	Plate, Anti-Rotation	2	1
N523-020	Cylinder	3	2
N523-091	Driver, SFIC	5	2
N523-127	Driver, IC	5	2
24055246	Soft Durometer Spacer	20	3
23988066	Insert, Gauge	10	3
N523-025	Clip, Slide	2	4
N523-149	Slide	2	4
D500-000	Spacer, SFIC	5	5
N523-021	Screw, Mounting	4	5
N523-092	Screw, Machine, oval head	4	5
C604-187	Catch, Slide	2	6
C604-188	Catch, Slide	2	6
C604-191	Spring, Catch, Slide	4	6
C503-019	Slide, Spring	8	7
N523-054	Plate, adjustment	2	8
N123-007	Keycam Assembly	2	9

Part Number	Description	Qty	Slot Number
N123-008	Keycam Assembly	2	10
N123-009	Keycam Assembly	2	11
N123-010	Keycam Assembly	2	12
N123-011	Keycam Assembly	2	13
N123-012	Keycam Assembly	2	13
N123-013	Keycam Assembly	2	14
24002693	Tool, Trim Removal	2	15
N123-028	Plunger Assembly	5	16
N123-017	Plunger Assembly	3	17
N523-056	Spindle, Inside	2	18
N523-013	Spindle, Outside	2	19
N523-019	Spindle, Outside, electrified	2	20
N123-020	Package, Screw	2	21
N123-040	Package, Screw	2	22
24085037	Hub, Inside	2	23
24085060	Hub, Inside	2	24
24088544	Housing, Outside	2	Bottom
63-104	Spring cage assembly, dummy	1	Bottom
M504-413	Installation tool, IC	1	Bottom
N123-021	Spring cage assy, inside	1	Bottom
N123-022	Spring cage assy, outside	1	Bottom
N123-032	Spring cage assy, inside	1	Bottom
N123-043	Spring cage assy, outside	1	Bottom
N123-056	Spring cage assy, SFIC, O/S	1	Bottom
N123-057	Spring cage assy, SFIC, I/S	1	Bottom
P515-181	Component Sheet	1	Bottom

## Strikes
   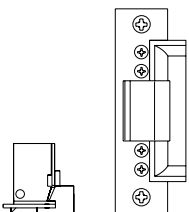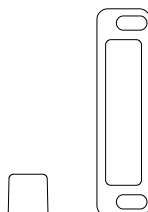
<b>Square Corner T-Strike, 10-013</b> Size: 1 1/8" x 2 3/4" x 3/32" Lip length: 1 1/8", 1 1/2" Includes strike box C603-623 Available in 605, 606, 612, 613, 619, 625, 626. 	<b>Square Corner Fire Door T-Strike, 10-016</b> Size: 1 1/8" x 2 3/4" x 3/32" Lip length: 1 1/8", 1 1/2" Includes strike box B502-853 Available in 605, 606, 612, 613, 619, 625, 626. 	<b>ANSI Prep. A115.2, 10-025</b> Size: 1 1/8" x 4 7/8" x 3/32" Lip length: 1 3/16" (std), 1 3/8" If required, K510-066 strike must be ordered separately. Available in 605, 606, 612, 613, 619, 625, 626. 
<b>Electric Strike, 10-042</b> Size: 1 1/4" x 4 7/8" 24 Volt AC 12 Volt DC Available in 606 and 626 only. 	<b>ANSI Plastic Strike Box, K510-066</b> 	

## Screws, Screw Packs and Special Parts

### Screws

Part Number	Description	Door Thickness	Type	Size
A501-171	ND170, washer	—	Washer	—
N523-092	ND170, mounting screw	1 1/2" - 2"	POH Machine	1/4"-20 x 2 1/2"
C603-256	ANSI strike screw	—	PFH Combo	12-24 X 1"
C603-897	Latch and strike screw	—	PFH Combo	#8 X 3/4"
N523-021	Spring cage screws	1 3/8" - 2"	POH Machine	#8 X 32 x 2 1/8"
N583-133	ND170, Spring cage screws	—	PFH Combo	#8 X 1"

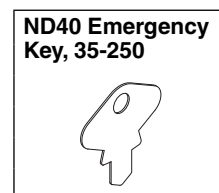
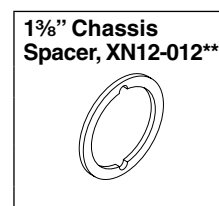


### Screw Packs, Standard

Part Number	Description	Contents
B502-517	Latch and strike screws	(4) C603-897
N123-020	Mounting, all except ND170	(4) C603-897
		(2) C603-256
		(2) N523-021
		(1) M504-271
N123-040	Mounting, ND170	(2) L583-133
		(1) N523-092
		(1) A501-171
		(1) M504-271
C203-736	ANSI Strike	(2) C603-256

### Special Parts

Part Number	Description
XQ02-309*	10-013 Strike, 7/8" flat lip
XQ03-494*	10-013 Strike, 1 5/8" - 6" lip
	10-013 Strike, 6 1/8" - 12" lip
XQ07-351*	10-025 Strike, 7/8" flat lip
	10-025 Strike, lips through 6" (except 7/8", 1 3/16" and 1 3/8")
XC03-069	Extension links, backsets over 5" - 42"
XN12-012**	Chassis spacer for 1 3/8" door (2 required)
35-250	Emergency Key, ND40
35-251	Spanner Key, ND85



### Screw Packs, Torx®

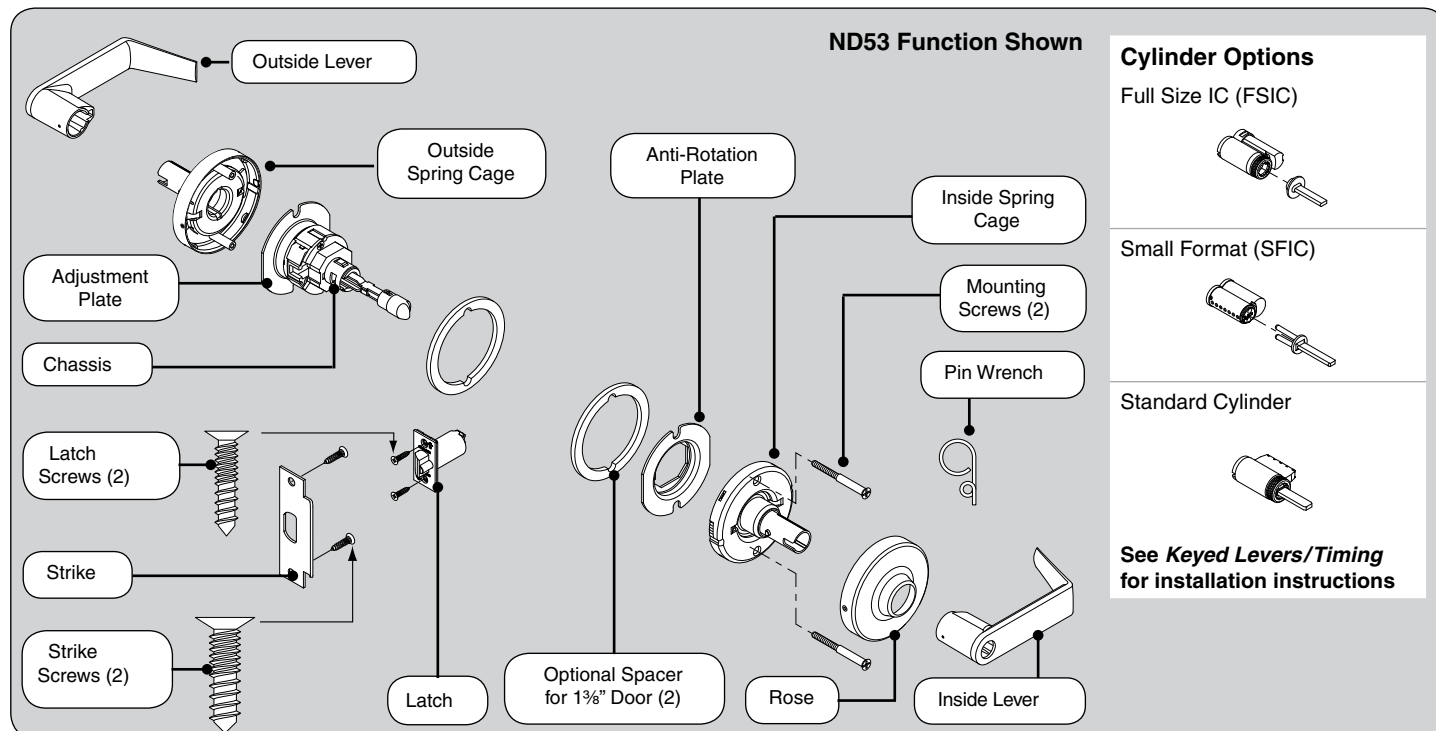
Part Number	Description	Contents
C203-311	Latch and strike (includes tool)	(4) C503-766 (T-15)
C203-312	Latch and ANSI strike (includes tool)	(2) C503-766 (T-15)
		(2) L583-371 (T-20)

\* Specify lip length.

\*\* Specify finish.




## ND-Series Standard Installation Instructions

**Door Preparation**



For door preparation use the template included in the package with the lock. For additional information, refer to the Schlage website: [securitytechnologies.ingersollrand.com](http://securitytechnologies.ingersollrand.com)

**1****Install Latch**

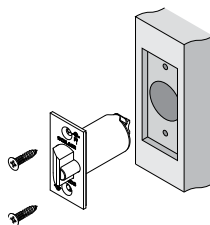The bevel must face toward the door stop.

**2****Install Chassis**

**⚠ IF DOOR THICKNESS IS NOT 1 3/4", SEE "DOOR THICKNESS ADJUSTMENT".**

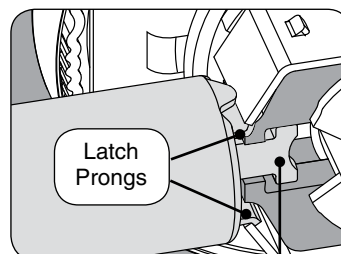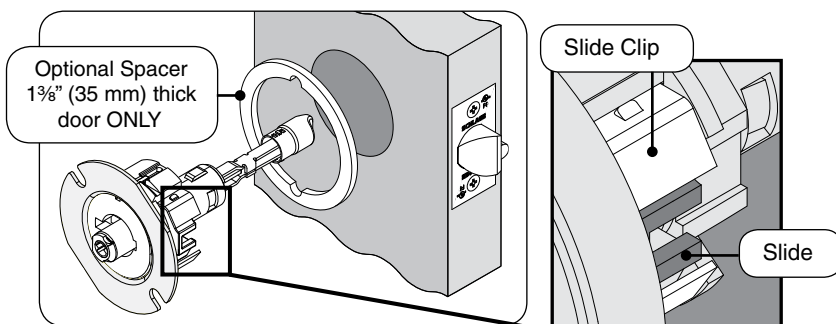

**IMPORTANT!**  
Push latch to center of slide


Latch prongs fit between slide and slide clip.

**3**

**Non-Keyed Outside Levers ONLY:**  
Install Outside Lever and Springcage  
**Keyed IC Outside Levers ONLY:**  
Install Outside Lever and Springcage - **DO NOT**  
install IC cylinder

**Non Keyed**

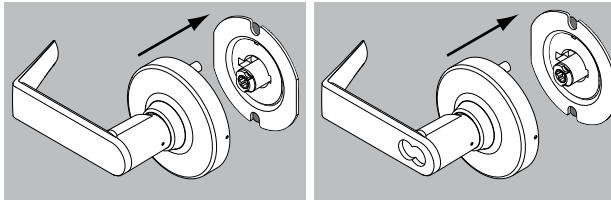**Keyed IC**




**IMPORTANT! ALL Keyed Outside Levers:**  
Follow steps at Keyed Levers/Timing

**Non-Keyed Levers ONLY, go to step 4**

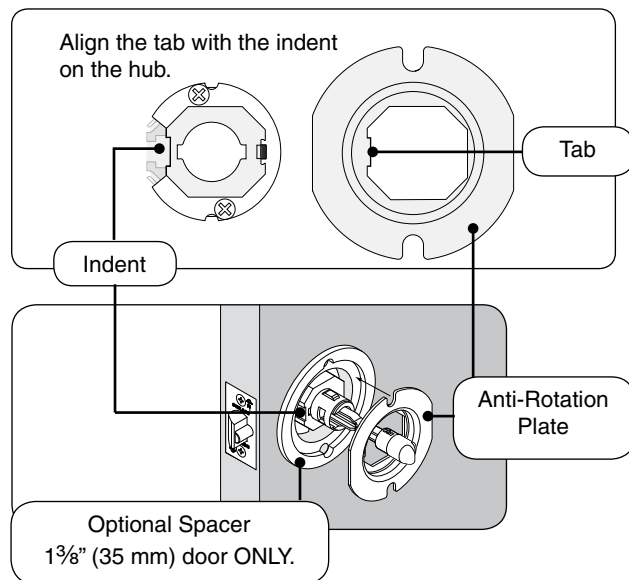
**4**

**Install Anti-Rotation Plate**




**5**

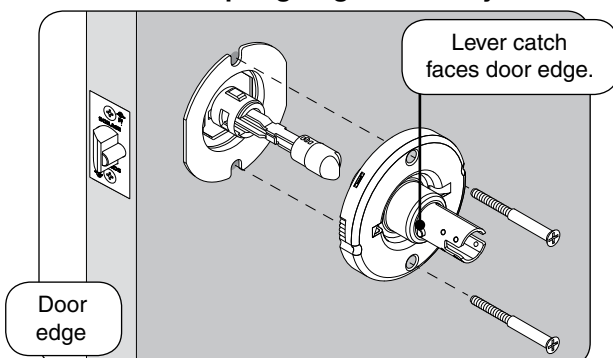**Install Inside Spring Cage Assembly**




**6**

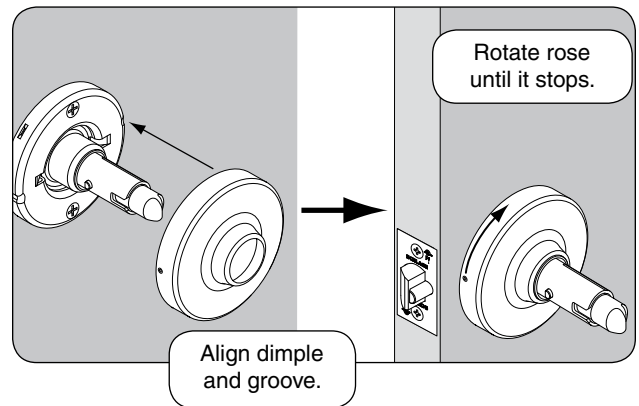**Install Inside Rose**




**7**

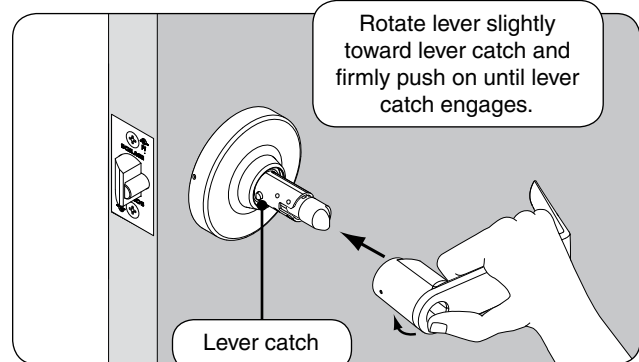**Install Inside Lever**



**8**

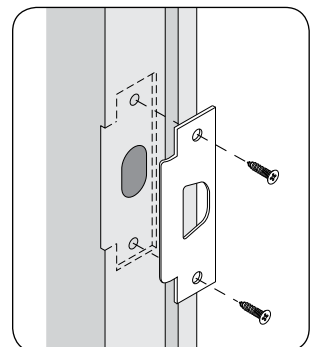**Install Strike**



**9**

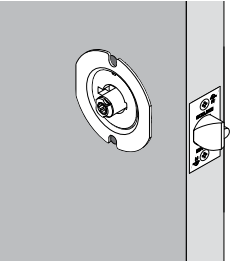
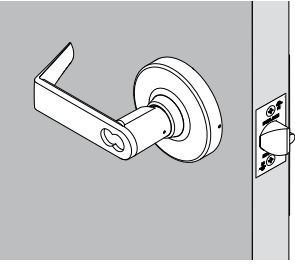
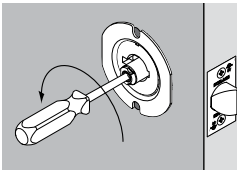
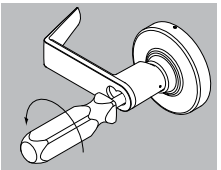

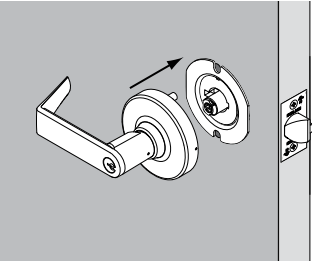
 
 

 
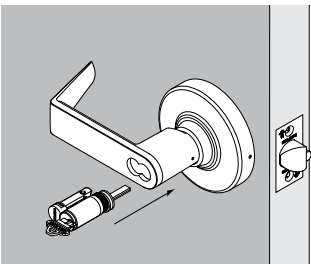
**Check Lock Function**

If a keyed function does not work properly, see **KEYED LEVERS/TIMING**.




 



 



 
**KEYED LEVERS/TIMING**

**⚠ IMPORTANT: DO NOT insert key in outside cylinder (if applicable) before or during these steps. FAILURE TO PROPERLY TIME THE LOCK WILL RESULT IN IMPROPER FUNCTION, AND CAN CAUSE DAMAGE TO THE LOCK.**

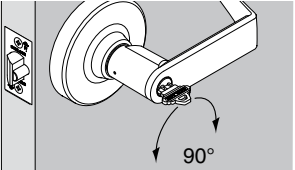
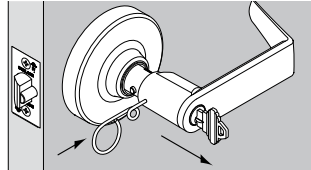
**ND70 and ND73 ONLY**

<p><b>a</b> <b>STANDARD CYLINDER:</b> Install chassis only.</p> 	<p><b>IC CYLINDER:</b> Install lock except for outside IC and driver.</p> 	<p><b>b</b> Rotate key cam counterclockwise until it stops. Then rotate clockwise to the position as shown below.</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p><b>STANDARD CYLINDER</b></p>  </div> <div style="text-align: center;"> <p><b>IC CYLINDER</b></p>  </div> </div> 
<p><b>c</b> <b>STANDARD CYLINDER:</b> Install the outside lever. Then, continue with Step 4.</p> 	<p><b>IC CYLINDER:</b> Insert driver. Align cylinder tailpiece blade and keyway.</p> <div style="display: flex; align-items: center; justify-content: center;"> <div style="text-align: center;"> <p>FSIC</p>  </div> <div style="text-align: center;"> <p>SFIC</p>  </div> </div> <div style="display: flex; align-items: center; justify-content: center; margin-top: 10px;">   </div> <p style="text-align: center;">FSIC SHOWN</p> <div style="text-align: right;"> <p>Turn the key 15° and hold. Install the cylinder. Then, continue with Step 4</p>  </div>	


**ND60, ND66, ND72, ND75, ND93, ND94, ND95 and ND97 ONLY**

<p><b>a</b> <b>STANDARD CYLINDER:</b> Install lock except for inside lever* *ND72 ONLY: Install chassis only. Both inside and outside cams require timing.</p>	<p><b>b</b> Rotate key cam clockwise to the correct position as shown below.* *ND72 ONLY: Required on inside and outside cams.</p> <table style="width: 100%; text-align: center;"> <tr> <td>Standard Cylinder</td> <td>IC Cylinder</td> <td>ND66 Standard Cylinder</td> <td>ND66 IC Cylinder</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> </tr> </table>				Standard Cylinder	IC Cylinder	ND66 Standard Cylinder	ND66 IC Cylinder					<p><b>c</b> Follow step C as shown above. Then, continue with Step 4.</p>
Standard Cylinder	IC Cylinder	ND66 Standard Cylinder	ND66 IC Cylinder										
													



**Remove a Keyed Lever**

<p><b>a</b> To remove a keyed lever, rotate key 90°.</p> 	<p><b>b</b> Insert pin wrench and push against lever catch. Pull off the lever.</p> 
--	--

**TROUBLESHOOTING—If levers do not function properly, follow these steps**

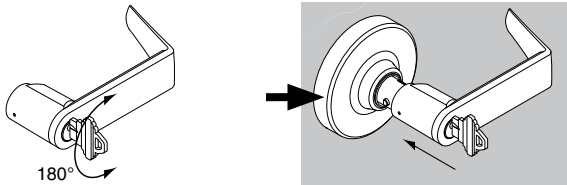
<p><b>a</b> Remove lever as shown on previous page.</p>	<p><b>b</b> Rotate key 180° and reinstall lever.</p> 	<p>For more information call Technical Support at 877-671-7011.</p>
---	---	---



**DOOR THICKNESS ADJUSTMENT**
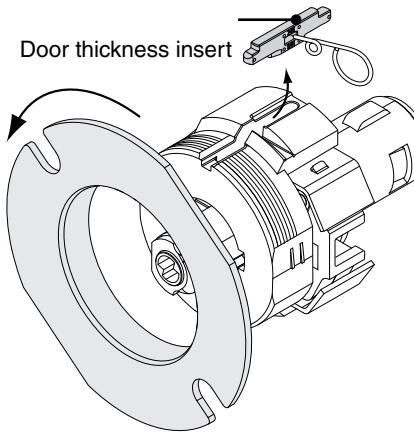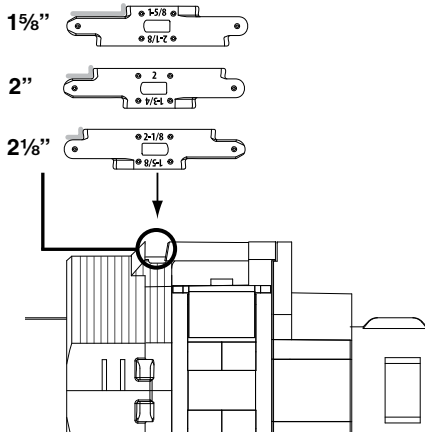
<p><b>!</b> For 1<math>\frac{3}{4}</math>" thick doors, <b>NO ADJUSTMENT IS REQUIRED.</b></p> <p>For 1<math>\frac{5}{8}</math>" thick doors, <b>install the Optional Spacers (see steps 2 and 4). No further adjustment is required.</b></p> <p>For 1<math>\frac{5}{8}</math>", 2" or 2<math>\frac{1}{8}</math>" doors, complete the following steps.</p>	<p><b>a</b> Remove adjustment plate and door thickness insert.</p> 	<p><b>b</b> Reinsert door thickness insert with correct dimension visible.</p> 
---	--	---


**If door thickness insert is missing, use marks on chassis:**

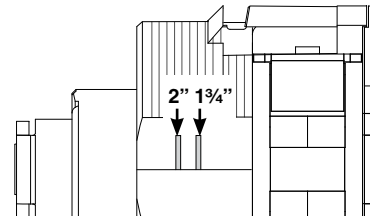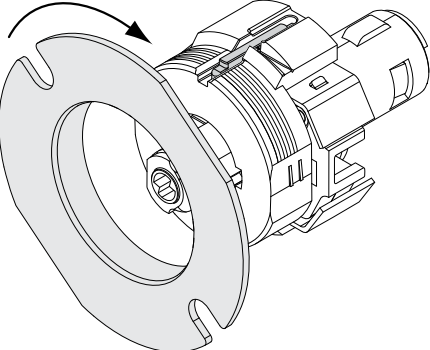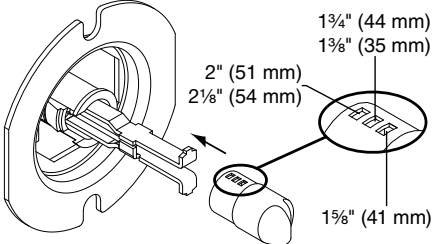- 1 $\frac{5}{8}$ " Align adjustment plate with 1 $\frac{3}{4}$ " mark. Use optional spacers. (For ND85 rotate additional half turn CCW.)
  - 1 $\frac{5}{8}$ " Tighten adjustment plate to bottom, then rotate a half turn CCW.
  - 1 $\frac{3}{4}$ " Align adjustment plate with 1 $\frac{3}{4}$ " mark. (For ND85 rotate an additional half turn CCW.)
  - 2" Align adjustment plate with 2" mark.
  - 2 $\frac{1}{8}$ " Align adjustment plate with 2" mark, then rotate an additional full turn CCW.
- CCW = counterclockwise



<p><b>c</b> Reinstall adjustment plate. Tighten until plate contacts door thickness insert flat.</p> 	<p><b>If applicable, adjust turn button position.</b></p> 
--	--

# ND25 Exit Lock Installation Instructions

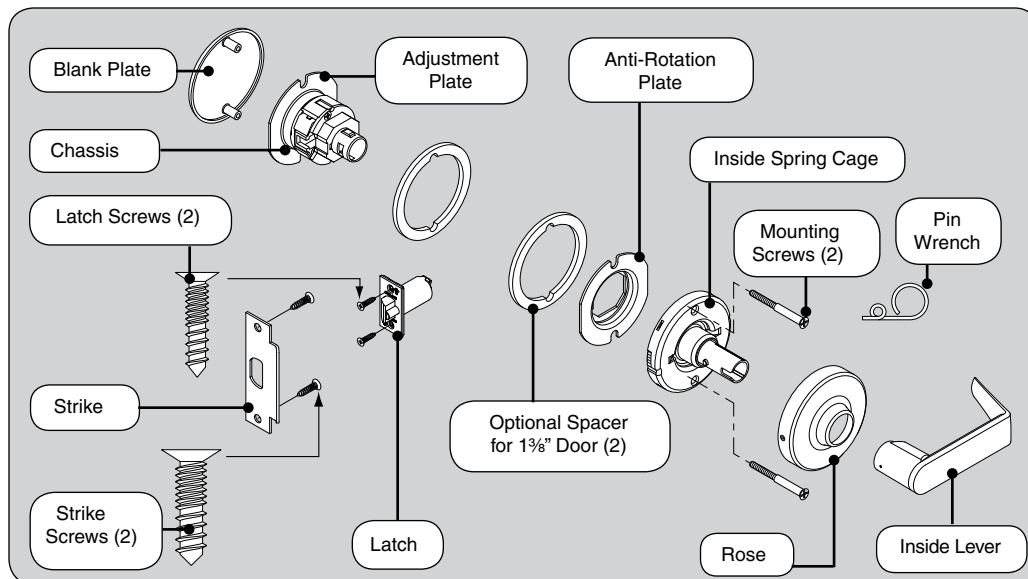

## Door Preparation

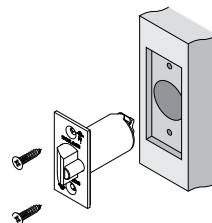
For door preparation use the template included in the package with the lock. For additional information, refer to the Schlage website:

[securitytechnologies.ingersollrand.com](http://securitytechnologies.ingersollrand.com)

**1**


## Install Latch

The bevel must face toward the door stop.


**2**

## Install Blank Plate and Chassis

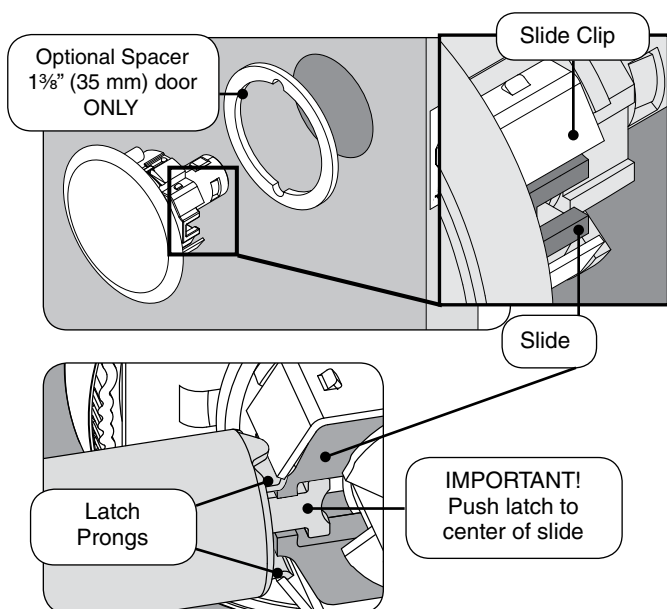**⚠ IF DOOR THICKNESS IS NOT 1 3/8", SEE "DOOR THICKNESS ADJUSTMENT".**




Latch prongs fit between slide and slide clip.

**3**

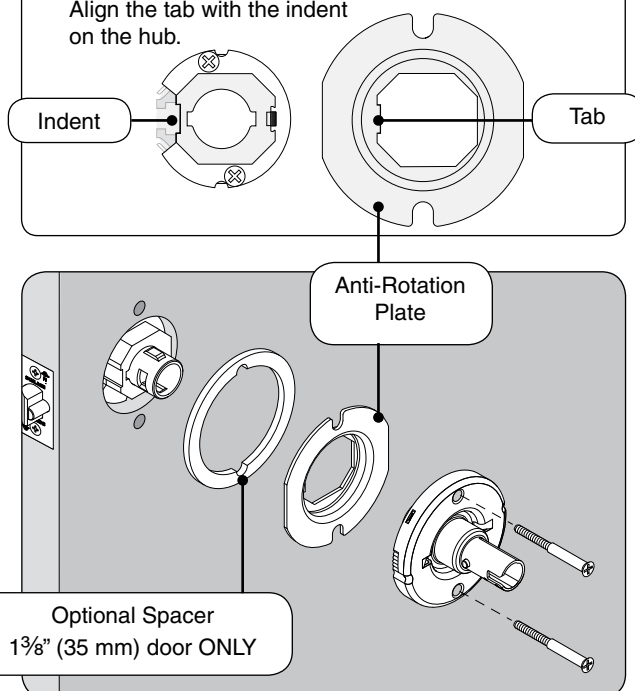
## Install Anti-Rotation Plate and Spring Cage

Align the tab with the indent on the hub.




4

### Install Rose

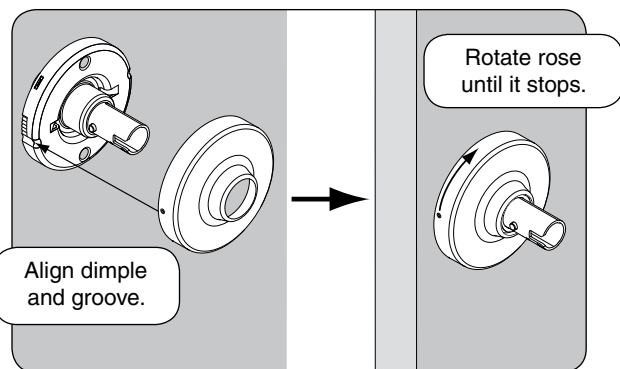


5

### Install Lever

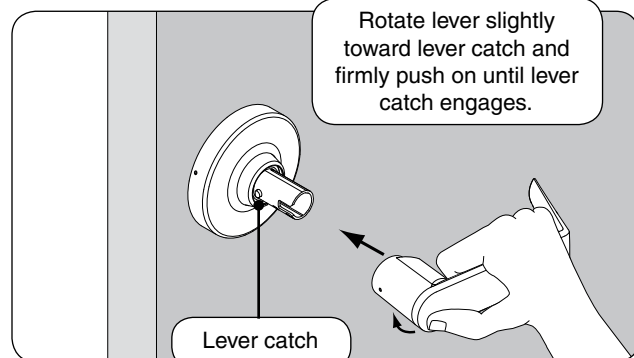

6

### Install Strike

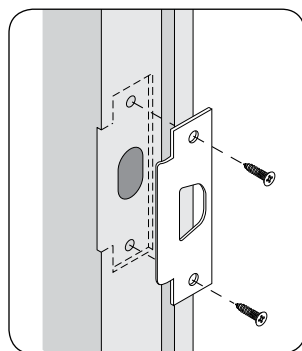

7

### Check Lock Function

For more information call  
Technical Support at 877-671-7011.

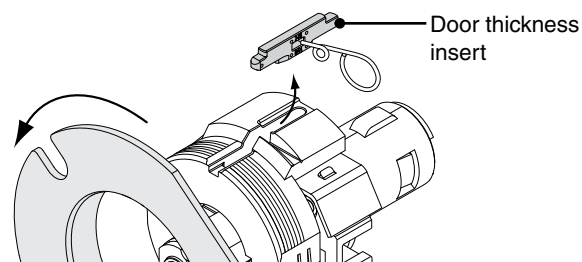
## DOOR THICKNESS ADJUSTMENT

**!** For 1 $\frac{3}{4}$ " thick doors, NO ADJUSTMENT IS REQUIRED.


For 1 $\frac{5}{8}$ " thick doors, install the **Optional Spacers** (see steps 2 and 3). No further adjustment is required.

For 1 $\frac{5}{8}$ ", 2" or 2 $\frac{1}{8}$ " doors, complete the following steps.

**a** Remove adjustment plate and door thickness insert.



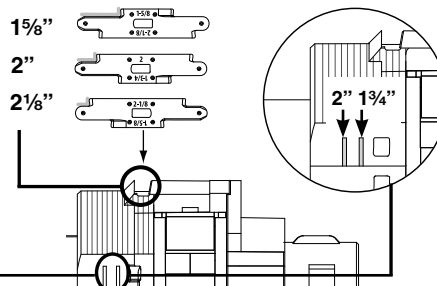**b** Reinsert door thickness insert with correct dimension visible.



**If door thickness insert is missing, use marks on chassis:**

1 $\frac{5}{8}$ " Align adjustment plate with 1 $\frac{3}{4}$ " mark.

Use optional spacers. (For ND85 rotate additional half turn CCW.)

1 $\frac{5}{8}$ " Tighten adjustment plate to bottom, then rotate a half turn CCW.

1 $\frac{3}{4}$ " Align adjustment plate with 1 $\frac{3}{4}$ " mark. (For ND85 rotate an additional half turn CCW.)

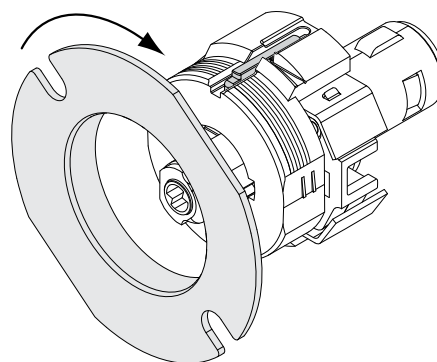
2" Align adjustment plate with 2" mark.

2 $\frac{1}{8}$ " Align adjustment plate with 2" mark, then rotate an additional full turn CCW.


CCW = counterclockwise

**c** Reinstall adjustment plate.





Tighten until plate contacts door thickness insert flat.




## ND170 Dummy Lock Installation Instructions

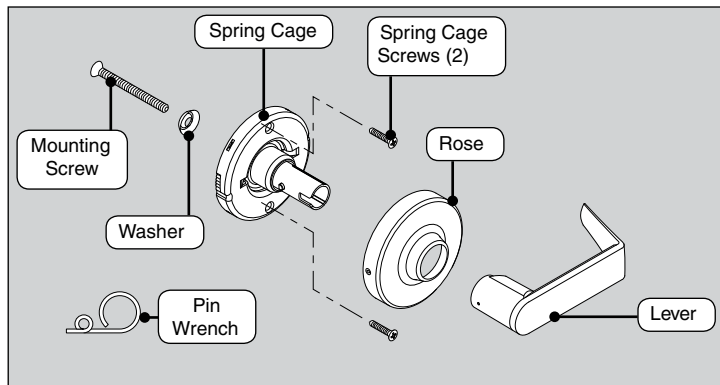**Door Preparation**

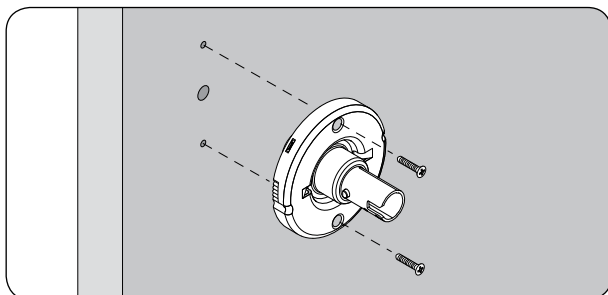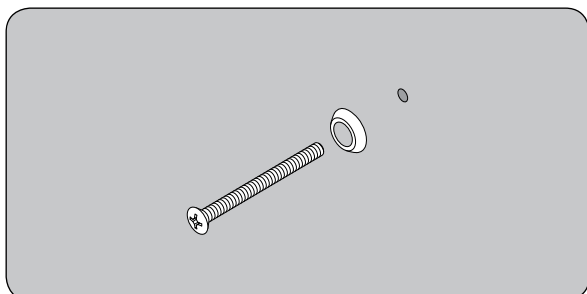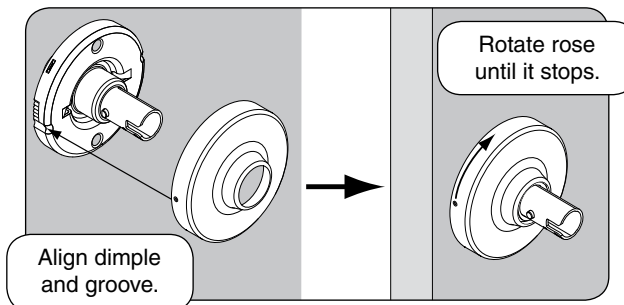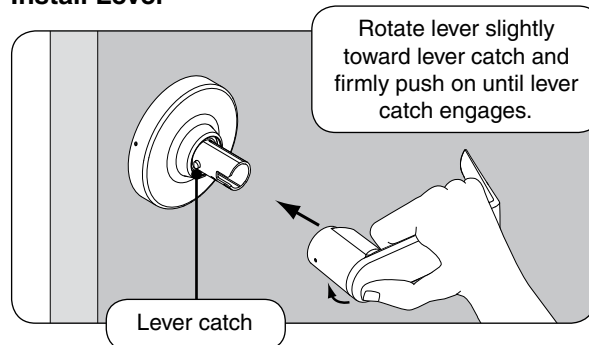For door preparation use the template included in the package with the lock. For additional information, refer to the Schlage website:  
[securitytechnologies.ingersollrand.com](http://securitytechnologies.ingersollrand.com)

**1 Install Spring Cage****2 Install Mounting Screw and Washer****3 Install Rose****4 Install Lever****To Remove Lever:**

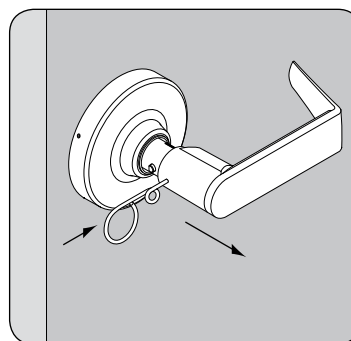Insert pin wrench and push against lever catch. Pull off the lever.



For more information call  
 Technical Support at 877-671-7011.



## ND-Series Electrified Functions

For standard installation, see full instruction sheet.

### Electrical Requirements

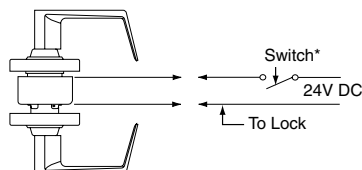
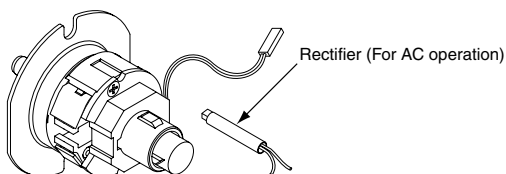
Amps .35; Volts 24 AC.

Amps .15; Volts 24 DC.


Operation Temperature: +140°F to -22°F

All power requirements shown  
are for single lock operation.

Attach low voltage wires\* to pigtail of rectifier or solenoid.  
Select proper wire size to minimize voltage drop.



DC Power Source

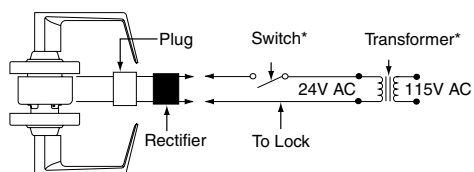

AC Power Source

\*Item not furnished.

## ND-Series Request to Exit Functions

For standard installation, see full instruction sheet.

### Electrical Requirements

Amps .50; Volts 24 AC.

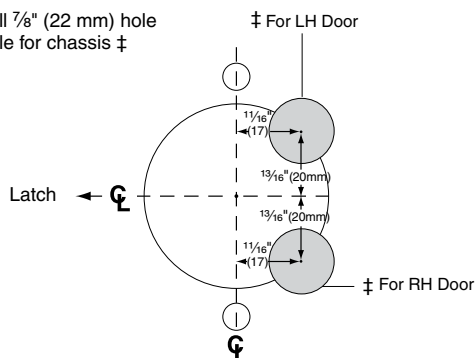
Amps .50; Volts 24 DC.

Operation Temperature: +140°F to -22°F


All power requirements shown  
are for single lock operation.

Attach low voltage wires\* to pigtail of rectifier or solenoid. Select proper wire size to minimize voltage drop.


**IMPORTANT:** Drill 7/8" (22 mm) hole  
prior to drilling hole for chassis ‡



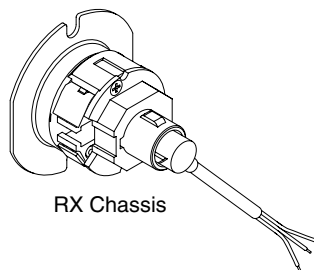Normally Open—white and purple wires, Normally Closed—white and grey wires





RX Chassis

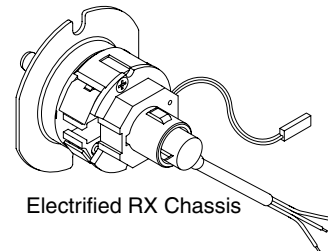



Electrified RX Chassis

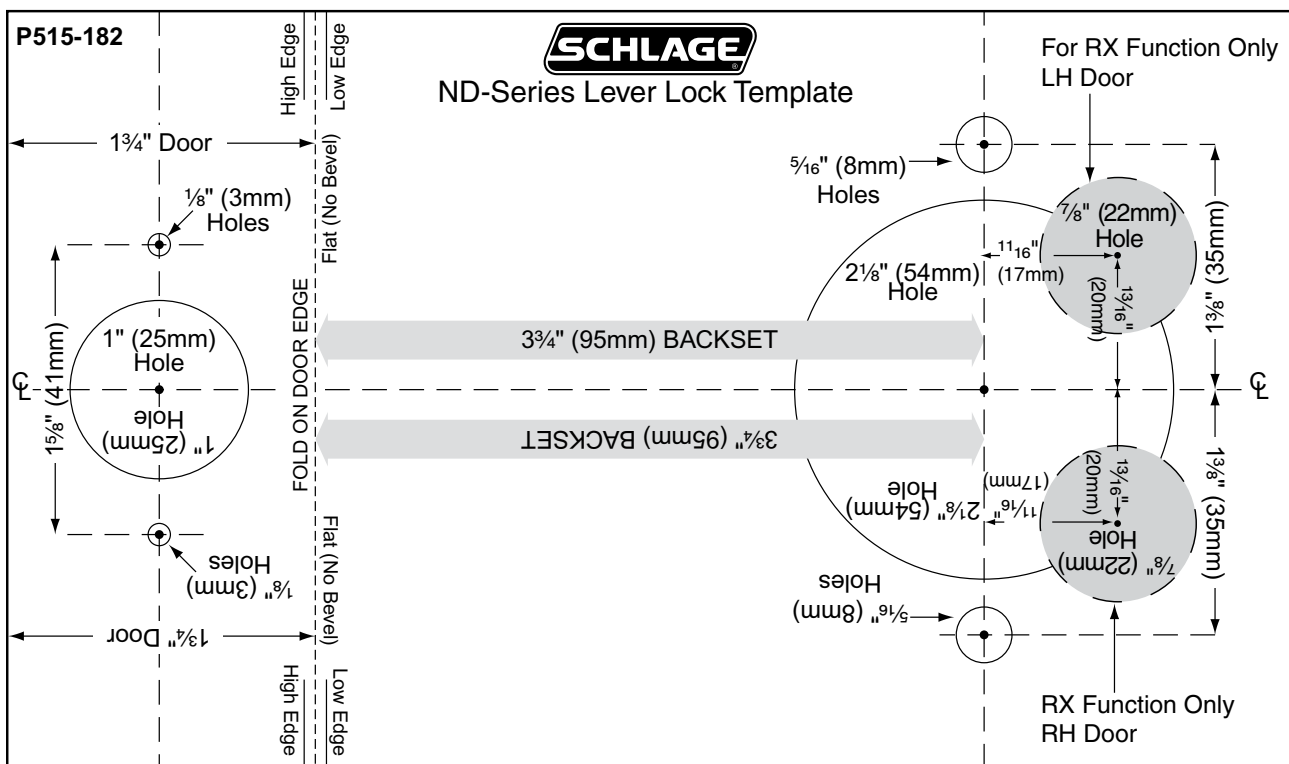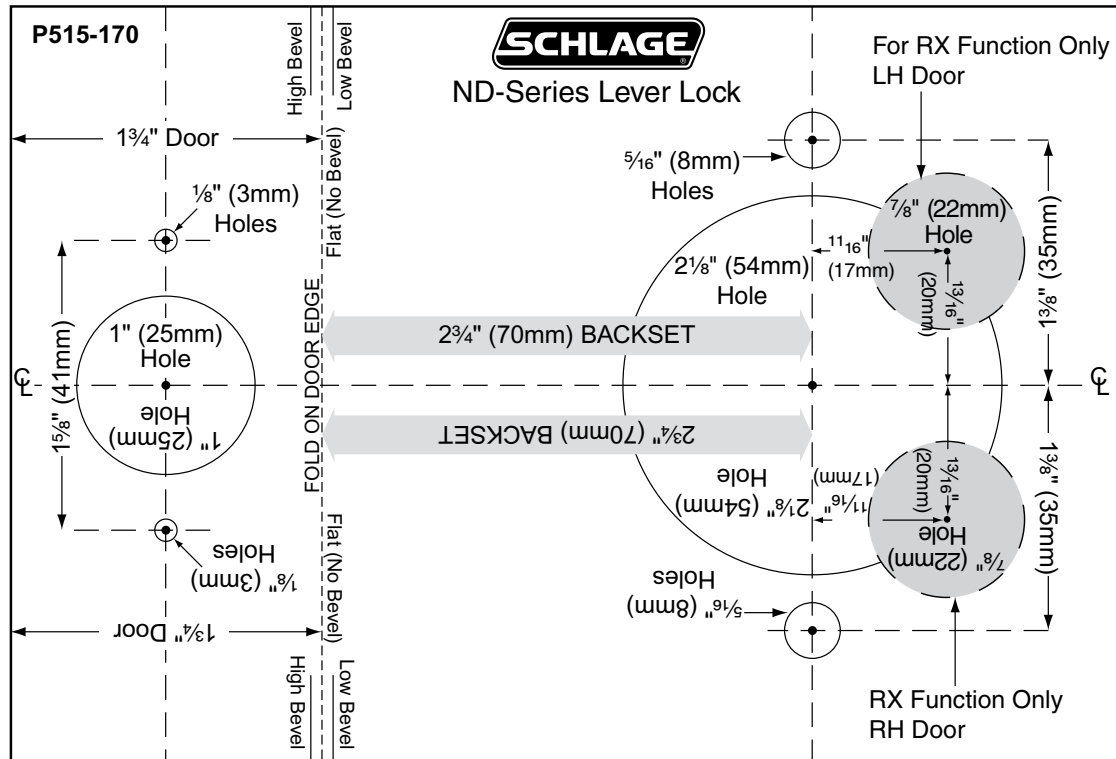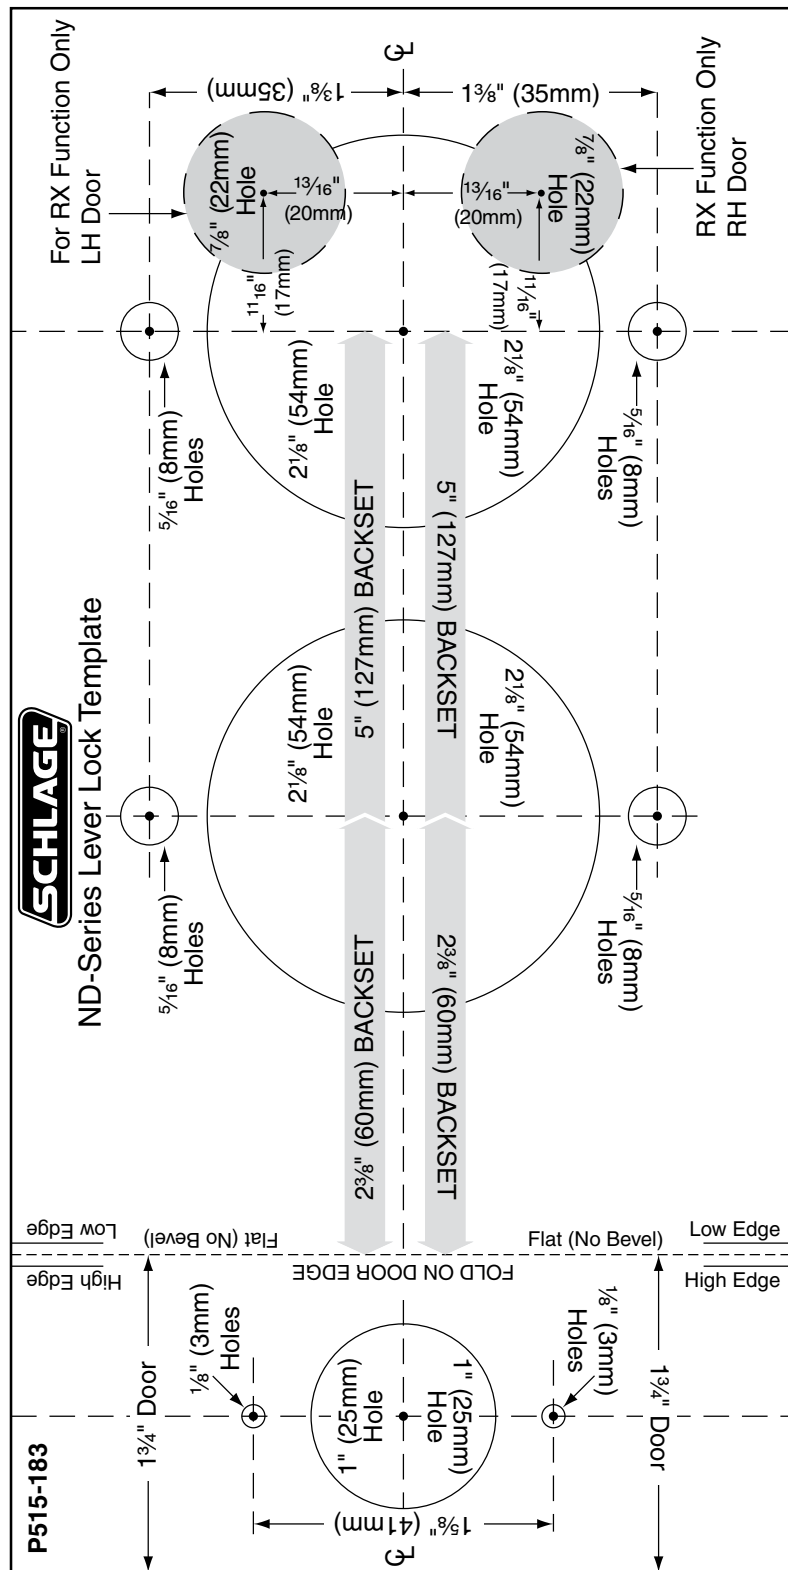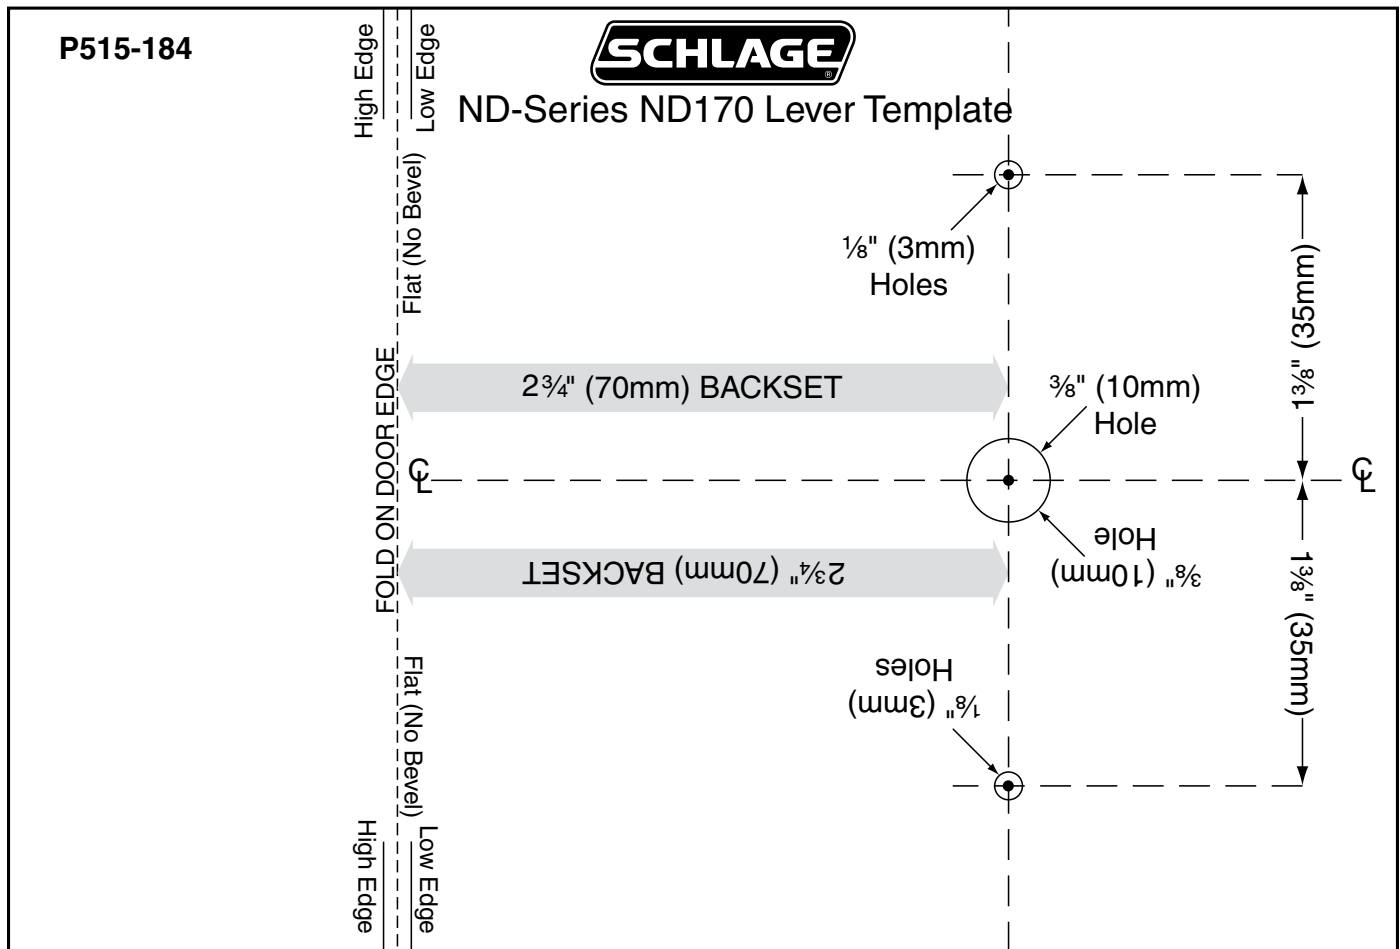\*Item not furnished.









## Finishes

Schlage Lock finishes are durable, top quality finishes obtained by the careful processing of solid brass, bronze, stainless steel, or other materials.

Where required, a protective clear coating is applied and cured under high temperature. It is important that the climatic conditions and usage be taken into consideration when selecting finishes. This is especially true in areas subjected to strong corrosive vapors, humid climate, or sea air which, in short time, may have a damaging effect on metal finishes.

The longevity and preservation of the finish appearance is determined by base metal and finishing process. Clear protective coating or other organic finishing applications may require different methods of cleaning and care. For example, non-clear coated finishes should not be cleaned with any soaps or solvents. Organically coated surfaces should periodically be cleaned with a mild non-abrasive soap and be buffed lightly with a clean cloth. The type of base metal and finished techniques must be considered when applying any cleaning or preservative method.

In some instances for customer convenience, the most appropriate BHMA (Builders Hardware Manufacturers Association) finish symbols are used to indicate similarity of appearance regardless of base metal or finishing process. Finish numbers in the 600-Series are the BHMA industry standard. The nearest former U.S. equivalent code designations are shown in parenthesis.

### Finish Codes and Descriptions

Schlage Code	BHMA	Description
605	(US 3)	Bright Brass, Clear Coated
606	(US 4)	Satin Brass, Clear Coated
612	(US 10)	Satin Bronze, Clear Coated
613	(US 10B)	Oil Rubbed Bronze, Oxidized Satin Bronze, Oil Rubbed, No Coating
619	(US 15)	Satin Nickel, Clear Coated
625	(US 26)	Bright Chromium Plated, No Coating
626	(US 26D)	Satin Chromium Plated, No Coating

## Ordering Procedures

To order Schlage products, descriptive data should be in the same sequence as shown below.

Line Item	Qty	Product	Outside		Inside		Hand	Latch	Strike	Dr Thk	Ext	Dim	Additional Details
			DES	FIN	DES	FIN							
1	2	3	4	5	6	7	8	9	10	11	12	13	14

**Line Item:** Line item number

**Qty:** Quantity

**Product:** Complete lock product or part number

**Outside DES:** Outside design code

**Outside FIN:** Outside finish code

**Inside DES:** Inside design code

**Inside FIN:** Inside finish code

**Hand:** Hand of door: Only one hand allowed per line item. Example: RH=right hand, LH=left hand, RR=right reverse, LH=left reverse

**Latch:** Leave blank for standard latch or specify part number if non-standard latch is required

**Strike:** Leave blank for standard strike or specify part number if non-standard latch is required. LLL=less strike

**Dr Thk:** Door thickness: Enter door thickness if non-standard, example 138=1 $\frac{3}{8}$ ", 214=2 $\frac{1}{4}$ ", 212=2 $\frac{1}{2}$ " (EI or EO assumes the latch will be centered on 1" door, to which material has been added)

**Ext:** Extension: Enter one of the following when door 2" thick or greater are specified: EE=extended equally, EI=extended inside, EO=extended outside, ED=extended differently

**Dim:** Dimension: Enter dimension for non-standard strike lip length and mortise cylinder or blocking ring length

**Additional Details:** Enter detail for keying information and for special requirements

## Limited Warranty

### PRODUCT WARRANTY: COMMERCIAL APPLICATIONS

#### Limited Warranty

Schlage Lock Company, LLC (the "Company") extends a three-year limited warranty to the original user of the products manufactured by the Company (the "Products") against defects in material and workmanship from the date of purchase. Certain Products contain restrictions to this limited warranty, additional warranties or different warranty periods. Please see below for specific Product warranty information.

**What The Company Will Do:** Upon return of the defective Product to the Company or its authorized distributor for inspections, free and clear of all liens and encumbrances and accompanied by the statement of defects or proof of purchase, the Company will replace the Product.

**Original User:** These warranties only apply to the Original User of Products. These warranties are not transferable.

**What Is Not Covered:** The following costs, expenses and damages are not covered by the provisions of these limited warranties: (i) labor costs including, but not limited to, such costs for the removal and reinstallation of Products; (ii) shipping and freight expenses required to return the Products to the Company; or (iii) any other incidental, consequential, indirect, special and/or punitive damages, whether based on contract, warranty, tort (including, but not limited to strict liability or negligence), patent infringement, or otherwise, even if advised of the possibility of such damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion or limitation may not apply to you.

The provisions of this warranty do not apply to Products: (i) used for purposes for which they are not designed or intended; (ii) which have been subjected to alteration, abuse, misuse, negligence or accident; (iii) which have been improperly stored, installed, maintained or operated; (iv) which have been used in violation of written instructions provided by Schlage; (v) which have been subjected to improper temperature, humidity or other environmental conditions (i.e., corrosion); or (vi) which, based on the Company's examination, do not disclose to the Company's satisfaction non-conformance to the warranty. Additionally, the Company will not warrant ANSI A156.2 Grade 2 lever Product installed in educational facilities and student housing.

### SPECIFIC PRODUCT WARRANTY RESTRICTIONS/ADDITIONAL WARRANTIES

**ND-Series Levers 10-Year Mechanical Warranty:** The limited warranty is provided for a period of ten (10) years from the date of purchase and is subject to the restrictions of these limited warranties.

**Small Format Interchangeable Core (SFIC) Warranty:** The limited warranty also applies to Schlage locks and housings when used with another manufacturer's cores, or to Schlage cores (i.e. SFIC) when used in another manufacturer's locks and housings. The use of unauthorized cylinder cams or other components with the Products shall void these warranties.

**Everest® Primus® Limited Lifetime Key Breakage Warranty:** A limited lifetime warranty is provided to the original user against breakage and is subject to the restrictions of these limited warranties.

### PRODUCT WARRANTIES, ADDITIONAL TERMS & CONDITIONS: COMMERCIAL AND RESIDENTIAL APPLICATIONS

**Additional Terms:** The Company does not authorize any person to create for it any obligation or liability in connection with the Products. The Company's maximum liability under these warranties is limited to the purchase price of the Product. No action arising out of any claimed breach of these warranties by the Company may be brought by the original user more than one (1) year after the cause of action has arisen.

**How State Law Applies:** These warranties give you specific legal rights, and you may also have other rights which vary from state to state.

**Note:** Should the Product be considered a consumer product as may be covered by the Magnusson Moss Federal Warranty Act, please be advised that: (1) Some states do not allow limitations or incidental consequential damages or how long an implied warranty lasts so that the above limitations may not fully apply; and (2) This warranty gives specific legal rights and a user may have other rights which may vary from state to state.

For warranty service and shipping instructions, Schlage and Portable Security Commercial customers contact:

Schlage, Customer Care  
3899 Hancock Expressway  
Colorado Springs, CO 80911  
(877) 671-7011  
Fax (800) 452-0665

The Schlage Lock Company reserves the right to make changes in designs and specifications or to make additions or improvements on its products without notice and without incurring any obligation to incorporate them on products previously manufactured. The Schlage Lock Company is not responsible for any modification, addition or alteration to our products by others.



Ingersoll Rand (NYSE:IR) advances the quality of life by creating and sustaining safe, comfortable and efficient environments. Our people and our family of brands—including Club Car®, Ingersoll Rand®, Schlage®, Thermo King® and Trane®—work together to enhance the quality and comfort of air in homes and buildings; transport and protect food and perishables; secure homes and commercial properties; and increase industrial productivity and efficiency. Ingersoll Rand Security Technologies' market-leading products include electronic and biometric access control systems; time-and-attendance and personnel scheduling systems; mechanical locks; portable security; door closers, exit devices, architectural hardware, and steel doors and frames; and other technologies and services for global security markets. Ingersoll Rand is a \$14 billion global business committed to a world of sustainable progress and enduring results.

877.671.7011

[www.securitytechnologies.ingersollrand.com](http://www.securitytechnologies.ingersollrand.com)

[ingersollrand.com](http://ingersollrand.com)