




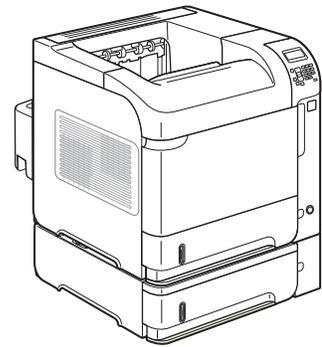

LASERJET ENTERPRISE 600 M601, M602, AND M603 SERIES PRINTER

Service Manual

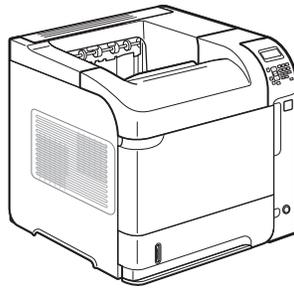

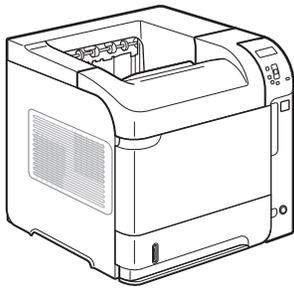

HP LaserJet Enterprise 600 M601, M602, and M603 Series Printer

Service Manual

Copyright and License

© 2011 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Part number: CE988-90945

Edition 1, 11/2011

Trademark Credits

ENERGY STAR and the ENERGY STAR mark are registered U.S. marks.

Conventions used in this guide

 **TIP:** Tips provide helpful hints or shortcuts.

 **NOTE:** Notes provide important information to explain a concept or to complete a task.

 **CAUTION:** Cautions indicate procedures that you should follow to avoid losing data or damaging the product.

 **WARNING!** Warnings alert you to specific procedures that you should follow to avoid personal injury, catastrophic loss of data, or extensive damage to the product.

Table of contents

1 Theory of operation	1
Basic operation	2
Major print systems	2
Internal components	3
Operating sequence	7
Formatter system	8
Sleep mode	8
Input/output	8
USB	8
Embedded print server	9
Hard-disk	9
CPU	9
Memory	9
Random-access memory	9
Nonvolatile memory	9
DIMM slot	9
PJM overview	10
PML	10
Control panel	10
Engine-control system	11
DC controller PCA	12
Sensors, solenoids, and switches	13
Motors and fans	14
Failure detection	14
Motor failure	14
Fan motor failure	14
Engine power supply	15
Fuser-control circuit	15
Low-voltage power supply	17
High-voltage power supply	18
Overcurrent/overvoltage protection	19
Image-formation system	20

Image-formation process	21
Block 1: Latent image formation	23
Step 1: Primary charging	23
Step 2: Laser-beam exposure	23
Block 2: Developing	24
Step 3: Developing	24
Block 3: Transfer	25
Step 4: Transfer	25
Step 5: Separation	25
Block 4: Fusing	26
Step 6: Fusing	26
Block 5: Drum cleaning	27
Step 7: Drum cleaning	27
Step 8: Drum charge elimination	27
Laser/scanner system	28
Laser failure detection	30
Pickup, feed, and delivery system	31
Pickup-and-feed block	32
Fuser/delivery block	33
Pressure roller pressure release control	33
Paper trays	34
Printing from Tray 1	34
Printing from Tray 2	34
Cassette media size detection and cassette presence detection	34
Jam detection	36
1x500-sheet paper feeder	40
Pickup-and-feed operation (PF)	41
Cassette lift operation (PF)	43
Cassette media size detection and cassette presence detection (PF)	43
Cassette multiple-feed prevention (PF)	43
Jam detection (PF)	43
1x1500-sheet paper deck	44
Pickup-and-feed operation (PD)	45
Cassette lift operation (PD)	47
Media size detection (PD)	48
Multiple-feed prevention (PD)	48
Jam detection (PF)	48
Envelope feeder	49
Pickup-and-feed operation (EF)	50
Multiple-feed prevention (EF)	50
Multiple-feed detection (EF)	51

Jam detection (EF)	51
Duplexer	53
Motor and fan control (DP)	54
Failure detection (DP)	55
Reverse-and-re-pickup operation (DP)	55
Side registration adjustment operation (DP)	56
Jam detection (DP)	58

2 Removal and replacement 59

Introduction	60
Removal and replacement strategy	60
Electrostatic discharge	60
Required tools	61
Types of screws	62
Service approach	63
Before performing service	63
After performing service	63
Post-service test	63
Print-quality test	63
Customer replaceable units (CRUs)	64
Print cartridge	64
Tray 2	65
Tray 2 separation, pickup, and feed rollers	66
Transfer roller	69
Fuser	70
Remove the fuser	70
Formatter cover and formatter cage	71
Installing a new formatter	73
Hard drive	74
Remove the SSM	74
Remove the encrypted HHD	76
Installing a replacement hard drive	78
SSM firmware upgrade	78
HDD firmware upgrade	79
Memory DIMM	80
Remove the memory DIMM	80
Install the memory DIMM	81
Tray 1 pickup and feed rollers	82
Tray 1 separation roller	85
Rear output bin	87
Covers	88

Top-accessory cover	88
Envelope feed accessory covers	89
Duplex accessory or cover	90
Tray 2 extension door	91
Remove the Tray 2 extension door	91
Top cover	92
Remove the top cover	92
Right-side cover	95
Remove the right-side cover	95
Reinstall the right cover	97
Left-side cover	98
Remove the left-side cover	98
Right-front cover	100
Remove the right-front cover	100
Rear-upper cover	103
Remove the rear-upper cover	103
Front cover	105
Remove the front cover	105
Main assemblies	107
Registration assembly	107
Control-panel assembly	109
Remove the control-panel assembly	109
Walk-up USB port and cable	111
Remove the walk-up USB port and cable	111
Inner connecting PCA	114
Remove the inner connecting PCA	114
Reinstall the inner connecting PCA	116
Fan FN102	117
Remove fan FN102	117
Fan FN103	119
Remove fan FN103	119
Pickup-motor assembly (M101)	121
Remove the pickup-motor assembly	121
Drum-motor assembly (M102)	123
Remove the drum motor	123
Lifter-motor assembly (M103)	125
Remove the lifter motor	125
DC controller PCA	128
Remove the DC controller PCA	128
Reinstallation tip	129
Installing a new formatter and a new DC controller	129

Pickup-drive assembly	131
Remove the pickup-drive assembly	131
Reinstall the pickup-drive assembly	136
Fuser-motor assembly (M299)	137
Remove the fuser-motor assembly	137
Drum-drive assembly	139
Remove the drum-drive assembly	139
Reinstall the drum-drive assembly	141
Fan FN101	142
Remove fan FN101	142
Fan FN301	144
Remove fan FN301	144
Environmental sensor (TH3)	146
Remove the environmental sensor (TH3)	146
High voltage power supply	148
Remove the high-voltage power-supply assembly	148
Feed-guide assembly	152
Remove the feed-guide assembly	152
Reinstall the feed-guide assembly	154
Tray 1 paper-pickup assembly	155
Remove the Tray 1 pickup assembly	155
Feed-roller assembly	157
Remove the feed-roller assembly	157
Laser/scanner assembly	158
Remove the laser/scanner assembly	158
Paper-delivery assembly	161
Remove the paper-delivery assembly	161
Reinstall the paper-delivery assembly	164
1,500-sheet paper deck (PD)	165
Separation roller (PD)	165
Rear cover (PD)	167
Right-side cover (PD)	168
1,500-sheet paper deck left-side cover	169
Remove the left-side cover	169
Door (PD)	172
Motor (PD)	174
Remove the Motor (PD)	174
Driver PCA (PD)	176
Remove the Driver PCA (PD)	176
Lift-drive assembly (PD)	178
Remove the Lift-drive assembly (PD)	178

3 Solve problems	181
Solve problems checklist	182
Menu map	184
Preboot menu options	185
Current settings pages	192
Troubleshooting process	193
Determine the problem source	193
Pre-troubleshooting checklist	193
Troubleshooting flowchart	194
Power subsystem	196
Power-on checks	196
Overview	196
Tools for troubleshooting	199
Component diagnostics	199
LED diagnostics	199
Understand lights on the formatter	199
Engine diagnostics	204
Engine test button	204
Formatter test	204
Print/Stop test	205
Drum rotation test	205
Paper-path test (and automatic sensor test)	206
Paper path sensors test (automatic)	206
Manual sensor test	208
Top of page sensor (PS103)	210
Pre-feed sensor (PS102)	211
Fuser delivery sensor (PS700)	212
Duplex sensor (PS1502)	213
Media width sensors 1/2 (PS106/108)	214
Output bin full sensor (PS104)	215
Tray 1 paper present sensor (PS105)	216
Tray 2 paper present sensor (PS101)	217
Tray 2 top of stack sensor (PS107)	218
Tray 2 paper size switches (SW102)	219
Tray/Bin manual sensor test	220
Print/stop test	220
Component tests	221
Diagrams	223
Block diagrams	223
Main assemblies	223
Main parts	224

Motors and fans	225
PCAs	226
500-sheet feeder	226
1,500-sheet feeder	227
Connectors	229
DC controller PCA connectors	229
Product base connectors	231
500-sheet paper tray connectors	232
1,500-sheet paper tray connectors	232
Duplexer connectors	233
Envelope feeder connectors	233
General timing chart	234
Circuit diagrams	235
Internal print-quality test pages	241
Print-quality-troubleshooting pages	241
Clean the paper path	242
Set up an auto cleaning page	242
Print configuration page	243
Configuration page	243
HP embedded Jetdirect page	245
Print quality troubleshooting tools	246
Repetitive image defect ruler	246
Control-panel menus	247
Retrieve Job from USB menu	247
Retrieve Job from Device Memory menu	247
Supplies menu	248
Trays menu	249
Administration menu	250
Reports menu	250
General Settings menu	250
Retrieve From USB Settings menu	253
General Print Settings menu	253
Default Print Options menu	255
Display Settings menu	255
Manage Supplies menu	256
Manage Trays menu	257
Stapler/Stacker Settings menu	258
Multi-Bin Mailbox Settings menu	258
Network Settings menu	259
Troubleshooting menu	263
Device Maintenance menu	264

Backup/Restore menu	264
Calibrate/Cleaning menu	264
USB Firmware Upgrade menu	265
Service menu	265
Interpret control-panel messages, status-alert messages, and event code errors	266
10.00.33	266
10.00.35	266
10.00.60	266
10.00.69	267
10.00.91	267
10.OX.Y0 Supply memory error	267
10.23.35	268
10.23.50	268
10.23.51	268
10.23.52	268
10.23.60	268
10.23.70 Printing Past Very Low	269
10.26.15	269
10.26.50	269
10.26.60	270
10.XX.34 Used Supply In Use	270
10.XX.40 Genuine HP Supplies Installed	270
10.XX.41 Unsupported Supply In Use	271
10.XX.70 Printing past very low	271
10.YY.15 Install <supply>	271
10.YY.35 Incompatible <supply>	272
11.00.YY Internal clock error	272
13.00.00	272
13.00.EE	273
13.A3.FF	273
13.D3.DZ	273
13.E5.FF	273
13.EA.EE	274
13.EE.FF	274
13.FF.EE	274
13.FF.FF	274
13.WX.EE	274
13.WX.FF	275
13.WX.YZ Fuser Area Jam	275
13.WX.YZ Fuser wrap jam	275
13.WX.YZ Jam below control panel	275

13.WX.YZ Jam in Tray 1	275
13.WX.YZ Jam in Tray <X>	276
13.WX.YZ Jam inside envelope feeder	276
13.WX.YZ Jam inside top cover	276
14.00.XX	276
20.00.00 Insufficient memory: <Device> To continue, touch "OK"	277
21.00.00 Page Too Complex	277
32.08.AX	277
32.1C.XX	278
32.21.00	284
33.01.XX	285
33.XX.YY Used board/disk	285
40.00.01 USB I/O buffer overflow To continue, touch "OK"	285
40.00.02 Embedded I/O buffer overflow To continue, touch "OK"	285
40.00.05 Embedded I/O bad transmission To continue, touch "OK"	286
41.02.00 Error	286
41.03.YZ Unexpected size in envelope feeder To use another tray, touch "Options"	286
41.03.YZ Unexpected size in tray <X>	287
41.05.YZ Unexpected type in tray <X>	288
41.XX.YZ Error To continue, touch "OK"	290
42.XX.YY	291
47.00.XX	291
47.01.XX	291
47.02.XX	292
47.03.XX	292
47.04.XX	292
47.05.00	292
47.06.XX	292
47.WX.YZ Printer Calibration Failed To continue, touch "OK"	293
49.XX.YY To continue turn off then on	294
50.WX.YZ Fuser error To continue turn off then on	294
51.00.YY Error	296
52.XX.00 Error To continue turn off then on	296
54.XX.YY Error	297
55.00.YY DC controller error To continue turn off then on	298
55.0X.YY DC controller error To continue turn off then on	298
56.00.YY Error To continue turn off then on	298
57.00.0Y Error To continue turn off then on	299
58.00.0Y Error To continue turn off then on	300
59.00.YY error To continue turn off then on	300

59.A2.0x Error	301
60.00.0Y Tray <Y> lifting error	302
62.00.00 No system To continue turn off then on	302
65.X0.A1 Output accessory disconnected	303
66.80.YY Stapler/Stacker failure	303
69.11.YY Error To continue turn off then on	305
70.00.00 Error To continue turn off then on	305
79.XX.YY Error To continue turn off then on	306
80.0X.YY Embedded JetDirect error	306
81.YY.ZZ EIO-1 Card Failure	308
82.73.46 OR 82.73.47	309
98.00.01 Corrupt data in firmware volume	310
98.00.02 Corrupt data in solutions volume	310
98.00.03 Corrupt data in configuration volume	310
98.00.04 Corrupt data in job data volume	310
99.00.01 Upgrade not performed file is corrupt	311
99.00.02 Upgrade not performed timeout during receive	311
99.00.03 Upgrade not performed error writing to disk	311
99.00.04 Upgrade not performed timeout during receive	311
99.00.05 Upgrade not performed timeout during receive	312
99.00.06 Upgrade not performed error reading upgrade	312
99.00.07 Upgrade not performed error reading upgrade	312
99.00.08 Upgrade not performed error reading upgrade	312
99.00.09 Upgrade canceled by user	313
99.00.10 Upgrade canceled by user	313
99.00.11 Upgrade canceled by user	313
99.00.12 Upgrade not performed the file is invalid	313
99.00.13 Upgrade not performed the file is invalid	314
99.00.14 Upgrade not performed the file is invalid	314
99.00.2X	314
99.09.60 Unsupported disk	315
99.09.61 Unsupported disk	315
99.09.62 Unknown disk	315
99.09.63 Incorrect disk	316
99.09.64 Disk malfunction	316
99.09.65 Disk data error	316
99.09.66 No disk installed	316
99.09.67 Disk is not bootable please download firmware	316
99.XX.YY	317
<binname> full Remove all paper from bin	317
<Supply> low OR Supplies low	317

<Supply> very low OR Supplies very low	318
[File System] device failure To clear press "OK"	318
[File System] file operation failure To clear press "OK"	318
[File System] file system is full To clear press "OK"	318
[File System] is not initialized	319
[File System] is write protected	319
Accept bad signature	319
Bad optional tray connection	319
Canceling	320
Canceling... <jobname>	320
Cartridge Low	320
Cartridge Memory Abnormal	320
Cartridge Out	320
Checking engine	321
Checking paper path	321
Chosen personality not available To continue, touch "OK"	321
Cleaning do not grab paper	321
Cleaning...	322
Clearing event log	322
Clearing paper path	322
Close stapler/stacker multi bin mailbox door	322
Close top cover	322
Cooling device	323
Creating cleaning page...	323
Data received To print last page press "OK"	323
Event log is empty	323
Expected drive missing	324
External device initializing	324
Face Down Tray Full	324
FIM Load Error Send full FIM on <X> port	324
Fuser Kit low	324
Fuser Kit very low To continue, touch "OK"	325
Genuine HP cartridge installed	325
Genuine HP supply installed	325
HP Secure hard drive disabled	325
Incompatible <supply>	326
Incompatible supplies	326
Initializing...	326
Install fuser unit	326
Install supplies	327
Install supply	327

Internal disk device failure To clear press "OK"	327
Internal disk file operation failed	327
Internal disk file system is full	328
Internal disk is write protected	328
Internal disk not found	328
Internal disk not functional	328
Internal disk not initialized	328
Internal disk spinning up	329
Job not stapled due to mixed sizes	329
Load Tray <X>: [Type], [Size]	329
Load Tray <X>: [Type], [Size] To use another tray, press "OK"	330
Loading program <XX>	330
Manually feed output stack Then touch "OK" to print second side	330
Manually feed: <Type><Size>	330
Manually feed: <Type><Size> To use another tray, press "OK"	331
Moving solenoid	331
Moving solenoid and motor	331
No job to cancel	331
NON HP SUPPLY INSTALLED	332
Output Bin Full	332
Paused...	332
Performing Paper Path Test...	332
Please Wait...	332
Printing Configuration...	333
Printing Event Log...	333
Printing File Directory...	333
Printing Font List...	333
Printing Fuser Test Page...	333
Printing Help Page...	334
Printing Menu Map...	334
Printing Registration Page...	334
Printing stopped	334
Printing Supplies Status Page...	334
Printing Usage Page...	334
Printing...engine test	335
Processing duplex job Do not grab paper until job completes	335
Processing job from tray <X>... Do not grab paper until job completes	335
Processing...	335
Processing... copy <X> of <Y>	335
RAM disk device failure To clear press "OK"	336
RAM disk file operation failed To clear press "OK"	336

RAM disk file system is full To clear press "OK"	336
RAM disk is write protected To clear press "OK"	336
RAM disk not initialized	336
Ready	337
Ready <IP Address>	337
Receiving Upgrade	337
Remove one print cartridge	337
Remove USB accessory	337
Replace <supply>	338
Replace supplies	338
Resend external accessory firmware	339
Resend Upgrade	339
Restore Factory Settings	339
ROM disk device failed To clear press "OK"	339
ROM disk file operation failed To clear press "OK"	339
ROM disk file system is full To clear press "OK"	340
ROM disk is write protected To clear press "OK"	340
ROM disk not initialized To clear press "OK"	340
Rotating Motor	340
Size Mis-Match	340
Size mismatch in Tray <X>	341
Sleep mode on	341
Staple Cartridge low	341
Staple Cartridge very low	341
Stapler/Stacker staple jam	342
Supplies low	342
SUPPLY MEMORY WARNING	342
The unit has corrupt data	342
Tray <X> empty: [Type], [Size]	343
Tray <X> lifting	344
Tray <X> open	344
Tray <X> overfilled	345
Type mismatch Tray	345
Unsupported drive installed To continue, touch "OK"	345
Unsupported supply in use OR Unsupported supply installed To continue, touch "OK"	346
Unsupported tray configuration	346
Unsupported USB accessory detected Remove USB accessory	346
Upgrade Error	346
USB accessory not functional	347
USB hubs are not fully supported Some operations may not work properly	347

USB is write protected To clear press "OK"	347
USB needs too much power	347
USB needs too much power Remove USB and Then Turn Off then On	347
USB not initialized	348
USB storage accessory removed Clearing any associated data	348
USB storage device failure To clear press "OK"	348
USB storage file operation failed To clear press "OK"	348
USB storage file system is full To clear press "OK"	348
Used supply installed To continue, touch "OK" OR Used supply in use	349
Waiting for tray <X> to lift	349
Windows Login Required to Use this Feature	349
Event-log messages	350
Print an event log	351
View an event log	352
Clear an event log	352
Clear jams	353
Jam locations	354
Common causes of jams	355
Clear jams from the input trays	356
Clear jams from Tray 1	356
Clear jams from Tray 2 or an optional 500-sheet tray	356
Clear jams from the optional 1,500-sheet tray	357
Clear jams from the optional duplexer	359
Clear jams from the optional envelope feeder	361
Clear jams from the output areas	363
Clear jams from the rear output bin	363
Clear jams from the optional stacker or stapler/stacker	364
Clear paper jams from the optional stacker or stapler/stacker	364
Clear staple jams from the optional stapler/stacker	365
Clear jams from the optional 5-bin mailbox	367
Clear jams from the fuser	369
Clear jams from the print-cartridge (top cover)	373
Change jam recovery	375
Paper does not feed automatically	376
The product does not pick up paper	376
The product picks up multiple sheets of paper	376
Prevent paper jams	376
Use manual print modes	378
Solve image-quality problems	380
Print-quality examples	380
Clean the product	388

Clean the paper path	388
Set up an auto cleaning page	388
Solve performance problems	389
Solve connectivity problems	390
Solve direct-connect problems	390
Solve network problems	390
Service mode functions	391
Service menu	391
Product resets	392
Restore factory-set defaults	392
Clean Disk and Partial Clean functions	393
Active and repository firmware locations	393
Partial Clean	394
Execute a Partial Clean	394
Clean Disk	395
Execute a Clean Disk	395
Product updates	397
Determine the installed revision of firmware	397
Perform a firmware upgrade	397
Embedded Web Server	397
USB storage device (Preboot menu)	398
USB storage device (control-panel menu)	399

4 Parts and diagrams 401

Order parts by authorized service providers	402
Order parts, accessories, and supplies	402
Supplies part numbers	402
Customer-self repair parts	402
Accessories part numbers	404
Related documentation and software	405
How to use the parts lists and diagrams	406
Assembly locations	407
Base product (no optional trays or accessories)	407
Covers	410
Product base	410
Internal components	412
Internal components (1 of 3)	412
Internal components (2 of 3)	414
Internal components (3 of 3)	416
High-voltage power supply	418
Cassette (Tray 2)	420

Cassette (custom media)	422
Paper feed roller assembly	424
Registration assembly	426
Tray 1 (MP) pickup assembly	428
Paper delivery assembly	430
Fuser assembly	432
PCAs (product base)	434
Input devices	436
1x500-sheet feeder	436
Covers (1x500)	436
Main body (1x500)	438
Cassette (1x500)	440
PCA (1x500)	442
1x1500-sheet paper deck	444
Covers (1x1500)	444
Front door assembly (1x1500)	446
Main body (1x500; 1 of 2)	448
Main body (1x500; 2 of 2)	450
Paper pickup assembly (1x500)	452
PCA (1x1500)	454
Duplexer	456
Main body (duplexer)	456
PCA (duplexer)	458
Envelope feeder	460
Covers (envelope feeder)	460
Main body (1 of 2; envelope feeder)	462
Main body (2 of 2; envelope feeder)	464
PCA (envelope feeder)	466
Output devices	468
Stapler/stacker multi-bin mailbox (MBM)	468
Covers (MBM)	468
Main body (MBM)	470
Main body (MBM; 1 of 2)	470
Main body (MBM; 2 of 2)	472
PCA (MBM)	474
Stacker and Stapler/Stacker (S and S/S)	476
Covers (S and S/S)	476
Main body (SS)	478
Main body (S)	480
Middle assemblies (S and S/S)	482
Stapler/Stacker middle assembly (1 of 2; S/S)	482

Stapler/Stacker middle assembly (2 of 2; S/S)	484
Stacker middle assembly (1 of 2; S)	486
Stacker middle assembly (2 of 2; S)	488
PCA (S and S/S)	490
Alphabetical parts list	492
Numerical parts list	501

Appendix A Service and support 511

Hewlett-Packard limited warranty statement	512
HP's Premium Protection Warranty: LaserJet print cartridge limited warranty statement	514
Data stored on the print cartridge	515
End User License Agreement	516
Customer self-repair warranty service	519
Customer support	520
Repack the product	521

Appendix B Product specifications 523

Physical specifications	524
Power consumption, electrical specifications, and acoustic emissions	524
Operating environment	525

Appendix C Regulatory information 527

FCC regulations	528
Environmental product stewardship program	529
Protecting the environment	529
Ozone production	529
Power consumption	529
Toner consumption	529
Paper use	529
Plastics	529
HP LaserJet print supplies	530
Return and recycling instructions	530
United States and Puerto Rico	530
Multiple returns (more than one cartridge)	530
Single returns	530
Shipping	530
Non-U.S. returns	531
Paper	531
Material restrictions	531
Disposal of waste equipment by users in private households in the European Union	532

Chemical substances	532
Material Safety Data Sheet (MSDS)	532
For more information	532
Declaration of Conformity	534
Certificate of Volatility	536
Types of memory	536
Volatile memory	536
Non-volatile memory	536
Hard-disk-drive memory	536
Safety statements	537
Laser safety	537
Canadian DOC regulations	537
VCCI statement (Japan)	537
Power cord instructions	537
Power cord statement (Japan)	537
EMC statement (China)	538
EMC statement (Korea)	538
EMI statement (Taiwan)	538
Product Stability	538
Laser statement for Finland	538
GS statement (Germany)	539
Substances Table (China)	540
Restriction on Hazardous Substances statement (Turkey)	540

Index	541
--------------------	------------