





Cashier Manual

# SECURCASH DRAWER


**Ver 1.2**  
**Tipo SC18**

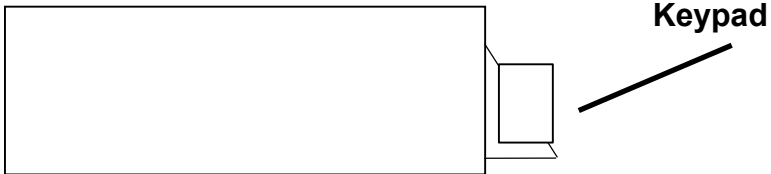


**Securcash closed**

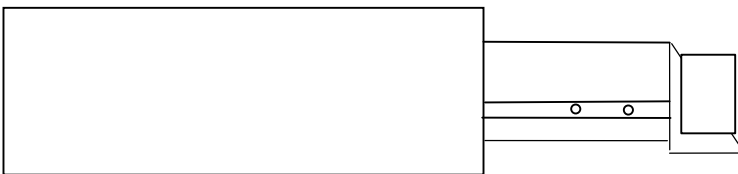

**Open 1° level:  
open  
immediately  
after digit the  
secondary code**

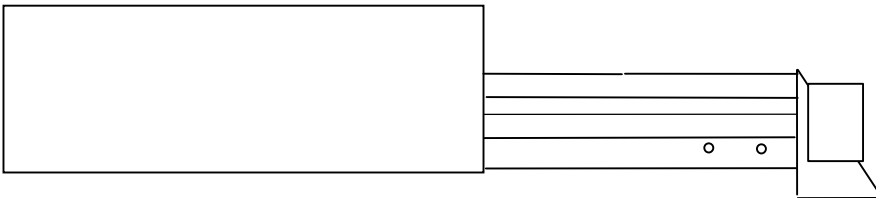

**Open 1°level and 2°  
level: digit the  
secondary code , wait  
for the delay time and  
re-digit the secondary  
code**

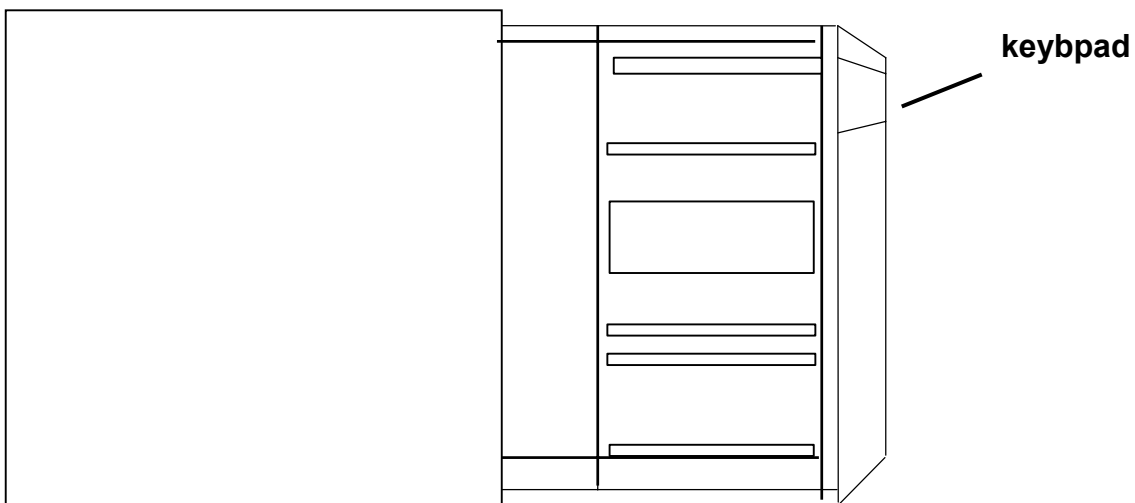

## OPENING PROCEDURE

“Time delay” must be switched on.

Opening procedure starts when cashier enters his Secondary code.

In case the drawer is completely closed, by entering the code you can access immediately to the first level. In case the drawer is already open at the first level cashier have to enter the code and wait for a programmable time delay before accessing to the second level protected part.

At the end of the time delay, begins a period called “Opening window” in which cashier can open the drawer to the second level entering once again the Secondary code to confirm his presence.

After a beep, cashier has 10 seconds to open the drawer.

Opening procedure can be resumed in these 2 phases :

**- drawer is completely closed (access to the first level)**


- **press any key to activate “Time delay”**
- **enter Secondary code for opening procedure (ex.: 222222 + E)**
- **push slowly the drawer and then open it within 10 sec. from the beep**

**- drawer already open at the first level (access to the second level)**

- **press any key to activate “Time delay”**
- **enter Secondary code for opening procedure (ex.: 222222 + E)**
- **wait the time delay**
- **during the “Opening window”, enter again the Secondary code**
- **push slowly the drawer and then open it within 10 sec. From the beep**

## MAIN SCREEN FUNCTIONS

From Time-delay Main screen, cashier can select one of the following options:

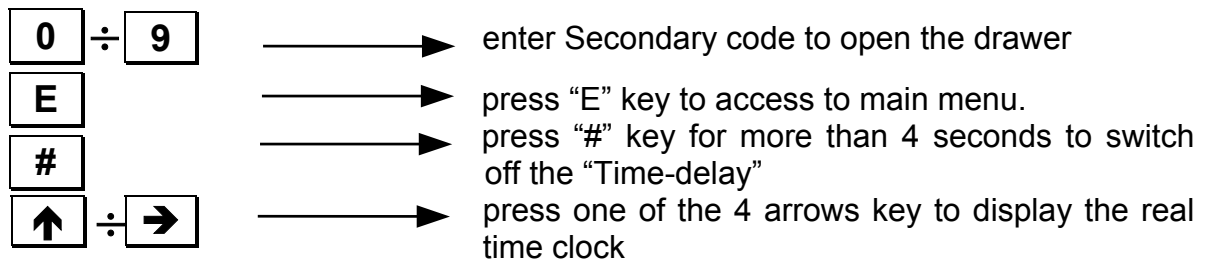

Generally is not requested to switch off using the drawer with "#" key: the device will switch off automatically after 60 sec. of non use.

### TIME LOCK SET-UP

Select this option to block up the Time delay for a programmable period from 0 to 99 minutes. During that period no operation is possible and the screen displays the time left (timer mode).

A Secondary code cashier can follow this procedure to set TIME LOCK:

- press any key to activate Time delay
- press "E" key twice
- enter Secondary code + "E" key
- set a number from 0 to 99 (time lock duration)
- press "E" key to confirm time lock duration

### Anti-coercion function

Anti-coercion function let Securcash cashier to activate an alarm in case he's forced to enter the opening code against his will (coercion).

Pay attention to these two facts:

- the function is not disabled
- the output is not connected so there are no effect if activated

To activate the above-mentioned function, the cashier has to enter properly his own code except for the last digit that must be increased of one unit.

Pay attention: in case the last digit of the proper code is "9", cashier have to digit "0".

For example:

**Secondary code: 123456**

To activate Anti-coercion function, enter the following code: **123457**

**Secondary code: 86484479**

To activate Anti-coercion function, enter the following code: **86484470**