

# HP Designjet Z6100 Printer series

## Service manual

For the complete PDF manual  
please visit [www.LaserPros.com](http://www.LaserPros.com).



## For HP Internal Use Only Warranty

©Copyright Hewlett-Packard Company 2008

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Hewlett-Packard Company.

First Edition, March 2007

Second edition, May 2008

The information contained in this document is subject to change without notice.

**Hewlett-Packard makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.**

Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

## WARNING

The procedures described in this manual are to be performed by HP-qualified service personnel only.

### Electrical Shock Hazard

Serious shock hazard leading to death or injury may result if you do not take the following precautions:

- Ensure that the ac power outlet (mains) has a protective earth (ground) terminal.
- Disconnect the Printer from the power source prior to performing any maintenance.
- Prevent water or any other liquids from running onto electrical components or circuits, or through openings in the enclosure.

### Electrostatic Discharge

Refer to the beginning of Chapter 4 of this manual, for precautions you should take to prevent damage to the Printer circuits from electrostatic discharge.

### Safety Symbols

General definitions of safety symbols are given immediately after the table of contents.

## WARNING

The Warning symbol calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a Warning symbol until the indicated conditions are fully understood and met.

### CAUTION

The Caution symbol calls attention to an operating procedure, practice, or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the product. Do not proceed beyond a Caution symbol until the indicated conditions are fully understood and met.

# HP Designjet Z6 100 Printer series



---

Service manual



# Using this Manual

## Purpose

This Service Manual contains information necessary to test, calibrate and service:

- HP Designjet Z6100 42-inch Printer (Model Q6651A)
- HP Designjet Z6100 60-inch Printer (Model Q6652A)

For information about using these printers, refer to the corresponding User and Quick Reference Guides.

## Readership

The procedures described in this Service Manual are to be performed by HP Certified service personnel only.

## Part Numbers

Part Numbers for Printer options, accessories and service parts are located in Chapter 7.

## Conventions

A small arrow  $\Rightarrow$  is used to indicate other parts of the Service Manual where you can find information related to the topic you are consulting.

---

# Table of Contents

<b>1</b>	<b>Troubleshooting</b>	
	Troubleshooting the printer.....	2
	Printer Education and Training.....	2
	Firmware upgrade .....	2
	Troubleshooting system error codes.....	2
	Performing a service test on a failed assembly.....	2
	Performing the necessary service calibrations .....	3
	Solving print quality problems .....	3
	The printer does not power on.....	3
	Printer hangs during printing and displays 'processing' .....	3
	The printer continuously rejects printheads .....	4
	A new Maintenance Cartridge is incorrectly detected as 'used' .....	4
	Cover sensors are not working .....	4
	The line sensor has problems detecting media .....	5
	Troubleshooting Media Jams/Printhead Crashes.....	5
	Troubleshooting shutdowns .....	5
	Printhead Maintenance Cartridge Path .....	6
	Paper Path .....	6
	Printhead path .....	6
	PWM shutdown .....	6
	Velocity shutdown .....	6
	Energy shutdown .....	6
	Vacuum suction much lower at high altitudes.....	7
	Banding at variable extreme environmental conditions .....	7
	Printhead Crashes/Smears on High Density Prints Using Coated Media .....	7
	Banding due to ink cartridge replacement while printing .....	7
	34" Rice Paper not supported .....	8
	Worm marks on HP Coated media with light area fills .....	8
	Solving Media-Handling Problems .....	8
	Difficult to load media "Too much skew" .....	8
	Troubleshooting a failure with the Take UP Reel (TUR) .....	9
	Take Up Reel LED status information .....	9
	Checking the Take Up Reel is correctly installed.....	10
	How the Take UP Reel Works .....	11
	Using the buzzer at power-up for troubleshooting problems.....	11
	Using the Power-up Sequence to Troubleshoot .....	12
	Corrective Actions for Power-Up Problems .....	14
	Troubleshooting OMAS problem .....	14
	Using the Power Switch LEDs to Troubleshoot .....	15
	Using the PCA LEDs to Troubleshoot.....	16
	Interconnect PCA .....	16
	PrintMech PCA .....	17
	Identifying faults from LED status .....	17
	How to Interpret the Service Information Pages .....	19
	Main Characteristics .....	20
	Current Configuration.....	21
	Current Media, Printhead and Ink Information .....	22

	Printer Usage Information.....	23
	Media Used Sections.....	24
	Event Logs.....	25
	Calibrations Status.....	26
	Connectivity Configuration.....	28
	When the main window is open and the printer is printing (safety compliance).....	29
	General RIP tips and tricks.....	29
	Frequently Asked Questions.....	30
	How to troubleshoot the 79:04 System Error.....	31
	Introduction.....	31
	Possible causes.....	32
	Troubleshooting based on symptoms.....	38
<b>2</b>	<b>System Error Codes</b>	
	Introduction.....	44
	System Error Codes and Warnings - Explanation.....	44
	Continuable and Non-Continuable Error Codes.....	47
<b>3</b>	<b>Ink Supplies</b>	
	What are Ink Supplies?.....	80
	Ink Cartridges.....	80
	Printheads.....	81
	Maintenance Cartridge.....	82
	General Information About the Ink Supplies.....	82
	General Precautions When Handling Ink Supplies.....	82
	Priming the Ink System.....	83
	When Should You Replace the Ink Supplies?.....	83
	Obtaining Ink Cartridge Information.....	83
	Obtaining Printhead Information.....	85
	Ink Cartridge Status Messages.....	86
	Ink Cartridge Status While Printing.....	86
	Ink Cartridge Status While Replacing.....	86
	Printhead Status Messages While Printing.....	87
	Printhead Status Messages While Replacing.....	87
	Maintenance Cartridge Status Messages While Printing.....	88
	Maintenance Cartridge Status Messages While Replacing.....	88
	Summary of Solving Ink Supplies Problems.....	88
	Problems reseating the printhead.....	88
	You Cannot Insert the Ink Cartridge Into the Printer.....	89
	You Cannot Insert the Printhead Into the Printer.....	89
	You Cannot Insert the Maintenance Cartridge Into the Printer.....	89
	Troubleshooting Printhead Error Codes.....	90
	Carriage Interconnect Wiper.....	91
	Warranty Information for Ink Supplies.....	91
	Ink Cartridge.....	91
	Printheads.....	92
<b>4</b>	<b>Service Tests and Utilities</b>	
	Introduction.....	94
	Diagnostics - Self Test.....	94
	Phone Support.....	94
	Service Tests (Diagnostics).....	94
	Entering the Service Tests Menu.....	96
	1. Scan Axis Test.....	97
	2. Paper Drive Test.....	101
	3. Electronics Module Test.....	105
	4. Carriage Assembly Test.....	112
	5. Sensors Test.....	112
	6. Ink Delivery System Test.....	115
	7. SVS Test.....	116
	8. Air Pump System Test.....	116
	9. Vacuum Fans Test.....	117

10. OMAS Module Test.....	118
11 EEROM Reset .....	118
12. Color Sensor Test.....	119
13. Aerosol Test .....	122
14. Primer Test .....	122
15.1 Service Special Utilities >>> Bag Broken Recovery.....	124
15.2 Service Special Utilities >>> Error 71:19 Recovery .....	126
15.3 Service Special Utilities >>> IO Information .....	128
15.4 Service Special Utilities >>> Unit Information .....	128
15.5 Service Special Utilities >>> Check Ink Supplies .....	129
Emergency Firmware Upgrade .....	130
Service Utilities .....	132
Entering the Service Utilities Menu.....	133
1. Turn Drive Roller .....	134
2. Prime Tubes.....	135
3. Set SN.....	138
4. Reset Life Counters .....	138
5. Diagnostic Print .....	140
6. Sleep Mode .....	141
7. Replace Cutter .....	142
8. Set RTC Clock.....	142
9. Enable/Disable Firewall .....	143
10. Prime Printhead X.....	144
11. Open/Close SOL.....	145
12. Disk Wipe DoD 5330.22'M .....	145
13. Enable/Disable SCAPA .....	148
14. Spectrophotometer test (Colormeter test).....	148
<b>5 Service Calibrations</b> .....	152
Service Calibrations .....	152
Entering the Service Calibrations Menu .....	153
1. Scan Axis Calibration.....	154
2. Paper Advance Calibration .....	157
3. Drop Detector Calibration .....	162
4. Line Sensor Calibration.....	163
5. Vacuum Calibration .....	166
6. OMAS Calibration.....	167
7. Primer Calibration.....	173
8. Platen Blue Line Calibration.....	177
<b>6 Print Quality</b> .....	181
How to Use the Image Quality Service Diagnostic Print .....	181
What is the Image Quality Service Diagnostic Print? .....	181
Considerations for Printing the Diagnostic Print .....	182
Printing the Image Quality Service Print .....	182
Diagnostic Part 1: Printhead Problems .....	183
Diagnostic Part 2: Alignment Test.....	184
Diagnostic Part 3: Printheads & Paper Advance Test.....	185
No Printing Defects Found in the Diagnostic Print .....	186
Visual Alignment Diagnostic Print.....	187
Plot for escalation only.....	190
Force Drop Detection.....	192
Disable Paper Advance Sensor .....	192
Fix paper advance issues.....	192
Clean the paper advance sensor window .....	194
The User Advance Calibration.....	194
Visual Paper Advance Plot .....	195
Interpreting plot results.....	196
Image quality issues by symptom .....	199
There is banding in the image .....	199
Lines are too thick, too thin, or missing .....	200

	Lines appear stepped or jagged .....	200
	Parts of lines or text are missing .....	201
	Lines are blurred (ink bleeds from lines) .....	202
	Lines are slightly warped .....	202
	Dark or light horizontal lines across the image (banding).....	202
	The image is grainy. ....	203
	The image has a metallic hue (bronzing).....	204
	The printed output is not flat .....	204
	The print smudges when touched .....	205
	Defects near the top of a print .....	205
	There are ink marks on the paper .....	205
	Colors are inaccurate.....	206
	Colors between different HP Designjets do not match .....	207
	The output is completely blank.....	209
	The output contains only a partial print.....	209
	The image is clipped .....	209
	The image is in one portion of the printing area.....	210
	The image is unexpectedly rotated .....	210
	The print is a mirror image of the original .....	210
	The print is distorted or unintelligible .....	210
	One image overlays another on the same print.....	210
	Pen settings seem to have no effect .....	210
	The image has a wood-grain appearance (aeroworms) .....	210
	CAD Lines look misaligned, images are blurred .....	211
	Some media might deform when printing high area fill.....	211
	Printheads fail repeatedly.....	211
	Working with other commercially available media .....	213
<b>7</b>	<b>Parts and Diagrams</b>	
	Printer Support .....	222
	Center Covers .....	224
	Electronics Module.....	226
	Right Cover.....	228
	Left Cover .....	230
	Right Hand Assemblies.....	232
	Left Hand Assemblies .....	234
	Carriage Assembly .....	236
	Scan-Axis Assemblies .....	238
	Drive Roller and Media-Axis Motor .....	240
	Paper Path Assemblies .....	242
	Center Guide and Pinchwheel Assembly.....	244
	Media Entry Assemblies .....	246
	Take-Up Reel Assembly.....	248
	Miscellaneous Parts.....	250
<b>8</b>	<b>Removal &amp; Installation</b>	
	Service Part Order .....	253
	Disassembly Order .....	255
	Introduction.....	257
	Safety Precautions.....	257
	Electrostatic Discharge (ESD) Precautions .....	257
	Required Tools.....	257
	Screw Types .....	259
	Window (42-inch) .....	260
	Installation of New Window .....	261
	Window (60-inch) .....	262
	Right Cover.....	264
	Right Trim .....	267
	Left Cover .....	270
	Left Trim.....	272
	Top Cover (42-inch) .....	273



Top Cover (60-inch) .....	277
Rear Door (42-inch) .....	281
Rear Door (60-inch) .....	283
Right Connector Cover .....	285
Left Connector Cover (42-inch) .....	287
Electronics Module Extension (60-inch only) .....	288
Window Position Sensor.....	289
Front Panel.....	292
Primer Assembly .....	294
Primer Valves .....	296
Service Station .....	300
Vacuum Fan.....	304
Aerosol Fan and Filter .....	307
Drop Detector.....	309
Ink Supply Tubes and Trailing Cable .....	312
ISS to Cartridge Cables.....	318
Cutter Assembly.....	319
Ink Supply Station (ISS).....	321
APS Assembly .....	324
Left Spittoon .....	328
Encoder Strip and Encoder Sensor .....	331
Carriage PCA .....	334
Carriage Flex Cables .....	337
Carriage Assembly .....	339
Belt Assembly.....	345
Scan-Axis Motor .....	346
Media-Axis Motor.....	349
Optical Media Advance Sensor (OMAS) .....	351
Interconnect PCA .....	357
EIO to PCA Interface Card.....	360
OMAS Controller Card .....	362
OMAS Cable.....	364
Sausalito PCI PCA .....	369
CPU Fan.....	371
Memory Module.....	373
Main PCA Formatter .....	375
Hard Disk Drive (HDD) .....	377
Power Supply Unit (PSU).....	379
PrintMech PCA .....	384
Formatter Battery .....	386
Electronics Module.....	388
Line Sensor Assembly.....	390
Color Sensor Assembly.....	392
Color Sensor Actuator Assembly.....	395
Media Deflector .....	397
Output Platen .....	398
Center Platen .....	400
Cartridge Tray.....	409
Input Roller .....	411
Maintenance Cartridge Door .....	413
Maintenance Cartridge Door Sensor .....	414
Media Sensor .....	415
Encoder Disc and Sensor.....	417
Media Lever Assembly .....	420
Media Lever Sensor .....	423
Pinchwheel Assembly .....	425
Center Guide .....	430
Drive Roller .....	433
Right Rollfeed Module Assembly .....	439

Left Rollfeed Module Assembly .....	440
Take-Up Reel Motor .....	442
Take-Up Reel Left Hand Module.....	444
Take-Up Reel Deflector Supports .....	445
Take-Up Reel Sensors .....	447

**9**

**Preventive Maintenance**

Preventive Maintenance.....	452
Moisture on the Printer.....	452
Noisy Carriage Bushing .....	452
Belt Swelling .....	452
Cleaning the Printer .....	452
General Cleaning .....	452
Cleaning the Drive Roller and Overdrive.....	452
Cleaning the Platen .....	453
Clean the Encoder Strip.....	454
Clean the paper-advance sensor window.....	457
Applying Oil to the Overdrive .....	458
Lubricating the Carriage Assembly.....	458
Change the maintenance absorber .....	459
Scheduled Maintenance .....	460
Level of Printer Usage .....	460

For the complete PDF manual  
please visit [www.LaserPros.com](http://www.LaserPros.com).