

For the complete PDF manual
please visit www.LaserPros.com.



Service Manual

Lexmark™ T640, T642, and T644

4061-xx0

- ***Table of Contents***
- ***Start Diagnostics***
- ***Safety and Notices***
- ***Trademarks***
- ***Index***

LEXMARK™

Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

Edition: September 27, 2005

The following paragraph does not apply to any country where such provisions are inconsistent with local law:
LEXMARK INTERNATIONAL, INC. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

Comments may be addressed to Lexmark International, Inc., Department D22A/032-2, 740 West New Circle Road, Lexington, Kentucky 40550, U.S.A or e-mail at ServiceInfoAndTraining@Lexmark.com. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you. You can purchase additional copies of publications related to this product by calling 1-800-553-9727. In other countries, contact your point of purchase.

Lexmark, Lexmark with diamond design, MarkNet, and MarkVision are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

ImageQuick, PrintCryption, and StapleSmart are trademarks of Lexmark International, Inc.

Other trademarks are the property of their respective owners.

**© 2005 Lexmark International, Inc.
All rights reserved.**

UNITED STATES GOVERNMENT RIGHTS

This software and any accompanying documentation provided under this agreement are commercial computer software and documentation developed exclusively at private expense.

Table of contents

Laser notices	xi
Safety information	xvii
Preface	xx
Definitions	v-xx
General information	1-1
Maintenance approach	1-1
Options	1-1
Configured models	1-2
Specifications	1-3
Resolution	1-3
Data streams	1-3
Print speed and performance print speed	1-3
Performance	1-3
Time to first print	1-3
Memory configuration	1-4
Operating clearances	1-4
Dimensions	1-5
Power requirements	1-6
Electrical specifications	1-6
Environment	1-7
Acoustics	1-7
Media specifications	1-8
Paper and specialty media guidelines	1-8
Supported print media	1-8
Selecting print media	1-15
Paper	1-15
Paper characteristics	1-15
Weight	1-15
Unacceptable paper	1-15
Transparencies	1-16
Selecting transparencies	1-16
Envelopes	1-16
Labels	1-17
Card stock	1-18
Storing print media	1-18
Avoiding jams	1-19
Print area	1-19
Tools required	1-19
Acronyms	1-20
Diagnostic information	2-1
Start	2-1
Symptom tables	2-1
Service errors (9xx.xx's)	2-1
User status and attendance messages	2-1
Additional information	2-1
Understanding the printer operator panel	2-2
Understanding the menus	2-3

Power-On Self Test (POST) sequence	2-4
Symptom tables	2-5
Base printer symptoms	2-5
High-capacity feeder (2000-sheet) symptoms	2-5
Paper tray symptoms	2-6
Duplex option symptoms	2-6
Envelope feeder symptoms	2-6
Output expander	2-6
StapleSmart finisher	2-7
Messages and error codes	2-8
Service error codes	2-8
User status displays	2-31
User attendance messages	2-32
User line 2 link messages	2-43
Check device connection messages	2-43
User attendance messages—paper jams and paper handling errors (2xx.xx)	2-44
Service checks	2-72
5-Bin mailbox service check	2-72
900.xx Error code service check	2-75
927.xx Fan service check	2-76
Main fan	2-76
Cartridge fan service check	2-76
950.00 through 950.29 EPROM mismatch failure	2-77
950.30 through 950.60 EPROM mismatch failure	2-78
Charge roll service check	2-79
Cover closed switch/cable service check	2-80
Dead machine service check	2-80
Duplex option service check	2-82
Envelope feeder service check	2-84
Fuser service checks	2-87
920.xx—Cold fuser service check	2-87
922.xx—Cold fuser check	2-89
923.xx—Hot fuser service check	2-90
924.xx—Hot fuser service check	2-91
925.xx—Hot fuser service check	2-91
Fuser exit sensor service check	2-92
Fuser narrow media sensor service check	2-93
Fuser solenoid service check	2-94
High-capacity feeder input tray service check	2-95
High-capacity output stacker service check	2-100
Input sensor service check	2-102
Input tray(s) service check	2-102
Interconnect card service check	2-104
Main drive service check	2-105
Operator panel service check	2-106
One or more operator panel buttons fail	2-106
No buttons work	2-106
Operator panel display	2-107
Options service check	2-108
Flash Memory Option(s)	2-108
DRAM Memory Option(s)	2-108
Hard Disk Option	2-108
Output bin sensor standard tray service check	2-109
Output expander service check	2-110
Paper feed service check	2-112
Paper size sensing service check	2-113
Parallel port service check	2-116
Print quality service check	2-116

Printhead service check	2-122
Signature button assembly service check	2-122
StapleSmart finisher service check	2-123
System board service check	2-126
Toner sensor service check	2-127
Transfer roll service check	2-128

Diagnostic aids 3-1

Accessing service menus	3-1
Diagnostics mode	3-2
Entering Diagnostics mode	3-2
Available tests	3-2
Exiting Diagnostics mode	3-4
REGISTRATION	3-4
Quick Test	3-5
PRINT TESTS	3-6
Input source tests	3-6
Print quality pages (Prt Quality Pgs)	3-6
HARDWARE TESTS	3-7
Panel Test	3-7
Button Test	3-7
DRAM Test	3-7
CACHE Test	3-8
Parallel Wrap tests	3-8
Serial Wrap tests	3-9
DUPLEX TESTS	3-9
Quick Test (duplex)	3-9
Top Margin (duplex)	3-10
Sensor Test (duplex)	3-10
Motor Test (duplex)	3-11
Duplex Feed 1	3-12
Duplex Feed 2	3-12
INPUT TRAY TESTS	3-13
Feed Tests (input tray)	3-13
Sensor Test (input tray)	3-13
OUTPUT BIN TESTS	3-14
Feed Tests (output bins)	3-14
Feed To All Bins	3-14
Sensor Test (standard output bin)	3-15
Sensor Test (Output Expander)	3-15
Sensor Test (high capacity output stacker)	3-16
Sensor Tests (5-bin mailbox)	3-16
Diverter Test	3-16
FINISHER TESTS	3-17
Staple Test	3-17
Feed Tests (finisher)	3-17
Sensor Test (finisher)	3-17
BASE SENSOR TEST	3-18
DEVICE TESTS	3-18
Quick Disk Test	3-18
Disk Test/Clean	3-19
Flash Test	3-19
PRINTER SETUP	3-20
Defaults	3-20
Page Count	3-20
Perm Page Count (permanent page count)	3-20
Serial Number	3-20

Envelope Enhance	3-20
Engine Setting 1 through 4	3-20
Model Name	3-20
Configuration ID	3-21
Edge to Edge	3-21
Parallel strobe adjustment (Par x Strobe Adj)	3-21
EP SETUP	3-22
EP Defaults	3-22
Fuser Temperature (Fuser Temp)	3-22
Fuser Page Count	3-22
Warm Up Time	3-22
Transfer	3-22
Print Contrast	3-22
Charge Roll	3-22
Gap Adjust	3-22
EVENT LOG	3-23
Display Log	3-23
Print Log	3-23
Clear Log	3-24
EXIT DIAGNOSTICS	3-24
Configuration menu (CONFIG MENU)	3-25
Entering Configuration Menu	3-25
Available menus	3-25
Maintenance page count (Maint Cnt Value)	3-25
Maintenance page counter reset (Reset Maint Cnt)	3-26
Print quality pages (Prt Quality Pgs)	3-26
SIZE SENSING	3-27
Panel Menus	3-27
PPDS Emulation	3-27
Download Emuls	3-27
Demo Mode	3-27
Factory Defaults	3-28
Energy Conserve	3-28
EVENT LOG	3-28
Paper Prompts	3-28
Env Prompts	3-28
Jobs On Disk	3-28
Disk Encryption	3-28
Font Sharpening	3-29
LCD Brightness	3-29
LCD Contrast	3-29
Exit Config Menu	3-29
Additional useful menu locations	3-29
Hex Trace	3-29
Menu settings page	3-30
Printing menu settings page	3-30
Theory	3-31
Autocompensator operation	3-31
Autoconnect system, paper tray options, envelope feeder—electrical	3-32
Autoconnect cabling and connectors	3-32
Duplex Option	3-32
Option microcode	3-32
Print quality troubleshooting	3-33
Paper feed jams	3-37
Access doors and trays	3-37
Clearing printer jams	3-37
250 Paper Jam Check MP Feeder	3-38
260 Paper Jam Check Env Feeder	3-39

23x and 24x jams	3-40
200 and 201 Paper Jam Remove Cartridge	3-41
202 Paper Jam Open Rear Door	3-43
23x Paper Jam Open Duplex Rear Door	3-44
270 and 280 Paper Jams	3-45
27x Paper Jam Check Bin x	3-45
28x Paper Jam Check Finisher	3-46
Clearing staple jams	3-48

Repair information 4-1

Handling ESD-sensitive parts 4-1

Adjustment procedures 4-2

Fuser solenoid adjustment	4-2
Gap adjustment	4-2
Printhead assembly adjustment	4-2
Paper alignment assembly adjustment	4-3

Removal procedures 4-4

Covers removals	4-4
Fuser wiper cover assembly removal	4-4
Redrive cap cover removal	4-5
Paper support removal	4-5
Left door removal	4-6
Redrive door	4-7
Right cover removal	4-8
Upper front cover removal	4-11
Upper front cover latch removal	4-13
Upper front cover outer bezel removal	4-14
Multipurpose feeder/lower front cover assembly removal	4-15
Left cover handle holder removal	4-16
Right cover handle holder removal	4-16
Left and right frame extensions	4-17
Pass thru plate	4-18
Laser cover removal	4-19
Bevel gear removal	4-21
Cartridge duct removal	4-23
Developer drive assembly removal	4-24
Developer drive coupler kit removal	4-25
ESD cover removal	4-25
Fuser assembly removal	4-26
Fuser exit sensor removal	4-28
Fuser exit sensor flag and spring removal	4-30
Fuser lamp removal	4-32
Fuser narrow media sensor removal	4-34
Fuser narrow media flag and spring removal	4-36
Fuser to LVPS AC cable removal	4-38
Fuser top cover removal	4-41
Fuser transfer plate removal	4-43
Gear release link removal	4-44
High voltage power supply removal	4-45
Inner paper deflector assembly removal	4-47
Input sensor removal	4-48
Integrated tray autocompensator assembly removal	4-49
Integrated tray autocompensator pick roll assembly removal	4-51
Interconnect card assembly removal	4-53
Low voltage power supply removal	4-54
Main fan removal	4-56
Main drive assembly removal	4-57
MPF arm assembly removal	4-60

- MPF lower paper deflector 4-61
- MPF pick tire removal 4-62
- MPF solenoid assembly removal 4-62
- Operator panel board removal 4-66
- Operator panel buttons removal 4-67
- Outer shield removal 4-67
- Paper alignment assembly removal 4-68
- Paper bin full sensor flag removal 4-70
- Paper size sensing board removal 4-71
- Power takeoff shaft and spring removal 4-72
- Printhead removal 4-73
- Redrive assembly removal 4-74
- Signature button contact assembly removal 4-75
- System board and inner shield removal 4-76
- Toner sensor removal 4-77
- Transfer roll assembly removal 4-77
- Upper front cover hinge assembly removal 4-78
- Upper paper deflector assembly removal 4-79
- USB board assembly removal 4-80

Connector locations and connections 5-1

- Connections 5-1**
 - System board 5-1
 - Autoconnect 5-6
 - Fuser Board 5-7
 - High-capacity output stacker board 5-8
 - High voltage power supply 5-9
 - Interconnect card 5-9
 - Low voltage power supply 5-10
 - Output expander control board 5-11
 - StapleSmart finisher 5-12

Preventive maintenance 6-1

- Safety inspection guide 6-1**
- Lubrication specifications 6-1**
- Scheduled maintenance 6-1**
 - Maintenance kit 6-1

Parts catalog 7-1

- How to use this parts catalog 7-1**
- Assembly 1: Covers 7-2**
- Assembly 2: Frame 1 7-4**
- Assembly 3: Frame 2 7-6**
- Assembly 4: Frame 3 7-8**
- Assembly 5: Printhead 7-10**
- Assembly 6: Paper feed—autocompensator 7-12**
- Assembly 7: Paper feed—multipurpose feeder 7-14**
- Assembly 8: Paper feed—alignment 7-16**
- Assembly 9: Integrated 250-sheet paper tray 7-18**
- Assembly 10: Integrated 500-sheet paper tray 7-20**
- Assembly 11: Drives—Main drive and developer drive 7-22**
- Assembly 12: Hot roll fuser 7-24**
- Assembly 13: Transfer/charging 7-26**
- Assembly 14: Electronics—power supplies 7-28**

Assembly 15: Electronics—card assemblies	7-30
Assembly 16: Electronics—shields	7-32
Assembly 17: Cabling diagrams 1	7-34
Assembly 18: Cabling diagrams 2	7-35
Assembly 19: Cabling diagrams 3	7-36
Assembly 20: Cabling diagrams 4	7-38
Assembly 21: Cabling diagrams 5	7-40
Assembly 22: Optional 250-sheet paper drawer	7-42
Assembly 23: Optional 250-sheet paper tray	7-43
Assembly 24: Optional 500-sheet paper drawer	7-44
Assembly 25: Optional 500-sheet paper tray	7-45
Assembly 26: Duplex option	7-46
Assembly 27: Envelope feeder	7-47
Assembly 28: Output expander 1	7-48
Assembly 29: Output expander 2	7-49
Assembly 30: High-capacity output expander 1	7-50
Assembly 31: High-capacity output expander 2	7-51
Assembly 32: High-capacity output expander 3	7-52
Assembly 33: 5-bin mailbox 1	7-54
Assembly 34: 5-bin mailbox 2	7-56
Assembly 35: High-capacity feeder 1	7-58
Assembly 36: High-capacity feeder 2	7-60
Assembly 37: High-capacity feeder 4	7-62
Assembly 38: High-capacity feeder 5	7-63
Assembly 39: Kiosk—vertical and horizontal paper adapters	7-64
Assembly 40: StapleSmart finisher 1	7-65
Assembly 41: StapleSmart finisher 2	7-66
Assembly 42: StapleSmart finisher 3	7-67
Assembly 43: StapleSmart finisher 4	7-68
Assembly 44: Options	7-69

Appendix A—Options and features **A-1**

Installing input options	A-1
Order of installation	A-1
Installing a 250-sheet or 500-sheet drawer	A-1
Installing a duplex unit	A-3
Installing memory or option cards	A-4
Accessing the printer system board	A-5
Removing or installing a memory card	A-7
Removal	A-7
Installation	A-8
Removing or installing a flash memory or firmware card	A-8
Removal	A-8
Installation	A-9
Installing an option card	A-10
Replacing the shield	A-11
Printing and using features	A-11
Canceling a print job	A-11
Printing the menu settings page	A-13
Printing a network setup page	A-13
Printing a font sample list	A-14

Printing a directory list	A-14
Printing confidential and held jobs	A-14
Linking trays	A-17
Identifying and linking output bins	A-18
Linking output bins	A-20
Index	I-1
Part number index	I-9

For the complete PDF manual
please visit www.LaserPros.com.