

# **Service Manual Pressure Cylinder**



**Type: TH\_500**

**Variant: TH\_500\_HY\_1**

**Variant: TH\_500\_HY\_2**

**Variant: TH\_500\_HY\_3**

**Variant: TH\_500\_HY\_4**

**Variant: TH\_500\_HY\_5**

**Manufactured by:**



xperion Energy & Environment GmbH  
Planckstraße 15  
32052 Herford  
Germany

# TABLE OF CONTENTS

<b>1. General safety instructions .....</b>	<b>3</b>
<b>1.1 Relevant Standards .....</b>	<b>3</b>
In addition to this service manual, for the operation of CNG Systems, the following standards must be taken into account: .....	
• ECE R 110 .....	3
• ECE R 115 .....	3
• DIN EN ISO 11439 .....	3
• NGV2 .....	3
1.1. Sign description .....	3
<b>2. Environmental protection and waste disposal .....</b>	<b>4</b>
<b>3. Operating conditions .....</b>	<b>5</b>
3.1. General .....	5
3.2. Gas composition .....	5
3.3. Temperature ranges .....	6
3.4. Cylinder handling .....	6
3.5. Behaviour after an accident or fire .....	7
3.5.1. Accident .....	7
3.5.2. Fire .....	7
<b>4. Installation instructions .....</b>	<b>7</b>
4.1. Assembly of a cylinder into a vehicle .....	7
4.1.1. Bracket mounting .....	8
4.1.2. Mounting .....	9
4.1.3. Neck Mounting .....	9
4.2. Installation of valves .....	9
4.3. Removal of valves and safety adapters .....	12
<b>5. Periodic Cylinder Inspection ("Gasanlagenprüfung" = GAP) according to ECE R 110, ISO 11439, NGV2 .....</b>	<b>13</b>
5.1. Requirements for the auditor .....	13
5.2. Procedure of the cylinder inspection .....	14
5.2.1. Examination of documents .....	14
5.2.2. Data of the label (example) .....	14
5.2.3. Optical control of the cylinder's surface .....	15
5.2.4. Inspection of connected components .....	18
5.2.5. Procedure of the leak test .....	19
5.3. Checklist for the periodical inspection with X-Store cylinders .....	20
<b>6. Approach at failure of a cylinder .....</b>	<b>21</b>
<b>7. Contact address .....</b>	<b>21</b>








## 1. General safety instructions

### 1.1 Relevant Standards

In addition to this service manual, for the operation of CNG Systems, the following standards must be taken into account:

- ECE R 110
- ECE R 115
- DIN EN ISO 11439
- NGV2

#### 1.1. Sign description

Prohibition signs	
	Work is allowed by authorized persons only
	No smoking
	Prohibition of fire and flames
Warning Signs	
	Warning of a danger point or safety note.
	Warning of cold surfaces.
Commandment signs	
	Use protective gloves.
	Use hearing protection

## 2. Environmental protection and waste disposal

X-Store cylinders are made of an HDPE liner, connection parts out of aluminum and / or stainless steel and carbon/glass fiber reinforcement embedded in epoxy resin. These substances are environmentally harmless and can be disposed after 20 years.

In accordance to the above mentioned materials, the recycling processes should be arranged with the current state of the art technologies.

If the entire cylinder will be recycled, it must be disabled. For this purpose, a hole in the cylindrical wall of the cylinder with a diameter of at least 10mm must be drilled.



Prior to disposal, the tank must be washed with nitrogen several times, in order to prevent the formation of an ignitable mixture.

If under certain circumstances the pressure of the cylinder has to be released, (i.e. change of a cylinder due to superficial damage), local and country safety regulations should be followed.

Before venting the cylinder, it is imperative to check all connections and pipelines between the cylinder / valve and torch for leaks. This can be done with leak-detect-spray. The cylinder must be grounded with a suitable cable to prevent electrostatic charge. A fire extinguisher must be accessible.



In radius of 10 meters around the cylinder, smoking and fire is prohibited.



If the gas will be relieved without a torch into the environment, it is recommended to wear ear-protection, because a noise level of more than 110dB (A) can occur.



In both cases it is important to note that the valve may cool down dramatically through the effusion of the gas. Therefore gloves must be worn.

### 3. Operating conditions

#### 3.1. General

X-Store cylinders are designed for an operating pressure of 25<sup>1</sup>MPa (250bar) at a surrounding temperature of 15°C.

The cylinder may be filled only up to this pressure, with a working pressure of not more than 25MPa (250bar) at a surrounding temperature of 15°C during the adjustments of the resulting temperatures within the cylinder.

This corresponds under normal operating conditions to a maximum of 32.5MPa (325bar). The maximum filling pressure should never exceed more than 32.5MPa (325bar) at any temperature.

If the pressure is discharged for any reason and the cylinder should never be stored at elevated temperature without pressure for longer than 3 month. If the cylinder is stored for a longer period (more than 3 month), the cylinder must be pressurized up to  $p > 2,5\text{bar}$ . Pressurisation from ambient pressure (if the cylinder is completely empty) must be carried out according to special procedure. Procedure can be provided by xperion.

The maximum useful life of the cylinder is 20 years in accordance with ECE R 110, ISO 11439, NGV2 This lifetime of a cylinder is shown on every cylinder label (see ECE R110 chapter 5.2.2), as well as in the documents of the cylinder.

During service, a periodical inspection according to chapter 5 must be carried out.

After the expiry of the useful life, the cylinder must be destroyed and disposed in accordance with the instructions from chapter 2.

#### 3.2. Gas composition

It must be ensured that the natural gas (CNG) corresponds with i.e. the ECE R 110 chapter 4.5 regulations, when filling the cylinders.

The operator of the filling stations is responsible for this.

Arid Gas:

---

<sup>1</sup> Cylinder TH\_500\_HY\_4 is designed for a operating pressure of 20MPa (200bar)

- Water vapour content < 32mg/m<sup>3</sup>
- Pressure dew point at 20MPa minimum -9°C
- Hydrosulphide and other soluble sulphides < 23mg/m<sup>3</sup>
- Oxygen < 1Vol.%

Humid Gas:

- Water vapour content > 32mg/m<sup>3</sup>
- Pressure dew point at 20MPa > -9°C
- Hydrosulphide and other soluble sulphides < 23mg/m<sup>3</sup>
- Oxygen < 1Vol.%
- Carbon dioxide < 4Vol.%
- Hydrogen < 0,1Vol.%

### 3.3. Temperature ranges

X-Store Cylinders are tested and homologated for a stabilized gas temperatures of -40°C to +65°C.

Exceeding this temperature range is not permitted at any time. Even short time exposure to temperatures > +65°C during any hot work (e.g. welding, thermal cutting, etc.) close to the cylinder is forbidden. Furthermore the operator has to assure that the cylinder does not come in contact with any sparks caused by hot works.

### 3.4. Cylinder handling



To avoid injuries to the hands through loose fibre ends, gloves must be worn at all times.

Cylinders may never be lifted at the valves / adapters, because this might cause damages not seen during visual inspection. Even minor forces can cause a deformation of the electromagnetic device of the valve, which may cause a malfunction of the automatic sealing device.

When dealing with composite pressure cylinders, it is particularly important to ensure that no impact load (i.e. through falling cylinders) may occur.

To avoid abrasions at the cylinder's surface, rubber layers must be used.

When storing cylinders, the following points have to be considered:

- The cylinders must be secured against rolling or sliding.
- If valves or adapters are screwed into the cylinder, the openings must be closed with plastic plugs in order to eliminate the penetration of dirt particles.
- For long-term storage (more than one day), the cylinder must be protected against UV-radiation.
- Rubber layers should be used to avoid damage of the cylinder's surface by abrasion.
- It is not allowed to leave the cylinder without internal pressure for more than 3 months

### **3.5. Behaviour after an accident or fire**

#### **3.5.1. Accident**

If a cylinder has been involved in an accident and this incident resulted in a damage of the cylinder, it must be tested by the company xperion or an authorized partner to re-confirm its further suitability. It is important to provide all available documentation of the accident (i.e. photos). Without such testing, it is prohibited to use the damaged cylinder.

#### **3.5.2. Fire**

If a cylinder has been involved in an event of a fire, it must be decommissioned and destroyed according to chapter 2.

## **4. Installation instructions**



All work on cylinders and gas equipment requires knowledgeable staff

### **4.1. Assembly of a cylinder into a vehicle**


The service technician who is doing the assembly of the car with the CNG Cylinders has to find out the best space in the car.

In special the following points have to be taken into account.

- Container assembly shall be mounted at least 100mm from the exhaust system of the vehicle. It must be assured that the surface top of the cylinder never exceeds +65°C.
- If assembly in the undercarriage of the vehicle is planned, the cylinder must be sufficiently protected from road debris and contact.
- If assembly in the vehicle interior is planned, the cylinder must be sufficiently protected against loose articles (e.g. heavy tools) or aggressive media (e.g. solvents).
- Regulations ECE R110, ECE R115, ISO 11439, NGV2 and country regulations should be followed.

#### 4.1.1. Bracket mounting

The distance between the strap-mountings must be at least  $\frac{1}{2}$ -times the cylindrical length of the cylinder ( $L_x = \frac{1}{2} \times L_{cyl}$ ). In general, the strap-mountings should be installed at the outer ends of the cylinder. Nevertheless, the distance to the cylinder-ends  $L_{end}$  should be at least 50mm.

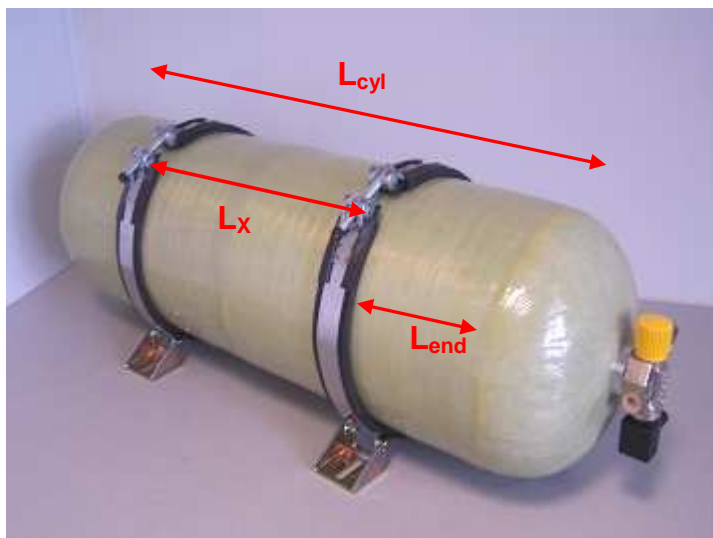

Example Picture 1

When using strap-mountings, rubber layers must always be between the strap and the cylinder. This rubber layer absorbs the axial and tangential expansion of the cylinder without damaging the surface of the cylinder.

xperion prescribes a rubber thickness of at least 2mm. When using strap-mountings produced by e.g. the company "Hydac", the rubber layer is part of the mounting-system for Type 4 cylinders.

As an example: Cylinder TH\_500\_HY\_5 with a diameter of 500mm has an expansion of the circumference of about 0.8% at working pressure. This equals an expansion of



the circumference of 12.5mm or an expansion of the diameter of 4mm between 0 and 250bar. The axial elongation is 0.5% or about 7.5mm between 0 and 250bar. Similar expansion percentages for the other cylinder sizes covered by this manual can be expected. If further clarification is required, please contact xperion or your local distributor. The TH\_500\_HY\_5 is designed for belly mounting, only.

#### **4.1.2. Mounting**

The variants of TH\_500\_HY\_1, 3 have been specifically designed to allow a vertical storage! If there are question please contact xperion.

#### **4.1.3. Neck Mounting**

The cylinder TH\_500\_HY\_1, 2, 3, 4 has been specifically designed to allow for neck mounted assembly. A current listing of the containers suitable for the neck assembly can be supplied by contacting xperion or your local distributor.

With the neck assembly it is to be noted that there is a fixed bearing side (container neck with valve) and a floating bearing side.

### **4.2. Installation of valves**


During assembly of valves, please follow, in accordance the points below.

#### **Installation of valves with self-sealing thread**

1. Only xperion authorized valves and relief devices are to be used. For a listing of such approved devices please contact xperion or your local distributor.
2. Ensure that the thread of the valve and adapter is compatible to the cylinder threads. X-Store cylinders have a connecting thread of 1/4 NPT.
3. Check all threads for damage and dirt. Remove dirt with a clean cloth. Damaged parts must be replaced.
4. Check that the valve and the supporting if there are no damages. During the complete preparation, the cylinders need careful handling. Any impact, drop damage or other visible damage (e.g. scratches or notches  $t > 0.5\text{mm}$  or surface damage) must be recorded and reported to xperion as soon as possible.



5. The transportation valve is sealed with PTFE tape. Manually (by hand) screw the valve until it is firmly applied.
6. The adapter is mounted with 400Nm. Applying a torque  $> 400\text{Nm}$  to the cylinder is not permitted. Tighten the valve with the matching specialty tool with a torque of 130Nm. Applying a torque of  $130\text{Nm} \pm 5\text{Nm}$  to the adapter / cylinder is required.

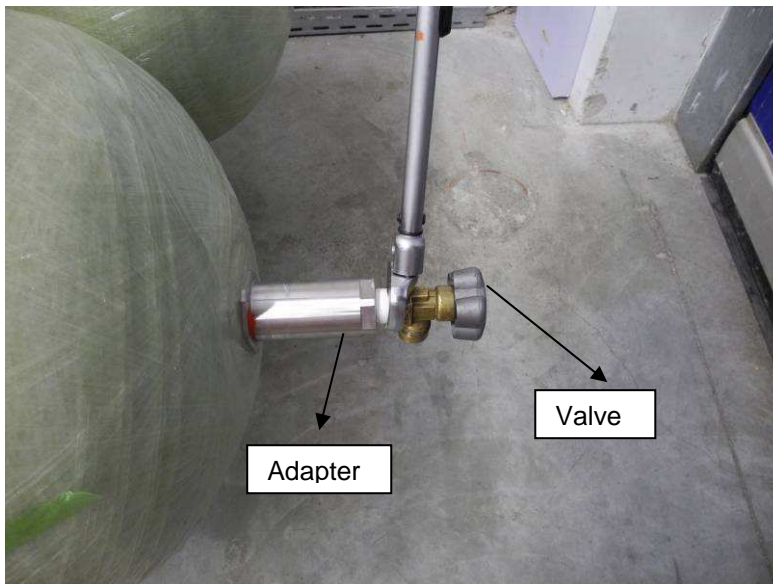


7. Mark the transition from valve to the cylinder with a drop of sealing mark/paint.
8. Record the change of the valve in the documents. During dismounting processes the technician has to pay attention that no part of the PTFE tape gets into the cylinder.
9. Test the system cylinder / adapter / valve / for leaks.

### **Installation of valves with o-rings sealing system**

1. Only xperion authorized valves and relief devices are to be used. For a listing of such approved devices please contact xperion or your local distributor.
2. Ensure that the thread of the valve and adapter is compatible to the cylinder threads. X-Store cylinders have a connecting thread of 1.125-12UNF
3. Check all threads for damage and dirt. Remove dirt with a clean cloth. Damaged parts must be replaced.
4. Check that the o-rings/supportrings and the o-ring groove has no damage. If necessary replace the o-ring/supportring.  
! Please note that the Support ring has two different sizes. The concave side is orientated to the o-ring!  
Add a small amount of Vaseline to the o-ring and support –ring.

During the complete preparation, the cylinders need careful handling. Any impact, drop damage or other visible damage (e.g. scratches or notches  $t > 0.5\text{mm}$  or surface damage) must be recorded and reported to xperion as soon as possible

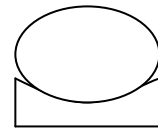

5. Manually (by hand) screw the valve until it is firmly applied.
6. Tighten the valve with the matching specialty tool with a torque of 130 Nm. Applying a torque  $> 130\text{Nm}$  to the cylinder is not permitted.



7. Mark the transition from valve to the cylinder with a drop of sealing mark/paint.
8. Record the change of the valve in the documents.
9. Test the system cylinder / adapter / valve / for leaks.

#### 4.3. Removal of valves and safety adapters



It is important to ensure that the cylinder is depressurized. The following steps should be followed.

To do so, the manual valve must be closed.



Afterwards, the automatic sealing device must be opened by special adapter to transfer the 12V. For any further instructions please contact xperion. The ear protection must be worn, because the noise level through the out coming gas can reach more than 110dB (A).



After the automatic sealing device has been opened, the manual valve must be opened slowly. If CNG effuses, the cylinder is not completely empty. In this case, please proceed as shown in chapter 2.

If you have to remove the valve from the cylinder please have a look into the standard of ISO 11623:2002 (page 25).

For further instructions regarding the removal and service of the valve please refer to the valve manufacturer instructions available by contacting xperion or your local distributor.

## **5. Periodic Cylinder Inspection ("Gasanlagenprüfung" = GAP) according to ECE R 110, ISO 11439, NGV2**

At regular intervals, however no longer than 48 months, cylinders for CNG use in vehicles must be inspected. The test intervals are defined within the ECE-R110, ISO 11439 and NGV2 respectively within the regulations of each country.

During the inspection, the cylinder is examined whether any inadmissible damages have occurred. Periodic inspections with water pressure tests and dismounting of the cylinder are no longer necessary.

Every vehicle run with CNG must be undertaken a GAP. For example, in Germany, the period between the last GAP and the next general vehicle inspection may never be longer than 12 months. Due to the inspection interval of 24 months between the general vehicle inspections of a passenger car, the maximum inspection interval adds up to 36 months. The standard instructs that a visual inspection must be performed every three years. Similar regulations apply accordingly in other countries. National regulations should always be followed. If in doubt, please contact xperion or your local distributor.

### **5.1. Requirements for the auditor**

The auditor must be in possession of a certificate that he has been trained according to the GAP or as required by National regulations. This GAP training instructs the safety and technology regulations when dealing with pressure cylinders and other CNG storage system components.

The GAP trainings are offered by various technical inspection authorities.

It is essential, that the auditor is in possession of this service manual in order to ensure that important information is understood.



All work performed on the cylinders and components are only allowed by trained and authorized staff only.

## 5.2. Procedure of the cylinder inspection

### 5.2.1. Examination of documents

At first the cylinders data must be recorded and be compared with the data from the logbooks (if applicable).

### 5.2.2. Data of the label (example)

<b>NUR CNG</b> CNG - 4		<b>X-STORE</b>		<b>CNG ONLY</b> CNG - 4	
<b>xperion Energy &amp; Environment GmbH</b>		<b>Nicht Verwenden nach</b> Do not use after		<b>MM / YYYY</b>	
ID-Nummer ID number	Type: TH_500 Var.: HY_1	Inhalt / volume:		<b>350 L</b>	
Seriennummer / serial number:	nnnnnnnn/YY	Leergewicht / empty weight		<b>142 kg</b>	
Betriebsüberdruck / working / service pressure:	25 MPa(25000 kPa)(3626 psig)/15°C	Monat/Jahr der Genehmigung/ Month/Year of approval		<b>03 / 2012</b>	
Prüfdruck / test pressure:	37,5 MPa	Datum der ersten Druckprüfung / Date of first pressure test		<b>MM / YYYY</b>	
zul. Betriebstemperatur / working temperature:	TS -40°C / 65°C	Hergestellt in / Manufactured in		<b>MM / YYYY</b>	
Max. Anzugsmoment / Maximum torque	130 Nm	Genehmigungsnummer / Typeapproval		<b>ISO 11439</b> <b>2011-CERT 010</b>	
<b>Nur vom Hersteller zugelassenen Druck- minderer verwenden / For Use Only With The Container Manufacturer's Approved Pressure Relief Devices and Valves</b>		ECE Genehmigungsnummer / ECE Typeapproval		<b>(E13) 110 R-000227</b>	
<b>If there is a question about the proper use, installation, or maintenance of this container, contact xperion Energy &amp; Environment GmbH, D-34123 Kassel, Otto-Hahn-Str. 5 call +49(0)561/58549-0</b>		entspricht / according to		<b>DOT FMVSS 304 / NGV2 - 07 / Type 4</b>	
		<b>This container should be visually inspected after a motor vehicle accident or fire and at least every 36 months or 36,000 miles, whichever comes first, for damage and deterioration.</b>			

Picture 2




NUR CNG/CNG ONLY	This cylinder is for compressed natural gas use only
xperion Energy & Environment GmbH	Manufacturer of the cylinder
Do not use after	The maximum lifetime of a CNG cylinder. After exceeding this date, the cylinder must be decommissioned. Date is listed as MM / YYYY
ID number	ID number of cylinder. If applicable the version number.
Serial number	Continuous serial number of the cylinder. ID number and serial number together guarantee an explicit allocation of the cylinder; nnnnn / YY
Volume	Nominal water volume in litre at ambient pressure
Empty weight	Weight of the cylinder without the valve in kg
Working pressure	Working pressure after temperature balancing. Directly after the filling of the cylinder, the pressure may exceed this pressure. For example: 25MPa = 250bar = 3626psi.
Permitted working temperature	-40°to +65°C (-40°F to +149°F).
Test pressure	Pressure, which is applied on the cylinder at the water-pressure-test in order to test the cylinder's strength. For example 37,5MPa = 375bar = 5438psi
Date of first pressure test	Date on which the cylinder has first been tested and approved by the TÜV. MM / YYYY
Month / year of approval	Date of approval through the certifying institute.
Type approval	Number which has been allocated after the approval by the certifying institute according to ISO11439.
ECE type approval	Number which has been allocated after the approval by the certifying institute according to ECE R 110.
According to	This cylinder is approved according to DOT FMVSS304/NGV2 – 07 by an independent cylinder inspector

### 5.2.3. Optical control of the cylinder's surface

X-Store cylinders are partly handmade. Therefore small optical differences between the cylinders may occur.

#### Superficial cracks

The first pressure test during the manufacturing process of the cylinder may result in uncritical inter fibre failure. These inter fibre failure are small harmless cracks in the surface of the cylinder. The cracks usual occur in circumferential direction. When a lot of resin accumulates at the surface, cracks may also occur in axial direction. These cracks do not have an impact on the function of the cylinder.

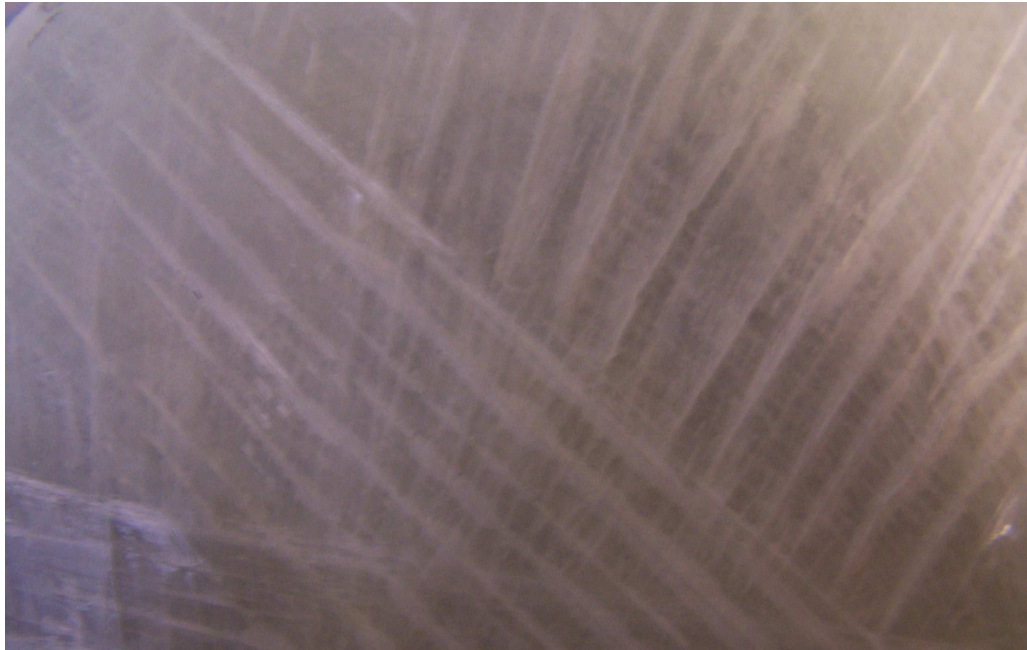


This part of the inspection is considered passed, if the cracks are not running through the fibres.

In cases of doubt, xperion ENERGY & ENVIRONMENT GmbH or your local distributor is to be informed.

#### **Abrasion marks and scratches**

Abrasion marks, scratches or scrapings, i.e. through loose tie straps or rubber supports, are without any harm to the cylinder, as long as they do not reach the fibre itself. It is important to find the reason for these damages before reinstalling the cylinder in order to avoid further damages.

When the scratches reach the fibre, the cylinder must be decommissioned.

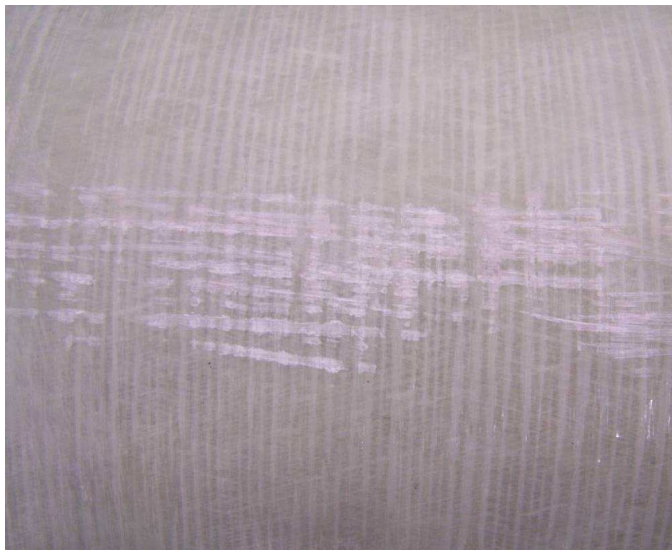




This part of the test is considered as passed, if the scratches are within the resin layer, but not the first fibre layer.

In cases of doubt, xperion ENERGY & ENVIRONMENT GmbH or your local distributor is to be informed.


### Points of impact

Shock or impacts onto the cylinder may be difficult to find and to evaluate the effect of it. If the affected spot shows only small signs of scratches, the cylinders is still usable.

If the affected spot shows damage to the fibre, the cylinder must be decommissioned.

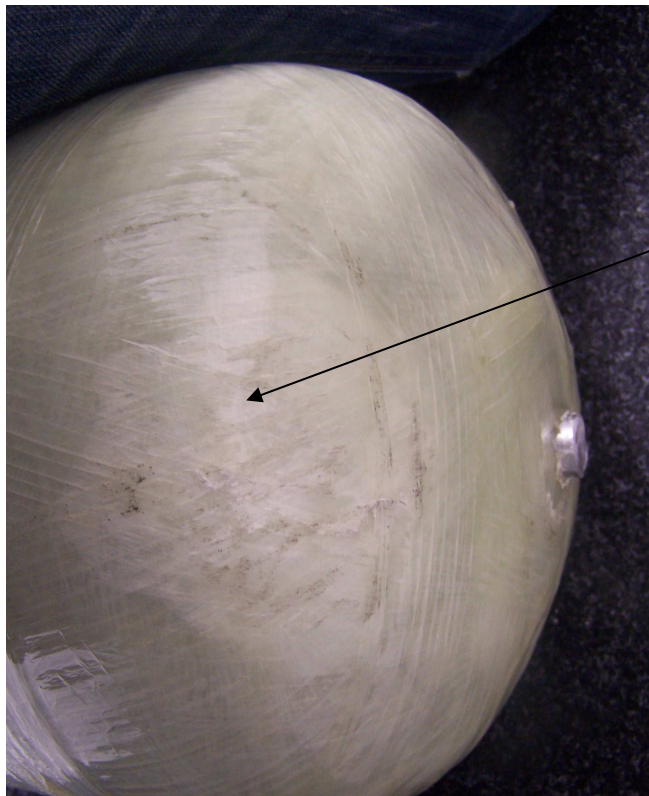

Delamination

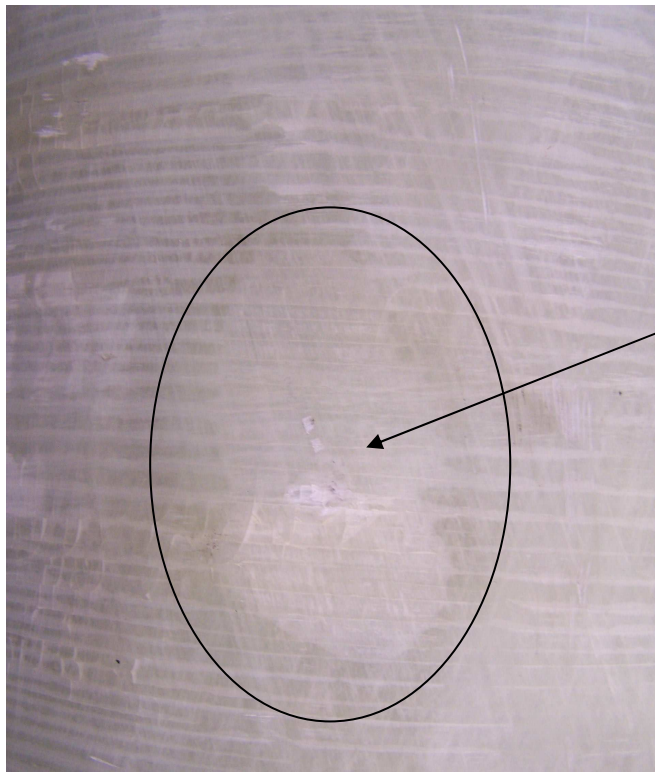

Delamination

**!!!!!!Any kind of Delamination is not acceptable!!!!!!**

In cases of doubt, xperion ENERGY & ENVIRONMENT GmbH or your local distributor is to be informed.

#### **Loose fibre ends**

Loose fibre and delamination of fibre ends are not acceptable. Depending on the degree of delamination, a repair at xperion ENERGY & ENVIRONMENT may be feasible.

To evaluate the level of damage, it may be helpful to send a digital photo to xperion ENERGY & ENVIRONMENT GmbH or your local distributor.

In cases of doubt, xperion ENERGY & ENVIRONMENT GmbH or your local distributor is to be informed.

### **5.2.4. Inspection of connected components**

#### **Control of the valve**

The valve / piping adapter must be in faultless condition. Damaged components must be replaced. The handwheel has to rotate smoothly.



Before unscrewing the valve or valve components, it must be ensured that the cylinder is depressurised. See also chapter 4.3.

Please check that the glass bulb is completely intact at valves with a thermal pressure release device. There should be no defects on such pressure release devices. Damaged parts have to be replaced.



Before unscrewing the adapter or adapter components, it must be ensured that the cylinder is completely depressurised. See also chapter 4.3.

### Leak test

Xperion recommends using leak detection spray or soapsuds when leak testing composite cylinders. Information of the testing by leak-measuring-machines (so-called sniffer devices) and leak rate tests can be provided by xperion.

The evaluation of the leak test must be done under the regulations of the ECE-R110. Extract out of the 7<sup>th</sup> adjusted version from 3<sup>rd</sup> of February 2008, chapter 17.1.5:

"The system may not have permeable spots. That means that the system must be bubble-free for three minutes."

Please consider that small-sized bubbles may appear when using leak detection spray. These bubbles must disappear after a few seconds. These bubbles have nothing to do with permeation or leakage of the cylinder.

Should a cylinder or valve be permeable, a clear bubble growth can be detected.

#### 5.2.5. Procedure of the leak test

The cylinder must be filled up to the appropriate working pressure. After filling, the cylinder must rest for at least 2 hours in order to gain stable pressure and stable temperature conditions. If the cylinder is heated due to the filling, the leak detecting spray or the soapsuds may evaporate, which causes incorrect test results.

The complete cylinder should be leak tested. Especially the connection: valve / cylinder / adapter must be tested, because these are the most critical joints.



If bubbles emerge within 3 minutes, the test has not passed. Leaking components must now be replaced and the leak test carried out again.

### 5.3. Checklist for the periodical inspection with X-Store cylinders

1. Serial number of the cylinder: \_\_\_\_\_
2. Year and month of the initial approval: \_\_\_\_\_
3. Date of last inspection: \_\_\_\_\_
4. Executing company, name of auditor: \_\_\_\_\_
5. Test criteria
  - 5.1. Superficial cracks not deeper than up to the first fibre layer?  
☐ Yes ----- allowed      ☐ No ----- not allowed
  - 5.2. Abrasion marks and scratches not deeper than up to the first fibre layer?  
☐ Yes ----- allowed      ☐ No ----- not allowed
  - 5.3. Points of impact are not, or only to a small degree existent?  
☐ Yes ----- allowed      ☐ No ----- not allowed
  - 5.4. Loose fibre ends are non existent?  
☐ Yes ----- allowed      ☐ No ----- not allowed
  - 5.5. Valve and safety adapters are not damaged?  
☐ Yes ----- allowed      ☐ No ----- not allowed
  - 5.6. The complete cylinder and attached components are without any leaks?  
☐ Yes ----- allowed      ☐ No ----- not allowed

\_\_\_\_\_  
Signature of authorized auditor

Each test criteria with "not allowed" errors causes the failure of the complete inspection. After a possible repair, the complete checklist must be processed again. The inspection has only been passed, if all cylinders positively tested.

## **6. Approach at failure of a cylinder**

xperion keeps record on all incidents which occur with X-Store cylinders. If a cylinder fails during a pressure test, xperion must be informed. Please send the serial number of the cylinder and the reason for failure to contact address from chapter 7.

## **7. Contact address**

xperion Energy & Environment GmbH  
Otto-Hahn-Straße 5  
34123 Kassel  
Germany

Phone: +49 (0)561 58549 -0  
Fax: +49 (0)561 58549-29

[info@xperion.de](mailto:info@xperion.de)  
[www.xperion.de](http://www.xperion.de)