



LASERJET PRO CM1410

COLOR MFP SERIES

Service Manual

For the complete manual please
visit www.LaserPros.com





HP LaserJet Pro CM1410 Color MFP Series

Service Manual

Copyright and License

© 2010 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Part number: CE861-90939

Edition 1, 9/2010

Trademark Credits

Microsoft®, Windows®, Windows® XP, and Windows Vista® are U.S. registered trademarks of Microsoft Corporation.

ENERGY STAR and the ENERGY STAR mark are registered U.S. marks.

Conventions used in this guide

-
-  **TIP:** Tips provide helpful hints or shortcuts.
 -  **NOTE:** Notes provide important information to explain a concept or to complete a task.
 -  **CAUTION:** Cautions indicate procedures that you should follow to avoid losing data or damaging the product.
 -  **WARNING!** Warnings alert you to specific procedures that you should follow to avoid personal injury, catastrophic loss of data, or extensive damage to the product.
-

Table of contents

1 Removal and replacement	1
Introduction	2
Removal and replacement strategy	2
Electrostatic discharge	4
Required tools	4
Service approach	5
Before performing service	5
After performing service	6
Post-service tests	6
Test 1 (print-quality test)	6
Test 2 (copy-quality test)	6
Test 3 (fax-quality test)	6
Parts removal order	7
Removal and replacement procedures	8
Pickup roller	8
Separation roller	10
Transfer roller	12
Print-cartridge drawer	14
Right cover	17
Right-front cover-1 and cover-2	20
Control panel	22
Left cover	25
Document-feeder and scanner assembly	28
Rear-center cover	30
Rear-upper cover	31
Speaker	33
Top cover	34
Front door and front-lower cover	36
Rear door and rear-lower cover	41
Main assemblies	44
Paper-guide assembly	44
USB port PCA and bracket	45
Reinstall the USB port PCA	47
Wireless PCA (wireless models only)	48

DC controller PCA	49
Special considerations	49
Remove the DC controller PCA	49
Formatter PCA, fax card PCA, and support bracket	53
Special considerations	53
Remove the formatter PCA	53
Fuser motor	59
Main motor	60
Intermediate transfer belt (ITB)	62
Reinstall the ITB	65
Power supply (high-voltage)	67
Reinstall the power supply (high voltage)	70
Power supply (low voltage)	71
Reinstall the power supply (low voltage)	75
Power supply (fuser)	77
Fuser	80
Document feeder components	83
Document feeder separation pad	83
Document feeder input tray	87
Document feeder cover	88
Document feeder pick arm assembly	90
Document feeder core assembly	92
Post scan pinch rollers	94
Document feeder base assembly	95
Document feeder floating hinges	97
2 Solve problems	99
Menu map	100
Tools for troubleshooting	100
Component diagnostics	100
LED diagnostics	100
Network LEDs	100
Control panel LEDs	101
Control-panel diagnostics	102
Engine Diagnostics	102
Engine test	102
Repetitive image defects	103
Diagrams	104
Plug/jack locations	104
DC controller PCA	105
General timing charts (product base only)	107
General circuit diagram (product base only)	108
Print-quality troubleshooting tools	109

Print a Diagnostics Page	109
Calibrate the product	109
Interpret the Print Quality Page	109
Control panel menus	111
Setup Menu	111
Reports menu	112
Quick Forms menu	113
Fax Setup menu	114
System Setup menu	117
Service menu	120
Network Setup menu	122
Function specific menus	123
Copy Menu	123
Fax Menu	124
Scan Menu	126
USB Flash Drive	127
Interpret control-panel messages	128
Control panel message types	128
Control panel messages	128
10.100X Supply Memory Error	128
49 Error, Turn off then on	128
50.x Fuser Error	128
79 Error Turn off then on	128
Communication error	128
Document feeder jam. Clear and reload	129
Document feeder mispick. Reload	129
Door open	129
Engine Communication Error	129
Engine error. Press OK to continue.	129
Fax receive error.	129
Fax Send error.	130
Jam in (area), Open door and clear jam	130
Jam in Tray 1, Clear jam and then press OK	130
Load paper	130
No dial tone	130
No fax answer. Canceled send.	130
No fax answer. Redial pending.	131
No fax detected.	131
Print failure, press OK. If error repeats, turn off then on.	131
Scanner error #, Turn off then on	132
Scanning error Cannot connect	132
Event-log messages	133
Paper feeds incorrectly or becomes jammed	135
The product does not pick up paper	135

The product picks up multiple sheets of paper	135
Prevent paper jams	136
Clear jams	136
Jam locations	136
Clear jams from the document feeder	137
Clear jams from the input tray	139
Clear jams from the output bin	142
Service mode functions	143
Secondary service menu	143
Open the secondary service menu	143
Secondary service menu structure	143
Product resets	144
Restore the factory-set defaults	144
NVRAM initialization	145
Solve fax problems	146
Troubleshoot fax codes and trace reports	146
View and interpret fax error codes	146
Fax trace report	156
Product updates	156
3 Parts and diagrams	157
Order parts by authorized service providers	158
Order replacement parts	158
Related documentation and software	158
Supplies part numbers	158
Service parts	158
Customer self repair parts	159
Whole-unit replacement part numbers	159
How to use the parts lists and diagrams	160
Assembly locations	161
Base product	161
Covers	162
Internal assemblies	164
Internal assemblies (1 of 4)	164
Internal assemblies (2 of 4)	166
Internal assemblies (3 of 4)	168
Internal assemblies (4 of 4)	170
PCAs	172
Scanner and document feeder (ADF) main assemblies	174
Document feeder internal components	176
Alphabetical parts list	178
Numerical parts list	181

Appendix A Service and support	185
Hewlett-Packard limited warranty statement	186
HP's Premium Protection Warranty: LaserJet print cartridge limited warranty statement	187
Data stored on the print cartridge	188
End User License Agreement	189
OpenSSL	191
Customer support	191
Rearrange the product	192
Appendix B Product specifications	193
Physical specifications	194
Power consumption, electrical specifications, and acoustic emissions	194
Environmental specifications	194
Appendix C Regulatory information	195
FCC regulations	196
Environmental product stewardship program	197
Protecting the environment	197
Ozone production	197
Power consumption	197
Paper use	197
Plastics	197
HP LaserJet print supplies	197
Return and recycling instructions	198
United States and Puerto Rico	198
Multiple returns (more than one cartridge)	198
Single returns	198
Shipping	198
Non-U.S. returns	198
Paper	199
Material restrictions	199
Disposal of waste equipment by users in private households in the European Union	199
Chemical substances	199
Material Safety Data Sheet (MSDS)	200
For more information	200
Declaration of Conformity	201
Declaration of Conformity (wireless models)	203
Certificate of Volatility	205
Safety statements	206
Laser safety	206
Canadian DOC regulations	206
VCCI statement (Japan)	206
Power cord instructions	206

Power cord statement (Japan)	206
EMC statement (Korea)	207
Laser statement for Finland	207
GS statement (Germany)	207
Substances Table (China)	208
Restriction on Hazardous Substances statement (Turkey)	208
Additional statements for telecom (fax) products	209
EU Statement for Telecom Operation	209
New Zealand Telecom Statements	209
Additional FCC statement for telecom products (US)	209
Telephone Consumer Protection Act (US)	210
Industry Canada CS-03 requirements	210
Additional statements for wireless products	212
FCC compliance statement—United States	212
Australia statement	212
Brazil ANATEL statement	212
Canadian statements	212
European Union regulatory notice	212
Notice for use in France	213
Notice for use in Russia	213
Korean statement	213
Taiwan statement	213

Index	215
--------------------	------------

List of tables

Table 1-1 Components inspection	2
Table 2-1 Repetitive image defects	103
Table 2-2 DC controller connectors	105
Table 2-3 Event-log messages	133
Table 2-4 Secondary service menu	143
Table 2-5 Fax receive error codes	146
Table 2-6 Fax send error codes	150
Table 3-1 Order parts, accessories, and supplies	158
Table 3-2 Related documentation and software	158
Table 3-3 Supplies part numbers	158
Table 3-4 Service parts	158
Table 3-5 Customer replaceable units (CRU) kit part numbers	159
Table 3-6 Whole-unit replacement part numbers	159
Table 3-7 Base product	161
Table 3-8 Covers, panels, and doors	163
Table 3-9 Internal assemblies (1 of 4)	165
Table 3-10 Internal assemblies (2 of 4)	167
Table 3-11 Internal assemblies (3 of 4)	169
Table 3-12 Internal assemblies (4 of 4)	171
Table 3-13 PCAs	173
Table 3-14 Scanner and document feeder main assemblies	175
Table 3-15 Document feeder assembly parts	177
Table 3-16 Alphabetical parts list	178
Table 3-17 Numerical parts list	181
Table B-1 Physical specifications	194
Table B-2 Environmental specifications ¹	194

List of figures

Figure 1-1	Phillips and Pozidrive screwdriver comparison	4
Figure 1-2	Parts-removal tree	7
Figure 1-3	Remove the pickup roller	9
Figure 1-4	Remove the separation roller (1 of 2)	10
Figure 1-5	Remove the separation roller (2 of 2)	11
Figure 1-6	Remove the transfer roller (1 of 3)	12
Figure 1-7	Remove the transfer roller (2 of 3)	12
Figure 1-8	Remove the transfer roller (3 of 3)	13
Figure 1-9	Remove the print-cartridge drawer (1 of 5)	14
Figure 1-10	Remove the print-cartridge drawer (2 of 5)	14
Figure 1-11	Remove the print-cartridge drawer (3 of 5)	15
Figure 1-12	Remove the print-cartridge drawer (4 of 5)	15
Figure 1-13	Remove the print-cartridge drawer (5 of 5)	16
Figure 1-14	Remove the right cover (1 of 5)	17
Figure 1-15	Remove the right cover (2 of 5)	17
Figure 1-16	Remove the right cover (3 of 5)	18
Figure 1-17	Remove the right cover (4 of 5)	18
Figure 1-18	Remove the right cover (5 of 5)	19
Figure 1-19	Remove the right-front cover (1 of 4)	20
Figure 1-20	Remove the right-front cover (2 of 4)	20
Figure 1-21	Remove the right-front cover (3 of 4)	21
Figure 1-22	Remove the right-front cover (4 of 4)	21
Figure 1-23	Remove the control panel (1 of 5)	22
Figure 1-24	Remove the control panel (2 of 5)	23
Figure 1-25	Remove the control panel (3 of 5)	23
Figure 1-26	Remove the control panel (4 of 5)	24
Figure 1-27	Remove the control panel (5 of 5)	24
Figure 1-28	Remove the left cover (1 of 6)	25
Figure 1-29	Remove the left cover (2 of 6)	25
Figure 1-30	Remove the left cover (3 of 6)	26
Figure 1-31	Remove the left cover (4 of 6)	26
Figure 1-32	Remove the left cover (5 of 6)	27
Figure 1-33	Remove the left cover (6 of 6)	27
Figure 1-34	Remove the document-feeder and scanner assembly (1 of 3)	28

Figure 1-35	Remove the document-feeder and scanner assembly (2 of 3)	28
Figure 1-36	Remove the document-feeder and scanner assembly (3 of 3)	29
Figure 1-37	Remove the rear-center cover (1 of 2)	30
Figure 1-38	Remove the rear-center cover (2 of 2)	30
Figure 1-39	Remove the rear-upper cover (1 of 4)	31
Figure 1-40	Remove the rear-upper cover (2 of 4)	31
Figure 1-41	Remove the rear-upper cover (3 of 4)	32
Figure 1-42	Remove the rear-upper cover (4 of 4)	32
Figure 1-43	Remove the speaker (1 of 2)	33
Figure 1-44	Remove the speaker (2 of 2)	33
Figure 1-45	Remove the top cover (1 of 3)	34
Figure 1-46	Remove the top cover (2 of 3)	35
Figure 1-47	Remove the top cover (3 of 3)	35
Figure 1-48	Remove the front door and front-lower cover (1 of 8)	36
Figure 1-49	Remove the front door and front-lower cover (2 of 8)	37
Figure 1-50	Remove the front door and front-lower cover (3 of 8)	37
Figure 1-51	Remove the front door and front-lower cover (4 of 8)	38
Figure 1-52	Remove the front door and front-lower cover (5 of 8)	38
Figure 1-53	Remove the front door and front-lower cover (6 of 8)	39
Figure 1-54	Remove the front door and front-lower cover (7 of 8)	39
Figure 1-55	Remove the front door and front-lower cover (8 of 8)	40
Figure 1-56	Remove the rear door and rear-lower cover (1 of 5)	41
Figure 1-57	Remove the rear door and rear-lower cover (2 of 5)	41
Figure 1-58	Remove the rear door and rear-lower cover (3 of 5)	42
Figure 1-59	Remove the rear door and rear-lower cover (4 of 5)	42
Figure 1-60	Remove the rear door and rear-lower cover (5 of 5)	43
Figure 1-61	Remove the paper-guide assembly (1 of 2)	44
Figure 1-62	Remove the paper-guide assembly (2 of 2)	44
Figure 1-63	Remove the USB port PCA and bracket (1 of 3)	45
Figure 1-64	Remove the USB port PCA and bracket (2 of 3)	46
Figure 1-65	Remove the USB port PCA and bracket (3 of 3)	46
Figure 1-66	Reinstall the USB port PCA and bracket	47
Figure 1-67	Remove the wireless PCA (1 of 2)	48
Figure 1-68	Remove the wireless PCA (2 of 2)	48
Figure 1-69	Remove the DC controller PCA (1 of 5)	50
Figure 1-70	Remove the DC controller PCA (2 of 5)	50
Figure 1-71	Remove the DC controller PCA (3 of 5)	51
Figure 1-72	Remove the DC controller PCA (4 of 5)	52
Figure 1-73	Remove the DC controller PCA (5 of 5)	52
Figure 1-74	Remove the formatter PCA, fax card PCA, and support bracket (1 of 8)	54
Figure 1-75	Remove the formatter PCA, fax card PCA, and support bracket (2 of 8)	54
Figure 1-76	Remove the formatter PCA, fax card PCA, and support bracket (3 of 8)	55
Figure 1-77	Remove the formatter PCA, fax card PCA, and support bracket (4 of 8)	56
Figure 1-78	Remove the formatter PCA, fax card PCA, and support bracket (5 of 8)	56

Figure 1-79	Remove the formatter PCA, fax card PCA, and support bracket (6 of 8)	57
Figure 1-80	Remove the formatter PCA, fax card PCA, and support bracket (7 of 8)	57
Figure 1-81	Remove the formatter PCA, fax card PCA, and support bracket (8 of 8)	58
Figure 1-82	Remove the fuser motor (1 of 2)	59
Figure 1-83	Remove the fuser motor (2 of 2)	59
Figure 1-84	Remove the main motor (1 of 4)	60
Figure 1-85	Remove the main motor (2 of 4)	60
Figure 1-86	Remove the main motor (3 of 4)	61
Figure 1-87	Remove the main motor (4 of 4)	61
Figure 1-88	Remove the ITB (1 of 5)	62
Figure 1-89	Remove the ITB (2 of 5)	63
Figure 1-90	Remove the ITB (3 of 5)	63
Figure 1-91	Remove the ITB (4 of 5)	64
Figure 1-92	Remove the ITB (5 of 5)	64
Figure 1-93	Reinstall the ITB (1 of 2)	65
Figure 1-94	Reinstall the ITB (2 of 2)	66
Figure 1-95	Remove the power supply (high-voltage; 1 of 6)	67
Figure 1-96	Remove the power supply (high-voltage; 2 of 6)	68
Figure 1-97	Remove the power supply (high-voltage; 3 of 6)	68
Figure 1-98	Remove the power supply (high-voltage; 4 of 6)	69
Figure 1-99	Remove the power supply (high-voltage; 5 of 6)	69
Figure 1-100	Remove the power supply (high-voltage; 6 of 6)	70
Figure 1-101	Reinstall the power supply (high voltage)	70
Figure 1-102	Remove the power supply (low voltage; 1 of 8)	71
Figure 1-103	Remove the power supply (low voltage; 2 of 8)	72
Figure 1-104	Remove the power supply (low voltage; 3 of 8)	72
Figure 1-105	Remove the power supply (low voltage; 4 of 8)	73
Figure 1-106	Remove the power supply (low voltage; 5 of 8)	73
Figure 1-107	Remove the power supply (low voltage; 6 of 8)	74
Figure 1-108	Remove the power supply (low voltage; 7 of 8)	74
Figure 1-109	Remove the power supply (low voltage; 8 of 8)	75
Figure 1-110	Reinstall the power supply (low voltage; 1 of 2)	75
Figure 1-111	Reinstall the power supply (low voltage; 2 of 2)	76
Figure 1-112	Remove the power supply (fuser; 1 of 5)	77
Figure 1-113	Remove the power supply (fuser; 2 of 5)	78
Figure 1-114	Remove the power supply (fuser; 3 of 5)	78
Figure 1-115	Remove the power supply (fuser; 4 of 5)	79
Figure 1-116	Remove the power supply (fuser; 5 of 5)	79
Figure 1-117	Remove the fuser (1 of 4)	80
Figure 1-118	Remove the fuser (2 of 4)	81
Figure 1-119	Remove the fuser (3 of 4)	81
Figure 1-120	Remove the fuser (4 of 4)	82
Figure 1-121	Remove the document feeder separation pad assembly (1 of 7)	83
Figure 1-122	Remove the document feeder separation pad assembly (2 of 7)	83

Figure 1-123	Remove the document feeder separation pad assembly (3 of 7)	84
Figure 1-124	Remove the document feeder separation pad assembly (4 of 7)	84
Figure 1-125	Remove the document feeder separation pad assembly (5 of 7)	85
Figure 1-126	Remove the document feeder separation pad assembly (6 of 7)	85
Figure 1-127	Remove the document feeder separation pad assembly (7 of 7)	86
Figure 1-128	Remove the document feeder input tray (1 of 2)	87
Figure 1-129	Remove the document feeder input tray (2 of 2)	87
Figure 1-130	Remove the document feeder cover (1 of 3)	88
Figure 1-131	Remove the document feeder cover (2 of 3)	88
Figure 1-132	Remove the document feeder cover (3 of 3)	89
Figure 1-133	Remove the document feeder pick arm assembly (1 of 4)	90
Figure 1-134	Remove the document feeder pick arm assembly (2 of 4)	90
Figure 1-135	Remove the document feeder pick arm assembly (3 of 4)	91
Figure 1-136	Remove the document feeder pick arm assembly (4 of 4)	91
Figure 1-137	Remove the document feeder core assembly (1 of 3)	92
Figure 1-138	Remove the document feeder core assembly (2 of 3)	92
Figure 1-139	Remove the document feeder core assembly (3 of 3)	93
Figure 1-140	Remove the post scan pinch rollers	94
Figure 1-141	Remove the document feeder base assembly (1 of 3)	95
Figure 1-142	Remove the document feeder base assembly (2 of 3)	96
Figure 1-143	Remove the document feeder base assembly (3 of 3)	96
Figure 1-144	Remove the document feeder floating hinges	97
Figure 2-1	DC controller connectors	105
Figure 2-2	Timing diagram	107
Figure 2-3	Circuit diagram	108
Figure 3-1	Base product	161
Figure 3-2	Covers, panels, and doors	162
Figure 3-3	Internal assemblies (1 of 4)	164
Figure 3-4	Internal assemblies (2 of 4)	166
Figure 3-5	Internal assemblies (3 of 4)	168
Figure 3-6	Internal assemblies (4 of 4)	170
Figure 3-7	PCAs	172
Figure 3-8	Scanner and document feeder main assemblies	174
Figure 3-9	Document feeder assembly parts	176

For the complete manual please
visit www.LaserPros.com