

Service  
Service  
Service



Philips Domestic Appliances and Personal Care

# Service Manual

## PRODUCT INFORMATION

- Active tip : Removes plaque between the teeth
- Number of brush heads included in fancy box : 1
- Colours : White/ light blue
- Waterproof : Yes
- Anti rolling strip : To prevent the appliance from rolling away

### Safety information

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

## TECHNICAL INFORMATION

- Voltage : 110 - 127 V, 200 - 240 V, 50 - 60Hz
- Power consumption : 2.8 Watts
- Speed (top) : Up to 15,000 brush strokes per minute
- Charging time : Empty to full : 16 hours
- Operating time : Full to empty : ± 25 minutes
- Battery type : NiCd

### Charging tips

- The appliance will only charge if the appliance is switched off.
- Please note that the electricity supply to sockets in mirror cabinets over washbasins or shaver sockets in bathrooms may be cut off when the light is switched off.
- The toothbrush can be put back in the stand after use and left to charge continuously. However, to extend the lifetime of the battery proceed as follows:  
When the appliance is used for the first time, continue to use it until the battery is empty.  
Use the appliance in the normal way without recharging it between the brushing sessions.  
Recharge the appliance when the motor almost stops running.  
Repeat this procedure 3 times in a row every 6 months.

**DISASSEMBLY- AND RE-ASSEMBLY ADVISE**

- No specific issues

**REPAIR INSTRUCTION**

## - Hand unit tooth brush (1)

Never open the hand unit of the toothbrush because the unit is no longer watertight after it has been opened.

 
Replace the entire unit in case of a defect.

When discarding the hand unit, remove the built-in rechargeable battery.


The battery should be completely empty.

**Instructions to remove the battery:**

1. Pull of the housing.

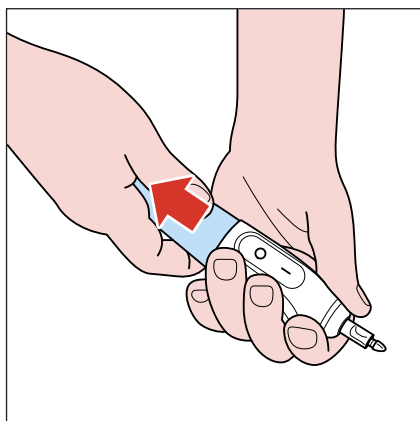

 2. Lift the battery out of the battery holder by means of a screwdriver.

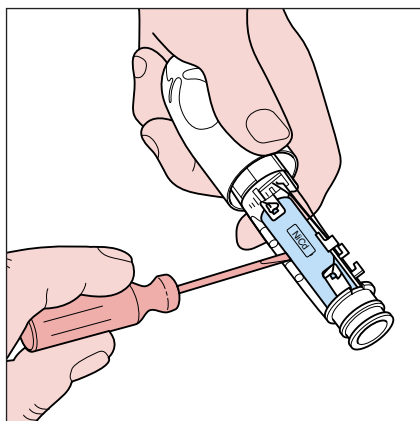


**Note:** After the housing has been removed, the appliance may not be watertight anymore and the guarantee will become invalid.

## - Charging stand (2)

 In case of a defective charging unit or damaged cord the complete charging unit must be replaced.

**OPTIONAL (accessories)**

- No specific issues

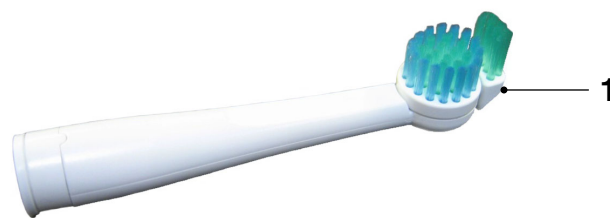**PARTS LIST & EXPLODED VIEW**

Pos	Service code	Description
1	4203 035 51600	Brush
2	4203 035 53950	Charging Stand WEU / EEU
	4203 035 53980	Charging Stand UK
	4203 035 53970	Charging Stand KOR
	4203 035 53960	Charging Stand China