

MOTOROLA A810

Asia/EMEA User's Guide 07/03/08

Dummy Page - To be discarded before printing

 
ITC Notes:

Use this template with A6MotoLandscape StructApps. This template supports:

- Spot color formatting.
To produce a B/W print , check the 'Spot color as B/W' checkbox in the Framemaker print dialog.
- User's Guides with embedded Legal Guides, if needed.
All semantically-named elements within the Legal Guide content must have their Role attributes set to LG.

HELLOMOTO

Introducing your new Motorola A810 wireless phone. Here's a quick anatomy lesson.

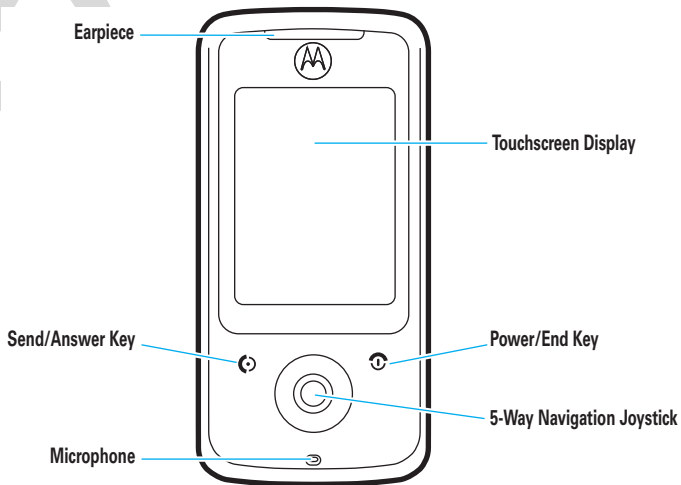

Accessory Connector Port
Insert battery charger and
phone accessories.

Camera Key

**Touchscreen and
send/end keys Lock**

Camera Lens

Lanyard Anchor

**Headset Jack
(3.5 mm)**

Volume Keys

Stylus
Use with
touchscreen display.

Speaker

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

www.hellomoto.com

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

© Motorola, Inc. 2008.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: 68XXXXX250-A









contents

menu map	6	basics	23	wallpaper	32
Safety Information	7	display	23	color scheme	33
FCC Notice	11	global navigation bar	24	backlight	33
Use and Care	12	application launcher	24	shortcuts & main menu	33
EU Conformance	13	button bar	25	auto answer	34
Recycling Information	14	status bar	25	calls	35
essentials	15	text entry	26	turn off a call alert	35
about this guide	15	volume	28	calls	35
SIM card	15	navigation joystick	28	redial	36
memory card	16	handsfree speaker	29	caller ID	37
battery	16	codes & passwords	29	emergency calls	37
turn it on & off	19	lock & unlock phone	29	turbo dial	38
make a call	20	lock touchscreen & send/end		dial extension or voicemail	
answer a call	21	keys	30	number	38
your phone number	21	personalize	31	dial extension number during a	
		ring style	31	call	39
		time	32		


address book	40	my favorites	56	Hearing Aids	82
view contact list	40	media applications.	60	Privacy and Data Security . .	83
add new contact	41	music player.	60	OSS Information	84
create group	42	camera.	61	Driving Safety	85
call or send message	42	video	62	index	87
search	43	FM radio	64		
delete contact	43	voice recorder	65		
copy contacts	43	browser	66		
check capacity	44	connections	69		
share contact.	44	Bluetooth® wireless	69		
synchronize contacts.	45	cable connections	72		
owner's information	45	other features	75		
messages	47	stk	75		
text messages.	47	advanced calling	76		
browser messages	50	security	77		
cell broadcast	51	master reset & clear	78		
office applications	52	call times	79		
email	52	service & repairs.	80		
calendar.	54	SAR Data.	81		
notes.	56	WHO Information.	82		

menu map

main menu

-  Calls
-  Notes
-  Calendar
-  Browser
-  My Favorites
-  Email
-  Alarm
-  Calculate
-  Music Player
-  Video Player

-  Camera
-  Recorder
-  Video
-  Photo Editor
-  Bluetooth®
-  STK (Operator Dependant)
-  PC Connection
-  Time
-  FM Radio

-  Setup
 - Ringer Alert Style
 - Wallpaper
 - Color Scheme
 - Language
 - Input Setup
 - Screen Calibration
 - Power Management
 - Home Screen Setup
 - Data Network
 - Security
 - Master Reset *
 - Master Clear *

* Requires SIM card to be fitted.

This is the standard main menu. **Your phone's menu may be a little different.**

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.*

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in

* The information provided in this document supersedes the general safety information in user's guides published prior to May 1, 2007.

the relevant standards, always follow these instructions and precautions.

External Antenna Care

If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of unauthorized antennas, modifications, or attachments could damage the mobile device and/or may result in your device not complying with local regulatory requirements in your country.

DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola—or if you hang your mobile device from a lanyard around your neck—keep the mobile

device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Implantable Medical Devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult your physician before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your health care provider.

Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

- Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue use if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- Do not place a mobile device in the airbag deployment area.

Responsible driving practices can be found in the "Smart Practices While Driving" section in this user's guide and/or at the Motorola Web site: www.motorola.com/callsmart.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Operational Warnings

Obey all posted signs when using mobile devices in public areas.





 

Potentially Explosive Atmospheres


Areas with potentially explosive atmospheres are often but not always posted and can include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Symbol Key

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.
	Do not let your battery, charger, or mobile device get wet.

Symbol	Definition
	Listening at full volume to music or voice through a headset may damage your hearing.

Batteries and Chargers

Caution: Improper treatment or use of batteries may present a danger of fire, explosion, leakage, or other hazard. For more information, see the “Battery Use & Battery Safety” section in this user’s guide.

Choking Hazards

Your mobile device or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your mobile device and its accessories away from small children.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are very tired.

Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of

your body. If you continue to have discomfort during or after such use, stop use and see a physician.

FCC Notice to Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a

particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



extreme heat or cold

Avoid temperatures below 0°C/32°F or above 45°C/113°F.



cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



microwaves

Don't try to dry your phone in a microwave oven.



the ground

Don't drop your phone.

European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

IMEI: 350034/40/394721/9

CE 0168

Type: MC2-41H14

Product
Approval
Number

The above gives an example of a typical Product Approval Number. You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rte. To find your DoC, enter the Product Approval Number from your product's label in the "Search" bar on the Web site.

Caring for the Environment by Recycling



This symbol on a Motorola product means the product should not be disposed of with household waste.

Disposal of your Mobile Device and Accessories

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved national recycling schemes, and further information on Motorola recycling activities can be found at: www.motorola.com/recycling

Disposal of your Mobile Device Packaging and User's Guide

Product packaging and user's guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.

essentials

about this guide

This guide describes the basic features of your Motorola wireless phone.

symbols



This means a feature is network, SIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.



 
This means a feature requires an optional accessory.

SIM card

 
Your *Subscriber Identity Module* (SIM) card stores your phone number and other information.

Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt. Turn off your phone and remove the battery before you install or remove the SIM card.

insert your SIM card

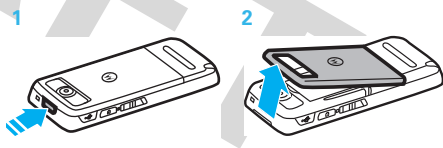

3



memory card

You can use an optional removable microSD memory card to store photos, videos, music and other files.



To insert a memory card, remove the battery door, then slide and lift the memory card tab out of the way as shown. Insert the memory card with the metal contacts facing down, then replace the memory card tab.

1



2



3



battery

battery use and safety

- Motorola recommends you always use Motorola-branded batteries and chargers.** The warranty does not cover damage caused by non-Motorola batteries and/or chargers.

Caution: Use of an unqualified battery or charger may present a risk of fire, explosion,

leakage, or other hazard. Improper battery use, or use of a damaged battery, may result in a fire, explosion, or other hazard.

- Battery usage by children should be supervised.
- **Important:** Motorola mobile devices are designed to work best with qualified batteries. If you see a message on your display such as **Invalid Battery** or **Unable to Charge**, take the following steps:
 - Remove the battery and inspect it to confirm that it bears a Motorola “Original Equipment” hologram;
 - If there is no hologram, the battery is not a qualified battery;
 - If there is a hologram, replace the battery and retry charging it;

- If the message remains, contact a Motorola Authorized Service Center.
- New batteries or batteries stored for a long time may take more time to charge.
- **Charging precautions:** When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging. Always take your mobile device with you when you leave your vehicle.
- When storing your battery, keep it in a cool, dry place.
- It is normal over time for battery life to decrease, and for the battery to exhibit shorter runtime between charges or require more frequent or longer charging times.
- **Avoid damage to your battery and/or mobile device.** Do not disassemble, open,

crush, bend, deform, puncture, shred, or submerge the battery or mobile device. Avoid dropping the battery or mobile device, especially on a hard surface. If your battery or mobile device has been subjected to such damage, take it to a Motorola Authorized Service Center before using.

- **Keep away from heat sources.**
 - Never expose your battery to heat sources. Do not attempt to dry a wet or damp battery with an appliance or heat source, such as a hair dryer or microwave oven.
 - Avoid direct exposure to summer sun for prolonged periods.
- Do not leave your battery or mobile phone in an unattended vehicle. Environments inside a vehicle can vary between extreme heat or cold, both of which can damage your battery.

- **Use care when handling a charged battery**—particularly when placing it inside a pocket, purse, or other container with metal objects. Contact with metal objects (such as jewelry, keys, or beaded chains) could complete an electrical circuit (short circuit), causing the battery to become very hot, which could cause damage or injury.

 
Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center for proper battery disposal.



Warning: Never dispose of batteries in a fire because they may explode.

insert the battery

 
Insert battery as shown ensuring the metal contacts face the phone pins.

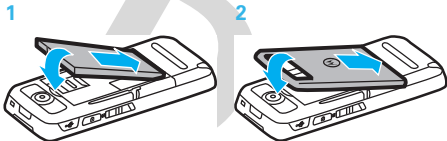

battery charging


New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. Your phone might take several seconds to start charging the battery.

When finished, your display shows **Charge Complete**.

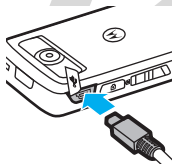

turn it on & off

Caution: On power up, the phone may prompt you to enter your SIM card PIN code to unlock the SIM card. If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled and your display shows **SIM Blocked**. Contact your service provider.

To turn on your phone, press and hold  for a few seconds or until the display lights up. If prompted, enter your eight-digit SIM card PIN code and/or four-digit unlock code.





To turn off your phone, press and hold  for a few seconds.


If you don't insert a SIM card, your phone shows **(No SIM Card)**. You can select **Antenna On** (to make an emergency call) or **Antenna Off** (to use the phone's non-calling features).


You can turn off the phone's antenna in locations where wireless phone use is prohibited, or when you just want to use the phone's non-calling features (games or personal organizer). Tap the status bar (see page 25), where the network reception level is shown, to open the device status screen, then tap the Antenna drop-down menu to select **On** or **Off**.



make a call

- 1 Tap  in the top global navigation bar to open the phone keypad.
- 2 Tap the keypad keys to enter the phone number.
- 3 Tap **Call** or press the send key  to make the call.



- 4 When you are finished, tap **End** or press the end key  to end the call.


Tip: Tap  to select a number from a list of recent received or dialed calls.

Tip: If you need to use the phone keypad during a call (for example, to dial an extension or make a conference call), tap the keypad button  from the in-call screen. Tap  to return to the in-call screen.


Note: Your service provider programs one or more **emergency phone numbers**, such as 911 or 112, that you can call under any circumstances, **even when your SIM card is not inserted, or the phone has been locked using the 4 digit code**. Check with your service provider, as emergency numbers vary by country. Your phone may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues. Do not solely rely on your wireless phone for essential communications, such as medical emergencies.

answer a call

 
When you receive a call, your phone rings and/or vibrates and shows an incoming call message.

Tap **Answer** or press  to answer the call.

Tip: You can press the volume keys to mute the ringer before answering the call.

When you are finished, tap **End** or press the end key  to end the call.

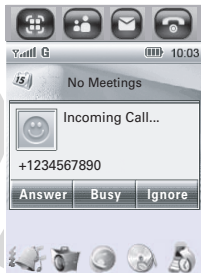

Tip: If you prefer not to answer the call, you can tap **Reject** to hang up on the caller, or tap **Busy** to transmit a busy tone signal to the caller (tapping **Busy** may divert the incoming call to your voicemail inbox).




your phone number





To view your phone number:

- 1 Tap  in the top global navigation bar to open the phone keypad.
- 2 Tap  in the bottom button bar to open the phone menu.
- 3 Tap **My Number** to see your phone number.

To see your phone number while you're on a call, tap  and then tap **My Number**.

o **store** or edit your name and phone number on your SIM card:

- 1 Tap  in the top global navigation bar to open the phone keypad.
- 2 Tap , then tap **Setup** to open the phone setup menu.
- 3 Tap **My Number** to open the number editor.

- 4 Enter your name and number (for line 1 and line 2, if applicable), then tap **Done** to store the information.

If you don't know your phone number, contact your service provider.

 
DRAFT

basics

See pages 1 and 2 for a basic phone diagrams.

display

The *home screen* appears when you turn on the phone.

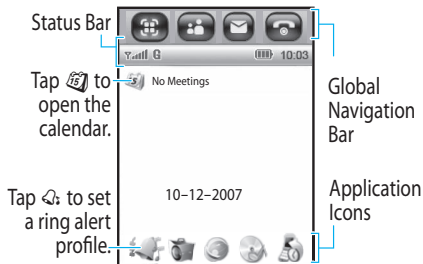

Note: Your home screen might look different from the one shown, depending on your service provider.





The home screen shows the next calendar event (if any) scheduled for the current day. Icons at the bottom of the screen provide shortcuts to commonly used applications.



You can use all of your phone's features by tapping on the global navigation bar icons, application icons, buttons, and text with the provided stylus.

To change the options that you see in the home screen, tap [App Launcher icon] to go to the application launcher screen, tap [Setup icon] **Setup**, then tap **Home Screen Setup**.


global navigation bar

 
Icons in the top *global navigation bar* give you easy access to your phone's primary functions:

-  Application Launcher
-  Address Book
-  Messages
-  Phone



Additionally, your phone shows a new message icon  in the global navigation bar to notify you of a new message or a missed call. Tap  to see information about the message or missed call.

application launcher

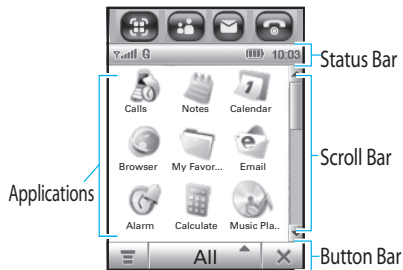Tap the application launcher icon  in the global navigation bar to open the application launcher screen.






Tap the button in the bottom centre of the screen to see All application icons, or to see application icons in predefined categories. If necessary, tap the scroll bar on the right side of the screen to see additional application icons. Tap an application icon to select it.

Tip: You can set your phone to show applications in a text-based list rather than graphic icons. Tap , then tap **List View** to change to list view. From list view, tap , then tap **Thumbnail View** to reset the graphic icons.

See page 6 for icons that identify applications available on the application launcher screen.

button bar

 
The button bar shows functions you can select in the active application. Typical buttons include:





	Menu	Tap to open context sensitive menu.
	Return	Tap to return to previous screen.
	Exit	Tap to exit current application.

status bar

Tap the status bar to open the device status screen and see phone status information.

The following indicators can appear in the status bar:




- 1 Signal Strength Indicator** – Vertical bars show the strength of the network connection. You can't make or receive calls when  or  appears.
- 2 Network Indicator** – Shows when your phone is using a fast **GPRS (G)**, or faster **EDGE (E)** network connection. 
- 3 Memory card** – Shows when a memory card is installed in your phone. 

- Bluetooth® Indicator** – Shows when Bluetooth connection is active.
- FM Radio** – Shows when the FM Radio is on.
- Battery Level Indicator** – Vertical bars show the battery charge level. Recharge the battery when your display shows **Low Battery**.
- Clock** – Shows current time.

text entry

Multiple text entry methods make it easy for you to enter names, numbers, and messages. The method you select remains active until you select another method.

Tap a text entry area on the screen to bring up a text entry window. If necessary, tap the entry method drop-down menu at the bottom of the screen to select a text entry method.

Tap  in the lower right corner of the screen to hide the text entry keyboard or pad when you are finished, or when you want to use the button bar functions.

handwriting

You can use the stylus as a pen to write letters, numbers, and punctuation directly on the screen.

In a text entry window, tap the entry method drop-down menu and tap

Handwriting to open the

handwriting pad. Tap a button on the handwriting pad to select Chinese characters, English text, or numbers as the type of text you want to enter.

Use the stylus to write in one of the two writing spaces. For best performance, alternate between the writing spaces so that recognition can occur in one while you are writing in the other.



Write a text character, then wait for your phone to recognize and place it in the text entry window. If your phone places an incorrect character, tap the character in the choice area that you want to replace it.

Your phone can use a predictive text function to predict the word you are writing. Tap a word in the prediction area to place it in the text entry window. To activate predictive text entry, see page 26.

To enter special characters or edit text, use the function buttons described on page 27.

 
English keyboard

Use the English keyboard to enter letters and numbers at the cursor location in the text entry window.

 


numeric pad


Use the numeric pad to enter digits and/or numeric symbols at the cursor location in the text entry window.

 



function buttons

Tap  with any text entry method to open the symbol pad, to enter a symbol at the cursor location.

Tap  to lock or hide the symbol pad.

To delete the character to the left of the cursor, tap .


To move the cursor to the next line, tap .

To enter a space at the cursor location, tap .

Tip: Tap a location in the text entry window to move the cursor to that location.

adjust text input settings

You can set your preferred input method, primary and secondary language preferences, specify your writing hand (left or right) and handwriting speed, activate word prediction and word completion, activate a user dictionary, and apply a watermark to the text you enter.

Tap  **Setup** in the application launcher screen, then tap **Input Setup** to open the input setting screen. Adjust settings, then tap **Save** to save your settings and return to the setup screen.

 
tap and hold

When using phone applications, in many cases you can tap and hold on an icon, file, or field to open a pop-up menu to perform various operations on the selected item. If the specific task you want to perform in an application is not already listed in the display, try using tap and hold to see if the feature you want is available in a pop-up menu.



volume

Press the volume keys to:

- turn off an incoming call alert
- change the earpiece volume during calls
- change the volume when listening to a song or the FM radio.



navigation joystick

Press the *navigation joystick*  up, down, left, or right to scroll to and highlight menu items. When you highlight something, press in the joystick  to select it.



This guide describes how to use the stylus and touchscreen control to use features. In most cases, it

doesn't include the equivalent joystick control for using the feature.

handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

To turn the handsfree speaker on or off during a call, tap **Spkr**.


Note: The handsfree speaker also works when your phone is connected to a handsfree headset accessory.




codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

You can also change your **SIM PIN** or call barring passwords.

To change a code or password, tap  **Setup** in the application launcher screen, tap **Security**, then tap **Change Passwords** to open the change passwords screen.

If you forget your unlock code: At the **Enter Unlock Code** prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, tap  to open the unlock code bypass screen. Enter your security code, then tap **OK**.

If you forget other codes: If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

lock & unlock phone

 
You can lock your phone, after a set delay, to save battery power.

To **automatically lock** your phone after a specified period of inactivity: Tap **U Setup** in the application launcher screen, tap **Power Management**, then select an **Auto Device Lock** timer setting. Slide the touchscreen lock down to unlock the phone.

Note: You can make emergency calls on a locked phone (see page 37). A locked phone still rings or vibrates for incoming calls or messages. It is not necessary too unlock your phone to answer a call.

lock touchscreen & send/end keys

Slide the touchscreen lock up to lock the touchscreen and send/end keys and down to unlock.

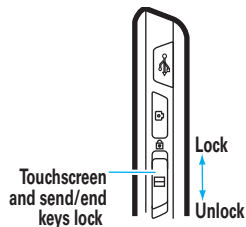


personalize

ring style

Each ring style profile uses a different set of sounds or vibrations for incoming calls and other events. Here are the profiles you can choose:




The ring style profile's indicator appears in the lower-left corner of your home screen. To choose your ring style profile, tap  in the home screen to set the ring style profile.

change alerts in a ring style profile


You can change the alerts for incoming calls and other events. Your changes are saved in the current profile.


Note: *Style* represents the current ring style. You can't set an alert for the **Silent** ring style setting or change some settings for some profiles.

- 1 Tap  **Setup** in the application launcher screen, then tap **Ringer Alert Style**.
- 2 Tap a profile, then tap **Edit** to adjust alert settings to personalize the profile. You can change the alerts used to notify you of incoming calls and messages, set ringer IDs, and adjust alert volume, touchscreen volume, and keypad volume. Any changes you make are saved to the profile.

 
time

Your phone can show the current time and date for multiple cities around the world.

Tap  **Time** in the application launcher screen to see the time screen. You can reset the time and date for a listed city. Tap the time and/or date field to change it. Tap **OK** to save your changes.

Tap , then tap **Setup** to adjust date and time display formats.


To replace a city listing in the world time screen, tap the city name, then tap **Browse...** to see the time zone map. Tap the city name again to see a city list. Select a new city, then tap **OK** to store it.

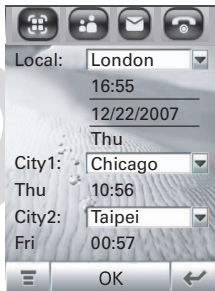

Alternatively, tap a time zone in the time zone map to see a list of cities in that time zone. Select a new city, then tap **OK** to store it.

wallpaper

Set a photo, or picture as a wallpaper (background) image in your home screen.


- 1 Tap  **Setup** in the application launcher screen, then tap **Wallpaper**.
- 2 Tap a photo/picture thumbnail image to set it as the wallpaper image. Tap the full-screen image preview to return to the wallpaper menu.
- 3 Tap **OK** to save your settings.

Tip: Tap an unused area of the home screen to see an unobstructed full-screen view of the wallpaper image. Tap the full-screen wallpaper image to return to the home screen

color scheme



Set the colors that your phone uses for buttons, highlights, and the status bar.

Note: This feature changes the look and feel of the phone's user interface, including the icons that you see in the top global navigation bar.

- 1 Tap  **Setup** in the application launcher screen, then tap **Color Scheme**.
- 2 Tap a thumbnail image to select it as the color scheme. Your phone shows a brief preview of the selected color scheme.
- 3 Tap **OK** to save your settings.

backlight

- 1 Tap  **Setup** in the application launcher screen, then tap **Power Management**.

- 2 Tap  and  to decrease or increase backlight brightness.
- 3 Tap **Auto Device Lock** to set the amount of time that the backlight remains on.
- 4 Tap **OK** to save your settings.


Note: Your phone's display is visible only when the display backlight is on, or when the display is viewed in direct sunlight. To extend battery life, the backlight turns off automatically when no activity is detected for a period of time. The backlight turns back on when you tap the screen or press any key.

shortcuts & main menu



home screen shortcuts

In the home screen, you can display your favorite features. To change the features that are displayed:



- 1 Tap  **Setup** in the application launcher screen, then tap **Home Screen Setup**.
- 2 Tap the shortcuts drop down menu and select a feature.
- 3 Tap **Save** to save your settings.


main menu appearance


To make your **main menu appearance** either graphic icons or a text-based list, tap , then  and then **List View** or **Thumbnail View**.

auto answer

To turn on or turn off the auto answer option:

Note: You can only use auto answer can when a headset is connected to your phone.

Tap  in the global navigation bar to open the phone keypad.

- 1 Tap , then tap **Setup** to open the phone setup menu.
- 2 Tap the check box beside **Auto Answer**. A check mark indicates that auto answer is activated.

calls




To make and answer calls, see pages 20 and 21.

turn off a call alert


You can press the volume keys to turn off a call alert before answering the call.


calls

Your phone keeps lists of recently answered, missed and dialed calls. The most recent calls are listed first. The oldest calls are deleted as new calls are added.


Shortcut: Press the send key  to go to the lists of recent calls from any menu. Use the five-way navigation joystick  to select the list you want and scroll to a number, then press  to call it.

To **dial** a number in the recent calls list:


Tap  in the global navigation bar to open the phone keypad.

- 1 Tap  to open the recent calls menu.
- 2 Tap **Answered Calls**, **Missed Calls**, or **Dialed Calls** to select a call list.
- 3 Tap an entry to call its number.

To **see** details or perform other operations on an entry in the recent calls list:


Tap  **Calls** in the application launcher screen to open the call history screen.



- 1 Tap **Answered Calls**, **Missed Calls**, or **Dialed Calls** to select a call list.
- 2 Tap an entry to see call details (time, date, duration).

- 3 Tap **Call** to call its number, or tap  to perform the following operations:

options	
Store	Create an address book entry with the number stored in the number type field you specify.
Send SMS	Open a new text message with the number in the To field.
Send MMS	Open a new multimedia text message with the number in the To field.
Delete	Delete the entry.

redial


Tap  in the global navigation bar to open the phone keypad.


- 1 Tap , then tap **Dialed Calls** to open the dialed calls list. Scroll to the entry you want to call, then press .
- 2 Tap the number you want to redial.

If you hear a **busy signal**, and you see **Call Failed, Number Busy**, tap **Redial** to redial the number.



To **activate** the automatic redial feature:

Tap  in the global navigation bar to open the phone keypad.

- 1 Tap , then tap **Setup** to open the phone setup menu.
- 2 Tap the check box beside **Auto Redial**. A check mark indicates that automatic redial is activated.

caller ID


Calling line identification (caller ID) shows the phone number for an incoming call in your phone's display.




Your phone shows the caller's name and picture when they're stored in your phonebook, or **Incoming Call** when caller ID information isn't available.


You can set your phone to play a different ringer ID for an entry stored in your phonebook (see page 41).

To show or hide **your phone number** from the next person you call:

Tap  in the global navigation bar to open the phone keypad.

- 1 Tap , then tap **Setup** to open the phone setup menu.
- 2 Tap **Show ID** then tap **On** or **Off** to show or hide your caller ID for outgoing calls.

3 Tap **OK** to save your settings.


4 Tap  to exit the phone setup menu.

Tip: Select **Network Controlled** to let the network determine your caller ID status.

emergency calls

Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call under any circumstances, even when your SIM card is not inserted.

Note: Check with your service provider, as emergency numbers vary by country. Your phone may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues. Do not solely rely on your wireless phone for essential communications, such as medical emergencies.


Tap  in the global navigation bar to open the phone keypad.

- 1 Tap the keypad keys to dial the emergency number.
- 2 Tap **Call** to make the call.

turbo dial

You can store up to nine phone numbers in the turbo dial list, then dial the numbers by tapping and holding a single keypad number key.


To **turbo dial** a phone number:


Tap  in the global navigation bar to open the phone keypad.

- 1 Tap and hold a keypad key to dial the phone number assigned to the key.

If no number is stored, your phone prompts you to store a phone number in the turbo dial numbers list.

To **set up** the turbo dial numbers list:


Tap  in the global navigation bar to open the phone keypad.

- 1 Tap , then tap **Setup** to open the phone setup menu.
- 2 Tap **Turbo Dialing** to open the turbo dial list.
- 3 Enter phone numbers in the turbo dial list.

dial extension or voicemail number

To direct dial an extension number or voicemail number, you can insert a pause character (**P**) in the dialing sequence. Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number.


- 1 Use the keypad key to dial the phone number.


- 2 When you need to insert a pause, tap , tap **Insert**, then select **Insert Pause** to insert a **P** at the cursor location.
- 3 Dial the extension number.
- 4 Tap **Call** to make the call.

Your phone dials the phone number, waits for the call to connect, then dials the remaining digits.

Tip: Use the same procedure to insert a wait character (+) in the dialing sequence. Your phone dials the number, waits for the call to connect, then prompts you for confirmation before it dials the remaining digits.

dial extension number during a call



- 1 Tap the keypad button  to open the phone keypad.

- 2 Dial the extension number.
- 3 Tap  to return to the in-call screen.

address book

You can store a contact list of names, phone numbers, and email addresses in your phone's electronic address book.

view contact list

Tap  in the global navigation bar to open the address book. To change the way your contact list is shown, tap , tap **Setup**, then tap the **Default List Display** drop-down menu to select **List View** or **Thumbnail View**. Tap **Sort Names** by **Last name** or **First Name** to display your contacts. Tap **Default Memory Location** to set **Phone Memory**, **SIM Card Memory** or **Phone/SIM Memory** as the default location to store your contacts.

use category views

Defining categories for your contacts helps you manage address book information. You can classify contacts in different categories according to your communication needs, and see contacts by category. Your phone provides the following basic categories:

- **All** – Lists all contacts stored on your phone and on your SIM card.
- **Phone** – Lists contacts stored on your phone that are not assigned to a user-defined category. This is the default category setting for new contacts.
- **SIM Card** – Lists contacts stored on your SIM card.

- **Group** – Lists contacts stored in a user defined category.

In the contact list, tap the category button in the bottom button bar and select a category name to see only the contacts in that category.



view and edit contact details

- 1 In the contact list, tap a contact name to see its details.
- 2 Tap **Edit** to edit the contact. Your phone shows complete contact details.
- 3 To edit contact information, tap the direct line in the field you want to edit.
- 4 When you are finished editing contact information, tap **Done** to store your changes and return to the contact list.

add new contact

Contacts can be stored to phone memory or SIM card memory. To set the default storage location.

Note: You can enter only a name and a single phone number for each contact that you store on the SIM card.



- 1 Tap  in the global navigation bar to open the address book.
- 2 Tap , then **New Contact**.
- 3 On the new contact screen, tap the **Photo** field to assign a picture ID to the entry. Your phone shows the picture when you receive a call from this contact.
- 4 Tap the direct line in a field to enter contact details. Pull down the scroll bar to see additional fields.

Tip: To set a distinctive ring tone for the contact, tap the **Ring Tone** field and select **Browse**. Scroll to select the desired tone and tap **OK**. Your phone sounds the tone when you receive a call from this contact.

- 5 When you are finished entering information, tap **Done** to store the contact.

create group



You can create a group mailing list consisting of multiple contacts stored in the address book. Groups make it easy for you to send a message to multiple recipients simultaneously.




- 1 Tap  in the global navigation bar to open the address book.
- 2 Tap **Group** to create a group.
or
- 3 Tap , then tap **New Group**.

- 4 Tap **Message** or **Email** to specify the default type of message to send to the group. You must enter a name for the group, and the group must contain at least one member.



- 5 When you finish entering information, tap **Save** to store the group.

call or send message

- 1 Tap  in the global navigation bar to open the address book.
- 2 Tap a contact name to see its details.
- 3 In the details list:
 - Tap the phone number following the mobile phone indicator  to call the contact's mobile phone. Other indicators may identify other numbers stored for the contact (such as home, work, or fax).

- Tap the message indicator  to the **right** of a phone number to send an SMS or MMS message to the number.
- Tap the email address following the email indicator  to send an email message to the address. Alternatively, tap the message indicator  to the **right** of the email address to send an MMS message to the address.

search



- 1 Tap  in the global navigation bar to open the address book.
- 2 Tap , then tap **Find Contacts**.
- 3 Select **Contact's Name**, **Number**, or **Other**, enter the desired information in the **Search Text** field, then tap **Find**.

Your phone shows the search result, or notifies you that no match can be found.

To continue searching, tap **Find New**.

To return to the contact list, tap .



delete contact

- 1 Tap  in the global navigation bar to open the address book.
- 2 Tap , then tap **Delete Contacts**.
- 3 Check the contact(s) you want to delete, then tap **Delete**.
- 4 Tap **OK** to confirm the deletion.

copy contacts

You can copy contacts between your phone and SIM card. This procedure does not delete the original contact.




Note: Your SIM card can store only a name and one phone number per contact. When you copy an entry from the phone to the SIM card, your phone prompts you to specify the number you want to store for the contact.

- 1 Tap  in the global navigation bar to open the address book.
- 2 Tap , then tap **Copy to SIM/Phone**.
- 3 Select **Phone to SIM** or **SIM to Phone**, then tap **OK**.
- 4 Check the number(s) you want to copy. If you copy from the SIM card to phone memory, specify the number type.
- 5 Tap **OK** to copy the numbers to the new location.

Note: The number of entries you can store on your SIM card depends on the SIM card capacity. The types of entries that can be copied to the SIM card may vary depending on the function of the SIM card.


check capacity

You can see the number of address book entries currently stored on the phone and SIM card, and the total number of entries you can store on the SIM card.


- 1 Tap  in the global navigation bar to open the address book.
- 2 Tap , then tap **Memory Status**. Your phone shows the number of phone and SIM card contacts, and the SIM card capacity (number of contacts).
- 3 Tap  to return to the address book.

share contact

You can share contact information with others by sending the data as a vCard to another phone, PC, or hand-held device.

- 1 Tap  in the global navigation bar to open the address book.

2 Tap the name of the contact you want to send.
Your phone shows contact details.


3 Tap , then tap **Share**.

4 Tap **Bluetooth**, then tap **OK** to exchange the data through a Bluetooth wireless connection.

or

Tap **Message** or **Email**, then tap **OK** to send the contact data in an MMS or email message.

5 Complete the setup procedure for the transfer method you selected.

6 Tap **OK** to send the contact information in a vCard. Tap , then tap **Share**.

For more information about using a Bluetooth wireless connection, see page 69.

synchronize contacts

You can synchronize your address book contacts with a PC. For more information, see page 72.



owner's information

You can store information about yourself in the address book. Then, if you lose your phone, the person who finds it can contact you to return the phone.

1 Tap  in the global navigation bar to open the address book.

2 Tap , then tap **Owner's Information**.

3 If owner's information is stored, the phone shows the owner's contact details. Tap **Edit** to edit the owner's information.


- 4 If owner's information is not stored, the phone shows the owner's information entry screen. Enter information as you would for a new contact (see page 41).
- 5 When you are finished entering information, tap **Done** to store the owner's information.

messages

text messages

You can send and receive SMS and MMS messages using the message center.

message center

Tap  in the global navigation bar to go to the message centre. Your messages are stored in different folders in the message centre. The number to the right of each folder name indicates the number of messages it contains. Tap a folder to see its contents.

The message centre contains the following folders:

- **Inbox** – Stores SMS and MMS messages you have received.

- **SIM Card** – Contains SMS messages stored on your SIM card. You can move these messages to other folders.
- **Drafts** – Temporarily stores messages that you are still writing.
- **Outbox** – Stores your messages that have not yet been sent.
- **Sent Items** – Stores copies of messages you have sent.
- **Trash** – Stores messages you have deleted. If you have not permanently deleted a message, you can retrieve it.




You can create additional personal folders to organize and store your messages.

send a text message

You can send an SMS text message to other wireless phone users, and to email addresses.



To compose and send an SMS message:

- 1 Tap  in the global navigation bar to go to the message centre.
- 2 Tap **Compose**.
- 3 Tap the message field, then tap the text entry method drop-down menu at the bottom of the screen and select an entry method to enter text in the message field. When you are finished, tap  in the lower right corner of the screen to hide the text entry keyboard or pad.
Alternatively, you can tap , tap **Load**, then tap **Quick Text** to insert a prewritten quick text note in the message field.


- 4 Tap **To** to select contacts from your address book, or tap the direct line in the **To** field to enter a phone number or email address.
- 5 Tap **Send** to send the message.


send a multimedia message


A Multimedia Messaging Service (MMS) message contains one or more pages with text and embedded media objects (including photos, pictures, animations, sounds, voice records, and/or video clips). You can send an MMS text message to other wireless phone users, and to email addresses.






To compose and send an MMS message:

 
- 1 Tap  in the global navigation bar to go to the message centre.
- 2 Tap **Compose**.
- 3 Tap the message field, then tap the text entry method drop-down menu at the bottom of the

 
screen and select an entry method to enter text in the message field. When you are finished, tap  in the lower right corner of the screen to hide the text entry keyboard or pad.

Alternatively, you can tap , tap **Load**, then tap **Quick Text** to insert a prewritten quick text note in the message field.

4 Tap a button in the media toolbar at the bottom of the screen to insert media objects on the page or attach files to the message.

- Tap  to insert a picture, video, or new drawing on the page.
- Tap  to insert a sound file or new voice record on the page.
- Tap  to activate the camera, take a photo or record a video clip, and insert it on the page.


- Tap  to attach a contact, event, task, or file to the message.

5 To add a new page after the current page, tap . Repeat steps 3 and 4 to enter contents for the new page.


6 Tap **To** to select contacts from your address book, or tap the direct line in the **To** field to enter a phone number or email addresses.

7 Tap **Send** to send the message.

receive a text message

When you receive a new message, your phone shows the new message icon  in the global navigation bar, and shows **New Incoming Message** or **Incoming MMS**, along with the sender's name or phone number.


Tap **Read** to read an SMS message, or download an MMS message to your phone. Tap **Dismiss** to close the message notification screen without reading the message. The message is stored in the inbox.


To read the message later, tap . Tap the message to see message details (sender, subject, time, and size).

Your phone reads message settings from the USIM card. If you put another USIM card in your phone, your phone sends and receives messages for the phone number on the new card.

signature

You can store your signature and manually or automatically append it to the messages you send.

Tap  in the global navigation bar to go to the message centre.

- 1 Tap , then tap **Signature Editing** to open the signature editing screen.
- 2 Tap the direct line in the **Signature Content** field to enter your signature.
- 3 If you want your phone to automatically add your signature to all outgoing messages, tap the check


box below the signature. A check mark indicates that automatic signature is activated.

- 4 Tap **Save** to store your signature.


browser messages

Your network's Web server can send you browser messages that you read in your micro-browser.



Your phone shows the new message icon  in the global navigation bar when you receive a new browser message. Tap **Read** to read the message.

You must activate the feature to receive browser messages.

Tap  in the global navigation bar to go to the message centre.


- 1 Tap , then tap **Service Setup**.
- 2 Tap **Browser Message** to open the WAP push editor.

- 3 Tap **On** to receive all browser messages, or **Off** to stop receiving browser messages.
- 4 Tap **Save** to save settings.


cell broadcast


Information service messages are broadcast messages that you can receive, such as stock updates, news headlines, or sports scores.



Your phone shows the new message icon  in the global navigation bar when you receive a new information service message. Tap **Read** to read the message.

Note: You must set up your information services message inbox **before** you can receive information service messages. Usually, your service provider has already set up the information services message inbox for you.

Tap  in the global navigation bar to go to the message centre.

- 1 Tap , then tap **Service Setup**.
- 2 Tap **Cell Broadcast > On/Off** to activate or close cell broadcast on your phone.

office applications


email



You can send and receive email messages with your wireless phone. You must have an email account with a POP3/IMAP-SMTP server on the Internet or your service provider's network.

mailboxes and folders

Note: You must set up your email mailbox before you can send and receive email messages. Usually, your service provider has already set up the email mailbox for you. If not, contact your service provider to get these settings.

Tap  **Email** in the application launcher screen to launch the email application.

Email messages are stored in different folders in your email mailbox:

- **Inbox** – Email messages you have received.
- **Outbox** – Your email messages that have not yet been sent.

You may have additional folders in an email mailbox, such as **Drafts** and **Sent**, or personal folders that you create.

If you have separate mailboxes for different email accounts, tap the **Mailbox** field at the top of the email message screen to select the mailbox you want to use. Your phone shows the folders associated with the selected mailbox.



send an email


You can send an email message to one or more recipients. You can manually enter each recipient's email address, or select addresses from the address book.



When you manually enter email addresses, you must insert a comma, semicolon, or colon between each address.

To compose and send an email message:

- 1 Tap  **Email** in the application launcher screen to launch the email application.
- 2 Tap , then tap **New Email** to open the email message composition screen.
- 3 Tap the direct line in the **Subject** field to enter a subject for the message.
- 4 Tap the message field, then tap the text entry method drop-down menu at the bottom of the screen and select an entry method to enter text


in the message field. When you are finished, tap  in the lower right corner of the screen to hide the text entry keyboard or pad.

- 5 Tap **Recipients** to select contacts from your address book, or tap the direct line in the **To** field to enter an email address.
- 6 Tap **Send** to send the message.


receive an email message

Email messages that you receive are stored on your service provider's email server until you download them to your phone.



Tap  **Email** in the application launcher screen to launch the email application. Tap **Send/Rec.** to download new received messages to your phone.


When you download an email message:

- Tap  to see message details (sender, subject, time, and size).

- Tap the message to read it.
- Tap **Reply** to send an email reply to the message.

calendar

You can use your phone's calendar to schedule and organize events such as appointments and meetings.

Tap  **Calendar** in the application launcher screen to schedule or review calendar events.

month view

The calendar initially shows the current month.

Tap ◀ or ▶ to go to the previous or next month.

An indicator in the lower left corner of the date box indicates that one or more events are scheduled for the day. Tap the date box to see the day's events. Tap an event to see event details.

week view

Tap the **Month** button in the bottom button bar, then select **Week** to see the week view.

Tap ◀ or ▶ to go to the previous or next week.

Vertical bars indicate scheduled events for the day. A horizontal bar below the date indicates a full-day event. Tap the day to see the day's events. Tap an event to see event details.

day view

Tap a day in the month or week view to see the day's events.


Alternatively, you can tap the **Month** button in the bottom button bar, then select **Day** to see the highlighted day.



Tap ◀ or ▶ to go to the previous or next day.

Tap an event to see event details.


add new event

Note: You must create an event to use the reminder alarm.

- 1 Tap  **Calendar** in the application launcher screen to open the calendar.
- 2 Tap the day to which you want to add an event. Your phone lists the day's events.

- 3 Tap , then tap **New Event** to open the new event editor.
 - 4 Tap the direct line in a field to enter event details. Pull down the scroll bar to see additional fields.
 - 5 When you're finished entering information, tap **Save** to store the event.
- Tap  to exit without storing the event.

delete an event

- 1 Tap the event to see event details.
- 2 Tap , then tap **Delete**.
- 3 Tap **OK** to confirm the deletion.

dismiss reminder alarm

When you set a reminder alarm for an event, the phone shows an event reminder and sounds a reminder alarm.


Tap **Snooze** to turn off the reminder alarm for a short period of time. The reminder alarm sounds again when the snooze period expires.

Tap **Dismiss** to dismiss the reminder alarm.

If you have more than one event set up for the same time, the phone shows each event in sequence. As you read and dismiss each event reminder, the next event is shown.

notes


You can write and store notes on your phone.

Tap  **Notes** in the application launcher screen to open the notes editor.

- 1 Tap the text line and enter the information on the keypad you want to record.
- 2 When you are finished entering information, tap to close the keypad and tap **Save**.

- 3 Enter a name and choose a storage location for the note.

- 4 Tap **Save** to save the note.

To read a note that you have saved, tap , tap **Open**, then select the note you want to open.

my favorites

The file manager application makes it easy for you to create personal folders to store and manage your files and applications.

Tap  **My Favorites** in the application launcher screen to open the file manager.

Your phone lists the available storage devices (such as **Phone** memory, and an optional removable microSD **Memory Card**).


Your phone includes several predefined folders:

- **MyPrograms** – Stores applications that you have download and install on your phone.
- **Notes** – Stores your notes.
- **Others** – Stores other files.
- **Photos** – Stores your photos.
- **Pictures** – Stores pictures from MMS and Bluetooth transfers.
- **Preload** – Stores preloaded media files.
- **Ring Tone** – Stores your sounds, videos and ring tones.

Note: Your phone's folders and files may be a little different.




edit files and folders

Tap and hold a file or folder to open a pop-up menu to perform various operations on the file/folder. The edit menu can include the following options:


options	
Share	Send the file to another phone, PC, or hand-held device.
Set as	Set a file as default for the applicable function.
Copy	Copy or cut the file or folder to the clipboard. (Tap  , then tap Paste to paste the clipboard contents in the current folder.)
Move	Move the file or folder to a new location.
Edit	Edit the file or folder
Rename	Rename the file or folder.

options	
Delete	Delete the file or folder.
Properties	Display the properties of the file or folder.

create new folder

- 1 Tap  **My Favorites** in the application launcher screen to open the file manager.
- 2 If necessary, tap the folder tree icon  to select the location (phone or memory card) where you want to create the folder.
- 3 Tap , then tap **New Folder**.
- 4 Enter a name for the folder.
- 5 Tap **Done** to save the folder.

sort

To change the way your files and folders are sorted, tap , then tap **Sort by**. You can sort files or folders by **Time**, **Name**, **Size**, or **Type**.

set alarm

Your phone has an alarm clock with two separate alarms that you can set to alert you at the time(s) you specify.

Tap **A Alarm** in the application launcher screen to open the alarm clock setup screen. Tap the check box beside an alarm to activate it. A check mark indicates that the alarm is activated. Tap below the alarm name to set the alarm time. Set the desired time, then tap **OK** to store it. Tap **Snooze** to set the snooze period. Tap **Save** to store your settings. When the alarm expires, your phone shows an alarm reminder and sounds an alert.

Note: When you select **Alarm When Powered Off** in the alarm clock setup screen, your phone turns itself on, if necessary, to alert you when the alarm expires.


calculator

 
You can use your phone as a calculator.

Tap  **Calculate** in the application launcher screen to open the calculator.

media applications



music player

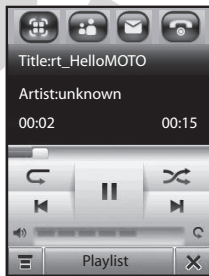









Your phone has a music player that you can use to play MP3, MIDI and AMR files and provides dynamic playing effects for your enjoyment. Tap  **Music Player** in the application launcher screen to launch the music player.



play media files


The music player displays the name, playing time, and total length of the track that is playing. Tap:


-  to play and  to pause

-  to play previous track or  to play next track
-  to play previous track or  to play next track
-  no repeat,  single repeat and  toggle repeat
-  to play or cancel random tracks
-  to mute volume and  to unmute volume.

You can use the navigation joystick to control the volume (push up to increase and down to decrease). Push the navigation joystick left to play the last track and right to play the next track.

playlist

In the music player window tap **Playlist**, then  and **Add Files**. Then select a file to add the file to the playlist.

In the music player window tap **Playlist**, then  and **Delete**. Then select the files to be deleted.

camera

Your phone has a 2 megapixel camera that can take photos at up to 1200 x 1600 pixels resolution.





Tap **H Camera** in the application launcher screen to launch the camera.





take a photo





To take the photo in the viewfinder tap **Capture**.

Before you take the photo, you can also tap:



-  to select the resolution of your photo (240 x 320, 768 x 1024, 1200 x 1600).
-  to activate the zoom feature. Push the navigation joystick up to zoom in and down to out.
-  to adjust the light setting. Push the navigation joystick left to increase and right to decrease.
-  to set the capture delay time (0, 5, 10, or 15 seconds).

 
After you have taken your photo, press  > **Review** to view it or  > **Delete** to delete it. In **Review** mode you can also tap:

-  then **Set as Wallpaper** to set the photo as your wallpaper.
-  then **Share** to send the photo by message, email, or Bluetooth.

-  then **Save to contact** to set the photo as ID picture for a contact.
-  then **Copy to microSD** to copy the photo to your microSD.
-  then **Move to microSD** to move the photo to your microSD memory card.
-  then **Edit** to edit the photo.




 
edit a photo

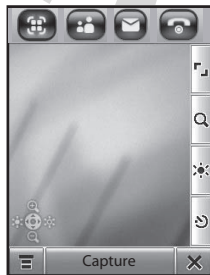Use the photo editor to edit photos and images stored on your phone, or create new drawings or illustrations. Tap  **Photo Editor** in the application launcher screen to launch the photo editor. To edit an existing photo or picture, tap ,




tap **Open**, then select the photo you want to open.

 
With the photo on the screen, tap:





-  to draw on the photo.
-  to add glasses and mask.
-  to select a color.
-  to see a full-screen view.

video

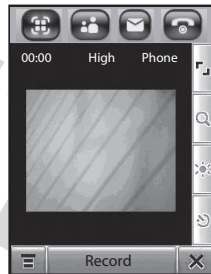Tap  **Video Camera** in the application launcher screen to launch the video camera.

Before you record the video, you can also tap:






-  to select the resolution of your video (Video HQ, Video MMS).
-  to activate the zoom feature. Push the navigation joystick up to zoom in and down to out.
-  to adjust the light setting. Push the navigation joystick left to increase and right to decrease.
-  to set the capture delay time (0, 5, 10, or 15 seconds).

record a video


To start recording a video tap **Record**. Tap **Done** to end recording.

When you ave finished recording, tap:

-  then **Review** to view the video you have taken.





-  then **Save to MicroSD** to save the video file to your microSD card.
-  then **Save to Phone** to save the video file to your phone.

play a video

Tap  **video player** in the application launcher to launch the video player.

To start playing a video, tap the file and then tap **Play**.

While the video is playing, tap:

-  then **Delete** to delete the file
-  then **Move to MicroSD** to save the file to your microSD file
-  then **Copy to MicroSD** to copy the file to your microSD file.
-  then **Share** to send the file to another phone by **Message**, **Email** or **Bluetooth**.

FM radio

You can use your phone to listen to FM radio stations when an optional Motorola Original™ standard headset or stereo headset is plugged into the phone's headset jack.



Note: You can't listen to the FM radio using a Bluetooth wireless headset.

To activate the FM radio from the application launcher screen, tap **f FM Radio**.

tune a station

Tap **⏮** or **⏭** to go to the previous or next active FM station.

Tap **⏪** or **⏩** to go to the previous or next frequency setting.



use preset channels

Tap **Ⓜ** to assign a channel number to the current tuned station.

Tap **⏪** or **⏩** to select the previous or next channel.

adjust radio settings

Tap the volume slider to adjust the radio volume. Alternatively, you can press the phone's volume keys to adjust radio volume.

Tap **🔇** or **🔊** to mute or unmute the radio.

Tap **Hide** to hide the radio when you want to use the display for other applications. The radio continues to play.

Tap **≡** to edit or clear radio channels, play the radio through your phone's internal speaker, or set the radio to play mono or stereo sound.

send/receive calls with the radio on

Your phone rings or vibrates as usual to notify you of an incoming call, message, or other event. You can answer the call, or ignore the call and continue listening to the radio.

If you answer the call, tap **End** as usual to end the call and resume the FM broadcast.

Note: You don't have to turn off the radio to make a call. The radio is muted automatically when you dial an outgoing call from the phone keypad.

voice recorder

You can record personal messages and phone calls on your phone.




Note: Recording of phone calls is subject to local laws regarding privacy and recording of phone

conversations. Always obey the laws and regulations on the use of this feature.

make a recording

To activate the voice recorder from the application launcher screen, tap **Recorder**.



Tap:

-  to start recording (speak into the microphone).
-  to stop recording. The voice record is automatically saved to the **Ring Tone** folder on your phone.
-  to play back the voice record you just made.




-  to stop playback.

play a recording

- 1 Tap  **Recorder** in the application launcher screen to open the recorder.
- 2 Tap , then tap **Open** to open the **Ring Tone** folder.
- 3 Tap the voice record you want to play, then tap **Open** to play it.

Tip: The voice record name identifies the date and time when the file was recorded. The recording date and time also appears when you play the voice record.

change voice record storage location

- 1 Tap , then **Setup**, then tap the folder tree icon in the **Location** field.
- 2 Select a folder, then tap **OK** to set it as the new storage location.

- 3 Tap **Save** to save the new storage location.


browser

The browser lets you access Web pages and Web-based applications on your phone.




Contact your service provider to set up access, if necessary.


start a browser session


Tap  **Browser** in the application launcher screen to start the browser.
If you are unable to establish a network connection with the browser, contact your service provider.


interact with web pages

Pull down the scroll bar to scroll through a text page or option list. Tap an option to select it. Tap  at any time to return to the previous screen.

Some Web pages may contain text fields for exchanging information with a Web site. Tap the field and enter text in the usual way.

Tap  to perform various browser operations. The browser menu can include the following options:

options	
Set Home Page	Set a WAP/Web address (URL) to be your home page.
Find...	Go Backward or Forward (your entry must be a enter complete word and is case sensitive).
Find Next	Find next entry (your entry must be a enter complete word and is case sensitive).
Bookmarks	Shows a list of your bookmarks. Tap  to save a New bookmark, or Open the highlighted bookmark.

options	
Saved Pages	Shows a list of WAP/Web sites you have visited Tap  to Save a or Open the highlighted Web site.
Select Encoding	Auto select /GB2312/BIG-5/Unicode (UTF-8).
View	Set browser view to Show Image or Small Screen .
Tools	Add and edit browser profiles, setup browser preferences, show SSL certificates, check browser history, empty the cache, and delete cookies.

Tap  to close and exit the browser application.

download files

You can download a file, game, or application from a Web page onto your phone by selecting its link.



You must specify the location where you want to save the file, and your phone must have sufficient memory storage space to store the file.

You can purchase games, applications, and multimedia content for your phone. In most cases, you can download and preview content before you purchase it. After previewing the content, you can choose to discard it, or purchase it and install it on your phone.

Note: Call charges apply during download sessions. Some games might make your phone vibrate. Some ring tones vibrate automatically. If you use one of these tones, your phone vibrates even when it is not set to a vibrate ring style.

connections


Bluetooth® wireless

Your phone supports Bluetooth wireless connections. You can connect your phone with a Bluetooth headset or car kit to make handsfree calls. You can also connect your phone with a phone or computer that supports Bluetooth connections to exchange files.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

For maximum Bluetooth security, you should always connect Bluetooth devices in a safe, private environment.

turn Bluetooth power on or off

- 1 Tap  **Bluetooth** in the application launcher screen, then tap **On (Discoverable)**.
- 2 Tap **On** or **Off** to activate or deactivate Bluetooth power.

use a headset or handsfree car kit

Before you try to connect your phone with a handsfree device, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the user's guide for the device). You can pair your phone with only one device at a time.

- 1 Tap  **Bluetooth** in the application launcher screen.
- 2 If necessary, turn Bluetooth power on.

3 Tap **Search** to search for Bluetooth devices.

Your phone shows a list of device(s) located within range of the phone. If your phone is already connected to a device, your phone identifies the connected device.

To connect to a device, select it from the list and tap **Pair**. The device may request permission to connect with your phone. Enter the correct PIN code (default code is 0000) to create a secure connection with the device.

Note: When Bluetooth power is on, your phone can automatically pair with a handsfree device you have used before. Just turn on the device and move it near the phone.

Tip: Want to know more about your headset or car kit? For specific information about a device, refer to the instructions that came with it.

copy files to another device

You can use a Bluetooth connection to copy a photo, picture, video clip, sound file, contact, calendar event, or bookmark from your phone to a computer or other device.



Note: You can't copy some copyrighted objects.

1 Tap and hold the object to open a pop-up menu, then select **Share** to see a list of share options. On your phone, scroll to the object that you want to copy to the other device.


Note: Share is not available for **SMS, MMS** and **Email**.

2 Tap **Bluetooth** to see the device list.


3 Tap the device name on the list.

4 Tap **Send** to send the object. If necessary, enter the correct PIN code to create a secure connection with the device.

If your phone could not copy the file to the other device, make sure the device is **on** and **ready** in *discoverable* mode (see the user's guide for the device). Also, make sure the device is not busy with another similar Bluetooth connection.


Note: Once you connect your phone to a Bluetooth device, that device can start similar Bluetooth connections with your phone. Your display shows the Bluetooth indicator  in the status bar when there is a Bluetooth connection.

receive files from another device

If you do not see the Bluetooth indicator  in the status bar, turn on your phone's Bluetooth feature (see page 69).


Place your phone near the device, and send the file from the device.

 
If your phone and the sending device don't recognize each other, place your phone in discoverable mode so the sending device can locate it:

- 1 Tap  **Bluetooth** in the application launcher screen to see the device list.
- 2 If necessary, turn Bluetooth power on.
- 3 Tap **On (Discoverable)** to put your phone into discoverable mode until a connection is made.

The device may request permission to bond with your phone. Enter the correct PIN code to create a secure connection with the device.

cable connections

 Your phone has a micro-USB port so you can connect it to a computer to transfer or synchronize data.

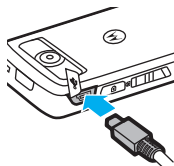

Note: Motorola Original™ USB data cables and supporting software may be sold separately. Check your computer to determine which cable you need.

Note: Before connecting your phone to your PC download and install the software driver from www.motorola.com/support/.

When using a USB cable connection:

- Be sure to connect the phone to a high-power USB port **on your computer** (not a low-power one, such as the USB port on your keyboard or bus-powered USB hub).

Note: If you connect your phone to a low-power USB port, the computer may not recognize your phone.

- Make sure both your phone and the computer are turned on.

synchronize phone information

You can synchronize information between your phone and a server or PC using the Motorola mobile PhoneTools software accessory product.



Motorola PhoneTools software is designed to synchronize with basic features of many popular Personal Information Management (PIM) software and hardware products. See the Motorola PhoneTools user's guide for more information.

To synchronize data between your phone and PC, connect your phone to your PC, then select the Sync


option from the Motorola PhoneTools software running on the PC.

The software notifies you when data synchronization is complete. If synchronization is not successful, Motorola PhoneTools notifies you that the attempt failed.

Note: Due to a known Microsoft™ Windows™ USB driver issue, a PC running Windows 2000 with Service Pack 1 or Service Pack 2 will not recognize a memory card inserted into your phone when you attempt to transfer or synchronize data between your phone and PC through a USB cable connection.

PC connection

You can use your phone as a modem, to connect your PC to the Internet, or as a storage device, to transfer data to/from the PC.

Connect your phone to the PC and tap  **PC Connection** in the applications launcher screen to access the PC Connection screen. Select **Modem** or **USB Mass Storage**.

modem

Motorola PhoneTools software includes a PC modem application that makes it easy to use your phone as a modem, and to set up a USB cable connection without first having to activate your phone's modem application.

USB mass storage

On your computer:

- 1 Open your "My Computer" window, where your phone's memory card shows as a "Removable Disk" icon.



- 2 Click on the “Removable Disk” icon to access the memory card.
- 3 To copy files between your computer and phone, drag and drop into the appropriate folders.

Use the folders on your memory card for the file types indicated:

- picture and video files: **\sights**.
 - music files: **\sound**.
- 4 When you’re finished, remove the device by selecting the “Safely Remove Hardware” icon in the system tray at the bottom of your computer screen, then select “USB Mass Storage Devices” and “Stop”.

other features

stk

features
access STK
Your SIM card may contain additional SIM Toolkit (STK) applications that add features and functionality to your phone. 
Tap  STK on the application launcher screen to see a list of STK applications you can use.

features
access a service
Tap a service or feature to select it. Your phone shows the service or feature screen.
Pull down the scroll bar to scroll through a text page or option list. Tap an option to select it. Tap  at any time to return to the previous screen.
Some screens may contain text fields where you must provide information in order to use a service or feature. Tap the field and enter text in the usual way.

features


more information

For more information about the STK applications available on your SIM card, contact your service provider.

advanced calling

features

international calls

Open the phone keypad, tap , tap **Insert**, then select **Insert+** to insert your local international access code (indicated by +). Then, tap the keypad keys to dial the country code and phone number.

Shortcut: Tap and hold the 0 key on the phone keypad to insert your international access code.



features

hold a call

To put all active calls on hold, tap **Hold**. Tap **Hold** again to resume the call.

mute a call

To turn off your phone's microphone during a call, tap **Mute**. Tap **Mute** again to resume the call.

call waiting



When you're on a call, you'll hear an alert if you receive a second call.

Tap **Answer** to put the first call on hold and answer the new call.

To switch between calls, tap **Switch**.

To connect the two calls, tap **Link**.

security

features

lock/unlock SIM card

Your *Personal Identification Number* (PIN) code protects the information stored on your SIM card. When the SIM card is locked, you must enter your SIM card PIN code to unlock the SIM card each time you turn on the phone or insert the SIM card in the phone. Your SIM card PIN code is given to you by your service provider.

Caution: If you enter an incorrect PIN code three times in a row, your SIM card is disabled and your display shows **SIM Blocked**.

Tap  to open application launcher, tap  **Setup**, tap **Security**, then select **SIM PIN Request**.

features

unlock SIM card PIN codes

If you enter an incorrect SIM card PIN code or PIN2 code three times in a row, your SIM card is disabled and your phone shows **SIM PIN Blocked**. You must enter a PIN unblocking key (PUK) code, which you can obtain from your service provider.



Caution: If the unblocking attempt is tried unsuccessfully 10 times, the SIM card is permanently disabled and your phone shows **SIM Disabled**.

master reset & clear

features

master reset

Reset all default phone settings, except for the lifetime timer.

Tap  to open application launcher, tap  **Setup**, tap **Master Reset**.



Tip: Tap **Cancel** to exit without performing the master reset procedure.

features

master clear

Caution: Master clear erases all information you have entered (including address book and calendar entries) and content you have downloaded (including photos and sounds) stored in your phone's memory. After you erase the information you can't recover it.

Master clear clears all settings and entries you made except SIM card information, erase downloaded pictures and sound files, and reset all options except for the lifetime timer.

Tap  to open application launcher, tap  **Setup**, tap **Master Clear**.



Tip: Tap **Cancel** to exit without performing the master clear procedure.

call times

features



call times

See call timers and cost trackers:

Tap  to open the phone keypad and tap  > **Setup**. Tap **Call Meters**. To reset the call timer, tap **Clear Call Meters**.

audible in-call time

Set an audible timer to beep at specified intervals during a call:

Tap  to open the phone keypad and tap  > **Setup** > **Call Meters**, Tap the **Audible Timer** pop-up menu, then select **Off**, **1 Min**, **5 Min**, **10 Min**, or **15 Min**.

service & repairs

If you have questions or need assistance, we're here to help.

Go to www.motorola.com/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR

level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 1.41 W/kg, and when worn on the body, as described in this user guide, is 0.25 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF

exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: <http://www.who.int/peh-emf>

Hearing Aid Compatibility with Mobile Phones

Some Motorola phones are measured for compatibility with hearing aids. If the box for your particular model has "Rated for Hearing Aids" printed on it, the following explanation applies.

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

- **M-Ratings:** Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.
- **T-Ratings:** Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated

phones. T4 is the better/higher of the two ratings. Note that not all hearing devices have telecoils in them.

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health

professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

Privacy and Data Security

Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- **Monitor access**—Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device's keypad where this feature is available.
- **Keep software up to date**—If Motorola or a software/application vendor releases a patch or software fix for your mobile device which updates the device's security, install it as soon as possible.
- **Erase before recycling**—Delete personal information or data from your mobile device prior to disposing of it or turning it in for recycling. For step-by-step instructions on how to delete all personal information from your device,

see the section entitled “master clear” or “delete data” in this user's guide.

Note: For information on backing up your mobile device data before erasing it, go to www.motorola.com and then navigate to the “downloads” section of the consumer Web page for “Motorola Backup” or “Motorola Phone Tools.”

- **Understanding AGPS**—In order to comply with emergency caller location requirements of the FCC, certain Motorola mobile devices incorporate *Assisted Global Positioning System* (AGPS) technology. AGPS technology also can be used in non-emergency applications to track and monitor a user's location—for example, to provide driving directions. Users who prefer not to permit such tracking and monitoring should avoid using such applications.

If you have further questions regarding how use of your mobile device may impact your privacy or data security, please contact

Motorola at privacy@motorola.com, or contact your service provider.

OPEN SOURCE SOFTWARE INFORMATION

For instructions on how to obtain a copy of any source code being made publicly available by Motorola related to software used in this Motorola mobile device you may send your request in writing to:

MOTOROLA, INC.
OSS Management
600 North US Hwy 45
Libertyville, IL 60048
USA

The Motorola website opensource.motorola.com also contains information regarding Motorola's use of open source.

Motorola has created the opensource.motorola.com to serve as a portal for interaction with the software community-at-large.

To view additional information regarding licenses, acknowledgments and required copyright notices for open source packages used in this Motorola mobile device please select file **LegalNotices.txt** on the phone:

- 1 Tap the  application launcher icon.
- 2 Tap the  menu icon.
- 3 Tap **Open Source**.
- 4 Select **LegalNotices.txt** file.

Smart Practices While Driving

Drive Safe, Call Smart SM

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. Go to www.motorola.com/callsmart for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an



inconvenient time, if possible, let your voice mail answer it for you.

- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.
- **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies.*

- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.*
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.*

* Wherever wireless phone service is available.

index

A

- accessories 15
- accessory connector port 2
- advanced calling 76
- alarm
 - dismiss 55
 - set 55, 58
- alert
 - set 31
 - turn off 28, 35
- answer a call 21
- application launcher 24
- arrange folders 58
- audible timer 79
- auto answer 34

B

- backlight 33
- battery
 - charging 19
 - indicator 26
 - install 19
 - life, extend 33
 - use and safety 16
- Bluetooth
 - connection
 - description 69
 - indicator 26
- bookmarks 67
- browser 66
 - messages 50
 - start 66
- button bar 25

C

- cables 72
- calculator 59
- calendar 54
- call
 - advanced 76
 - answering 21
 - barring 29
 - contact 42
 - making 20
 - times 79
 - waiting 76
- caller ID 37
- camera 61
 - lens 2
- capacity check 44
- cell broadcast 51

center key 28
charge battery 19
check capacity 44
clear 78
clock 26, 32
codes 29
color scheme 33
connection
 cable 72
 USB connection 72
contacts
 copy 43
 delete 43
 list 40, 43
 share 44
 synchronize 45
copy files 70
create group 42
create new folder 58

D
data security 83
date, setting 32
delete contact 43
deleted messages 47
dial a phone 20
dialed calls 35
display 1, 23
download files 68
draft messages 47

E
earpiece 1
 volume 28
edit photos 62
email 52
emergency
 number 37
 use 20
end key 1

enter text 26
Enter Unlock Code message 29
event delete 55

F
favorites 56
find contacts 43
FM radio 64
 indicator 26
function buttons 27

G
global navigation bar 24
groups 42

H
handsfree speaker 29
handwriting 26
headset jack 2
hold a call 76
home page 67

home screen 23, 33

I

inbox 47, 52

Incoming Call message 37

indicator

Bluetooth 26

clock 26

FM radio 26

low battery 26

memory card 16, 25

message 49, 50, 51

network 25

signal strength 25

insert

battery 19

memory card 16

SIM 15

international access code 76

K

keyboard 27

L

linking. See Bluetooth

lock

phone 29

screen 30

Low Battery message 26

M

master clear 78

master reset 78

memory card 16

indicator 16, 25

insert 16

menu

icons 33

message center 47

message indicator 49, 50, 51

messages

browser 50

deleted 47

draft 47

inbox 47

multimedia 48

outbox 47

receive 49

send 42

send text message 47

sent 47

signature 50

microphone 1

MMS, defined 48

multimedia message 48

music player 60

volume 28

mute a call 76

N

navigation key 1, 28

network indicator 25
new folder 58
notes 56
numeric pad 27

O

object exchange 70
optional accessory 15
outbox 47, 52
owner's information 45

P

pairing. See Bluetooth
passwords. See codes
pause character 38
phone number 21
phone software updates 72
photos 61
picture ID 37
PIN code 19, 29
pin codes 77

PIN2 code 29
play
 music 60
 videos 63
play media files 60
port USB connector 72
power key 1, 19
power management 33
preset radio channels 64
privacy 83

R

radio 64
 volume 28
receive
 email 53
 text message 49
received calls 35
recent calls 35
record
 sound 65

video 62
redial 36
reminder set 55
repairs 80
reset 78
ring style set 31
ringer ID 37

S

safety
 information 7
 tips 85
screen lock 2
search 43
security 77
 code 29
send
 email 53
 key 1
 message 42
 text message 48

sent messages 47
service 80
set
 alarm 58
 alert 31
 home page 67
 reminder 55
 ring style 31
 time 32
 wallpaper 32
share contacts 44
signal strength indicator 25
signature 50
SIM card 15, 19, 29, 47
 blocked message 77
 disabled message 77
 insert 15
 lock/unlock 77
SMS defined 48
software updates 72

sort, folders 58
sound recording 65
speaker 2, 29
start browser 66
status bar 25
STK 75
storage location 66
stylus 23
switch on/off 19
symbol entry mode 28
synchronize contacts 45

T
take photos 61
tap and hold 28
tap text entry mode 26, 27
text
 entry 26
 input settings 28
time
 indicator 26

 setting 32
 zone 32
timers 79
touch screen lock 30
trash 47
tune radio 64
turbo dial 38
turn on/off 19

U

unlock
 code 29
 phone 19, 29
 screen 30
updates 72
USB
 cables 72
 connection 72

V

video 62

player 63
view contact list 40
voice recorder 65
voicemail 38, 39
volume 28
 control 28
 earpiece 28
 keys 2

W

wallpaper 32
web access 66
web messages 50
WHO information 82

Y

your number 21

U.S. patent Re. 34,976