

Chest Freezer

no frost

English **p3**

 **Electrolux**

makes life a little easier

820 41 77 06

Contents

TECHNICAL SPECIFICATION 2

SAFETY INSTRUCTIONS 5

 Warnings and Guidelines 5

THE NO-FROST (FROST FREE) SYSTEM 7

DESCRIPTION OF THE APPLIANCE 8

 View of the appliance 8

INSTALLATION 9

 Position 9

 Electrical requirements 9

 Description of equipment 9

 Electrical Connection 9

HOW TO USE 10

 Temperature alarm 10

 Prior to putting into service 10

 Adjusting the temperature setting 10

 Switching the equipment off 10

 Freezing 11

 Conservation of frozen products 12

 Preparation of Ice cube maker 12

 Replacement of electric bulbs 13

 Packaging and positioning 13

 Capacity 13

 Basket 14

 The role of the pressure equalisation valve 14

HELPFUL HINTS 15

 Normal operating sounds 15

 Storage 15

 Freezing 15

MAINTENANCE 16

 Cleaning 16

IF SOMETHING DOES NOT WORK 17










 In case of a power failure or breakdown 17

Technical Specifications

Model		ECS2070	ECS2370	ECS3070
Volume (gross)	litres	205	235	305
Volume (net)	litres	200	230	300
Height without/ with roller	cm	87,6/88,3	87,6/88,3	87,6/88,3
Width	cm	119	132,5	160
Depth	cm	66,5	66,5	66,5

Chest Freezer

no frost

Technical specification	p2	
Safety instructions	p5	
The no-frost (frost-free) system	p7	
Description of the appliance	p8	
Installation	p9	
How to use	p10	
Helpful hints	p15	
Maintenance	p16	
If something does not work	p17	

 **Electrolux**

makes life a little easier

4 electrolux cold

Dear customer,

Before placing your new freezer into operation read these operating instructions carefully. They contain important information for safe use, for installation and for care of the appliance.



Notes which are important for your safety or for the proper functioning of the appliance are stressed with a warning triangle and / or with signal words (**Warning!**, **Caution!**, **Important!**). Please observe the following carefully.

This symbol and numbered instructions guide you step by step in the operation of the appliance.



Tips and notes concerning economical and environmentally sound use of the appliance are marked with the cloverleaf.

The operating instructions contain instructions for the correction of possible malfunctions by the user in the section "What to do if ...". If these instructions should not be sufficient, please contact your local Service.

Safety Instructions

Warnings and Guidelines

Important

It is vital that these instructions are kept with the freezer for future use. If the freezer is sold or given to another user, or if you move and leave the freezer behind, you must ensure that the instructions accompany the freezer to enable the next user to use the freezer correctly and read the relevant warnings.

- This freezer is only intended for the freezing and storage of food.
- This freezer should only be operated by adults. Children must not be allowed to tamper with the control buttons or play with the freezer.
- Changes in the electrical mains system in connection with the installation of this freezer should always be carried out by an authorised electrician or competent person.
- Do not under any circumstances attempt to repair the freezer yourself. Repairs carried out by untrained people may result in personal injury or serious malfunction of the freezer.
- Service of the freezer should be carried out by an authorised service company, and only original spare parts should be used.
- It is dangerous to alter the freezer specifications, or to change the freezer in any other way.
- Make sure that the freezer is not placed on top of the mains cable.
- Do not re-freeze food once it has been defrosted.
- Observe the recommendations for storage carefully. See under "Helpful Hints".
- This freezer includes components that are heated during operation. Consequently, adequate ventilation must always be provided. If ventilation is insufficient defects may occur, resulting in the loss of food. See under "Installation".
- Do not place drinks in the freezer. Bottles and cans containing carbonated liquid or sparkling drinks are particularly prone to explosion, which may damage the freezer.
- This freezer is heavy. Take care when moving it.
- If the freezer is fitted with a lock to prevent tampering by children, the key must always be kept safely out of the reach of children, and far away from the freezer.
- Before disposing of an old freezer, make sure that the lock (if present) no longer works. This is to prevent accidents and avoid the danger of children getting locked inside.
- Make sure the power plug is not squashed or damaged by the back of the freezer.
- A damaged power plug may overheat and cause a fire.




6 electrolux cold

- Do not place heavy articles or the freezer itself on the power cord. There is a risk of a short circuit and fire.
 - Do not remove the power cord by pulling on its lead, particularly when the freezer is being pulled out of its niche.
 - Damage to the cord may cause a short-circuit, fire and/or electric shock.
 - If the power cord is damaged, it must be replaced by a certified service agent or qualified service personnel.
- If the power plug socket is loose, do not insert the power plug. There is a risk of electric shock or fire.




In the interests of the environment:

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.


The no-frost (frost free) system

The no frost (frost free) system enables both the freezing of fresh foodstuff as well as storage of readily frozen foodstuff by cold air. An evaporator cools the air in the interior space of the appliances, which is circulated and uniformly distributed by a fan. This uniformly circulating air flow creates a dry climate, low temperature fluctuations and low temperature differences in the entire appliance interior. The moisture in the air condenses as frost on the evaporator. The evaporator thaws/defrosts automatically, as soon as this is necessary. The melted water is drained off outside to the compressor and evaporates through the heat generated by the latter. Thus, the interior of the appliances and the stored cooled or frozen foodstuffs always remain fresh and ice-free. Manual thawing/defrosting is not necessary.

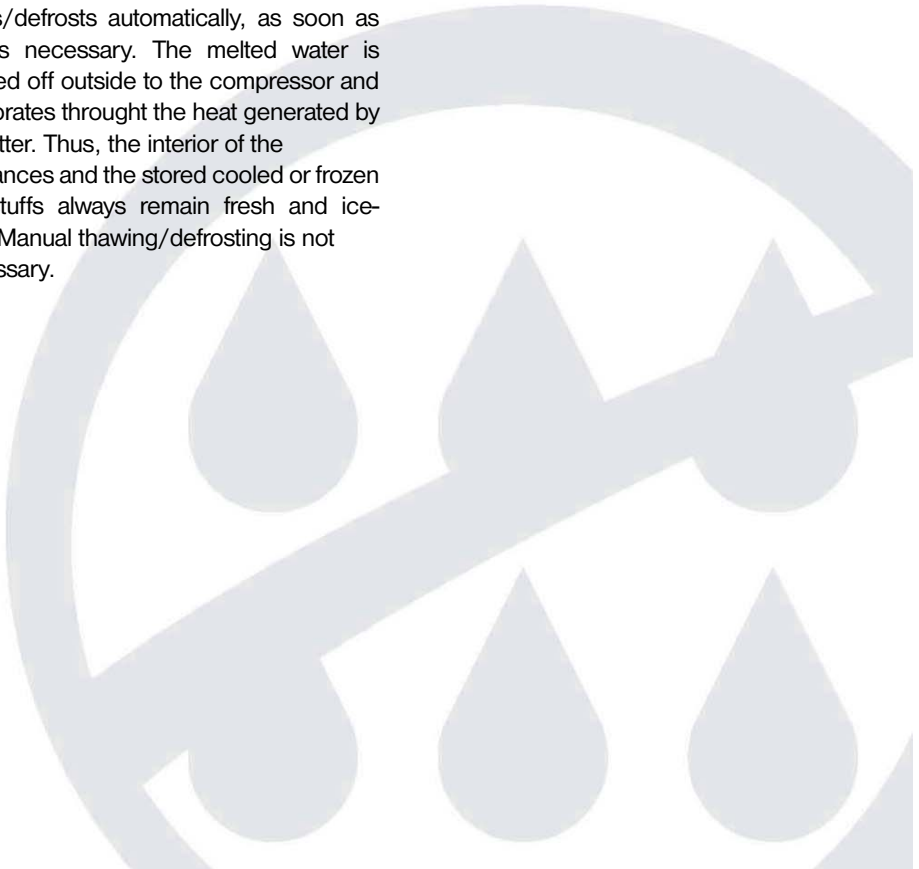

Description of the appliance

View of the appliance

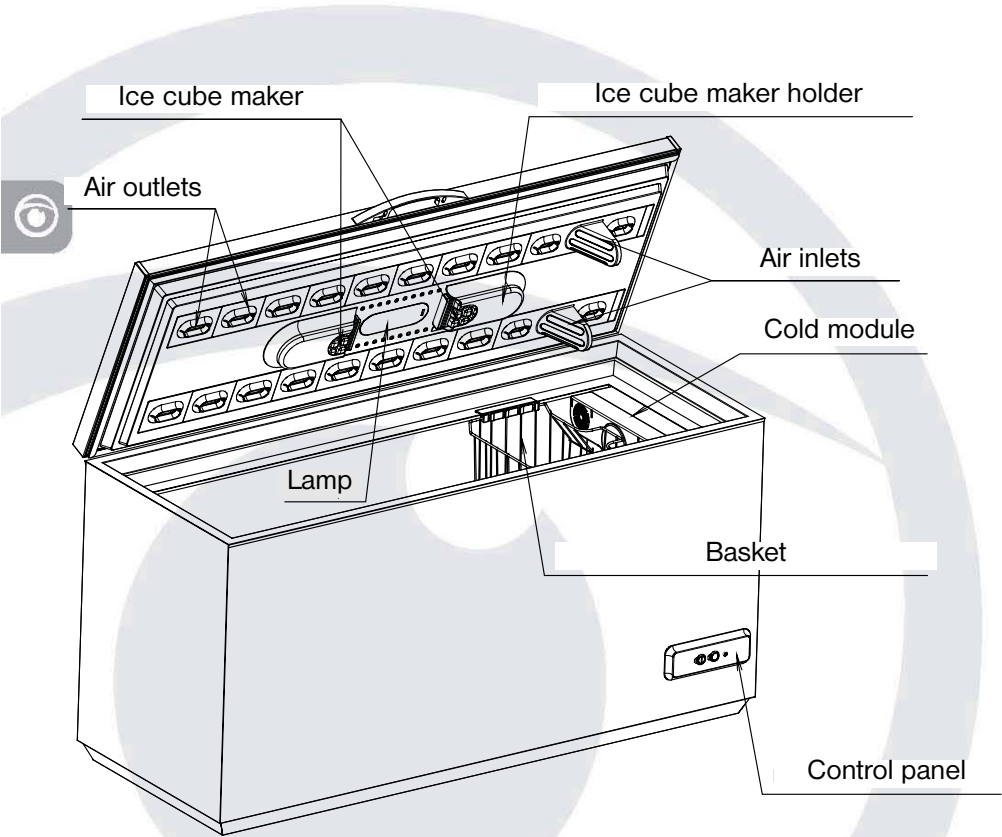

Installation


Position

- Place the freezer horizontally on a firm surface, resting on all wheels. Use a wooden block or similar object to compensate for any bumps/holes in the surface.
- The room should be dry and adequately ventilated.
- Temperatures of the external environment have an impact on the energy consumption of the freezer. Therefore:
 - do not place the freezer in a position exposed to sunshine or beside a radiator oven, or any other source of heat.
 - position it where the temperature of the environment corresponds to the climatic classification for which the freezer was designed.

Climatic classification Ambient temperature limits

	From...to	
SN	+10 to +32	C
N	+16 to +32	C
ST	+18 to +38	C
T	+18 to +43	C

- If the freezer has been handled in a vertical position it should be allowed to stand in normal position for about 12 hours before switching it on.
- Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown.

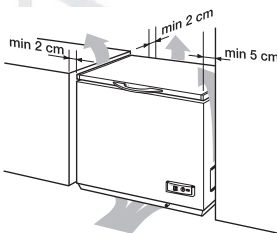

Electrical requirements

Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate, located on the back of the cabinet.

Warning:


This appliance must be earthed.

This appliance complies with the

following EC Directives:
 -73/23/EEC-Low-Voltage Directive
 -89/336/EEC -EMC Directive.

Testing has been carried out in accordance with EN 153 regarding the determination of freezer capacity, energy consumption and temperature rise time.


Description of equipment

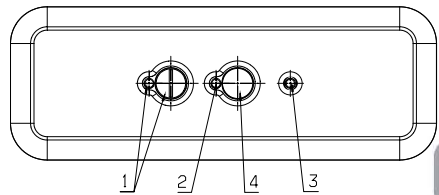

Control panel:

- Signal lamp of the control section (green).
- Signal lamp (yellow) for quick freezing.
- Acoustic alarm and alarm signal lamp (red).
- Push button:
 - for reset acoustic alarm
 - for start quick freezing mode
 - for stop quick freezing mode

Electrical Connection

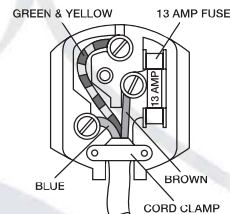

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

This appliance must be earthed.


The manufacturer declines any liability should these safety measures not be observed.

Electrical Requirements

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance rating plate.

The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS1362) fuse must be used. Should the plug need to be replaced for any reason. The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow:	Earth
Blue:	Neutral
Brown:	Live

The wire coloured green and yellow must be connected to the terminal marked with the letter "E" or by the earth symbol  or coloured green and yellow.

The wire coloured blue must be connected to the terminal "N" or coloured black.

The wire coloured brown must be connected to the terminal marked "L" or coloured red.

Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.

How to use

Temperature alarm

If the temperature in the freezer becomes too high, the acoustic alarm

sounds and the alarm signal lamp flashes.

The acoustic alarm signal sound and the red alarm signal lights up:

Press the button to stop the acoustic alarm signal. The red alarm lamp continues to flash until the freezer reaches the proper temperature.

- on putting the equipment into service until the temperature necessary for safe food storage is maintained.
- after loading fresh food in a quantity exceeding the freezing capacity (see "Freezing")
- if the lid remains open for long time. If there is a malfunction and the internal temperature cannot be maintained.

The acoustic alarm signal fails to sound and the red alarm indicator fails to light up:

- if the power supply to the equipment fails
- in the case that the electronic temperature controller has failed.

Prior to putting into service

Clean the inside of equipment and all the appliances prior to putting into service the first time (see chapter: "Maintenance")

Adjusting the temperature setting

Use a coin to turn the temperature control knob. This is to render it more difficult to change the setting inadvertently (protection against children being able to tamper with the equipment).

- **Position "Off" means that the equipment is switched off.**

- **Position "1"** means that the inside temperature is at its highest .
- **Position "4"** means that the inside temperature is at its lowest .
- **Recommended setting:** "2" or "3".

Use a coin and turn the temperature control knob to position "2" or "3". The factors influencing the inside temperature are as follows:

- ambient temperature
- quantity of food to be conserved
- frequency and duration of opening the cover

Switching the freezer off

- To put the freezer out of service, turn the temperature control knob counterclockwise to "off" position. The green signal lamp is extinguished.

Putting the freezer out of service for prolonged time.

- To put the freezer out of service, turn the temperature control knob counterclockwise to "off" position. The green signal lamp is extinguished. Then, disconnect the plug connector from the mains receptacle.
- Disconnect the plug from mains or disconnect or remove the fuse.
- Clean thoroughly (see section Maintenance and Cleaning").
- Leave the lid open to prevent any smell from being formed.

Freezing

Recommendation: for freezing fresh food, use the special basket. This enables the fresh food to be separated from those already frozen. Always take care of preventing the food already frozen from being thawed as a result of contact with fresh food. If freezing

compartment is insufficient, part of goods can be placed in the large compartment of the cabinet on the left side of basket.

Attention!

- Prior to freezing foods, the inner temperature of freezer should be -18°C or below.
- Observe the freezing capacity indicated on the data label. The freezing capacity is the maximum quantity of fresh products that can be frozen with in 24 hours.
- Any food once thawed must not be refrozen without further processing (e.g. cooking)
- In order to utilize the maximum freezing capacity, depress the button (quick freezing) for 1 second 24 hours in advance of the time the freezing is planned to begin or 4 to 6 hours in advance if only a small quantity of goods is to be frozen. The yellow lamp is lit

It is not necessary to use button (quick freezing) for quantities not exceeding 1.5 kg.

Wrap the foods so they are airtight prior to freezing in order to prevent them from becoming dry, losing their flavour or interacting with the flavour of other frozen foods.

Caution! Do not touch the frozen products with wet hands; otherwise your hands may stick to the frozen product as a result of freezing.



12 electrolux cold

- Place the wrapped foods into the freezer. The products not frozen should not be in contact with those already frozen in order to prevent the latter from hawed.
- In order to freeze additional products, preserve the quick freezing setting. Alternatively, stop the quick freezing mode about 24 hours following the loading of goods (earlier in case of small quantities).
To do this, depress the button (quick freezing) again. The yellow signal lamp extinguishes.
- If the (quick freezing) button is not depressed to stop the quick freezing function, the equipment switched automatically to the normal mode after a 48-hour operation (the yellow signal lamp extinguishes). Then the equipment continues to operate in the mode determined by the setting of temperature control knob.

Advice:

- For wrapping the goods to be frozen, use freezer bags, cling wrap specified for use in a freezer and good quality foil.
 - special boxes suitable for frozen food
 - Extra strength aluminium foil
- For closing the bags and foils, use plastic clips, rubber bands or adhesive tapes.
- Prior to closing, remove the air from the bags and foils; otherwise, the air causes the to dry out food and, in addition, occupies space.
- Make small flat packages in order to accelerate the freezing.


- Do not fill the special boxes to the brim with ice cream or liquid due to the expansion occurring during freezing.

Conservation of frozen products

Attention! Prior to loading the freezer the first time with food already frozen, the temperature of $-18\text{ }^{\circ}\text{C}$ necessary for safe storage should be obtained.

- Store only frozen foods that are wrapped in order to prevent them becoming dry, losing their flavour or interacting with the flavour of other frozen foods.
- Observe the period storage recommended on pre-packed frozen food.
- Store ice creams and high fat content foods in the lower part of freezer (near the bottom)

Preparation of Ice cube maker

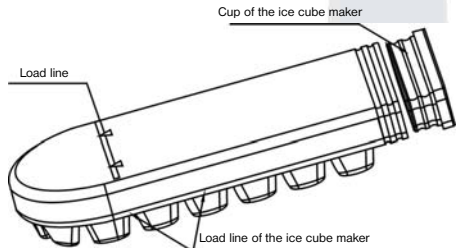


- 1.Fill the ice cube maker until the cubes will be full in the horizontal position or by the load line mark in the vertical position. After this close the ice cube maker with cap.
- 2.Place it in the freezer and leave to solidify holder in the lid of the.
- 3.To loosen the frozen cubes, either bend the ice cube tray or hold it under running water for a few seconds.

Important! Never try to free an ice tray that is frozen to the freezer compartment using pointed or sharp edged objects. Use a soft plastic scraper.

Replacement of electric bulbs

Warning! Risk of electric shock! Prior to replacement of electric bulbs, remove the plug from the mains socket or disconnect or unscrew the fuse or lodgement.

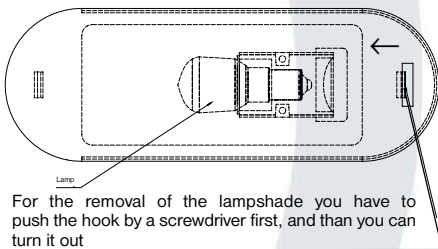

For the removal of the lampshade you have to push the hook by a screwdriver first, and than you can turn it out


Lamp specification: 220 to 240 V, max 15W
bulb holder: E14

- 1.Turn the temperature control knob counterclockwise to "off" position.
- 2.Remove mains plug
- 3.For replacement of the bulb press the cover hook and remove as shown in the illustration
- 4.Replace defective light bulb.
- 5.Place the cover again.

Packaging and positioning

- Food must be cold before freezing (no more than room temperature)
- Food must be packed in airtight and moisture -proof packaging to prevent it from drying out.
- Place fresh food for freezing close to the cold sides of the freezer, making sure that it is not in contact with frozen food already in the freezer.
- Never fill the freezer to more than loading line (arrow with dashed line) shown on the illustration.

See under "Helpful hints".

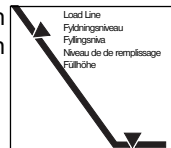

Capacity

The freezing capacity of the freezer is stated in the data plate (kg/24 hours). Do not exceed the amount stated - if you do, the freezing capacity time will be extended. The data plate is located on the back of the cabinet.



Important! The freezing capacity stated can be utilised to the full occasionally to freeze large amounts of fresh food. However, if the freezer is filled with large amounts of food for freezing every day, the capacity stated is reduced by about one-third.

Basket

The basket is designed for fast freezing and protection for part of the lid (Air inlet). The handles can be placed in one position as shown in the drawings.

Important: Do not leave a space between the right side of the basket and Cold module.

Do not keep distance between basket and cold modul

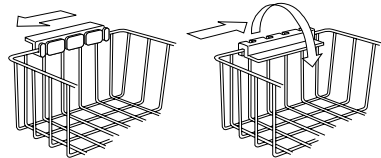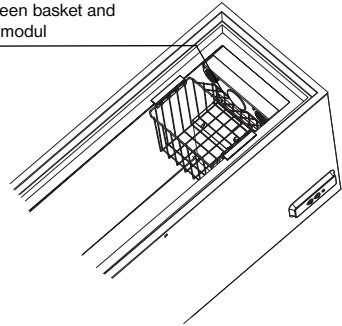

The baskets are designed for the storage of food which has already been frozen. The handles can be placed in two positions, as shown in the drawings.


The baskets can either be placed inside the freezer or hung on the edge of the casing.

The role of the pressure equalisation valve

The pressure equalisation valve installed in your freezer automatically eliminates the pressure difference which otherwise would make it very difficult or even impossible to open the lid.

It may be possible to hear the operation of the valve as the air flows in through the air-ing outlet in the rear wall of the cabinet.

For a safe operation, keep the two openings of the valve clear, do not cover them!

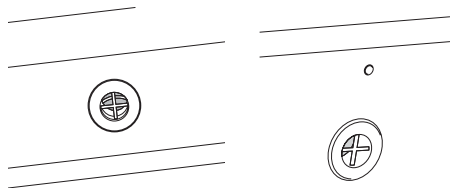

Hints and Tips

Normal Operating Sounds

- You may hear faint gurgling or bubbling sounds when the refrigerant is pumped through the coils or tubing at the rear, to the cooling plate/evaporator.
- When the compressor is on, the refrigerant is being pumped round and you will hear a whirring sound or pulsating noise from the compressor.
- A thermostat controls the compressor and you will hear a faint click when the thermostat cuts in and out.

Storage

Frozen food can be stored anywhere inside the freezer, but should be kept below the load line. Never exceed the maximum storage time for purchased frozen food. When you buy a frozen food, make sure that it has been stored at the correct temperature. Do not buy products which have wet or damaged packaging. Place purchased products in your freezer as quickly as possible. We recommend using an insulated bag to bring such products home with you. Never place bottles, warm objects, or fizzy drinks in the freezer.

IMPORTANT! Do not push food together too much, try to allow air to circulate around each them.

Freezing

Only use fresh food of the best quality. Cool hot dishes to room temperature as quickly as possible before placing them in the freezer. Wrap food carefully in freezer foil, or use the special freezer boxes or bags which are on the market. Divide food into small portions before freezing- this ensure that the freezing is more rapid, and means that you only need to defrost the amount needed for immediate consumption.

Remember that defrosted food must not be re-frozen. However, cooked dishes which have been made using defrosted food may be frozen. Mark the freezer packaging with the date of freezing. We recommend keeping a record of the contents of your freezer. If freezing is too slow, the quality of the food being frozen deteriorates. Consequently, do not freeze larger amounts than is stated on the freezer's data plate. If you wish to freeze several days in a row the maximum freezing capacity stated per day is reduced by about one-third. As far as possible, keep the lid closed during freezing. If you inexperienced with home freezing, we recommend that you purchase a book containing advice and guidelines.




Maintenance

Cleaning

Before any maintenance **or cleaning work is carried out DISCONNECT the appliance from the ELECTRICITY supply.**

- Use a damp cloth to clean your freezer. Use hot water, and a mild, non-aromatic cleaning agent.
- Remove the vented floor, as shown on the illustration, and then clean, after the cleaning replace the vented floor again.
- After cleaning the freezer, clean the basket, ice cube maker, before replacing them.

For the removal of vented floor (with grid) you have to pull out the grid and then you can turn it out.

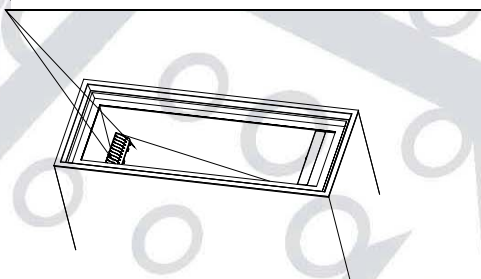

Important! Never use strong cleaning agents, scouring powder or strongly aromatic cleaning agents to clean your freezer inside, since this will damage the inside and leave a strong smell.

External cleaning

Wash the outer cabinet with warm water to which a little mild washing-up liquid has been added. Do NOT use abrasive products.

If something does not work

Check the following before making a request for service:

Defect:	Check if:	Possible cause:	Action:
Freezer not cold enough	Green light not on	Plug not connected correctly	Check plug and socket
		Defect in switch or fuse	Check fuse, call electrician
		Power failure	Wait until current returns
	Green and red light on	Fresh food recently placed in freezer	Wait of couple of hours
		Air chanel blocked	Clean the vented floor
		Lid open to long	Wait of couple of hours
Green light on, red light not on	Thermostat set too warm	Set thermostat colder	
Freezer too cold	Yellow light on	"Super" function active	Press "Super" button out
	Yellow light not on	Thermostat set too cold	Set thermostat warmer

- If you are still unable to solve the problem, contact your local Service Force Centre.
Do not attempt to repair the appliance yourself. Incorrect procedure may cause personal injury or lead to additional defects.
- If the freezer has been switched off briefly, the compressor may not start immediately when the current is re-connected. This is quite normal.
- If it is quite normal for the freezer to seem warm on the outside occasionally, owing to the heat generated by the freezing process. This heat also helps to keep the appliance free

IN CASE OF A POWER FAILURE OR BREAKDOWN

- Providing the period of power failure or breakdown does not exceed the temperature rise there will be no risk of damage to the frozen food, providing you do not open the lid during this period
- If the freezer is only half full or the lid opened this will reduce the temperature rise time.

Also from Electrolux



Fridge/freezer



Dishwasher



Washing machine



Microwave



Hob



Oven

Oven



Vacuum



Trilobite



From the Electrolux Group. The world's No.1 choice.

