



Benutzerinformation
Notice d'utilisation
Istruzioni per l'uso
User manual

Gefrier
Congélateur
Congelatore
Freezer

SG245N10, SG293N10

We were thinking of you

when we made this product

Welcome to the world of Electrolux

Thank you for choosing a first class product from Electrolux, which hopefully will provide you with lots of pleasure in the future. The Electrolux ambition is to offer a wide variety of quality products that make your life more comfortable. You find some examples on the cover in this manual. Please take a few minutes to study this manual so that you can take advantage of the benefits of your new machine. We promise that it will provide a superior User Experience delivering Ease-of-Mind. Good luck!

The following symbols are used in this manual:



Important information concerning your personal safety and information on how to avoid damaging the appliance



General information and tips



Environmental information

Scrapping old appliances



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Contents

| | | | |
|---|----|--------------------------------------|----|
| Scrapping old cabinets | 69 | Protect the environment | 77 |
| Contents | 70 | MAINTENANCE and CLEANING .. | 77 |
| Safety instructions | 71 | Removing the ventilation grille | 78 |
| USE | 72 | Cleaning | 78 |
| BEFORE USE | 72 | To change the lamp | 78 |
| Control Panel | 72 | Defrosting the freezer | 78 |
| To start the freezer and set the correct temperature | 73 | When the appliance is not in use .. | 78 |
| Adjusting the thermometer display | 73 | SOMETHING NOT WORKING | 79 |
| Switching off | 74 | Technical specification | 81 |
| Temperature inside the freezer | 74 | INSTALLATION | 81 |
| Alarms and other features | 74 | Mains Cable | 81 |
| Freezing | 75 | Unpacking | 81 |
| Suitable storage periods | 76 | Remove the transport supports ... | 82 |
| Thawing | 76 | Cleaning | 82 |
| Cabinet interior | 76 | Installing the cabinet | 82 |
| HINT and TIPS | 76 | Door Reversal | 83 |
| Saving energy | 76 | Electrical connection | 84 |
| Food Storage | 77 | European Guarantee | 85 |
| | | www.electrolux | 86 |
| | | Kundendienst | 87 |

Safety instructions

Carefully read these instructions to learn how the appliance works and how to care for it. Keep the instruction booklet. It will come in handy if you later sell the cabinet or give it to somebody else.

These warnings are provided in the interests of your safety. Ensure that you understand them all before installing or using the appliance. Your safety is of paramount importance. If you are unsure about any of the meanings or warnings contact the Customer Care Department.

For the User

- The cabinet is intended for keeping foodstuff in a normal household as explained in this instruction booklet.
- Do not keep explosive gases or liquids in the refrigerator or freezer compartment. They may explode and cause injury and material damage.
- Do not place food products directly against the air hole on the rear wall.
- Do not keep carbonised drinks or bottles in the freezer compartment. The glass bottles may break.
- The cabinet is heavy. The edges and projecting parts of the cabinet may be sharp. Be careful when moving the cabinet and always use gloves.

Child Safety

- Pay attention so that small children do not gain access to the operating controls or the inside of the cabinet.

USE


BEFORE USE

Position and clean the cabinet as explained in the section "Installation".



Before inserting the power plug into the outlet and switching on the cabinet for the first time, leave it standing upright for about 4 hours. Otherwise the compressor may sustain damage. This time will allow the oil sufficient time to return to the compressor.

Control Panel

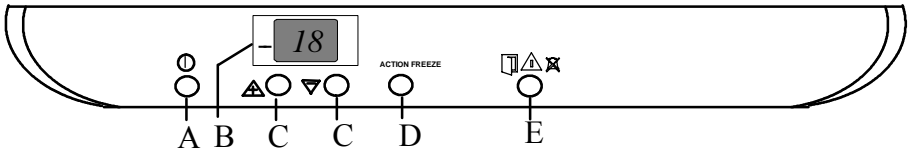

A. Freezer power switch

Switches the freezer on and off.

Green indicator lamp

Lights when the freezer is operating.

B. Temperature display

Shows the highest temperature inside the freezer.

C. Temperature adjustment button/thermostat

Used to set the temperature in the freezer.

D. FAST FREEZE button

Used to switch the Fast Freeze feature on and off.

Yellow indicator lamp

Lights when Fast Freeze is operating.

E. Alarm shut-off button

Used to turn the audible alarm off.

Red warning lamp

 
Flashes when one of the alarms in the cabinet has been triggered.

To start the freezer and set the correct temperature

Switching on:

Switch on the freezer by pressing the power switch.

The alarm sounds if the temperature inside the freezer reaches room temperature. Turn off the alarm by pressing the switch-off button.





Setting the temperature

Press the buttons until the desired temperature blinks on the temperature display. (The temperature can be set between -15°C and -24°C.)

"+" increases the temperature.

  "-" decreases the temperature.





Once set, the temperature display shows the current temperature inside the freezer.

 
Allow the cabinet to run for a period of 24 hours whenever the temperature setting is changed. This will allow the temperature to stabilise inside the cabinet.

It is not necessary to reset the temperature when the cabinet is switched on after it has been out of use. The thermostat recalls the previously set temperature.

Adjusting the thermometer display

On delivery, the cabinet's thermometer is set to show the average temperature during normal operation conditions. If the cabinet is used during other operational conditions, for example, in warmer surroundings, with a lot of food or if the cabinet is run entirely or partially without accessories the thermometer display can be adjusted for these conditions.

When adjusting the thermometer display, the cabinet should be working and freezing should not be active. Press the shut down button for the Setting the temperature "+" and the "-" button simultaneously and hold them down for about 5 seconds. As confirmation, the sound will buzz with a short signal. The thermometer is now set for display of warmer food products. To return to normal display, repeat the same process. As confirmation, the buzzer will give off a loud signal.




Information: It is very important to press the buttons at **exactly** the same time.

Please observe that the display will not change immediately. Instead, the temperature of the cabinet will successively change internally.

Switching off

Switch off the cabinet by pressing the power switch.

 Keep the button pressed for approx. 1 second.



Power to the cabinet is completely interrupted only when the power plug is disconnected.

Temperature inside the freezer

To ensure that foodstuff will keep for a long time, be sure that the temperature inside the freezer is -18°C or below. Please note, however, that the energy consumption increases as the temperature decreases.

The built-in temperature display shows the warmest temperature inside the freezer. If the temperature is measured using a thermometer, put it between the products since this will reflect the real temperature in the frozen products. It is normal that the built-in temperature display shows a temperature slightly above that measured in other ways.

Alarms and other features

Door open alarm

If the door remains open for more than about 1,5 minute, the red indicator lamp starts flashing and an audible alarm sounds.

To switch off the alarm:

Press the alarm shut-off button. As long as the door remains open, the audible alarm will sound anew at 1-minute intervals. The red indicator lamp goes out when the door is closed.



Temperature alarm

If the temperature rises above -12°C , the red warning lamp flashes and an audible alarm sounds. The temperature display will then start to flash.

To switch off the alarm:

Press the alarm shut-off button to switch off the audible alarm. The temperature display will stop flashing. The red warning lamp goes out when the temperature inside the freezer again falls below -11°C .

Find out what caused the alarm. See the chapter "Something not working".



Temperature memory

The temperature memory shows when an alarm has been triggered in the cabinet.

The temperature memory operates as follows:

When the temperature inside the

freezer again falls below -11°C the audible alarm stops. The temperature display and the red warning lamp will flash to indicate that an alarm was triggered. When the alarm shut-off button is pressed, the display then displays the warmest temperature inside the cabinet during the alarm phase and the display stops flashing. By referring to the temperature display indication, it is possible to decide whether or not to discard the products inside the freezer.



At about -12°C :

Most food products can be immediately re-frozen. Ice cream is especially sensitive to temperature changes and should be consumed as soon as possible.

At -9° - -2°C :

Food products should be prepared (cooked) prior to eating or re-freezing them.

However, always check the quality of the food yourself to determine if it can be frozen or if it must be discarded.

Freezing

Press the fast freeze button approx. 24 hours prior to placing the food in the freezer.

 
You need not press the fast-freeze button when freezing smaller quantities of food during any 24-hour period.

Fast freeze is automatically switched off approx 50 hours after the button has been pressed.

Fast freeze can be discontinued by pressing the fast freeze button once again.


The yellow fast freeze lamp remains lit as long as the fast freeze button is engaged.

"A" (ACTION FREEZE) is displayed in the temperature display.



Practical advice on freezing

- When freezing products, use the top shelves.
- Do not cover the air hole on the rear wall.
- Spread out the products as much as possible to allow air to circulate between them.
- Do not place food products which are to be frozen directly against other frozen food. The heat from the unfrozen food may cause the frozen food to thaw on the surface.
- Once frozen, re-arrange the products and put them as close as possible to each other. The food will then stay cold longer in the event of a power failure.

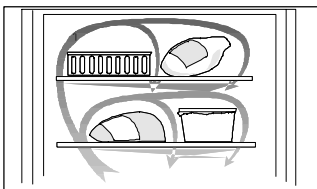

- Do not freeze too much food at the same time. The freezing capacity of the unit is indicated in the specifications section.



Check that the cabinet is operating and keeps the set temperature one day after switching it on for the first time. Only after then should the freezer be used to freeze fresh foodstuff.

Suitable storage periods

Food purchased in frozen condition: Follow the advice on the maximum storage period indicated on the packaging.

Fresh food frozen at home:

Fatty and salty food should not be kept frozen for more than three months.

Cooked food and low-fat food may be kept up to about six months. Lean food and berries can be kept for approximately one year.


Thawing

It is best to thaw foods in refrigerator. Place the foodstuff on a plate with a raised edge to prevent liquids from running out. Easily thawed foods can be placed in room temperature or in cold water. When using a microwave oven to thaw foodstuff, follow the manufacturer's instructions.

Cabinet interior

Freezer drawers


The freezer drawers make that it easy to quickly and easily find the food package you want. In order to obtain maximum space, all fittings except the top door and the lower box can be removed and filled with groceries up to the indicated loading limit.

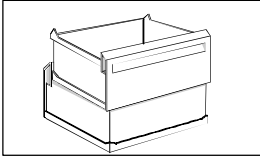

Ice cubes

Fill the ice tray to max. 3/4 since water expands as it freezes. Release the ice cubes by twisting the ice tray. If ice cubes are kept for a long time,

they will dry out and the taste is affected. Thus, throw away old ice cubes and prepare new ones when needed.

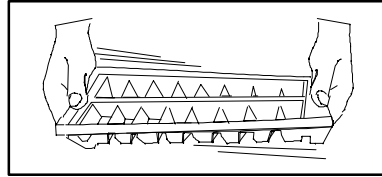

HINT and TIPS

Saving energy

- Pay careful attention to where the cabinet is placed. See the section "Installation". When installed correctly, the cabinet will consume less energy.
- Try to avoid keeping the door open for long periods, or opening the door too frequently as warm air will enter the cabinet, and cause the compressor to switch on unnecessarily often.
- Ensure there are no obstructions preventing the door from closing properly.
- Thaw frozen food in the fridge. This will ensure safer defrosting of foods and reduce the work of the refrigeration unit
- It is advisable to periodically clean the refrigeration system at the back of the appliance with a duster or vacuum cleaner.
- Food which is to be frozen (when cool) should be placed in the fridge before being transferred to the freezer.
- Avoid unnecessary frosting in the cabinet by packing all foodstuffs into airtight packages before placing them in the freezer.

- Carefully follow the advice on freezing products in the section "Using the freezer". This will prevent wasting energy.
- Do not set the temperature too low in the freezer. A suitable temperature is in the range of -18°C to -20°C .
- Defrost the freezer when the frost layer reaches a thickness of 3-5 mm.
- Make sure the door gasket is complete and always clean.

Food Storage

- To obtain the best results from your appliance, neither hot foods nor liquids which may evaporate, should be placed in the larger compartment.
- Avoid buying frozen food if you can not store it straight away. The use of an insulated container is advisable. When you arrive home place the frozen food in the freezer immediately.
- Ensure that food placed in the freezer is dated and labelled and used in date order to ensure that food is consumed at its best. Remove suspect food from you refrigerator and clean, refer to cleaning and maintenance.

Protect the environment

- Hand over the cabinet packaging and discarded fridges and freezers to a recycling station. Contact your local council or Environmental Health office for more information.
- Keep foodstuff in re-usable containers. Cut down on disposable material as much as possible.
- When cleaning the cabinet, use a

mild washing-up detergent.



- Follow the advice in the section "Saving energy"
- The door gasket and coolant used in this cabinet will not harm the ozone layer.
- All parts in the packaging can be recycled.
- The cabinet has been designed for easy dismantling and subsequent recycling.

MAINTENANCE and CLEANING

Removing the ventilation grille

The ventilation grille can be removed, e.g. to wash the grille.

Make sure the door is open when removing the ventilation grille. Unsnap the upper edge of the grille by pulling outward/downward. Then pull the grille straight out to completely remove it.

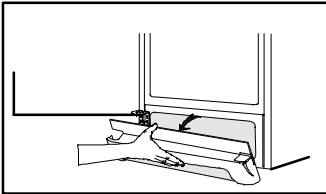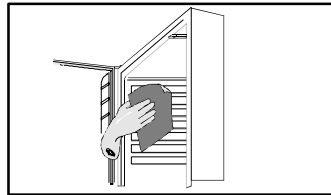

Wash the outer cabinet with warm soapy water. Remove the ventilation grille (see the section "Removing the ventilation grille") and vacuum-clean under the cabinet. Once or twice a year dust the condenser (black grille) and the compressor at the back of the appliance, with a brush or vacuum cleaner, as an accumulation of dust will affect the performance of the appliance and cause excessive electricity consumption.


Cleaning

Clean the cabinet at regular intervals.

Disconnect the appliance from electricity supply.

Clean the inside and accessories with warm water and bicarbonate of soda (5ml to 0,5 litre water) Rinse and dry thoroughly.

Regularly check the door seals and wipe clean to ensure they are clean and free from debris.

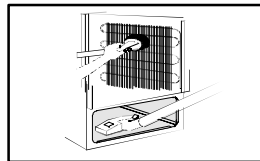


When moving the cabinet, lift it by the front edge to avoid scratching the floor.

To change the lamp

The light is switched on automatically when the door is opened. Before replacing the light bulb, disconnect the power plug from the outlet.

Press the spring together and pull the grille downward at the same time. Use a bulb of the same type, E14 socket, maximum rating of 25 W.

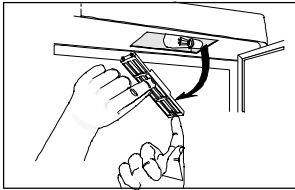

Defrosting the freezer

Defrosting is not necessary. Every 24 hours, the evaporator is defrosted automatically.

When the appliance is not in use Disconnect the appliance from electricity supply.

Empty all foods and clean the appliance, leaving the doors ajar to prevent unpleasant smells. If the cabinet will be kept on, ask somebody to check it once in a while to prevent the food inside from spoiling in case of a power failure.

SOMETHING NOT WORKING

Before contacting your local Service Force Centre check the following point:

| Problem | Possible cause / Remedy |
|---|--|
| "□" is displayed in the temperature display. | Please contact your local Electrolux Service Force Centre |
| Audible alarm + flashing red warning lamp. (It is too warm inside the freezer.) | Switch off the audible alarm by pressing the alarm off button. The audible alarm could have been triggered by: The cabinet having been recently switched on and the temperature still being too high. See the chapter "Switching on and setting the temperature". The door may have been open for so long that the 'door open' alarm was triggered. |
| It is too cold inside the freezer. | Set a warmer temperature. Action Freeze could have been switched on. The temperature display shows the highest temperature inside the cabinet. Thus a difference between the temperature indicated on the display and the (average) temperature measured in another way is normal. |

| | |
|--|---|
| <p>It is too warm inside the freezer.</p> | <p>Set a lower temperature.</p> <p>Make sure that the door is completely closed and that the insulating strip is complete and clean.</p> <p>If warm food products have been put inside the freezer, wait for a couple of hours and then check the temperature again.</p> <p>Distribute the food products to allow cold air to circulate around them.</p> |
| <p>Too much frost and ice are produced.</p> | <p>Make sure that the door is completely closed and that the insulating strip is complete and clean.</p> |
| <p>The compressor operates continuously.</p> | <p>Set a warmer temperature.</p> <p>Make sure that the door is completely closed and that the insulating strip is complete and clean.</p> <p>The temperature where the cabinet is placed is above normal room temperature.</p> |
| <p>The cabinet does not operate at all. Cooling or interior light does not operate. No indicator lamps light.</p> | <p>The cabinet is not switched on.</p> <p>Power does not reach the cabinet. (Try connecting another electrical device to the power outlet.)</p> <p>The fuse has blown.</p> <p>The power plug is not properly connected.</p> |
| <p>Sound level in cabinet is too high.</p> | <p>The refrigerating system will always produce some sounds. A pulsing sound is heard when coolant is pumped inside the cooling pipes. A ticking sound from the thermostat can be heard when the compressor switches on and off. The sound level varies depending on the operation of the cabinet.</p> <p>If you feel the sound level is incorrect: Make sure the pipes at the back of the cabinet not touch each other. Carefully bend them if they do.</p> <p>If the cushion spacers (between the cabinet wall and pipes) come loose, put them back in place again.</p> <p>Carefully follow the instructions in the chapter "Installing the cabinet".</p> |

| | |
|---------------|---|
| Power failure | Do not unnecessarily open the cabinet, except when the power cut seems to be long, in which case the food products should be moved to another cabinet that works. If the frozen products are still hard following the power cut, they may be immediately refrozen. If the food products have thawed but are still fresh, they may be used, however they should be prepared before re-freezing or eating them. |
|---------------|---|

TECHNICAL SPECIFICATION

| Model | SG293N10 | SG245N10 |
|----------------------------|----------|----------|
| Net capacity Freezer l | 293 | 245 |
| Energy consumption kWh/y | 319 | 302 |
| Freezing capacity 24 hours | 24 | 20 |
| Rising time h | 15 | 17 |
| Dimension mm | | |
| Height | 1850 | 1650 |
| Width | 660 | 660 |
| Depth | 680 | 680 |

INSTALLATION

Mains Cable

Do not remove the power cord by pulling on its lead, particularly when the product is being pulled out of its niche.

- Damage to the cord may cause a short-circuit, fire and/or electric shock.
- In the event of damage to the appliance's main cable, only an authorised service company recommended by the manufacturer or a similarly qualified person may adjust it in order to avoid shock hazard for the user.

Unpacking

Unpack the cabinet and check that it is in good condition and free of any transport damage. Notify the dealer immediately of any damage. Hand the packaging over for recycling. For more information, contact your local city office or the dealer.





Do not allow children to play with the packaging. The plastic film can cause suffocation.

Remove the transport supports

Remove the transport supports placed along the door sides.

Some models are fitted with a silencing pad under the cabinet. Do not remove this pad.

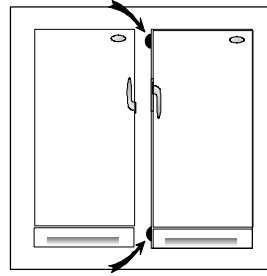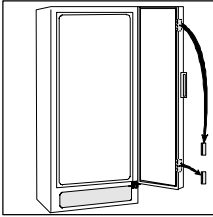

Make sure that the power plug is not squashed or damaged by the back of the product.

- A damaged power plug may overheat and cause a fire.

Do not place heavy articles or the product itself on the power cord.

- there is a risk of a short circuit and fire.

If the power plug socket is loose, do not insert the power plug.

- there is a risk of electric shock or fire.

To obtain the best performance from the cabinet, ensure:

- the cabinet is placed in a dry, cool place and is not exposed to direct sunlight.

- the cabinet is not placed close to a source of heat, e.g. a cooker or dishwasher.


- the cabinet is level. The cabinet should not lean against any wall. If necessary adjust the feet using the adjustment spanner supplied.

Cleaning

Wash the inside of the cabinet using lukewarm water, a mild washing-up detergent and a soft cloth.


Installation of distance

Assemble the attached distance on the back side of the panel according to the illustration.

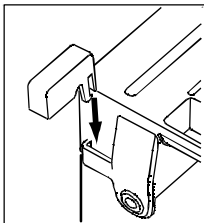

Installing the cabinet


When two appliances are placed beside each other, the spacers enclosed in the plastic wrapping should be glued between the appliances. As shown in the illustration.

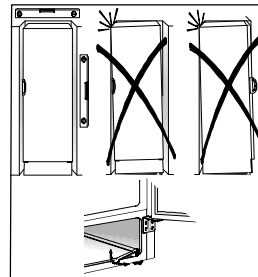

· there is good air circulation around the cabinet and that the air channels below and behind the cabinet are not blocked. The ventilation space above the cabinet must be at least 4 cm. The ventilation space can either be

- directly above the cabinet, or
- behind and above the top cupboard.

In this case, the space behind the cupboard must be at least 50 mm deep.

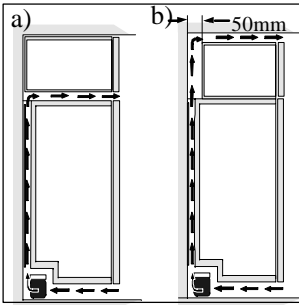

Cabinet is placed at a location whose ambient temperature corresponds to the climate classification*, for which the appliance is designed.

* See on the rating plate on the inside of the appliance.

The following table shows which ambient temperature is correct for each climate classification.


| Climate classification | for an ambient temperature of |
|------------------------|-------------------------------|
| SN | +10°C to +32°C |
| N | +16°C to +32°C |
| ST | +18°C to +38°C |
| T | +18°C to +43°C |

If the cabinet is placed in a corner and the side with the hinges facing the wall, the distance between the wall and the cabinet must be at least 10 mm to allow the door to open enough so that the baskets can be removed.

The power plug must be accessible after installation of the cabinet.


Door Reversal

- Close the cabinet and remove the plug from the electrical socket.
- Remove the ventilation grille. There is a part on the grille that can be removed. Remove and reposition it on the other side.
- Put the cabinet on a wooden board when it is laid down. Later, when raising the cabinet, it will be easier to grip under the cabinet thanks to the board.

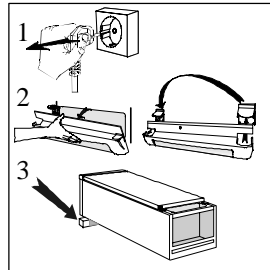


4. On the upper part of the cabinet.
Put the hinge pin on the other side.

5. On the lower part of the cabinet.
a. Unscrew the hinge.
b. Remove the door-closing fittings from the hinge and put the hinge pin on the other side. Then attach the supplied door-closing fitting.

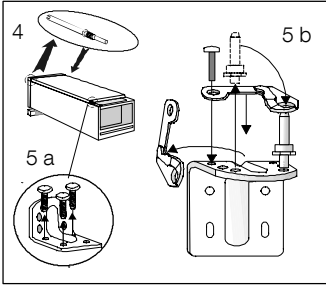

6. a. Remove the door-closing fitting from the bottom of the door.
b. Then secure the supplied door-closing fitting on the other side.
c. Secure the lower hinge.

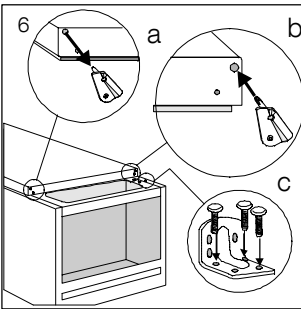


Remove any play in the door by adjusting the height of the lower hinge with the supplied spanner. Secure with the lock-nut.

Raise the cabinet and replace the ventilation grille.

7. To transfer the handle.
Unscrew the screws. Fit the handle

onto the opposite side by turning it one half circle. Press the supplied plastic plugs into the holes to which the handle was previously fitted.

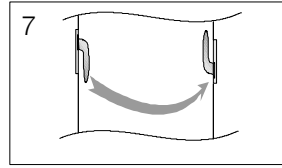

Put the cabinet in position. Check that the appliance is level. See the section "Positioning the cabinet".

Electrical connection

Connect the cabinet to a grounded electrical outlet.

Voltage: 230 V.

Fuse: 10 A.

Refer to the rating plate on the left inside the cabinet.

KUNDENDIENST



Servicestellen

5506 Mägenwil/Zürich
Industriestr. 10

9000 St. Gallen
Zürcherstrasse 204 e

4127 Birsfelden
Hauptstrasse 52

6032 Emmen
Buholzstrasse 1

7000 Chur
Comercialstrasse 19

3018 Bern
Morgenstrasse 131

Points de service

1028 Prévèrenge
Le Trési 6

Servizio dopo vendita

6916 Grancia
Zona Industriale E



Ersatzteilverkauf

5506 Mägenwil
Industriestrasse 10
Tel. 0848 848 023

Point de vente de rechange

5506 Mägenwil
Industriestrasse 10
Tel. 0848 848 023

Vendita pezzi di ricambio

5506 Mägenwil
Industriestrasse 10
Tel. 0848 848 023

Fachberatung / Verkauf

8048 Zürich
Badenerstrasse 587
Tel. 044 405 81 11

Demonstration / Vente

8048 Zürich
Badenerstrasse 587
Tel. 044 405 81 11

Consulente (cucina) / Vendita

8048 Zürich
Badenerstrasse 587
Tel. 044 405 81 11

Garantie

Für jedes Produkt gewähren wir ab Verkauf bzw. Lieferdatum an den Endverbraucher eine Garantie von 2 Jahren. (Ausweis durch Garantieschein, Faktura oder Verkaufsbeleg). Die Garantieleistung umfasst die Kosten für Material, Arbeits- und Reisezeit.

Garantie

Nous octroyons sur chaque produit 2 ans de garantie à partir de la date de livraison ou de la mise en service au consommateur (documenté au moyen d'une facture, d'un bon de garantie ou d'un justificatif d'achat). Notre garantie couvre les frais de mains d'œuvres et de déplacement, ainsi que les pièces de rechange.

Garanzia

Per ogni prodotto concediamo una garanzia di 2 anni a partire dalla data di consegna o dalla sua messa in funzione. (fa stato la data della fattura, del certificato di garanzia o dello scontrino d'acquisto). Nella garanzia sono comprese le spese di manodopera, di viaggio e del materiale.

Die Garantieleistung entfällt bei Nichtbeachtung der Gebrauchsanweisung und Betriebsvorschriften, unsachgerechter Installation, sowie bei Beschädigung durch äussere Einflüsse, höhere Gewalt, Eingriffe Dritter und Verwendung von Nicht-Original Teilen.

Les conditions de garantie ne sont pas valables en cas d'intervention d'un tiers non autorisé, de l'emploi de pièces de rechange non originales, d'erreurs de maniement ou d'installation dues à l'inobservation du mode d'emploi, et pour des dommages causés par des influences extérieures ou de force majeure.

Dalla copertura sono esclusi il logoramento ed i danni causati da agenti esterni, intervento di terzi, utilizzo di ricambi non originali o dalla inosservanza delle prescrizioni d'installazione ed istruzioni per l'uso.

EUROPEAN GUARANTEE

This appliance is guaranteed by Electrolux in each of the countries listed at the back of this user manual, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of the countries listed, the appliance guarantee will move with you subject to the following qualifications:-

- The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by the seller of the appliance.
- The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your new country of residence for this particular model or range of appliances.
- The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user.
- The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes.
- The appliance is installed in accordance with all relevant regulations in force within your new country of residence.

The provisions of this European Guarantee do not affect any of the rights granted to you by law.

www.electrolux.com

|  |  |  |
|---|---|---|
| Albania | +35 5 4 261 450 | Rr. Pjeter Bogdani Nr. 7 Tirane |
| Belgique/België/ Belgien | +32 2 363 04 44 | Bergensesteenweg 719, 1502 Lembeek |
| Česká republika | +420 2 61 12 61 12 | Budějovická 3, Praha 4, 140 21 |
| Danmark | +45 70 11 74 00 | Sjællandsgade 2, 7000 Fredericia |
| Deutschland | +49 180 32 26 622 | Muggenhofer Str. 135, 90429 Nürnberg |
| Eesti | +37 2 66 50 030 | Mustamäe tee 24, 10621 Tallinn |
| España | +34 902 11 63 88 | Carretera M-300, Km. 29,900 Alcalá de Henares Madrid |
| France | www.electrolux.fr | |

|  |  |  |
|--|---|---|
| Great Britain | +44 8705 929 929 | Addington Way, Luton, Bedfordshire LU4 9QQ |
| Hellas | +30 23 10 56 19 70 | 4 Limnou Str., 54627 Thessaloniki |
| Hrvatska | +385 1 63 23 338 | Slavonska avenija 3, 10000 Zagreb |
| Ireland | +353 1 40 90 753 | Long Mile Road Dublin 12 |
| Italia | +39 (0) 434 558500 | C.so Lino Zanussi, 26 - 33080 Porcia (PN) |
| Latvija | +37 17 84 59 34 | Kr. Barona iela 130/2, LV-1012, Riga |
| Lietuva | +370 5 2780609 | Verkių 29, LT-09108 Vilnius |
| Luxembourg | +35 2 42 43 13 01 | Rue de Bitbourg, 7, L-1273 Hamm |
| Magyarország | +36 1 252 1773 | H-1142 Budapest XIV, Erzsébet királyné útja 87 |
| Nederland | +31 17 24 68 300 | Vennootsweg 1, 2404 CG - Alphen aan den Rijn |
| Norge | +47 81 5 30 222 | Risløkkvn. 2 , 0508 Oslo |
| Österreich | +43 18 66 400 | Herziggasse 9, 1230 Wien |
| Polska | +48 22 43 47 300 | ul. Kolejowa 5/7, Warsaw |
| Portugal | +35 12 14 40 39 39 | Quinta da Fonte - Edifício Gonçalves Zarco - Q 35 2774 - 518 Paço de Arcos |
| Romania | +40 21 451 20 30 | Str. Garii Progresului 2, S4, 040671 RO |
| Schweiz/Suisse/ Svizzera | +41 62 88 99 111 | Industriestrasse 10, CH-5506 Mägenwil |
| Slovenija | +38 61 24 25 731 | Electrolux Ljubljana, d.o.o. Tržaška 132, 1000 Ljubljana |
| Slovensko | +421 2 43 33 43 22 | Electrolux Slovakia s.r.o., Electrolux Domáce spotrebiče SK, Seberínho 1, 821 03 Bratislava |
| Suomi | +35 8 26 22 33 00 | Konepajannranta 4, 28100 Pori |
| Sverige | +46 (0)771 76 76 76 | Electrolux Service, S:t Göransgatan 143, S-105 45 Stockholm |
| Türkiye | +90 21 22 93 10 25 | Tarlabaşı caddesi no : 35 Taksim Istanbul |
| Россия | +7 495 9377837 | 129090 Москва, Олимпийский проспект, 16, БЦ „Олимпик“ |

www.electrolux.com