


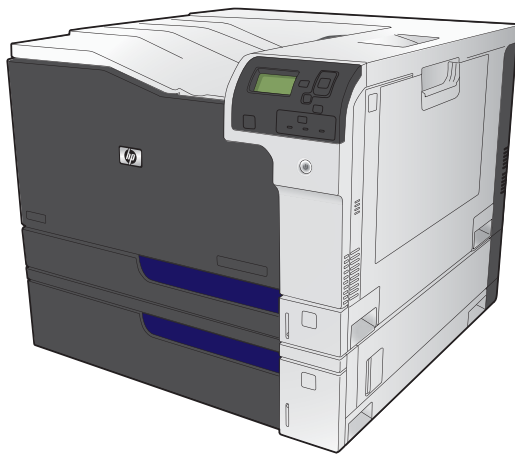

Color LaserJet Enterprise M750

Service Manual



M750n



M750dn



HP Color LaserJet Enterprise M750 Printer Series

Service Manual

Copyright and License

© 2013 Copyright Hewlett-Packard
Development Company, L.P.

Reproduction, adaptation, or translation
without prior written permission is prohibited,
except as allowed under the copyright laws.

The information contained herein is subject to
change without notice.

The only warranties for HP products and
services are set forth in the express warranty
statements accompanying such products and
services. Nothing herein should be construed
as constituting an additional warranty. HP shall
not be liable for technical or editorial errors or
omissions contained herein.

Edition 1, 11/2013

Part number: D3L08-90966

Trademark Credits

ENERGY STAR and the ENERGY STAR mark are
registered U.S. marks.

Conventions used in this guide

 **TIP:** Tips provide helpful hints or shortcuts.

 **NOTE:** Notes provide important information to explain a concept or to complete a task.

 **CAUTION:** Cautions indicate procedures that you should follow to avoid losing data or damaging the product.

 **WARNING!** Warnings alert you to specific procedures that you should follow to avoid personal injury, catastrophic loss of data, or extensive damage to the product.

Table of contents

1 Theory of operation	1
Basic operation	2
Major product systems	2
Product block diagram	2
Sequence of operation	3
Normal sequence of operation	3
Formatter-control system	5
Sleep mode	5
Input/output	5
CPU	6
Memory	6
Firmware	6
Nonvolatile memory	6
PJM overview	6
PML	6
Control panel	6
Engine-control system	7
DC controller	8
Motors	11
Fans	13
Fuser-control circuit	14
Fuser temperature control	15
Fuser protective function	16
Fuser failure detection	17
Low-voltage power supply	18
Overcurrent/overvoltage protection	20
High-voltage power supply	21
Laser scanner system	23
Laser failure detection	23
Image-formation system	25
Electrophotographic process	25
Image formation process	27

Latent-image formation block	28
Pre-exposure	28
Primary charging	28
Laser beam exposure	29
Developing block	30
Transfer block	31
Primary transfer	31
Secondary transfer	31
Separation	32
Fusing block	32
ITB cleaning block	33
Drum cleaning block	33
Print cartridges	34
Memory tag	35
Cartridge presence detection	35
Toner level detection	35
Cartridge life detection	35
Developing unit engagement and disengagement control	35
ITB unit	37
Primary transfer roller engagement and disengagement control	38
ITB unit presence detection	39
ITB cleaning mechanism	39
Calibration	40
Color-misregistration control	40
Environment change control	41
Image stabilization control	42
Image density control (DMAX)	42
Image halftone control (DHALF)	42
Pickup, feed, and delivery system	43
Photo sensors	45
Motors and solenoids	46
Pickup and feed block	46
Tray 2 cassette pickup	46
Tray 2 cassette multiple-feed prevention	47
Tray 2 cassette media-size detection and Tray 2 cassette-presence detection	49
Tray 2 cassette lift-up operation	50
Cassette media-presence detection	52
Tray 1 (MP tray) paper pickup	52
Tray 1 (MP tray) last-paper detection	53
Paper feed	54
Skew-feed prevention	55

Media detection	57
Feed-speed control	58
Fusing and delivery block	58
Loop control	58
Pressure roller pressurization and depressurization control	59
Output bin full detection	61
Duplex block (duplex models only)	62
Duplex reverse and duplex feed control	62
Duplex operation	63
Jam detection	64
Paper feeder	67
Paper-feeder motors	68
Paper-feeder paper pickup and feed	69
Cassette media-size detection and cassette-presence detection	69
Paper-feeder cassette lift operation	70
Paper-feeder jam detection	71
Optional 3X500-sheet paper deck	72
Motor control	74
Pickup-and-feed operation	75
Cassette media-size detection and cassette-presence detection	76
Cassette lift-up operation	77
Jam detection	78
2 Removal and replacement	81
Removal and replacement strategy	82
Cautions during removal and replacement	82
Required tools	83
Types of screws	83
Service approach	83
Before performing service	84
After performing service	84
Parts removal order	84
Removal and replacement procedures	85
Print cartridges	85
Toner-collection unit	88
Fuser	90
Reset the New Fuser Kit setting at the control panel	90
Pickup roller (Tray 1)	91
Separation pad (Tray 1)	92
Separation roller assembly (Tray 2)	94
Pickup roller (Tray 2)	95

Pickup roller, separation roller, and feed roller (1 x 500-sheet and 3 x 500-sheet paper feeders)	96
Secondary transfer roller	97
Intermediate transfer belt (ITB)	98
Reset the New Transfer Kit setting at the control panel	99
Formatter PCA	100
Hard Drive	102
Remove the encrypted HDD	102
Remove the solid-state module	104
Covers	106
Identification and location	106
Right-front cover and control-panel assembly	108
Left cover	110
Rear cover	111
Remove the rear cover	111
Toner collection unit access door	112
Right-rear cover	114
Reinstall the right-rear cover	114
Top cover	115
Remove the top cover	115
Front-door assembly	117
Right-door assembly	120
Main assemblies	123
Formatter case	123
Remove the formatter case	123
Laser/scanner assembly	125
Remove the laser/scanner assembly	125
Paper pickup assembly	128
Remove the paper pickup assembly	128
Reinstall the paper pickup assembly	131
Registration sensor assembly	135
Remove the registration sensor assembly	135
Lifter-drive assembly	138
Remove the lifter-drive assembly	138
ITB front guide assembly	141
ITB rear guide assembly	144
Residual toner full sensor	145
Remove the residual toner full sensor	145
Main drive assembly	150
Remove the main drive assembly	150
Install the main drive assembly	159

Fuser drive assembly	164
Remove the fuser drive assembly	164
Install a replacement fuser drive assembly	166
Fuser gear assembly	168
Remove the fuser gear assembly	168
Install a replacement fuser gear assembly	173
Paper delivery assembly	176
Remove the delivery assembly	176
Reinstall the paper delivery assembly	177
Duplex drive assembly (duplex models)	179
Remove the duplex-drive assembly	179
Delivery drive assembly (simplex models)	181
Remove the delivery drive assembly	181
Residual-toner-feed assembly	182
Remove the residual-toner-feed assembly	182
ITB motor (M1)	184
Remove the ITB motor	184
Drum motor (M2)	186
Remove the drum motor	186
Developing motor (M3)	187
Remove the developing motor	187
Fuser motor (M4)	188
Remove the fuser motor	188
Developing-disengagement motor (M6)	189
Remove the developing-disengagement motor	189
Power-supply fan (FM1)	190
Remove the power-supply fan	190
Fuser fan (FM2)	192
Remove the fuser fan	192
Formatter fan (FM3) and ICB PCA	194
Remove the formatter fan and ICB PCA	194
DC controller PCA	197
Remove the DC controller PCA	197
Low-voltage power supply	199
Remove the low-voltage power supply	199
Imaging (developing) high-voltage power supply	202
Remove the imaging (developing) high-voltage power supply	202
First transfer high-voltage power supply	203
Remove the first transfer high-voltage power supply	203
Second transfer high-voltage power supply	205
Remove the second transfer high-voltage power supply	205

Driver PCA	207
Remove the driver PCA	207
Power switch PCA	209
Remove the power switch PCA	209
Environmental sensor	210
Remove the environmental sensor	210
1 x 500-sheet paper feeder assembly	211
1 x 500 rear cover	211
1 x 500 left cover	212
1 x 500 right-front cover	214
1 x 500 front-upper cover	215
1 x 500 right door	216
1 x 500 right-lower cover	218
1 x 500 pickup assembly	219
1 x 500 lifter-drive assembly	222
1 x 500 pickup motor	223
1 x 500 driver PCA	224
3 x 500-sheet paper feeder (optional accessory)	225
3 x 500 rear cover	225
3 x 500 right and left cassette rails	226
3 x 500 paper deck controller PCAs	227
3 x 500 paper deck lifter-drive assembly	228
3 x 500 paper deck pickup motor	229
3 x 500 front-lower cover	230
3 x 500 left cover	231
3 x 500 right-corner cover	232
3 x 500 front-upper cover	233
3 x 500 right-door assembly	234
3 x 500 right-lower cover 1	236
3 x 500 right-lower cover 2	237
3 x 500 left-lower cover	238
3 x 500 rear-lower cover	239
Remove the 3 x 500 rear-lower cover	239
3 x 500 paper deck pickup assembly	240
Remove the 3 x 500 paper deck pickup assembly	240

3 Solve problems	243
Solve problems checklist	244
Menu map	246
Current settings pages	246
Control panel menus	247

Sign In menu	247
Retrieve Job From USB menu	247
Retrieve Job From Device Memory menu	247
Supplies menu	248
Trays menu	250
Administration menu	251
Reports menu	251
General Settings menu	251
General Print Settings menu	255
Default Print Options menu	256
Display Settings menu	258
Manage Supplies menu	259
Manage Trays menu	260
Network Settings menu	261
Troubleshooting menu	264
Device Maintenance menu	265
Backup/Restore menu	265
Calibration/Cleaning menu	266
USB Firmware Upgrade menu	266
Service menu	267
Troubleshooting process	268
Determine the problem source	268
Pre-troubleshooting checklist	268
Troubleshooting flowchart	269
Power subsystem	271
Power-on checks	271
Power-on troubleshooting overview	271
Tools for troubleshooting	273
Component diagnostics	273
LED diagnostics	273
Understand lights on the formatter	273
Engine diagnostics	276
Defeating interlocks	277
Disable cartridge check	278
Engine test button	279
Paper-path test	279
Manual sensor test	280
Front-door opening/closing switch (PS14)	281
Right-door opening/closing sensor (PS15)	282
TOP (top-of-page) sensor (PS5)	284
Fuser loop sensors 1 and 2 (PS7 and PS8)	285

Fuser pressure-release sensor (PS9)	286
Fuser output sensor (PS6)	287
Developer alienation sensor (PS11)	288
ITB alienation switch (SW5)	289
Tray/Bin manual sensor test	290
Tray 1 paper sensor (PS2)	292
Tray 2 paper present sensor (PS1)	293
Tray 2 paper surface sensor (PS4)	294
Tray 2 paper size switches (SW7 and SW8)	295
Tray 3 paper sensor (SR3)	296
Tray 3 paper surface sensor (SR2)	297
Tray 3 paper size sensors (SW2 and SW3)	297
Tray 3 feed sensor (SR1)	299
Tray 3 door opening/closing sensor (SW1)	300
Tray 4 paper sensor (SR3)	301
Tray 4 paper surface sensor (SR2)	301
Tray 4 paper size sensors (SW2 and SW3)	301
Tray 4 feed sensor (SR1)	301
Tray 4 door opening/closing door sensor (SW1)	301
Tray 5 paper sensor (SR83)	302
Tray 5 paper surface sensor (SR82)	302
Tray 5 paper size sensors (SW82 and SW83)	302
Tray 5 feed sensor (SR81)	302
Tray 5 door opening/closing sensor (SW1)	302
Tray 6 paper sensor (SR93)	302
Tray 6 paper surface sensor (SR92)	302
Tray 6 paper size sensors (SW92 and SW93)	302
Tray 6 feed sensor (SR91)	302
Tray 6 door opening/closing sensor (SW1)	302
Output-bin-full sensor (PS10)	303
Paper-path sensors test	303
Print/stop test	304
Component tests	304
Component test (special-mode test)	304
Additional component tests	307
Diagrams	309
Block diagrams	309
Plug/jack locations	311
Location of connectors	312
DC controller connections	312
Product connections	314

Locations of major components	321
General timing charts	328
General circuit diagram	330
Internal print-quality test pages	334
Print-quality-troubleshooting pages	334
Diagnostics page	337
Configuration page	339
Configuration page	339
HP embedded Jetdirect page	341
Finding important information on the configuration pages	342
Color-band test	342
Print quality troubleshooting tools	344
Repetitive image-defect ruler	344
Calibrate the product	344
Control-panel menus	346
Administration menu	346
Reports menu	346
General Settings menu	348
General Print Settings menu	361
Default Print Options menu	363
Display Settings menu	365
Manage Supplies menu	366
Manage Trays menu	369
Network Settings menu	370
Troubleshooting menu	381
Device Maintenance menu	386
Backup/Restore menu	386
Calibration/Cleaning menu	387
USB Firmware Upgrade menu	389
Service menu	389
Interpret control-panel messages and event log entries	390
Control-panel message types	390
Control-panel messages and event log entries	390
10.0X.Y0 Supply memory error	390
10.22.50	391
10.22.51	391
10.22.52	391
10.23.50	392
10.23.51	392
10.23.52	392
10.23.70 Printing past very low	392

10.39.50 New Document Feeder Kit	393
10.39.53	393
10.39.55 Clean Document Feeder Rollers	393
10.39.56	393
10.39.60 Document Feeder Kit low	393
10.39.69 Document Feeder Kit very low	393
10.39.70 Scanning past very low	394
10.39.71 Document Feeder has stopped	394
10.XX.34 Used supply in use	394
10.XX.40 Genuine HP supplies installed	394
10.XX.41 Unsupported supply in use	395
10.XX.70 Printing past very low	395
10.YY.15 Install <supply>	396
10.YY.25 Wrong cartridge in <color> slot	397
10.YY.35 Incompatible <supply>	397
11.00.YY Internal clock error	398
13.00.00	398
13.A3.D3	398
13.A3.D4	399
13.A3.D5	399
13.A3.D6	400
13.A3.FF	400
13.A4.D4	400
13.A4.D5	401
13.A4.D6	402
13.A4.FF	402
13.A5.A5	402
13.A5.D6	403
13.A5.FF	403
13.A6.D6	403
13.A6.FF	404
13.AA.EE	404
13.AB.EE	404
13.B2.AX	405
13.B2.DX	406
13.B2.FF	407
13.B4.FF	407
13.B9.AZ	408
13.B9.CZ	409
13.B9.DZ	411
13.B9.FF	412

13.B9.YZ Fuser Area Jam	412
13.BA.EE	414
13.BB.EE	414
13.E1.DZ	414
13.FF.FF	416
20.00.00 Insufficient memory: <Device> To continue, touch "OK"	416
21.00.00 Page too complex To continue, touch "OK"	416
32.1C.XX	416
33.02.01	421
33.02.02	421
33.02.03	422
33.03.01	422
33.03.02	422
40.00.01 USB I/O buffer overflow To continue, touch "OK"	422
40.00.02 Embedded I/O buffer overflow To continue, touch "OK"	422
40.00.04 Unsupported USB accessory detected To continue, touch "OK"	423
40.00.05 Embedded I/O bad transmission To continue, touch "OK"	423
40.08.0X USB storage accessory removed	423
40.0X.05 USB storage accessory removed	423
41.01.YZ	423
41.02.00 Error	425
41.02.0Z Error	425
41.03.YZ Unexpected size in Tray <X>	425
41.03.YZ Unexpected size in Tray <X> To use another tray, touch "Options"	426
41.04.YZ	427
41.05.YZ Unexpected type in Tray <X>	428
41.05.YZ Unexpected type in Tray <X> To use another tray, touch "Options"	429
41.07.YZ Error To continue, touch "OK"	430
41.WX.YZ Error To use another tray, touch "Options"	432
42.XX.YY	433
47.00.00	433
47.00.XX	433
47.01.XX	433
47.02.XX	434
47.03.XX	434
47.04.XX	434
47.05.00	434
47.06.XX	434

47.WX.YZ Printer calibration failed To continue, touch “OK”	435
48.01.XX Error	436
49.XX.YY Error To continue turn off then on	436
50.WX.YZ Fuser error To continue turn off then on	437
51.00.YY Error To continue turn off then on	440
52.00.00 or 52.20.00 To continue turn off then on	441
54.0X.07	441
54.11.05 or 54.12.05	441
54.XX.YY Error	442
55.XX.YY DC controller error To continue turn off then on	443
56.00.01 Illegal Input Printer Error To continue turn off then on	443
56.00.02 Selected media output bin unavailable	444
56.00.03 Media input path operation error	444
57.00.0Y Error To continue turn off then on	444
58.00.02 environmental sensor malfunction	445
58.00.04 Error To continue turn off then on	445
59.00.YY Error To continue turn off then on	446
59.0X.50 Error To continue turn off then on	447
59.0X.60 Error To continue turn off then on	447
59.0X.70 Error To continue turn off then on	448
59.0X.80 Error To continue turn off then on	448
60.00.0Y Tray <Y> lifting error	449
60.10.0Y Media input source <Y> pickup mechanism malfunction	450
61.00.01	450
62.00.00 No system To continue turn off then on	451
69.11.YY Error To continue, touch “OK”	451
70.00.00 Error To continue turn off then on	451
80.0X.YY Embedded Jetdirect Error	451
81.WX.00 Wireless Network Error To continue turn off then on	453
81.WX.YZ Embedded Jetdirect Error To continue turn off then on	453
98.00.0X Corrupt data in X volume	454
99.00.01 Upgrade not performed file is corrupt	454
99.00.02 Upgrade not performed timeout during receive	454
99.00.03 Upgrade not performed error writing to disk	454
99.00.04 Upgrade not performed timeout during receive	455
99.00.05 Upgrade not performed timeout during receive	455
99.00.06 Upgrade not performed error reading upgrade	455
99.00.07 Upgrade not performed error reading upgrade	455
99.00.08 Upgrade not performed error reading upgrade	456
99.00.09 Upgrade canceled by user	456
99.00.10 Upgrade canceled by user	456

99.00.11 Upgrade canceled by user	456
99.00.12 Upgrade not performed the file is invalid	456
99.00.13 Upgrade not performed the file is invalid	457
99.00.14 Upgrade not performed the file is invalid	457
99.00.2X	457
99.01.XX	458
99.02.01	458
99.02.09	458
99.05.56	458
99.09.60 Unsupported disk	459
99.09.61 Unsupported disk	459
99.09.62 Unknown disk	459
99.09.63 Incorrect disk	459
99.09.64 Disk malfunction	460
99.09.65 Disk data error	460
99.09.66 No disk installed	460
99.09.67 Disk is not bootable please download firmware	460
99.09.68	461
99.XX.YY	461
<Binname> full Remove all paper from bin	461
<Supply> almost full	461
<Supply> low OR Supplies low	461
<Supply> very low OR Supplies very low	462
<Tray X> lifting	463
[File System] device failure To clear press OK	463
[File System] file operation failed To clear press OK	463
[File System] file system is full To clear press OK	464
[File System] is not initialized	464
[File System] is write protected	464
Accept bad signature	464
Bad optional tray connection	464
Calibration reset pending	465
Canceling	465
Canceling <jobname>	465
Checking engine	465
Checking paper path	465
Chosen personality not available To continue, touch "OK"	465
Cleaning do not grab paper	466
Cleaning... ..	466
Clearing event log	466
Clearing paper path	466

Close front door	466
Close lower right door	467
Close middle right door	467
Close right door	467
Close upper right door For help press ?	467
Cooling device	468
Data received To print last page, press OK	468
Event log is empty	468
Expected drive missing	469
HP Secure Hard Drive disabled	469
Incompatible <supply>	469
Incompatible supplies	469
Initializing... ..	470
Install <supply>	470
Install <supply> Close rear door	470
Install Fuser Unit	471
Install supplies	471
Install Transfer Unit	471
Internal disk not functional	471
Internal disk spinning up	472
Load Tray <X>: [Type], [Size]	472
Load Tray <X>: [Type], [Size] To use another tray, touch OK	472
Loading program <XX>	473
Manually feed output stack Then touch "OK" to print second sides	473
Manually feed: [Type], [Size] To continue, touch "OK"	473
Manually feed: [Type], [Size] To use another tray, touch OK	473
Moving solenoid	474
Moving solenoid and motor	474
No job to cancel	474
Paused	474
Performing Color Band Test... ..	474
Performing Paper Path Test... ..	475
Please wait... ..	475
Printing CMYK samples... ..	475
Printing Color Usage Log... ..	475
Printing Configuration... ..	475
Printing Demo Page... ..	475
Printing Diagnostics Page... ..	476
Printing Engine Test... ..	476
Printing Event Log... ..	476
Printing File Directory... ..	476

Printing Font List...	476
Printing Fuser Test Page...	476
Printing Help Page...	477
Printing Menu Map...	477
Printing PQ Troubleshooting...	477
Printing Registration Page...	477
Printing RGB Samples...	477
Printing stopped	477
Printing Supplies Status page...	478
Printing Usage Page...	478
Processing duplex job... Do not grab paper until job completes	478
Processing job from tray <X>... Do not grab paper until job completes	478
Processing... <filename>	478
Processing... copy <X> of <Y>	478
Ready	479
Ready <IP Address>	479
Remove all toner cartridges	479
Remove at least one toner cartridge	479
Remove shipping lock from Tray 2	479
Replace <supply>	480
Replace supplies	480
Restore Factory Settings	481
Restricted from printing in color	481
Rotating <color> motor	481
Rotating Motor	482
Size mismatch in Tray <X>	482
Supplies in wrong positions	482
Tray <X> empty: [Type], [Size]	483
Tray <X> open	483
Tray <X> overfilled	484
Troubleshooting	484
Type mismatch Tray <X>	484
Unsupported drive installed To continue, touch "OK"	485
Unsupported supply in use OR Unsupported supply installed To continue, touch "OK"	485
Unsupported tray configuration	485
Unsupported USB accessory detected Remove USB accessory	486
USB accessory needs too much power Remove USB and turn off then on	486
USB accessory not functional	486
Used supply installed To continue, touch "OK" OR Used supply in use	486

Wrong cartridge in <color> slot	487
Event log messages	488
Print or view an event log	489
Clear an event log	489
Clear jams	490
Common causes of jams	490
Jam locations	491
Clear jams in the upper-right door	496
Clear jams in the lower-right door	498
Clear jams in Tray 1	499
Clear jams from Tray 2, Tray 3, or an optional tray	501
Clear jams in the output bin area	502
Jam causes and solutions	503
Jams in the output bin	503
Jams in the fuser and transfer area	503
Jams in the duplex area (duplex models only)	504
Jams in Tray 1, Tray 2 and internal paper path	505
Jams in Tray 3, 4, 5, and 6	507
Change jam recovery	509
Solve paper-handling problems	510
Product feeds multiple sheets	510
Product feeds incorrect page size	510
Product pulls from incorrect tray	510
Paper does not feed automatically	511
Paper does not feed from Tray 2, 3, 4, 5, or 6	511
Output is curled or wrinkled	512
Product will not duplex or duplexes incorrectly	512
Use manual print modes	514
Solve image-quality problems	517
Print quality examples	517
Clean the product	523
Clean the paper path	523
Solve performance problems	524
Solve connectivity problems	525
Solve direct-connect problems	525
Solve network problems	525
Service mode functions	526
Service menu	526
Product resets	527
Restore factory-set defaults	527
Preboot menu options	528

Product updates	535
Determine the installed revision of firmware	535
Perform a firmware upgrade	535
Embedded Web Server	535
USB storage device (Preboot menu)	536
USB storage device (control-panel menu)	537

4 Parts and diagrams 539

Order parts by authorized service providers	540
Order parts, accessories, and supplies	540
Related documentation and software	540
Supplies part numbers	541
Customer self repair parts	541
Service replacement parts	543
Accessories part numbers	545
How to use the parts lists and diagrams	546
Assembly locations	547
External covers, panels, and doors	548
Right door assembly	550
Internal components (1 of 9)	552
Internal components (2 of 9)	554
Internal components (3 of 9)	556
Internal components (4 of 9)	558
Internal components (5 of 9)	560
Internal components (6 of 9)	562
Internal components (7 of 9)	564
Internal components (8 of 9)	566
Internal components (9 of 9)	568
1x250 cassette	570
Paper pick-up assembly	572
Paper delivery assembly	574
Printed circuit assemblies	576
1x500 paper feeder	578
1x500PF external components	578
1x500PF internal components	580
1x500PF PCA	582
3x500 paper feeder	584
3x500PF external components	584
3x500PF internal components	586
3x500PF cassette	588
3x500PF PCAs	590

Alphabetical parts list	592
Numerical parts list	604

Appendix A Service and support 617

Hewlett-Packard limited warranty statement	618
HP's Premium Protection Warranty: LaserJet toner cartridge limited warranty statement	619
Color LaserJet Fuser Kit, Transfer Kit, and Roller Kit Limited Warranty Statement	620
Data stored on the toner cartridge	621
End User License Agreement	622
Customer self-repair warranty service	624
Customer support	625

Appendix B Product specifications 627

Physical specifications	628
Power consumption, electrical specifications, and acoustic emissions	628
Environmental specifications	628

Appendix C Regulatory information 629

FCC regulations	630
Environmental product stewardship program	631
Protecting the environment	631
Ozone production	631
Power consumption	631
Toner consumption	631
Paper use	631
Plastics	631
HP LaserJet print supplies	631
Return and recycling instructions	632
United States and Puerto Rico	632
Multiple returns (more than one cartridge)	632
Single returns	632
Shipping	632
Non-U.S. returns	633
Paper	633
Material restrictions	633
Disposal of waste equipment by users	634
Electronic hardware recycling	634
Chemical substances	634
Material Safety Data Sheet (MSDS)	634
For more information	634

Declaration of Conformity 635

Certificate of Volatility 637

Safety statements 639

 Laser safety 639

 Canadian DOC regulations 639

 VCCI statement (Japan) 639

 Power cord instructions 639

 EMC statement (China) 639

 Power cord statement (Japan) 640

 EMC statement (Korea) 640

 EMI statement (Taiwan) 640

 Laser statement for Finland 640

 GS statement (Germany) 642

 Substances Table (China) 642

 Restriction on Hazardous Substances statement (Turkey) 642

 Restriction on Hazardous Substances statement (Ukraine) 642

 Eurasian Conformity (Belarus, Kazakhstan, Russia) 643

Index 645

