


MOTO Q™ 9m Home Screens

a Multimedia Home Screen and a Standard






 


Standard Home Screen

One-touch access for all messaging needs.


 


To switch between the two home screens, press and hold the home screen toggle key  found on the keyboard.

Screen Icons






-  Launch Microsoft® Internet Explorer® mobile for a PC-like web experience¹
-  View and send text, MMS or email messages¹
-  Go to V CAST to get music¹
-  View thumbnails of pictures and videos
-  Activate the camera to take pictures and videos
-  Launch Microsoft® Windows Media® to play and manage music and videos

Tip: Change icons/shortcuts with the Personalize My MOTO Q feature.


MOTO Q™ 9m Quick Tips

- To lock your keyboard, press  then . To unlock, press Unlock and then .
- To access your Quick List options, press and hold .
- To conserve battery life on your phone:
 - Close any unused programs by pressing Start > System Tools > Task Manager > select program to kill > Menu > Kill
 - Reduce backlight timeout by pressing Start > Settings > Power Management > Backlight Timeout on Battery
 - Turn off Bluetooth® power when you are not using it by pressing Start > Bluetooth > Bluetooth Manager > Settings > Change status to Bluetooth OFF

Standard Home Screen Tips

- Use the home screen toggle key  if you want to return to the multimedia home screen
- Select  from keyboard for one touch access to email, text and MMS messages¹
- Use the CAPS  key to enter capital letters
- Press Fn  then CAPS  to view a list of alternative characters

Multimedia Home Screen Tips

- Use the home screen toggle key  if you want to return to the standard home screen
- Press the space bar to mute music
- Press and hold thumb wheel to override music player volume anytime



0-3005



Getting to Know Your Two











Your **MOTO Q™ 9m** has two home screens, Home Screen.



Multimedia Home Screen

One-touch access for all multimedia needs.

Screen Keys

-  Rewind to beginning of song/video
-  Press to play or pause music/video
-  Fast forward to next song/video
-  Access full music/video library
-  Open full screen mode for best viewing
-  Activate Music and Video mode to access songs/videos from library
-  Activate Picture mode to view pictures from library
-  Activate camera to take pictures or videos
-  Go to V CAST to get music¹
-  Volume control. Use thumb wheel to maximize or minimize volume





When you turn on your new **MOTO Q 9m** for the first time, the multimedia home screen will appear.

Get V CAST Music¹

Use V CAST to download music over the air. While on the go, the V CAST Music store is open 24/7. No wires or computers necessary.

Follow These Steps to Buy Music

Note: Your phone must be in an EVDO coverage area to download music.

1. Using the thumb wheel, scroll to and select the V CAST Music icon 
2. Browse catalog to find songs you want
3. To Preview, press the left soft key
4. Highlight Song > Buy 
5. Press  again to confirm selection
6. Press OK  (or choose to download later)
7. Select storage to Phone Memory or Memory Card to begin downloading

Insert Memory Card

Store all your new songs on a memory card to keep your MOTO Q 9m memory free!


1. Open memory slot
2. Insert card with metal contacts facing downward, toward back of phone

Note: Memory card icon  will appear at top of screen if inserted correctly.


3. Push cover back in place to close

Play Your Music

Play Downloaded Music or Videos¹

1. Use the thumb wheel to scroll to and select the music & video icon . This will put you into the music and video mode. Your device may already be in this mode and your display may not change

Note:  will take you to V CAST.

2. Scroll to and select the music library icon 
3. Select Update Library (this will ensure all your music is updated to your library)
4. Select All Media
5. Scroll to and select your song; your music will start playing


Tip: To stop playing your music, push the center select key. To resume music, push the center select key again.

Note: You only need to update your library after downloading new music or videos to your phone.

Navigate Key Features

Send Text Message from Dial Pad¹

1. Type in the contact's phone number
2. Press the right soft key (Menu)
3. Select Send Text Message and compose your message



Note: Press the function key  to switch between numbers and letters when typing. Press the shift key to switch between lower case and upper case characters.

4. Press the left soft key (Send)

Send Text From Your Contact List¹

1. Press the right soft key (Contacts) and select desired recipient
2. Scroll down and select Send Text Message

Browse the Internet¹

1. Press the left soft key (Start) and select Internet Explorer 
2. With the browser open, press the right soft key (Menu), and select Address Bar
3. Clear URL in address bar field by holding down backspace key 
4. Enter URL and press the left soft key (Go)

Personal Email Setup¹

Get your Yahoo!®, AOL®, Gmail®, Hotmail® or other POP3 emails right on your **MOTO Q™ 9m**. Setup is quick and easy!


Follow These Steps

1. Press the left soft key (Start)
2. Messaging
3. New E-Mail Account
4. Enter email address
5. Select "Try to get email server settings from internet"

Note: If your phone finds your account settings, it automatically fills in the following screens. If your phone cannot find your settings, contact your email provider to get settings.

6. Press the right soft key (Next)
7. Enter username and password
8. Press the right soft key (Next)
9. Press the right soft key (Finish)

Note: Steps may vary by email provider.

Tip: Save more battery life by extending your email Send/Receive intervals: Press the Messaging key  > select an email account > Menu > Settings > Next until you can change the Automatic Send/Receive interval.

¹ Network dependent feature, not available in all areas. Airtime, data charges and/or additional charges may apply. Wireless email functionality requires an email account with wireless server capabilities.

Certain mobile phone features may not be available throughout the entire network or their functionality may be limited. All features, functionality and other product specifications are subject to change without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the U.S. Patent & Trademark Office. AOL is a registered trademark of America Online, Inc. in the United States and/or other countries. Microsoft, Windows, ActiveSync, Windows Media, Outlook, Pocket Outlook, Excel, and Word and MSN are registered trademarks of Microsoft Corporation; and Windows XP, Windows Mobile, Windows Vista and Microsoft are trademarks of Microsoft Corporation. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. miniSD is a trademark of SanDisk Corporation. Other trademarks and trade names are those of their respective owners. All rights reserved. © Motorola, Inc. 2007