



MOTOKRZR™ maxx K3
3G
Quick Start Guide



MOTOSTART




PMS 286
100/66/0/2



Note: Before using your phone for the first time, be sure to review the important safety information in the user's guide. Periodically review this information so you remember how to safely use your phone.

insert your SIM/ USIM card


Your *Subscriber Identity Module* (SIM) card stores your phone number and other information. **Turn off your phone and remove your battery before you install or remove a SIM/ USIM card.**

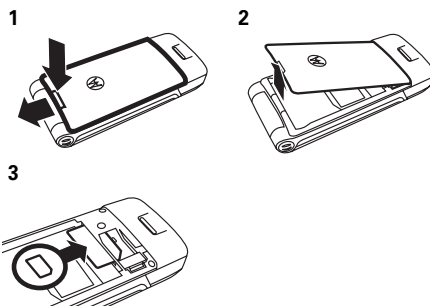




insert a memory card^{1,3}

You can store photos, sounds, and other multimedia files on an optional removable MicroSD™ memory card. Remove the battery door and install the memory card as shown, with the metal contacts facing down.

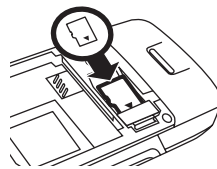



insert your battery

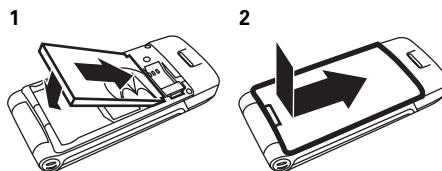




charge your battery

New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. Your phone might take several seconds to start charging the battery. When finished, your display shows **Charge Complete**. Your phone's battery charging indicator lights up while the battery is charging.

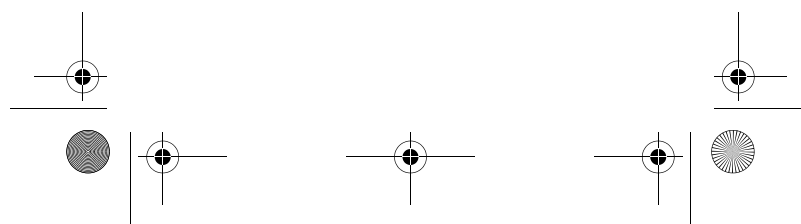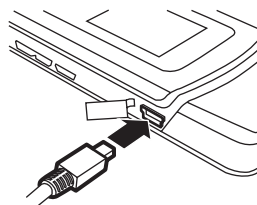



turn it on & off


To turn on your phone, press and hold  for a few seconds or until the keypad or display lights up.




To turn off your phone, press and hold  for a few seconds.


make a call

To make a call, enter a phone number and press .



To "hang up," close the flip or press .


answer a call

To answer a call when your phone rings and/or vibrates, just open the flip or press .

To "hang up," close the flip or press .


make a video call

Enter a phone number and press  to see the video call preview. **To make a video call** press .

To "end" a video call press .


welcome

Introducing your **MOTOKRZR™** maxx K3.

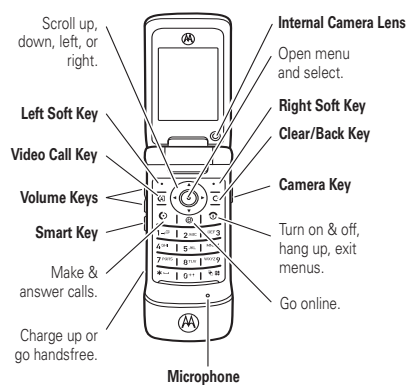

*Make sure your fingers do not cover the microphone during calls.
Simulated picture. Please refer to your handset for actuality.

Tip: Press the *centre key* to open the main menu and select menu options. Press the *clear/back key* to delete letters or numbers or to go back idle screen.

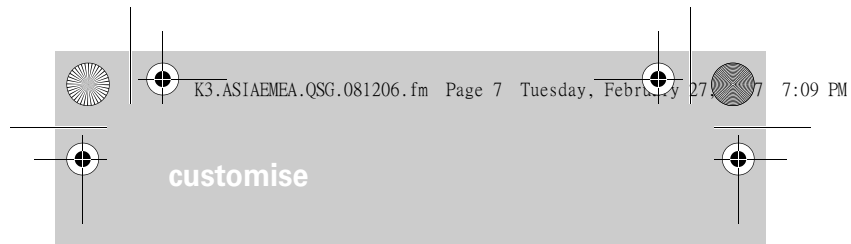

ring style

Press  >  Settings > Ring Styles > Style: *style name*

 Loud  Vibrate  Vibe then Ring
 Soft  Vibe & Ring  Silent


Tip: Your current ring style icon appears at the top of your screen.


Shortcut: To change your ring style volume from the **home screen**, just press the volume keys up or down. With your **phone closed**, press a volume key to see your ring style profile, press the smart key to change it, then press a volume key to store the change.

wallpaper

Choose your display background image:

Press  >  Settings > Personalise > Wallpaper

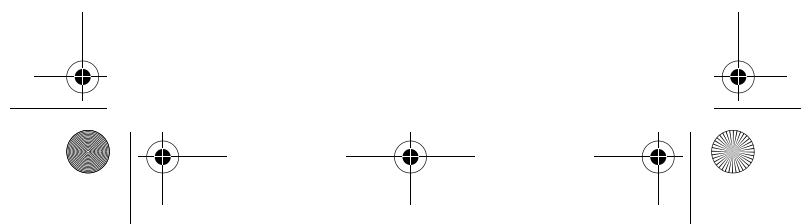

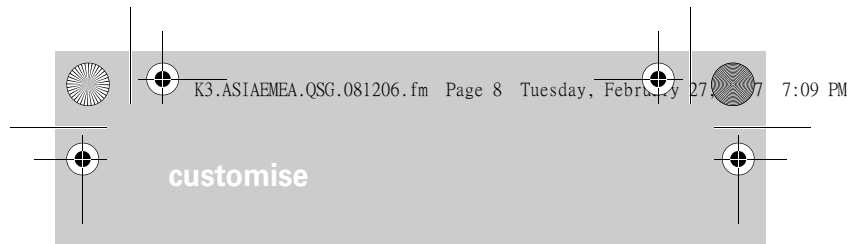

screen saver

Choose the image or animation that appears when your phone is on and open but inactive.

Tip: This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.

Press  >  **Settings** > **Personalise** > **Screen Saver**


change home keys


To change features for the launch bar in the home screen:

Press  >  **Settings** > **Personalise** > **Home Screen** > **Home Keys**


motorola software update²

New from Motorola! A simple and convenient way to keep your phone's software up to date with a USB cable and a PC. Learn more, see if your phone is supported, and register for notification of free updates at www.hellomoto.com/update.

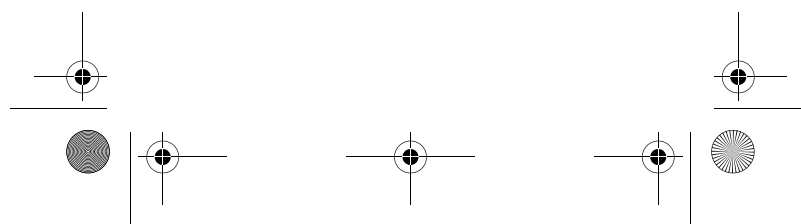

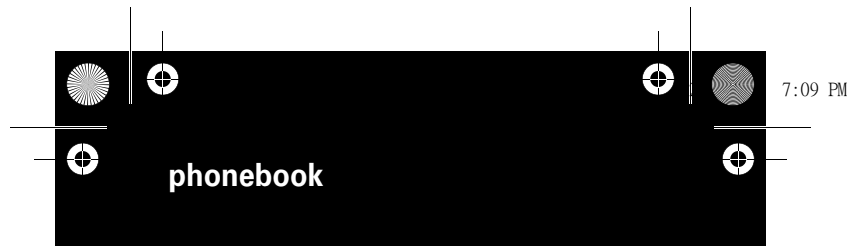


store a phone number


- 1 Enter a phone number in the home screen.
- 2 Press **Store**.
Select **Create New Contact**, if necessary.
- 3 Enter a name and other details for the phone number. To select a highlighted item, press the *centre key* .
- 4 Press **Done** to store the number.


call a stored phone number

Press  >  Phonebook

- 1 Scroll to the phonebook entry.
Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want.
- 2 Press  to call the entry.

You can show contacts stored in your **phone's memory** or on your **SIM card**. Press  >  Phonebook, then press **Options** > **View** > **Phone & SIM Card**, **SIM Card**, or **Phone Contacts**.

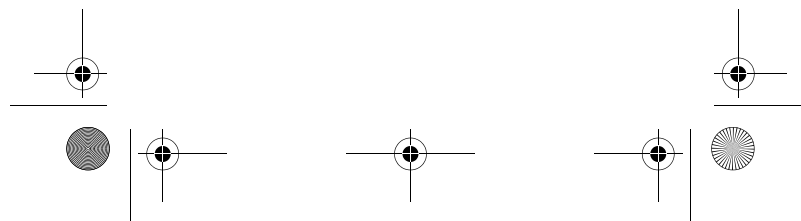

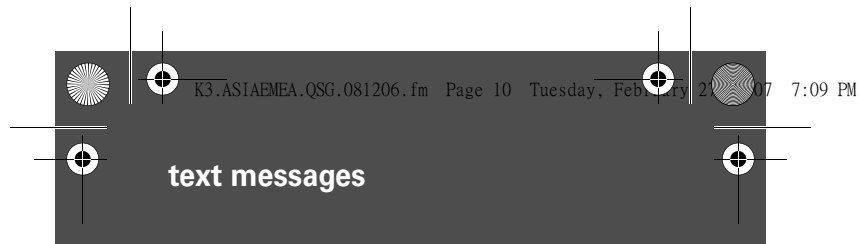
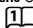 
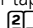 


send a text message²

A text message can contain text and pictures, sounds, or other media objects.


Press  >  Messages > Create Message


1 Press keypad keys to enter text on the page.

Note: Press  to switch text entry mode (**Primary**, **Secondary**, **Numeric** or **Symbol**). Your **Primary** mode can be set to any iTAP™  or tap **1** mode. Your **Secondary** mode can be set to any iTAP  or tap **2** mode or to **None**. **Numeric** mode enters numbers only. **Symbol** mode enters symbols only.


2 When you finish the message, press the **Send To** key.

3 To send the message, press the **Send** key.

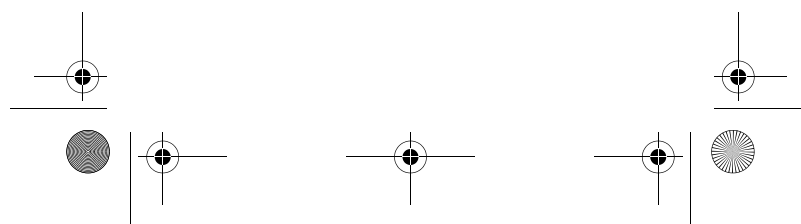


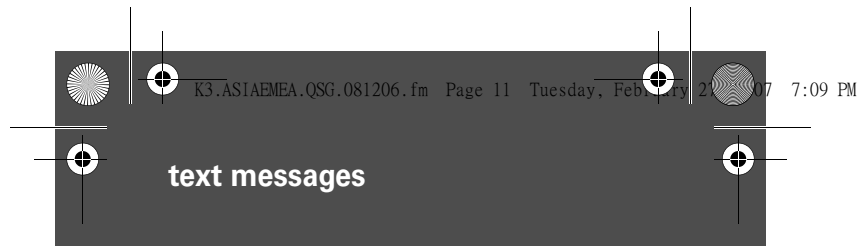


receive a text message²

When you receive a message, your phone plays an alert, and the display shows **New Message** with a message indicator, such as .

Press the **Read** key to open the message.

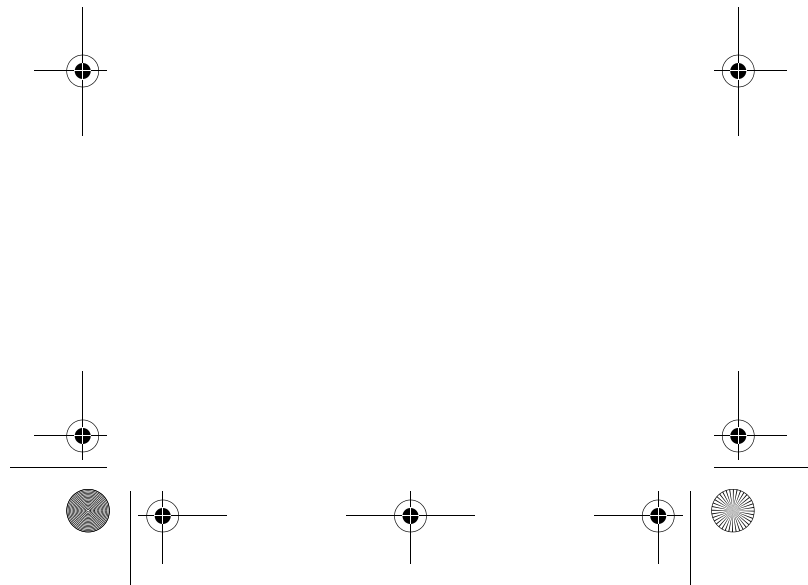

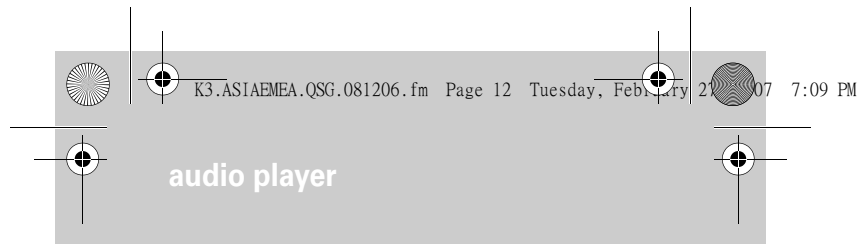




play music files

Your phone can play and store WMA and MP3 song files. You can use an optional removable memory card with your phone to store more songs.

Press  >  **Multimedia** > **Media Finder** > **Music**

You can open a list of **All Songs**, **Recently Played** songs, or the **Playlists** you created. You can also choose songs by **Artists**, **Albums**, **Genres**, or **Composers**.

When you select a song, with your phone **open**:

- **Play or pause** – Press the *centre key* .
- **Skip back or forward** – Press  left or right.
- **Change volume** – Press the volume keys.
- **Hide the player** – Press **Options** > **Hide**. This lets you use other phone features while the song plays. To stop the hidden audio player, press  in the home screen.

Tip: You can listen to tunes on the move, using Bluetooth™ A2DP stereo headphones.




audio player

If you close your phone's flip while music is playing:


- **Adjust song volume** – Press the volume keys.
- **Open the music player** – Press and release the smart key to show the track list. Press the volume keys to scroll through the list, and select the track to be played.
- Press and hold the smart key to lock or unlock the side keys.
- The controls close after 4 seconds, if you don't use them.

Volume Keys

Smart Key

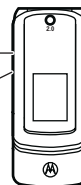


download music files²

To **download** songs from the Internet, use your phone's micro-browser (press  and go to the page with the file). To **copy** files between your phone and a computer, use a cable connection or a Bluetooth™ connection (see your phone's *MOTOMANUAL*).




take a photo & store or send it²


Press  >  Multimedia > Camera to see the camera viewfinder.

Press the *centre key*  to take the photo in the viewfinder.

- To store the photo, press **Options** > **Store Only**.
- To send the photo in a message, press **Send**. Enter text and press **Send To**, then select a recipient.

Note: Some other phones or networks do not support messages with pictures.

- To discard the photo, press .

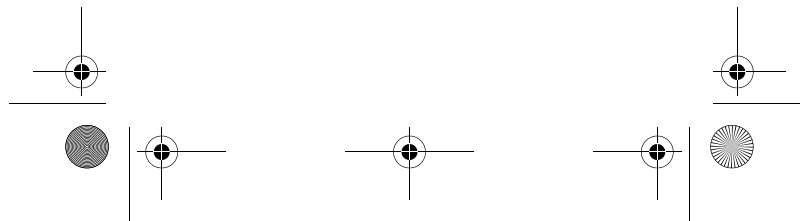


videos

record a video & store or send it²


Press  >  **Multimedia** > **Video Camera** to see the video viewfinder.

Note: The number of minutes remaining is an estimate.

Tip: If you want to send your video in a message, the video length must be set to **MMS**. To set length, press **Options** > **Video Camera Setup** > **Video Length**.

- 1 Press the *centre key*  to start recording the video in the viewfinder.
- 2 Press **Stop** to stop recording the video.
 - To preview, store, or discard the video, press **Options**.
 - To send the video in a message, press **Send**. Enter text and press **Send To**, then select a recipient.

Note: Some other phones or networks do not support messages with videos.

- To discard the video, press .

Bluetooth™ wireless

use Bluetooth


Your phone can make handsfree calls using an optional Bluetooth headset or car kit.³


Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Before you try to connect your phone with a handsfree device, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the user's guide for the device).


Press  >  Settings > Connection > Bluetooth Link > [Add Audio Device]



Your phone lists the devices it finds within range.

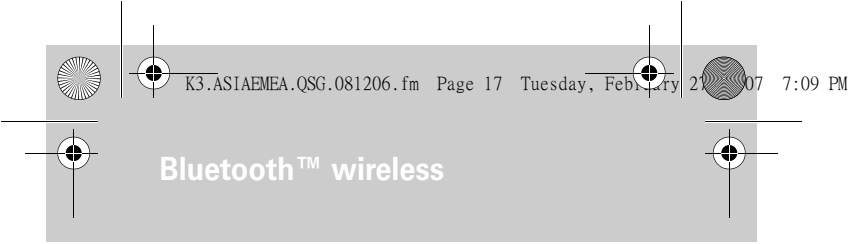- 1 Scroll to a device in the list and press the *centre key* .
- 2 Press **Yes** or **Ok** to connect to the device.





3 If necessary, enter the device passkey (such as 0000) and press **Ok**.

When your phone is connected, the Bluetooth indicator  appears in the home screen and the external Bluetooth indicator light flashes.

Shortcut: When your phone's Bluetooth power is on, your phone can automatically connect to a handsfree device you have used before. Just turn on the device, or move it near the phone. If the device doesn't connect, turn it off and back on. To turn your phone's Bluetooth power on, press  >  **Settings** > **Connection** > **Bluetooth Link** > **Setup** > **Power** > **On**.

For specific information about a device, refer to the instructions that came with it.

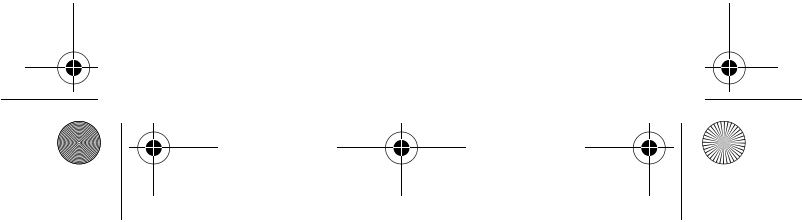

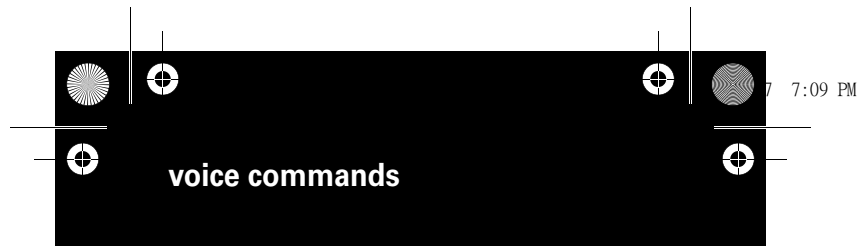


voice commands

You can use voice commands to make a call:

- Use **Name Dial** to dial a phonebook entry by speaking the entry's name.
- Use **Digit Dial** to dial any phone number by speaking its digits.

Note: Not all phone languages support voice recognition and voice commands.

Tip: Speak numbers at a normal speed and volume, pronouncing each digit distinctly. Avoid pausing between digits.

- 1 Press and hold .
- 2 Say "Name Dial" or "Digit Dial".
- 3 When prompted, say the name of the phonebook entry or speak the digits in the phone number.
If your phone recognises the name or number, it makes the call.

accessories

Music



S705 Sound Pilot™



S805 Bluetooth™ Headset

On the move



H670 Bluetooth™ headset



MicroSD™ Memory Card

In vehicle



IHF1000 Bluetooth™ Car Kit



Car Charger

* Accessory may not be included when phone purchased.



- 1) Removable memory card is available at various storage capacity.
- 2) The feature detailed here may be a network, subscription and SIM card or service provider dependent feature and not available in all areas.
- 3) Bluetooth™ headset and its accessories and memory card are optional accessories, which may not be included when phone purchased.

Note: The functions available on this handset may vary in different regions and nations. Please contact your local customer service centres, agencies or retailers if you have any question about the handset functions. Motorola reserves all rights to revise and change this Quick Start Guide without obligation to notify any person of such revisions or changes. The pictures and simulated screenshots are enhanced to show details for ease of reference. Please refer to your handset for actuality.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth Trademarks are owned by their proprietor and used by Motorola, Inc. under license.

© Motorola, Inc. 2007. Printed in Malaysia. P/N 6802931J09



PMS 286
100/66/0/2