



kitchen think

Instructions for Installation and Use

Freezer
Model HZ201

To the Installer

Before installation fill in the product details on the back cover of this book.
The information can be found on the rating plate.

To the User

You must read the instructions prior to installing and using the appliance and
then retain them for future reference.

CONTENTS

| | |
|--------------------------------------|------------|
| Product Safety | 3 |
| Installation | 3 |
| Electrical Connection | 4 |
| Get to Know your Appliance | 5 |
| Getting your Appliance ready for use | 6 |
| How to use your Freezer | 6 |
| Ice Trays | 7 |
| Food Storage | 8-9 |
| Energy Saving Tips | 10 |
| Caring for your Appliance | 11 |
| Troubleshooting | 12 |
| Notes | 13 |
| After Sales Service | 14 |
| Hotpoint Guarantee | 15 |
| Key Contacts | Back Cover |

Retention of this Instruction Book

This Instruction Book must be kept handy for reference as it contains important details on the safe and proper use of the appliance.

If you sell or pass the appliance to someone else, or move house and leave it behind, make sure this Book is also provided so the new owner can become familiar with the appliance and safety warnings.

If the Book is lost or damaged a copy may be obtained from:
GDA LTD., Morley Way, Peterborough, PE2 9JB



PRODUCT SAFETY

ATTENTION

Read your manual carefully since it contains instructions which will ensure safe installation, use and maintenance of your appliance.

Your Refrigerator is built to International safety standards (EN60) and has been awarded the European approval mark (IMQ) for compliance with UK electrical safety requirements. It also meets the EC standards on the prevention and elimination of radio interference (EC directive 87/308 - 02.06.89).

1. This appliance must not be installed outdoors - not even in an area protected by a roof. It is extremely dangerous to leave it exposed to rain or storms.
2. It must only be used by adults and exclusively to refrigerate and freeze foodstuffs, following the instructions for use contained in this manual.
3. Do not ever touch or handle the appliance with bare feet or with wet hands or feet.
4. It is highly recommended that you do not use extension cords or multiple socket adapters. If the refrigerator is installed between cabinets, make sure that the cord is not bent or dangerously pinched or compressed.
5. Never pull on the cord or the refrigerator to remove the plug from the wall socket - this is very dangerous.
6. Never touch the cooling components within the appliance, especially with wet hands because this could result in injury.

7. Never put ice cubes just removed from the freezer into your mouth because they could stick to your mouth and cause burns.

8. Never clean the appliance or perform maintenance without first turning off the green light and disconnecting it from the electrical mains.

9. Before having your old refrigerator picked up for disposal, remove or make inoperable any locking devices to prevent children who might play in or around the appliance from being locked inside.

10. Before calling for service/assistance in the case of malfunction, consult the chapter entitled "Troubleshooting" to determine whether it is possible to eliminate the problem. Do not try to repair the problem by trying to access the internal components of the appliance.

11. If damaged, the power supply cord on this appliance must necessarily be replaced by our service centre because special tools are required for replacement.

12. Do not use electric appliances inside the compartment for food storage, if these are not those recommended by the manufacturer.

13. At the end of the functional life of your appliance – containing cyclopentane gas in the insulation foam and perhaps gas R600a (isobutane) in the refrigeration circuit – the latter should be made safe before being sent to the dump. For this operation, please contact your dealer or the Local Organisation in charge of waste disposal.

INSTALLATION

To ensure that the appliance operates properly and to reduce energy consumption, it is important that the appliance is installed correctly.

Ventilation

The compressor and condenser generate heat and, therefore, need to be ventilated properly. Avoid placing the appliance in direct sunlight, or next to an electric stove or similar appliance. Areas not adequately ventilated are not suitable for this appliance.

During installation, make sure not to cover or obstruct the grates that allow for proper ventilation of the appliance.

Away from Heat

Avoid positioning the appliance in a place where it is directly exposed to sunlight or near an oven, hob or the like.

Electrical Connection and Earthing

Before proceeding with the electrical connection, make sure that the voltage indicated on the rating plate, located within the freezer, corresponds to the mains voltage in your home

and that the socket is fitted with a standard earthing wire in accordance with safety standards for 46/90 systems. If the socket is not fitted with an earthing wire, the manufacturer will not be held liable for any damages and/or injuries arising out of the use of the appliance. Do not use multiple sockets or adapters.

Position the appliance in such a way that you can access the socket where it is plugged in.

Insufficient power?

The electrical socket must be able to handle the maximum power load of the appliance, which is indicated on the rating plate located within the freezer.

Before making the electrical connection ...

After the appliance has been delivered, place it in the vertical upright position and wait at least 3 hours before inserting the plug into the socket in order to ensure that it functions properly.

ELECTRICAL CONNECTION

Your appliance is supplied with a 13amp fused plug that can be plugged into a 13amp socket for immediate use. Before using the appliance please read the instructions below.

WARNING:

THIS APPLIANCE MUST BE EARTHED.

Replacing fuse covers:

When replacing a faulty fuse, a 13amp ASTA approved fuse to BS 1362 should always be used and the fuse cover re-fitted.

If the fuse cover is lost, the plug must not be used until a replacement is obtained.

Replacement fuse covers:

If a replacement fuse cover is fitted, it must be of the correct colour as indicated by the coloured marking or the colour that is embossed in words on the base of the plug.

Changing the plug:

Removing the plug

If your appliance has a non-rewireable moulded plug and you should wish to remove it to add a longer cable or to re-route the mains cable through partitions, units etc. please ensure that either:

- The plug is replaced by a fused 13amp re-wireable plug bearing the BSI mark of approval.

or

- The mains cable is wired directly into a 13amp cable outlet, controlled by a switch (in compliance with BS 5733) which is accessible without moving the appliance.

Disposing of the plug

Cut off and dispose of the supplied plug if it does not fit your socket. The cable should be cut as close as possible to the moulded plug.

Remove the fuse.

WARNING:

To avoid a shock hazard do not insert the discarded plug into a socket anywhere else.

Fitting a new plug

IMPORTANT:

WIRES IN THE MAINS LEAD ARE COLOURED IN ACCORDANCE WITH THE FOLLOWING CODE...

| | | |
|------------------|---|---------|
| Green and Yellow | - | Earth |
| Blue | - | Neutral |
| Brown | - | Live |

As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- Connect Green and Yellow wire to terminal marked 'E' or \perp or coloured Green and Yellow.
- Connect Brown wire to terminal marked 'L' or coloured red or brown.
- Connect Blue wire to terminal marked 'N' or coloured Black or Blue.

If a 13amp plug (BS 1363) is used it must be fitted with a 13amp fuse. A 15amp plug must be protected by a 15amp fuse, either in the plug or adaptor or at the distribution board.

If you are in any doubt about the electrical supply to your machine, consult a qualified electrician before use.

CE Marking certifies that this appliance conforms to the following EEC directives :

Low Voltage Equipment - 73/23/EEC & 93/68 EEC

Electromagnetic Compatibility 89/336/EEC, 92/31/EEC & 93/68/EEC

GET TO KNOW YOUR APPLIANCE

A Temperature Control

This makes it possible to adjust the internal temperature of the freezer with the following settings:

- 0: The freezer is off;
- 1: Freezer is on low;
- 4: Freezer is on high;

By turning the knob from setting "1" to setting "4" you lower the temperature.

E Drain system for drawing off defrost water

F Storage Compartments

G Ice tray

H Compartments Used for Freezing and Storage

B Green Light

 
 
When the light is on (by moving the switch to the right) this indicates that the appliance is connected to the mains. When the switch is moved to the left (green light covered), the appliance is disconnected from the mains.

C Yellow Light

When this light is on (by moving the switch to the left), the compressor will operate continuously to reach the lower temperatures necessary for freezing fresh foods quickly. By moving the switch to the right (yellow light covered) the freezer is operated by the thermostat.

D Red Light

This light comes on when the temperature inside the appliance is not sufficient to preserve foodstuffs.

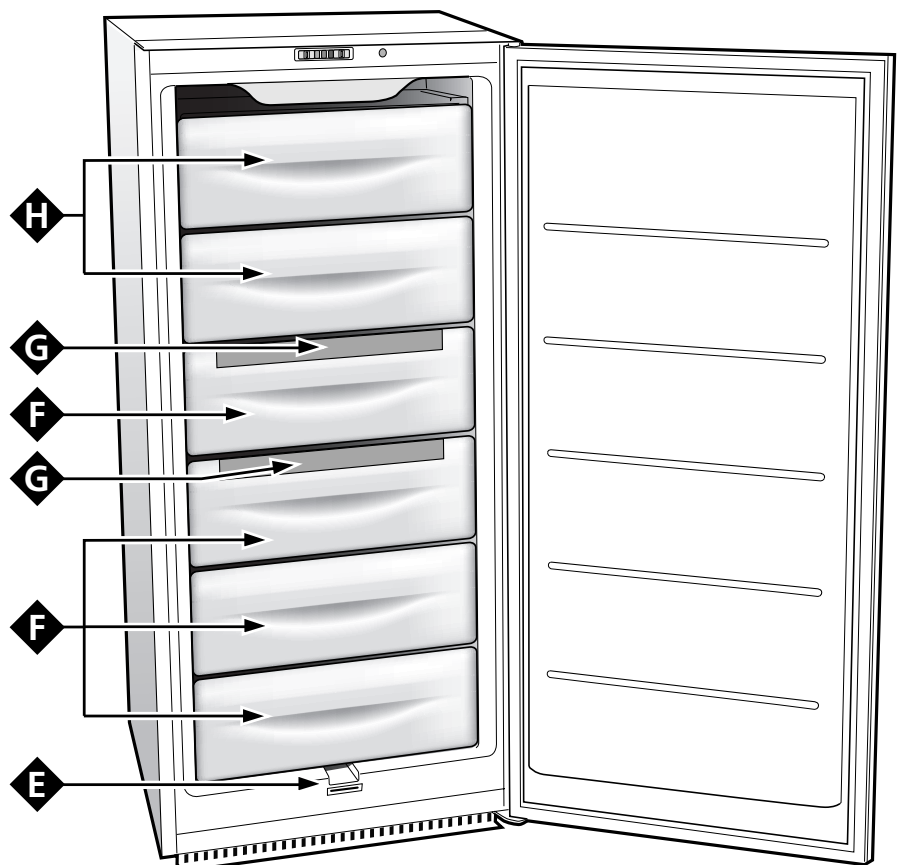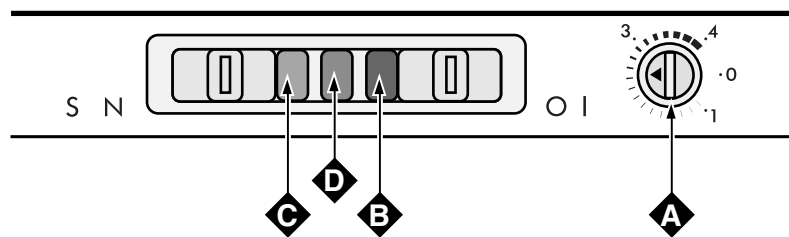

GETTING YOUR APPLIANCE READY FOR USE

NOTICE

After the appliance has been delivered, leave it to stand in its upright position for approximately 3 hours, before plugging it into the mains and switching on, to ensure proper performance.

Use these average temperature settings to ensure optimum performance and save energy.

Before placing food in the freezer, clean the interior well with warm water and baking soda.

After plugging the appliance into the socket, make sure that the green light is on - turn on the yellow light.

When the red light goes off - turn off the yellow light.

The appliance is now ready for use.

How to use your freezer

Freezing

- For the preparation of food to be frozen, please consult a specialized manual.

- In order to freeze fresh food, turn the switch to the left - to turn on the yellow light.

- When freezing fresh foods, remember that they should not touch other previously frozen or deep frozen foods. Place the fresh food, that you wish to freeze, in the top compartment where the temperature will fall below 18°C, ideal for freezing food properly.

- Proper conservation depends on the speed with which food is frozen.

For this reason we recommend that the switch be turned on to the freeze setting (the yellow light will come on) 24 hours before the food to be frozen is placed in the freezer. This operation is necessary for large quantities of food (up to the maximum capacity, as indicated on the rating plate).

- During the freezing process, avoid opening the door.

- If a large amount of food is introduced for freezing at one time, the internal freezer temperature may momentarily increase and the red light will come on. When the compartment returns to the correct temperature, the red light will go out, preservation of foods stored is not affected.

- **IMPORTANT:** Remember to turn off the yellow light after 24 hours as freezing will be completed. This will save energy.

- Food that has thawed, even partially, must not be re-frozen: you must cook it in order to consume it (within 24 hours) or to freeze it once again.

- In order to freeze and then thaw foods optimally, it is recommended that you divide food into small portions so that they freeze quickly and uniformly. The packages should be clearly marked with the content and the date they were frozen.

- Do not open the door in the event of a power failure or malfunction. This precaution will slow the rise in temperature within the compartment. If the door is not opened, frozen and fast-frozen foods will remain in their current state for approximately 9-14 hours.

- Do not place full bottles in the freezer: they could easily burst because all liquids increase in volume when they freeze.

Food Preservation

- To preserve frozen and deep frozen food well, never set the temperature control below 1, no matter what the room temperature is.

For room temperatures from 25°C to 27°C the temperature control should be set between 1 and 2.

For room temperatures of up to 32°C set the control between 2 and 3.

Maximum storage times for frozen foods are indicated in the tables, see 'FOOD STORAGE'.

- Always follow the instructions on the packages of deep frozen foods carefully - if there are no instructions, never keep the food for more than 3 months from the date of purchase.

- When buying deep frozen foods, ensure that they have been stored at appropriate temperatures and that the packaging is intact. If a package shows signs of moisture or abnormal swelling, it has probably been stored at the wrong temperature and the contents have been spoiled.

- To maintain the quality of the deep frozen food, transport them in appropriate containers to keep them cold and then place them inside the freezer as soon as possible.

Ice trays

This new ice tray is exclusive to us. The ice tray is situated on the top part of the freezer drawer to ensure greater ergonomics and cleanliness and leave more room free inside the drawers : the ice no longer comes into contact with the food placed inside the freezer compartment; furthermore, dripping of water during filling is avoided (a lid to cover up the hole after filling with water is also provided).

Instructions for use (Fig. 1)

Fill up the tray with water via the special hole up to the level indicated (MAX WATER LEVEL), taking care not to overfill: inserting excess water will lead to the formation of ice which could obstruct the exit of the ice cubes.

If you do use an excessive amount of water, you will have to wait until the ice has melted, empty out the tray and re-fill it with water.

Once you have filled the ice tray up with water through the hole indicated, turn it by 90 °. Thanks to the connected compartments, the water fills up the special shapes, after which you can cover the hole up with the special cap and place the ice tray in the inner door of the freezer compartment. Once the ice has formed, all you need to do is to knock the tray against a hard surface so that the ice cubes come away from their housing and come out of the same hole used to fill the tray with water. To make it easier for the ice cubes to come out, wet the outside of the tray.

WARNING: every time you fill up the ice tray with water , make sure that it is completely empty and that there are no traces of ice left inside it.

The minimum time required for ice to form properly is approximately 8 hours.

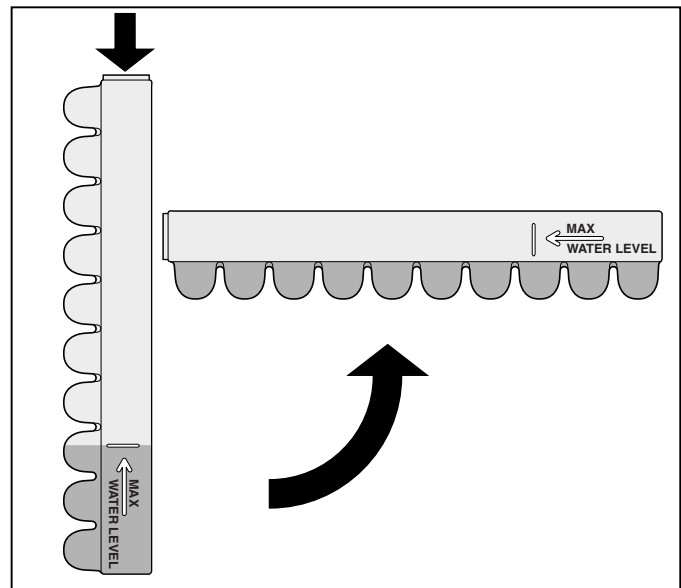 


Fig. 1

FOOD STORAGE

Meat and Fish

| Food | Wrapping | Tenderising (days) | Storage (months) | Thawing Time |
|-----------------------------------|--|--------------------|------------------|------------------------------|
| Beef Roast | Tinfoil | 2 / 3 | 9 / 10 | Not required. |
| Lamb | Tinfoil | 1 / 2 | 6 | Not required. |
| Pork Roast | Tinfoil | 1 | 6 | Not required. |
| Veal Roast | Tinfoil | 1 | 8 | Not required. |
| Veal/Pork Chops | Each piece wrapped in cling film and then in tinfoil (4 to 6 slices) | | 6 | Not required. |
| Veal/Lamb Cutlets | Each piece wrapped in cling film and then in tinfoil (4 to 6 slices) | | 6 | Not required. |
| Mincing Meat | In aluminium containers covered with cling Film | Freshly minced | 2 | Slowly in refrigerator |
| Heart and Liver | Plastic bags | | 3 | Not required. |
| Sausages | Cling Film or Tinfoil | | 2 | As necessary. |
| Chicken and Turkey | Tinfoil | 1 / 3 | 9 | Very slowly in refrigerator. |
| Duck and Goose | Tinfoil | 1 / 4 | 6 | Very slowly in refrigerator. |
| Pheasant, Partridge and Wild Duck | Tinfoil | 1 / 3 | 9 | Very slowly in refrigerator. |

Film

Film

Plastic bags

Plastic bags

Film

Plastic bags

FOOD STORAGE

Fruits and Vegetables

| Food | Preparation | Blanching Time | Wrapping | Storage (months) | Thawing Time |
|--|---|----------------|----------------------------------|------------------|------------------------------|
| Apples and Pears | Peel and cut into slices. | 2' | In Containers (cover with syrup) | 12 | In refrigerator very slowly. |
| Apricots, Peaches, Cherries and Plums | Peel and pit. | 1' / 2' | In Containers (cover with syrup) | 12 | In refrigerator very slowly. |
| Strawberries Blackberries and Raspberries | Rinse and dry | | In Containers (cover with sugar) | 10 / 12 | In refrigerator very slowly. |
| Cooked Fruit | Cut, cook and strain. | | In Containers (add 10% sugar) | 12 | In refrigerator very slowly. |
| Fruit Juice | Wash, cut and crush. | | In Containers (sugar to taste) | 10 / 12 | In refrigerator very slowly. |
| Cauliflower | Remove leaves, cut head into small pieces and blanch in water and a little lemon juice. | 2' | Plastic bags | 12 | Not required. |
| Cabbage and Brussel Sprouts | Wash and cut into small pieces. | 1' / 2' | Plastic bags | 10 / 12 | At room temperature. |
| Peas | Shell and wash. | 2' | Plastic bags | 12 | Not required. |
| French Beans | Wash and slice if required. | 2' | Plastic bags | 10 / 12 | Not required. |
| Carrots, Peppers and Turnips | Peel, wash and slice if necessary. | 3' / 4' | Plastic bags | 12 | Not required. |
| Mushrooms and Asparagus | Wash, peel and cut up. | 3' / 4' | Plastic bags or Containers | 6 | At room temperature. |
| Spinach | Wash and mince. | 2' | Plastic bags | 12 | At room temperature. |
| Vegetable for Soups | Wash and cut up in small pieces. | 3' | Plastic bags or Containers | 6 / 7 | Not required. |

Plastic bags

Plastic bags

ENERGY SAVING TIPS

- Install the Appliance Properly

In other words, away from sources of heat and direct sunlight, in a well ventilated room.

- Correct Temperature Settings

Set the temperature control to one of the middle settings. Very cold temperature settings will not only consume a great deal of energy but will neither improve nor lengthen the storage life of the food.

- Do not Overfill your Appliance

Remember that proper storage of food requires good air circulation. Overfilling your appliance will hamper proper air circulation and overwork the compressor.

- Close the Doors

Open your freezer only when necessary, remember that every time you open the door, most of the cold air will be lost. To bring the temperature back to the proper level again, the motor must run for a considerable amount of time, consuming a substantial amount of energy.

- Check the Door Seal

Keep the seal clean and make sure that they adhere well to the door. This alone will ensure that no cold air escapes.

- No Hot Foods

A container of hot food placed in the freezer will increase the temperature significantly. Allow food to cool before storing.

- Check your Appliance for build up of ice

Check the interior walls for ice. Defrost your appliance when the layer becomes too thick (see section, 'CARING for your APPLIANCE').

CARING FOR YOUR APPLIANCE

Before doing any cleaning, turn off the green light and disconnect the appliance from the electricity (by pulling out the plug or turning off the general switch in your home).

Defrosting

WARNING: do not damage the refrigeration circuit. Do not use mechanical devices or instruments other than those recommended by the manufacturer to speed up the defrosting process.

How to Defrost the Freezer

The frost should be removed from the walls of the appliance periodically.

When defrosting, remove the frozen food from the appliance, wrap it in newspaper and store in a cool place. Since the rise in temperature will shorten the storage life of the food, it should be used as soon as possible.

Never use sharp metal objects to remove frost because they could pierce the cooling circuit and damage the freezer beyond repair.

- To defrost the appliance completely (this should be done once or twice a year), turn off the green light and leave the door open until the frost has completely thawed.

- The freezer is equipped with a system to drain the water, simply place a container in position as shown in fig.2.

- You can speed this process by placing containers of warm water in the appliance.

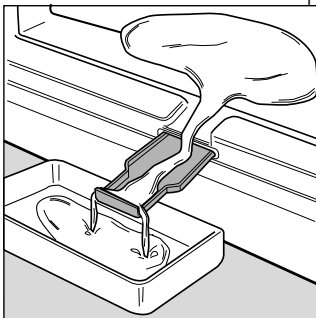 


Fig. 2

Cleaning and Special Maintenance

Before cleaning the freezer, turn off the green light, switch off and remove the plug from the socket.

- Use a water and bicarbonate solution to clean the appliance. Clean the interior and exterior with a sponge soaked in warm water and a sodium bicarbonate solution, which is, among other things, a good disinfectant. If you do not have any in the house, you can use a neutral soap.

- DO NOT use abrasive detergents, bleach or detergents containing ammonia. NEVER use solvent based products.

- Rinse with clean water and dry with care.

- When completed, turn on the green light and set the temperature control to the appropriate setting.

- After 2-3 hours, the appliance will once again be ready for preserving frozen and deep frozen foods.

TROUBLESHOOTING

Green Light is off.

Check that:

- The mains switch in your home is on.
- There has not been a power cut.
- The plug is properly inserted in the socket and is switched on.
- The socket is working; try another appliance in the socket to check.
- The fuse in the plug is ok - if not replace it, (see ELECTRICAL CONNECTION).

The Red Light is always on.

Check that:

- The door is shut properly.
- The seal is clean and not damaged.
- The door has not been left open too long.
- The temperature control is on the correct setting.
- The freezer is not overfilled.
- There is not too much frost on the internal walls.

The compressor runs continuously.

Check that:

- The door is shut properly or has not been left open too long.
- The room temperature is not too high.
- The temperature control is not set too high.
- The yellow light is on (continuous operating function).

The appliance makes too much noise.

The refrigerant in the cooling circuit causes a slight bubbling sound, even when the compressor is not running (this is quite normal and is not a fault).

Check that:

- The appliance is level.
- The appliance was installed between cabinets or objects that vibrate and make noise.

If after all the checks, the appliance still does not operate or the problem persists, call Hotpoint Service, see KEY CONTACTS, back cover. Inform them of: the type of problem, the abbreviation of the model name (Mod.) and the relative numbers (S/N) written on the rating plate, located within the freezer.

Never call on unauthorized technicians and always refuse spare parts which are not originals.

NOTES



After Sales Service

"No company is better positioned to offer an after sales service on a Hotpoint appliance than us - the manufacturer"

As part of our commitment to you, all Hotpoint appliances have the added benefit of a fully inclusive parts and labour guarantee for the first 12 months. In addition to this you also have the advantage of **free replacement parts for the first 5 years** when fitted by a Hotpoint engineer. When the 12 months parts and labour guarantee expires we offer the following after sales service options:

Repair Service and Information Help Desk

UK: 08709 066066

www.theservicecentre.co.uk

Republic of Ireland: 1850 302 200

Note: Our operators will require the Model number and the Serial number of your appliance

Available 364 days a year with a fast, effective and value for money service. We have the largest white goods repair service in the UK with over 1200 of our own fully trained engineers. All repairs include a parts and labour guarantee for 12 months from the date of the repair.

If you require any information or have any questions about your appliance, our operators are on hand with help and advice.

All this ensures that you will receive the best available after sales service possible.

Extended Warranties

UK: 08709 088 088

www.theservicecentre.co.uk

Republic of Ireland: 1850 502 200

Whether you have just one or a number of Hotpoint appliances in your kitchen, we offer two service cover plans to give you total peace of mind.

- Repair Protection Plan - FREE service repairs for a single Hotpoint appliance during the period of cover.
- Kitchen Cover - FREE service repairs for all your Hotpoint appliances less than 8 years old.

Genuine Parts and Accessories UK: 08709 077 077

www.theservicecentre.co.uk

Republic of Ireland: (01) 842 6836

A wide range of genuine parts and accessories are available from our hotline or through our web site.

Genuine parts and accessories, extended warranties and service repairs are all available on our web-site at:



www.theservicecentre.co.uk



Guarantee

"Satisfaction guaranteed or your money back"

 
We give you a unique 'satisfaction guaranteed' promise - **valid for 90 days** - after you have purchased your Hotpoint appliance. If there is a technical problem simply call Hotpoint Repair service or visit our web-site at www.theservicecentre.co.uk and where necessary, we will arrange for an engineer to call. If the technical problem is not resolved under this guarantee, **we will replace your machine or, if you prefer, give you your money back.**

All Hotpoint appliances carry a fully inclusive 12 month parts and labour guarantee as well as free replacement parts for the first 5 years (except microwaves, selected integrated appliances and cooker hoods, which have a one year guarantee) provided that they are fitted by a Hotpoint engineer.

Guarantee terms and conditions

Your guarantee is only applicable in the United Kingdom or Republic of Ireland and is subject to the following provisions that your appliance:

- Has been installed and used correctly in accordance with this instruction booklet.
- Has been used solely for domestic purposes and is located on domestic premises (ie. not for commercial or trade use).
- Has been properly connected to a suitable electrical supply voltage as stated on the appliance rating plate.
- Has not been subject to misuse, accident, modified or repaired by anyone other than one of our own service engineers.



For pre purchase information on any other Hotpoint product call: 08701 50 60 70
or visit: www.hotpoint.co.uk



Recycling & Disposal Information

As part of Hotpoint's continued commitment to helping the environment, Hotpoint reserves the right to use quality recycled components to keep down customer costs and minimise material wastage.

Please dispose of packaging and old appliances carefully.

To minimise risk of injury to children, remove the door, plug and cut mains cable off flush with the appliance. Dispose of these parts separately to ensure that the appliance can no longer be plugged into a mains socket, and the door cannot be locked shut.



Key Contacts

After Sales Service

Over 1200 trained specialists, directly employed by us, ensure that you can have complete confidence in both the appliances and services we offer.



Repair Service and Information Desk

UK: 08709 066 066

(Open 8 to 8 Mon - Fri, 8 to 6 Sat, 10 to 4 Sun & Bank Holidays)

www.theservicecentre.co.uk

Republic of Ireland: 1850 302 200

Note: Our operators will require the following information:

Model number:

Serial number:

Extended Warranties

UK: 08709 088 088

(Open 8 to 8 Mon - Sun)

www.theservicecentre.co.uk

Republic of Ireland: 1850 502 200

Genuine Parts and Accessories

UK: 08709 077 077

(Open 8-30 to 5-30 Mon - Fri & 9 to 12 Sat)

www.theservicecentre.co.uk

Republic of Ireland: (01) 842 6836