



MOTOROKR™ Z6m

## Quick Start Guide to Music

## welcome

Introducing the music player on your new  
MOTOROKR™ Z6m CDMA wireless phone!

**Music Anytime** – Just imagine...all the newest, hottest tunes, along with your old favorites, right at your fingertips! And you're still connected—take or make calls or exchange messages.

Keep your music as close as you keep your phone with Jump Music from Alltel. This free music software lets you move music from your computer to your phone quickly and easily.

Use the robust music player to set your playlist for your morning commute. Slip a microSD card into the removable memory slot to save many more songs!

**Note:** Before using your phone for the first time, be sure to review the important safety information in the user's guide. Periodically review this information so you remember how to safely use your phone.

 
## contents

<b>get started</b> . . . . .	<b>4</b>
install the battery . . . . .	4
charge the battery . . . . .	5
turn phone on & off . . . . .	5
lock & unlock phone . . . . .	6
what music transfer tools do you need? . . . . .	7
do you need a memory card? . . . . .	8
what music file formats can you play? . . . . .	10
do you need a USB cable? . . . . .	10
what headphones can you use? . . . . .	11
celltop . . . . .	11
<b>play music</b> . . . . .	<b>12</b>
play music . . . . .	12
replay, shuffle, & other options . . . . .	16
browse & play music . . . . .	18
wake up music player . . . . .	20
turn off music player . . . . .	20
music player tips . . . . .	21
playlists . . . . .	22

<b>get music</b> .....	<b>25</b>
download & install free Jump Music software . . .	25
get songs from a CD with Jump Music . . . . .	26
transfer files with Jump Music . . . . .	28
<b>Bluetooth®</b> .....	<b>32</b>
pair with headset, handsfree device, or other audio device . . . . .	32
<b>find answers</b> .....	<b>34</b>

## get started


### install the battery

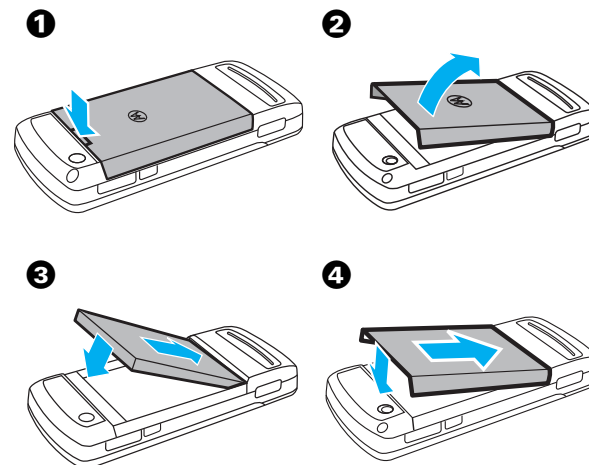

## get started


### charge the battery

 New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. Your phone may take several seconds to start charging the battery. The phone shows **Charge Complete** when finished.

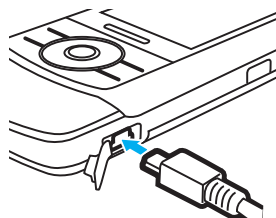


**Tip:** Motorola batteries have circuitry that protects the battery from damage from overcharging.

### turn phone on & off

 **To turn on your phone**, press and hold  for a few seconds or until the display turns on.

If prompted, enter your four-digit unlock code (originally **0000**).

**To turn off your phone**, press and hold  for two seconds.

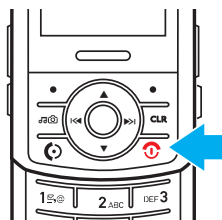


## get started

 
### lock & unlock phone

You can lock your phone to keep from accidentally pushing external keys when the slider is closed.

**To lock the phone**, push the lock switch up.

When the phone is on and locked, if you open the slider, the keypad unlocks. When you close the slider, the phone goes back into the locked mode. When the phone is off and locked, the phone will not turn on, but briefly displays a white padlock  to remind you that the phone is locked.

For other locking features, see your User's Guide.

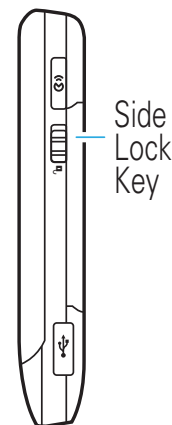

## get started

### what music transfer tools do you need?

To put music on your computer and then load it on your phone, you need:

- Microsoft® Windows® XP™ or Windows Vista™ operating system
- for importing and loading music to your phone or removable memory card, you need the Jump Music software, which you can download for free at [www.alltel.com/jumpmusic](http://www.alltel.com/jumpmusic)
- USB data cable (sold separately)

7

## get started

 
### do you need a memory card?

Your phone supports removable microSD memory cards from various manufacturers with up to 2 GB capacity. SanDisk is the recommended brand of microSD cards greater than 1 GB.

If you don't have a memory card, you can store files on your phone, but you are limited by the amount of space.

#### install memory card

- 1 Open the memory card slot cover on the top of your phone.
- 2 With the gold contacts up, slide the memory card into the card slot and press it until it clicks.
- 3 Replace the memory card slot cover.

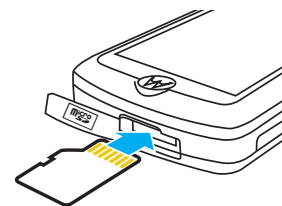

8

## get started

**To remove the card**, lightly press it to release it from the slot and carefully slide it out.

**Caution:** Do not remove your memory card while your phone is using it or writing files to it.

#### format memory card

You must format a memory card before using it for the first time. This critical procedure creates required directories. If you do not format a memory card before using it for the first time, your phone may not be able to read the card.

**Caution:** Formatting the memory card erases all content on the card.

**Find it:**  >  Phone Status > Storage Devices

- 1 Scroll to **Memory Card-T-Flash** and press **Options**.
- 2 Scroll to **Format** and press **Select**.
- 3 When prompted, press **Yes** to continue or **No** to cancel formatting.

9

## get started

### what music file formats can you play?

Your phone can play many types of files: MP3, AAC, AAC+, WMA, and M4A.

**Note:** You can also use the **Sounds** option of the **Media Gallery** menu (see your User's Guide) to play these and other types of files. However, the **Sounds** option doesn't have all of the music player capabilities.

### do you need a USB cable?

To load music from a computer to your phone, you can use a Bluetooth® connection (see your User's Guide) or a cable connection. A cable connection requires a USB data cable, which is sold separately from your phone.

10

## get started

### what headphones can you use?

Your phone has a 3.5mm headset jack for wired stereo listening. Your phone also supports compatible wireless stereo Bluetooth® (A2DP) accessories. You can also plug in a stereo wired EMU headset.

**Tip:** For more great accessory ideas, visit [www.hellomoto.com](http://www.hellomoto.com) or your local Alltel store.

### celltop

From the home screen, press **Celltop** to customize on-screen cells with shortcuts to the stuff you'll love: call log, ringtones, messaging inbox, XM radio, Xcess Search, weather, news, stocks, football, and basketball. Also, rodeo and baseball cells are available as free downloads.


**Tip:** You can also press  >  **Celltop**.

Visit <http://www.mycelltop.com/> for a quick online demo and FAQ.

11

## play music

 
### play music

A short press of the music/camera key () launches your phone's music player.

**Tip:** You can also press  >  **Media Gallery** > **Music Player**.

**Note:** Your phone might prompt you to search for songs. If you have made changes to the memory card since the last time you used the music player, select **Yes**.

Your phone displays the **My Music** menu:

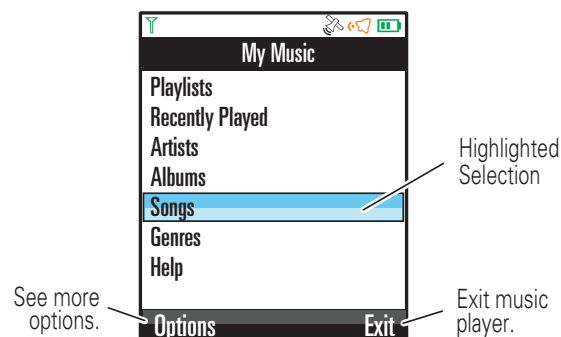

12

## play music

The **My Music** menu includes:

 
menu items	
<b>Playlists</b>	Create or play a playlist.
<b>Recently Played</b>	View & play songs you played recently.
<b>Artists</b>	Find & play music by an artist.
<b>Albums</b>	Find & play music from a specific album.
<b>Songs</b>	Find & play a song from the entire list of songs on your phone.
<b>Genres</b>	Find & play music from a specific genre (type of music), such as rock or jazz.
<b>Help</b>	Read brief tips for having a good music experience.

**Tip:** When browsing through any of these menus, to quickly jump to an entry, press the first letter of the entry.

13

## play music



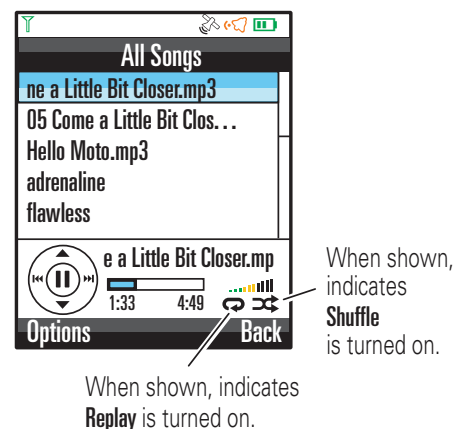




While a song is playing on the music player, your screen looks like this:



14

## play music

Use these keys to control the music player:

controls	
<b>pause/play</b>	Press  .
<b>fast forward</b> 	Press & hold  right for at least two seconds.
<b>skip to next song</b> 	Press  right.
<b>rewind</b> 	Press & hold  left for at least two seconds.
<b>go back to previous song</b> 	Within first two seconds of song, press  left.
<b>return to song beginning</b> 	After first two seconds of song, press  left.
<b>scroll up/down</b>	Press  up or down.
<b>turn off music player</b>	Press  .

15

## play music


### replay, shuffle, & other options

Press **Options** while using the music player to choose from these options:

option	
<b>Now Playing</b>	Return to the music player.
<b>Hide</b>	Allows the music player to play in the background.
<b>Pause/Resume</b>	Pause/resume play.
<b>Play</b>	Begin playing the current selection.
<b>Song Details</b>	View details about the song.
<b>Repeat</b>	Replay one song (when you select a single song for play—does not play a playlist or album).
<b>Shuffle</b>	Play songs in random order.

16

## play music

option	
<b>Visualization</b>	Select an animation to play with the music or display file information by pressing the navigation key  left or right and then pressing <b>Back</b> .  Visualization appears on the screen after about 10 seconds of music.
<b>Search?</b>	Set whether the player searches for new music on the memory card <b>when you first activate the player</b> :  <b>Always</b> —Search automatically.  <b>Ask</b> —Prompt you to begin or skip searching.  <b>Never</b> —Do not allow a search when the player is activated.
<b>Search for Songs</b>	Search for new music on the memory card. (Searching makes the music player stop playing.)




 



17

## play music

option	
<b>About</b>	View detailed information about the music player.


### browse & play music



**Find it:**  >  Media Gallery > Music Player

- 1 Scroll to **Artists, Albums, Songs, or Genres** and press .
- 2 Scroll to the item you want and press .
  - For an **artist**, select an album. Play the entire album by pressing . Play one song by scrolling to the song you want to play and pressing . Play all songs by the artist by pressing **Options** > **Play** > **Select**.
  - For an **album**, you can play the entire album by pressing . Play one song by scrolling to the song you want to play and pressing .
  - For a **song**, you can play the entire album beginning with the song by pressing .




18

## play music

one song by scrolling to the song you want to play and pressing .

- For a **genre**, select the artist and album. You can play the entire album beginning with the song by pressing . Play one song by scrolling to the song you want to play and pressing . Play all songs in the genre by pressing **Options** > **Play** > **Select**.

After playing a song, the player continues by playing the next song in the list.

**Note:** Your phone keeps a list of most recently played songs. To find this list, press  >  **Media Gallery** > **Music Player** > **Recently Played**. To play a song from this list, scroll to the song and press .


19

## play music



### wake up music player

While the music player is active, your phone may conserve battery power by turning off the display and keypad backlights.

**To turn display and lights back on:**

slider position	
closed	Press  .
open	Press a number key.

### turn off music player

slider position	
closed	Press  .
open	Press  or press <b>Back</b> until you return to the <b>My Music</b> menu, then press <b>Exit</b> .

20

## play music

### music player tips

- If you are navigating music player menus while a song is playing and don't press a key for more than 20 seconds, the player returns to the current song list screen.
- If you receive a call while playing music, the music pauses. You can **Ignore** the call and send the caller to voicemail or **Answer** the call. Playing resumes when you end the call.
- If you receive a message while playing music, the music pauses. You can **Read** the message now or **Cancel** to read it later and continue listening to music.
- If the music player is hidden, you can use other phone features. Using applications like the camera or video recorder turns the music player off. After you close the applications, you have to launch the player again.

21

## play music


### playlists

#### create a playlist


**Find it:**  >  **Media Gallery** > **Music Player** > **Playlists** > **[Create New Playlist]**


- Enter a name for the playlist and press **Ok**.

**Note:** Playlist names must be all lowercase, less than 32 characters, and must not include these special characters: / \ : \* ? < > | " !

- Scroll to a song you want to add and press .

**or**

Press  left or right to see lists of songs organized by artist, album, or songs.

When you select a song, a ✓ appears beside the song. (To unselect a song, scroll to the song and press  again.)



- Keep adding songs until you've created your playlist, and then press **Done**.

22


# play music

## play a playlist

**Find it:**  >  Media Gallery > Music Player > Playlists

- 1 Scroll to a playlist and press .
- 2 To play the entire playlist beginning with the first song, press .

or

To play one song, scroll to the song you want to play and press . The player will then to play the next song in the list.

or


To play all songs from all playlists, press **Options**, scroll to **Play**, and press **Select**.

**Note:** The ringtones playlist holds all of the preloaded ringtones (so the music player does not play them with the rest of your music). You can edit the ringtones playlist to add new ringtones, but you cannot remove or rename it.


23

# play music

## edit or delete a playlist

- 1 Select a playlist and press **Options**.
- 2 Scroll to **Edit Playlist** to edit the playlist name or **Delete Playlist** and press .

## reorder a playlist

- 1 Select a playlist and press **Options**.
- 2 Scroll to **Reorder Playlist** and press .
- 3 Scroll to the song you want to move and press **Grab**.
- 4 Scroll to the position in the playlist where you want to move the song, and press **Insert**.
- 5 When you are finished, press **Done**.

24

# get music

## download & install free Jump Music software

- 1 Go to [www.alltel.com/jumpmusic](http://www.alltel.com/jumpmusic) to download the free software to your computer desktop.
- 2 Start the installation by double-clicking the downloaded file on your desktop.
- 3 Follow the installation wizard prompts to accept the license agreement, choose the file location on your computer, and complete the installation.

**Note:** For step-by-step installation instructions and a complete description of the Jump Music software, see the online FAQ at [www.alltel.com/jumpmusic](http://www.alltel.com/jumpmusic).

- 4 After installation finishes, start Jump Music by double-clicking the icon on your desktop.

The first time you run Jump Music, it builds a library of your digital music by scanning either your My Music folder and desktop or your entire hard drive. The first option is much faster, but if you have music in many places on your hard drive, you may want a more thorough scan.

25

# get music

## get songs from a CD with Jump Music

- 1 Insert a music CD into your computer.
- 2 When prompted by Windows Audio, select **Import Songs using Alltel Jump Music** to list songs in the Music Pane and import all songs.

You can also select **Play Songs using Alltel Jump Music** to list songs and play the first song or **Show Songs using Alltel Jump Music** to list songs only.

**Note:** If you always want to do the same action for a CD, select **Always do this action** and click **OK**.

After a pause, the CD loads, and Jump Music retrieves song information from the Internet. The list of songs appears in the Music Pane.

By default, songs are imported to the My Music folder on your computer. To change this, click

26



## get music

**Browse**, navigate to the folder you want, and click **OK**.

**Note:** For more Jump Music editing and personalizing options, see the online FAQ at [www.alltel.com/jumpmusic](http://www.alltel.com/jumpmusic).

- 3 To import (rip) all songs from the CD, click **Import** (without selecting specific songs).

To import specific songs from the CD, select the songs and click **Import**.

Alternately, you can choose **Import Songs from Alltel Jump Music** in the Windows Audio CD dialog.

**Note:** If your phone is connected to your computer, you can choose to **Import only**, or **Import and move to the phone**.

A spinning icon appears next to a song that is being imported. When finished, the spinning icon turns into a check mark.

To cancel the import, click **Cancel**.

27

## get music

### transfer files with Jump Music

**Note:** To transfer files using a Bluetooth connection, see your User's Guide.

Transfer files from a computer to your phone or removable memory card. You can also transfer files from phone to memory card to free up phone memory.

**Note:** Your phone does not support DRM protected music files. The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

28

## get music

### transfer from computer to phone or memory card

- 1 If you do not have music on your computer, import music as described in "get songs from a CD with Jump Music" on page 26.
- 2 Connect your phone to your computer. When your phone is connected, it appears in the Jump Music Wireless Phone Pane.
- 3 To transfer songs from your computer to your phone, select the songs and click **Move**.

You can also drag songs from the Music Pane to the Wireless Phone Pane.

**To delete songs from your phone**, click the X icon next to each song in the Wireless Phone Pane. Deleting songs increase storage space on the phone's memory card.

To delete songs from your Music Library, right-click on songs and select **Delete**. Deleting songs from your Jump Music library does not affect the original song files on your hard drive.

**Note:** Due to copyright law, Jump Music will not transfer music from your wireless phone to your computer. It also

29

## get music

will not transfer DRM protected music to your wireless phone, although it can play these songs directly from your computer if they are MP3, M4A, M4P, or WMA files.


**Your phone must search for changes on the memory card so that the music player finds your transferred files.** If the music player asks to search, press **Yes**. If not, perform the search by pressing **Options > Search for Songs**.

**To adjust scanning**, press **Options > Search?** and select **Ask**, **Never**, or **Always**.

### transfer from phone to memory card

**Caution:** Moving a file to the memory card deletes the original file from phone memory.



**Find it:**   Media Gallery

- 1 Scroll to **Pictures**, **Sounds**, or **Videos** and press **Select**.  
**Note:** You cannot move pictures to the memory card that came preloaded on your phone.
- 2 Scroll to the file you want to copy or move and press **Options**.
- 3 Scroll to **Mark** and press  right.

30



## get music

- 4 Scroll to **Current** (to mark the selected file) or **All** (to mark all files) and press **Select**.
- 5 Press **Options**, then scroll to **Manage Marked Files** and press  right.
- 6 Scroll to **Copy** or **Move** and press **Select**.
- 7 Scroll to the device where you want to copy or move the file and press .

**Your phone must search for changes on the memory card so that the music player finds your transferred files.** If the music player asks to search, press **Yes**. If not, perform the search by pressing **Options > Search for Songs**.

**To adjust scanning**, press **Options > Search?** and select **Ask**, **Never**, or **Always**.

31

## Bluetooth®

### pair with headset, handsfree device, or other audio device

**Before you try to connect to another Bluetooth audio device**, make sure your phone's Bluetooth power is **On** and the device is in *pairing mode* (see the user guide for the device). You cannot perform pairing if your phone is connected to another device.

**To pair your phone with an audio device:**


**Find it:**  >  **Bluetooth Link > Audio Devices > [Look For Devices]**

**Note:** If Bluetooth power is not on, your phone prompts you to turn it on.


Your phone displays a list of audio devices located within range of the phone. If your phone is already connected to a device, your phone lists that device and identifies it with a ✓ (in-use indicator). After a connection is established with a device, no other device can connect to your phone until the currently connected device is disconnected.

32

## Bluetooth®

- 1 Highlight a device in the list of devices.
- 2 Press  to connect the device.
- 3 If the device requests permission to bond with your phone, select **YES** and enter the device PIN code to create a secure connection with the device.

**Note:** The default PIN code is **0000**.

When the connection is made, the  (Bluetooth) indicator or a **Bluetooth** message displays in the home screen, and the Bluetooth indicator light displays on the outside of the phone.

If you are connecting to a computer, use the Bluetooth wizard or online help to determine what services are available.

**Tip:** For information about an accessory, see the instructions that came with it.

33

## find answers

### How long does it take to search for songs on a memory card?

Search time depends on the size of the memory card, how many songs it holds, and how much information each song has. Searching a card can take anywhere from 15 seconds to 5 minutes.

### Why is there a playlist called \*ringtones?

This playlist contains the preloaded ringtones for your phone (so the music player does not play them with the rest of your music). You can edit the ringtones playlist to add new ringtones, but you cannot remove or rename it.

### Why can't I see all my songs in different categories (artist, album, genre)?

When you load a song, information about the artist, album, and genre is loaded into your music player's Artists, Albums, and Genres folders. Sometimes this information is not available, so your phone loads the song as Unknown and that song does not appear in the folder. However, all songs are listed in the Songs folder.

34

## find answers

### Why doesn't my computer recognize the phone's removable memory card, even though the card was formatted by the phone?

Your computer may be unable to recognize a removable memory card that was formatted by the phone. When the computer prompts: "Do you want to reformat?" Click "Yes" to continue. Be aware that formatting the memory card erases all content on the card.

### Where can I find more answers to my questions?

If you have questions or need assistance, we're here to help.

Go to [www.motorola.com/consumer/support](http://www.motorola.com/consumer/support), where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

35

### [www.hellomoto.com](http://www.hellomoto.com)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Microsoft and Windows are registered trademarks of Microsoft Corporation; and Windows XP and Windows Media are trademarks of Microsoft Corporation. Macintosh is a registered trademark of Apple Computer, Inc. All other product or service names are the property of their respective owners.

© Motorola, Inc., 2007.

**Caution:** Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Manual Number: 6809517A69-0

36

[www.motorola.com](http://www.motorola.com)



**MOTOROLA**

