 




Note: Before using your phone for the first time, be sure to review the important safety information in the user's guide. Periodically review this information so you remember how to safely use your phone.


insert your SIM card

Your Subscriber Identity Module (SIM) card stores your phone number and other information. Turn off your phone and remove your battery before you install or remove a SIM card




insert a memory card

You can store photos, sounds, and other multimedia files on a removable memory card. Your phone can support a memory card up to 2GB.

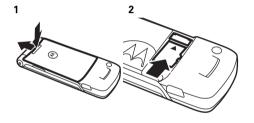


insert your battery

 

charge your battery

 New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. Your battery status icon flashes once it



starts charging. Your main display shows **Charge Complete** when finished

turn it on & off

Press and hold for a few seconds or until the keypad or display lights up.

To turn off your phone, press and hold of for a few seconds.



make a call

Enter a phone number and press ① to make a call. To "hang up," press ② or close the flip.

answer a call

When your phone rings and/or vibrates, just open the flip or press ① to answer. To "hang up," press ② or close the flip.

HELLOMOTO

Introducing your new MOTOKRZR™ K1 GSM wireless phone.



Tip: Press the *center key* • • to open the main menu and select menu options. Press the *clear/back key* ⑤ to delete letters or numbers or to go back one menu. Press the ※ and # keys to see different categories in lists like your Call History and Contacts.

customize

ring style

Shortcut: In the home screen, press the volume keys up or down to quickly change your ring style.

Press •• > 🖁 Settings > Ring Styles > Style: and select:

△3) Loud ③B∜ Vibrate №△ Vibe Then Ring
△3 Soft ③△5 Vibe & Ring △5 Silent

Tip: Your current ring style icon shows at the top of your screen

wallpaper

Choose your display background image:

Press • > B Settings > Personalize > Wallpaper

screen saver

Choose the image or animation that shows when your phone is open but inactive.

Press • > \blacksquare Settings > Personalize > Screen Saver

Tip: This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.

phonebook

store a phone number

Note: You can store new contacts in your phone's memory or on your SIM card. Contacts on the SIM card only have a Name and Number.

Press • > Contacts, then press Options > Create New > Phone Contact or SIM Contact

- 2 Press the Done key to store the number.

call a stored phone number

- Press •• > **C** Contacts
- Scroll to the phonebook entry.
 Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want.
- 2 Press to call the entry.

Note: You can show contacts stored in your **phone's memory** or on your **SIM card**. Press $-\hat{\phi}$ > \bigcirc Contacts, then press Options > View > Phone & SIM Card, SIM Card, or Phone Contacts.

voice commands

using voice commands

You can use voice commands to tell your phone what to do

- Press and release the voice command key on the 1 right side of your phone.
- 2 Your phone says "Say a command" and shows a list of voice commands, including: Call <Name or #> (such as "Call 555-1212" or "Call John" replacing John with a name from your phonebook). Send E-mail <Name>. Send Voice Note <Name or #>. Send Message <Name or #>. Lookup <Name>.

Go To <App> (such as "Go To Received Calls", Check < Item> (such as "Check Battery"), and

Turn Prompts Off

Tip: For voice command help, press the **voice** command key, then press the Help soft kev.

images

take a photo & store or send it

Press • > \blacksquare Media > Camera to see the camera viewfinder.

Press the *center key* • to take the photo in the viewfinder.

- To store the photo, press Options > Store in Phone.
- To send the photo in a message, press the Send key.

Note: Some other phones or networks do not support messages containing pictures.

To discard the photo, press .

edit a stored photo Press • > Media > Graphics

- 1 Scroll to the photo.
- 2 Press Options > Edit. You can choose settings such as Brightness and Contrast, or effects such as Blur and Sharpen, Rotate, Mirror, Borders and Styles. You cannot edit some copyrighted files.

images

record a video & store or send it

Press • > \blacksquare Media > Video Camera to see the viewfinder.

If you want to send your video in a message, the video length must be set to MMS. To set length, press Options > Video Camera Setup > Video Length.

- 1 Press the *center key* to start recording the video in the viewfinder
- 2 Press the Stop key to stop recording the video.
 - To store or discard the video, press the Options key.
 - To send the video in a message, press the Send key. Enter the message text, press Send To, and select a recipient.

Note: Some other phones or networks do not support messages containing videos.

• To discard the video, press .

memory card

see and copy files on your memory card

To see the files stored on your memory card, open a file list such as Media > Graphics. Icons can indicate if a file is stored in your phone memory () or on your memory card ().

To copy or move a file **from your phone to your memory card**, highlight it in the list and press **Options > Manage > Copy** or **Move > Memory Card**. You cannot copy or move some copyrighted files.

To copy a file **from your memory card to a computer**, you can use a cable connection or a Bluetooth™ connection.

Note: If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.

Bluetooth™ wireless

use a headset or handsfree car kit

Your phone can make handsfree calls using a Bluetooth headset or car kit.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Before you try to connect your phone with a handsfree device, make sure the device is on and ready in pairing or bonding mode (see the user's guide for the device). You can connect your phone with only one device at a time.

Press · • ·> 🖁 🕏 Settings > Connection > Bluetooth Link > Audio Devices > [Look For Devices]

Your phone lists the devices it finds within range.

Scroll to a device in the list and press the center key ••.

Bluetooth™ wireless

- 2 Press the Yes or OK key to connect to the device.
- 3 If necessary, enter the device passkey (such as 0000) and press the OK key.

When your phone is connected, the Bluetooth indicator shows in the home screen.

Shortcut: When Bluetooth power is on, your phone can automatically connect to a handsfree device you have used before. Just turn on the device or move it near the phone. To turn Bluetooth power on, press • Settings > Connection > Bluetooth Link > Setup > Power > On.

For more specific information about a Bluetooth headset or car kit, refer to the instructions that came with it.

accessories



HF850 Bluetooth™ Car Kit



Bluetooth™ Headset S805



Stereo headset S200



Bluetooth™ Headset H700



Bluetooth™ Headset H670

accessories



MicroSD™ Memory Card



Motorola PhoneTools with Cables



Travel Charger



Car Charger

www hellomoto com

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems. Inc. in the U.S. and other countries.

© Motorola, Inc., 2006.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Manual Number: 6809505A94-0



