 


**I N F O**

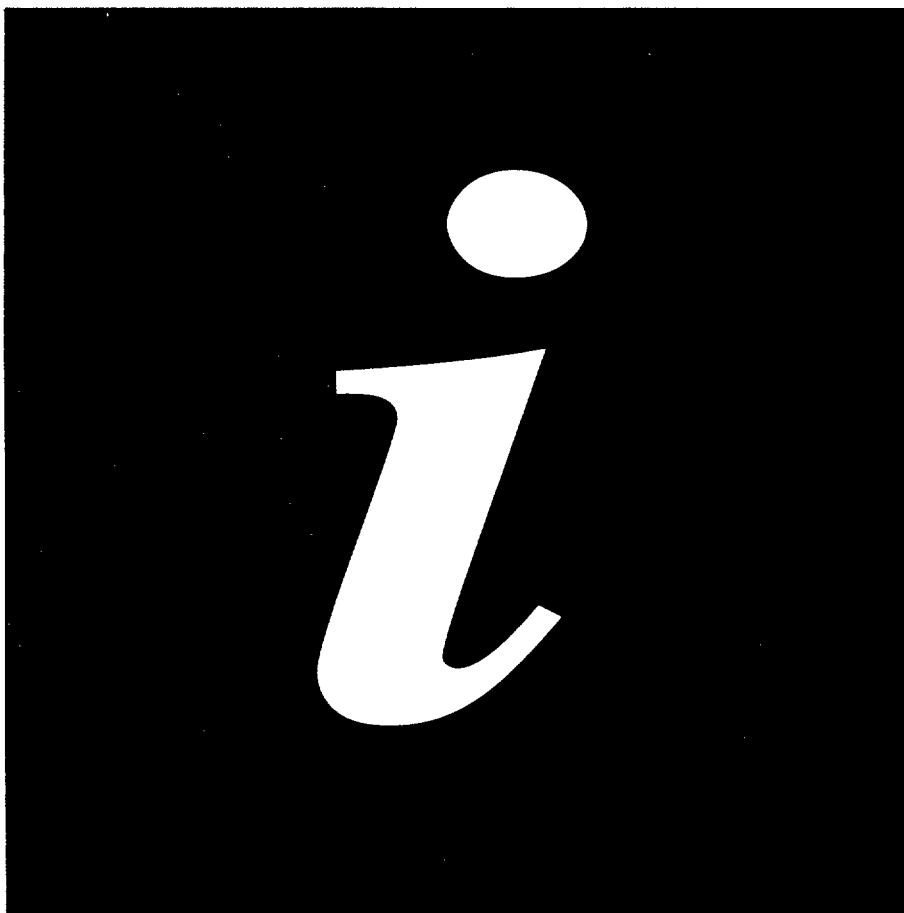

**INSTALLATION AND INSTRUCTION MANUAL  
FREEZER EU 0562 C**

 **Electrolux**

A/E/1-1 (97.)

---

# SAFETY INFORMATION

---

It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is left with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant safety information.

These warnings have been provided in the interest of safety. You **MUST** read them carefully before installing or using the appliance.

## Installation

- This appliance is heavy. Care should be taken when moving it.
- It is dangerous to alter the specifications or attempt to modify this product in any way.
- Care must be taken to ensure that the appliance does not stand on the electrical supply cable
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- This appliance should be left for 2 hours after installation before it is turned on in order to allow the refrigerant to settle.
- There are working parts in this product which heat up. Always ensure that there is adequate ventilation as failure to do this will result in possible food loss. See installation instructions.
- Parts which heat up should not be exposed. Wherever possible, the back of the appliance should be close to a wall but leaving the required distance for ventilation as stated in the installation instructions.
- Ice lollies can cause "frost/freezer burns" if consumed straight from the freezer.
- Do not remove items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or "frost/freezer burns".
- The cooling plate or refrigerated freezer shelves in this appliance contain channels through which refrigerant passes. If these are punctured this would cause substantial damage to the appliance and result in food loss. **DO NOT USE SHARP INSTRUMENTS** to scrape off frost or ice. Under **NO** circumstances should solid ice be forced off the lining or shelves. Solid ice should be allowed to thaw, when defrosting the appliance. See Defrost instructions.
- Manufacturers' recommended storage times should be adhered to. Refer to relevant instructions.
- This product should be serviced by an authorised engineer, and only genuine Electrolux spare parts should be used.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Electrolux Service Force Centre.

## Child Safety

- This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the product.

## During Use

- Electrolux domestic refrigerators, freezers and fridge/freezers are designed to be used specifically for the storage of edible foodstuffs only.
- Before defrosting, cleaning or maintenance work is carried out, be sure to switch off the appliance and unplug it.
- Frozen food should **NOT** be re-frozen once it has thawed out.
- Do not place carbonated or fizzy drinks in the freezer as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance.

---

# CONSERVATION

---

## In the interests of the Environment:

When disposing of your old fridge, freezer or fridge/freezer:

- Help to keep your country tidy - use authorised disposal sites for your old appliances.
- If you are discarding an old appliance that has a lock or catch on the door, you must ensure that it is made unusable to prevent young children being trapped inside.

Check with your local Council or Environmental Health Office to see if there are facilities in your area for re-cycling this appliance.

## For Maximum Efficiency

- Make sure that the appliance is cleaned properly.
- Make sure that the door is closed properly.
- Do not position the appliance near to sources of heat.
- Do not over-fill your appliance, air **MUST** be allowed to circulate.
- Do not open the door for longer than is absolutely necessary, as warm air will enter the appliance.

---

# TECHNICAL SPECIFICATIONS

---

<b>Dimensions:</b>	<b>EU0562</b>
Height:	52 cm
Width:	52.5 cm
Depth:	59 cm
Capacity:	1.7 cuft
Star Rating:	4
Voltage:	230 V
Frequency:	50 HZ
Average Daily Units of Electricity:	0.68 kwh*

\* This figure is based on standard test results in accordance with European Standard EN153. Actual consumption will depend on how the appliance is used and where it is located.

**This appliance complies with E.E.C. directive No 87/308 of 2.6.87 relative to radio interference suppression.**



This appliance complies with the following E.E.C Directives:

**73/23 EEC** of 19.2.73 (Low Voltage Directive) and subsequent modifications;

**89/336 EEC** of 3.5.89 (Electromagnetic Compatibility Directive) and subsequent modifications.

---

# CONTENTS

---

<b>Safety Information</b>	Page 2
<b>Conservation</b>	Page 3
<b>Technical Specifications</b>	Page 3
<b>Installation</b>	Page 5
Location	Page 5
Door Reversal	Page 5
<b>Electrical Connections</b>	Page 6
<b>General Features</b>	Page 7
<b>Using Your Machine</b>	Page 8
Starting Up and Temperature Regulation	Page 8
Frozen Food Storage	Page 8
Defrosting	Page 9
<b>Health and Safety Guidelines</b>	Page 9
<b>Maintenance and Cleaning</b>	Page 10
Interior and Exterior Cleaning	Page 10
When the appliance is not in use	Page 10
<b>What Happens If Something Goes Wrong?</b>	Page 11
<b>Guarantee Conditions</b>	Page 12
<b>Electrolux Service Force</b>	Page 13

# INSTALLATION

## IMPORTANT

If you are discarding an old refrigerator or freezer that has a lock on the door, you **MUST** ensure that the lock is made unusable to avoid young children being trapped inside.

## LOCATION

Place the appliance away from all heat sources, such as, radiators, cookers, direct sunlight etc. Best results are obtained with room temperatures ranging between +16°C and +32°C.

You should ensure that air can circulate freely around the back, top and bottom of the appliance. There must be a minimum distance of 100mm (4") between the top of the appliance and any overhanging kitchen furniture, see fig 1(A). However the recommended installation would be as shown in Fig 1(B), with no overhanging kitchen furniture.

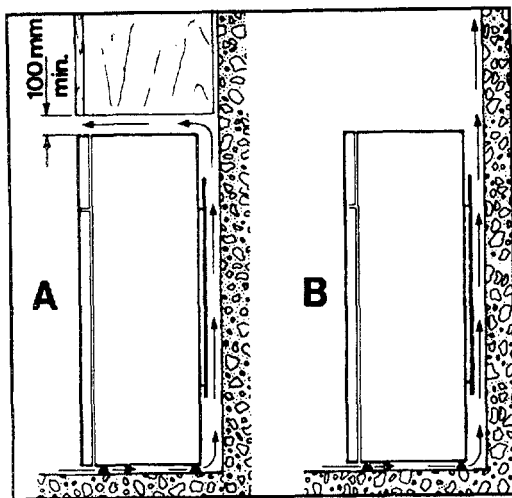 


Fig 1

## DOOR REVERSAL

Before carrying out this procedure, disconnect the appliance from the electricity supply.

Remove the hinge cap and 2 screws securing the top hinge. Remove the 2 white caps on the opposite side of the cabinet, and refit the hinge in the vacant holes. Replace the 2 white caps in the holes that have been vacated by the hinge. (See fig 2)

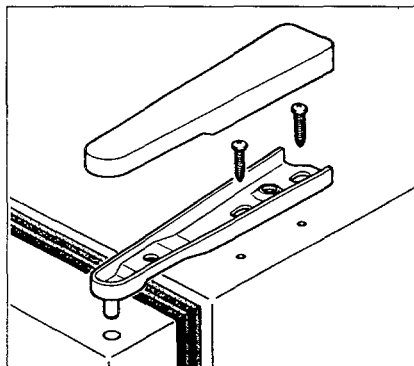 


Fig 2

Remove the 2 screws securing the bottom hinge and refit on the opposite side. (See fig 3).

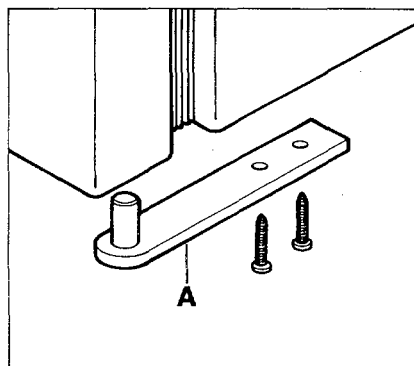 


Fig 3

Remove the 2 screws securing the door handle and refit on the opposite side of the door (the holes are already provided). Replace caps in vacant holes.

**Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown.**

# ELECTRICAL CONNECTIONS

**WARNING: THIS APPLIANCE MUST BE EARTHED.**

**The Manufacturer declines any liability should this safety measure not be observed.**

If the plug fitted to your appliance is not suitable for your socket outlet, it must be cut off and the appropriate plug fitted.

Remove the fuse from the cut off plug. The cut off plug should be disposed of to prevent the hazard of electric shocks in case it should be plugged into a 13 amp socket in another part of your home.

## IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

<b>Green and Yellow</b>	-	<b>Earth</b>
<b>Blue</b>	-	<b>Neutral</b>
<b>Brown</b>	-	<b>Live</b>

If you fit your plug the colours of the wires in the mains lead of your appliance may not correspond with the markings identifying the terminals in your plug, proceed as follows, see Fig 4.

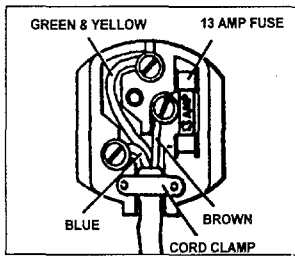 


Fig 4

Connect the Green and Yellow (earth) wire to the terminal in the plug which is marked with the letter 'E' or the earth symbol  $\oplus$ , or coloured green and yellow.

Connect the blue (neutral) wire to the terminal in the plug which is marked with the letter 'N' or coloured black.


Connect the brown (live) wire to the terminal in the plug which is marked with the letter 'L' or coloured red.

The plug supplied with this appliance incorporates a fuse. For replacement, use a 13 amp BS1362 fuse. Only ASTA or BS1 approved fuses should be used. Care must be taken to ensure that the top cover is refitted without causing damage to either the top cover or base. In the event of the plug becoming damaged or cracked it must be replaced with an equivalent 13 amp BS1363 plug and rewired as shown in fig 4.

---

# GENERAL FEATURES

 ---

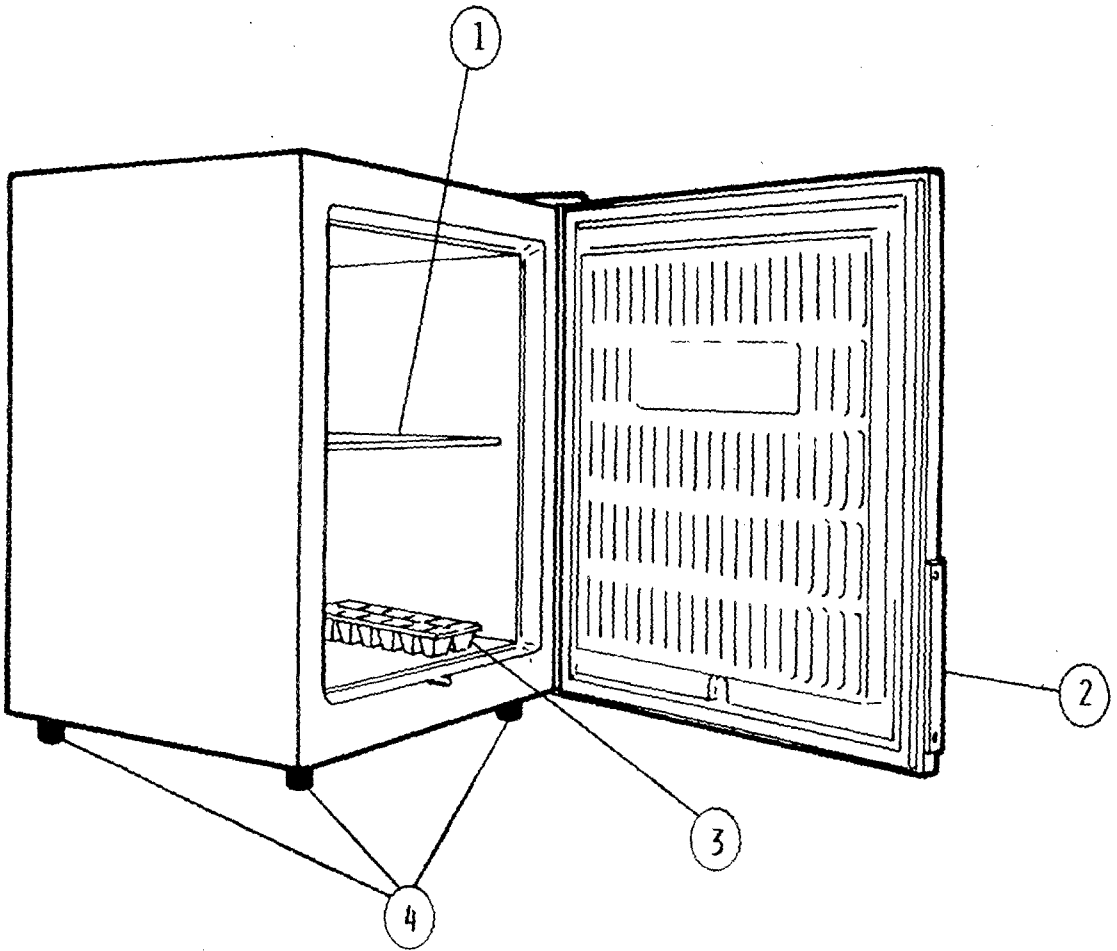

- 1 Storage Shelf
- 2 Handle
- 3 Ice Tray
- 4 Feet

---

# USING YOUR APPLIANCE

---

## Before using

Remove all securing tapes. Wash the inside of the appliance with lukewarm water with a little bicarbonate of soda added (5ml to 0.5 litre of water). Do not use soap or detergent as the smell may linger. Dry the appliance thoroughly.

This appliance should be left for 2 hours after installation before it is turned on, to allow the refrigerant to settle.

## Starting-Up and Temperature Regulation

To operate the appliance, turn the thermostat control knob, which is located on the side of the cabinet, to the 'SUPER' position (to freeze) or to the 'NORMAL' position (to store) as may be required.

## Frozen Food Storage

If the appliance has not been used previously, it must be left to run for at least 3 hours with the thermostat knob in the 'SUPER' position, at least 24 hours before introducing fresh food to be frozen. Once the food is placed in the freezer, leave the appliance running on 'SUPER' for a further 24 hours, after which the freezing process is completed. Then, switch back to normal operation, by turning the thermostat control knob to the 'NORMAL' position.

Your appliance has the following net storage volume 50 litres\*, and the maximum amount of fresh food that can be frozen in 24 hours is 15.4lb (7kg).

\* This is a standard measurement, the actual capacity depends upon the density and sizes of the food. The above figures are based on an average density of 0.32kg per litre (20lb per cu ft).

Food to be frozen must be placed on the bottom of the inner liner and not on the shelf.

Pre-packed frozen food should be put in the freezer as soon as possible after purchase.

Your freezer provides for long term storage which generally means up to 3 months, but the length of time can vary and it is important to follow the recommended times shown on packets of commercially frozen food.

Any open packets of frozen food, should be re-wrapped in airtight materials to prevent surface evaporation which causes drying or 'freezer burn'.

## IMPORTANT

In the event of a power failure do not open the freezer door while the power is off. The frozen food should not deteriorate if the power failure is of short duration and the freezer is full. If the temperature within your freezer should rise do not re-freeze the food without checking its condition. The following guidelines should assist you.

- |                                      |  |
|--------------------------------------|--|
| <b>Ice Cream:</b>                    | Once thawed, should be discarded.  |
| <b>Fruit &amp; Vegetables:</b>       | If soft should be cooked and used up.  |
| <b>Bread &amp; Cake:</b>             | Can be re-frozen without danger.   |
| <b>Shellfish:</b>                    | Should be refrigerated and used up quickly.                                    |
| <b>Cooked Dishes:</b><br><b>i.e:</b> | Casseroles, should be refrigerated and used up.                                |
| <b>Large Pieces Of Meat:</b>         | Can be re-frozen providing there are still ice crystals remaining within them. |
| <b>Small Joints:</b>                 | Should be cooked and can then be re-frozen as cooked dishes.                   |
| <b>Chicken:</b>                      | Should also be cooked and re-frozen as a cooked dish.                          |

## Important

Do not place sealed containers of carbonated liquids such as fizzy into the freezer as it creates pressure on container which may cause it to explode, resulting in damage to the freezer.

Ice cubes and ice lollies should not be consumed immediately after removal from the freezer as it may result in low temperature skin abrasions.

Aim to check dates on packets and rotate food regularly. Although, storage longer than recommended is not harmful, flavours and textures begin to deteriorate.



---

# DEFROSTING

---

## DEFROSTING

The freezer compartment will become progressively cover with frost which should be removed on a regular basis with the special plastic scraper provided. During this operating, it is not necessary to switch off the power supply or to remove the foodstuffs. However, when the ice becomes very thick, or exceeds 1/4", on the inner liner, complete defrosting should be carried out when the freezer is empty.

### To carry out complete defrosting

- Remove any food from inside and wrap in several sheets of newspaper and place in a refrigerator or a cold place.
- Turn the thermostat control knob to the 'STOP' position.
- Leave the door open and place a bowl of hot water (not boiling) inside the freezer, the hot water will accelerate the defrosting process.
- When defrosting is complete, clean and dry the freezer thoroughly.
- Close the door and turn the thermostat control knob to the 'SUPER' position for at least 3 hours, after which the frozen food can be replaced in the freezer and the knob turned to the 'NORMAL' position.

---

# HEALTH AND SAFETY GUIDELINES

---

**Because of consumer demand, preservatives have been removed from many pre-prepared foods. This, together with the changes in shopping habits to a once-a-week shop, mean that safe handling and storage of food is more important than ever.**

**The following tips should help you to ensure that the food in your home is in as perfect condition as possible.**

- Keep the time between buying chilled food and placing it in your fridge as short as possible. Tests showed that the temperature of 1 litre of orange juice rose to 22°C in an hour between the supermarket and home. It then took 11 hours to get down to 7°C in the refrigerator.
- Keep the freezer door closed as much as possible. Remember that warm air is flowing in as you are deciding what to have for tea!
- Do not push food together too much, try to allow air to circulate round each item.
- Cool cooked food as quickly as possible but do NOT place in the fridge until cool.
- Do not store food uncovered.
- The safest way to defrost food is to put it in the refrigerator to thaw slowly.
- It is important that food is used before its "best before" date.
- Ensure that food placed in the freezer is dated and labelled and used in date order to ensure that food is consumed at its best
- Always wash your hands in soapy water and dry them with a clean towel before handling food.
- Keep work surfaces clean and avoid cross-contamination by not using the same work surface or knife, without washing them thoroughly.
- Use kitchen roll wherever possible for cleaning up food. If you use a dishcloth, be sure to boil it frequently.
- DO connect the appliance to an electricity point which is not liable to be switched off accidentally.
- DO follow the instructions given on the operation of the temperature control to ensure efficient operation.
- DO wrap and cover foods for perfect storage.
- DO ensure that when the fridge is to be out of service for some time, that the interior is carefully cleaned, dried, the door left ajar and the plug is removed from the electrical supply socket.
- DO NOT open the door more often or for longer than is necessary, as this allows a temperature rise and also causes a rapid build-up of frost.
- DO NOT prevent the free passage of air to the back of the freezer.
- DO NOT turn the current off at the mains if you intend to leave the fridge in use whilst on holiday.
- DO NOT overload the interior. To do so will restrict the circulation of cooled air currents, which are necessary to help maintain the correct storage temperature conditions. This does not apply to the frozen food packages stored in the frozen food compartment, these can be packed closely together.

# MAINTENANCE AND CLEANING

Before any maintenance or cleaning is carried out, DISCONNECT the appliance from the ELECTRICITY supply.

## Interior Cleaning

All parts of the interior should be wiped with a soft cloth, warm water and bicarbonate of soda (5 ml to 0.5 litre of water). Rinse and dry thoroughly.

Ensure that no moisture runs down behind the temperature control panel.

**Never use DETERGENTS, ABRASIVE POWDERS, HIGHLY PERFUMED CLEANING PRODUCTS OR WAX POLISHES, TO CLEAN THE INTERIOR AS THESE WILL DAMAGE THE SURFACE AND LEAVE A STRONG SMELL.**

Clean the drain hole and the water trough of defrost water at regular intervals, and make sure that the drain hole is never obstructed, so that the defrost water can flow freely.

## Exterior Cleaning

Wash the outer cabinet with warm soapy water. Do NOT use abrasive products.

Once or twice a year dust the condenser (Black grill) and the compressor at the back of the appliance, with a brush or vacuum cleaner, as an accumulation of dust will affect the performance of the appliance and cause excessive electricity consumption.

## When the appliance is not in use

When the appliance is not in use for long periods, disconnect from the electricity supply, empty all foods and clean the appliance, leaving the door ajar to prevent unpleasant smells.

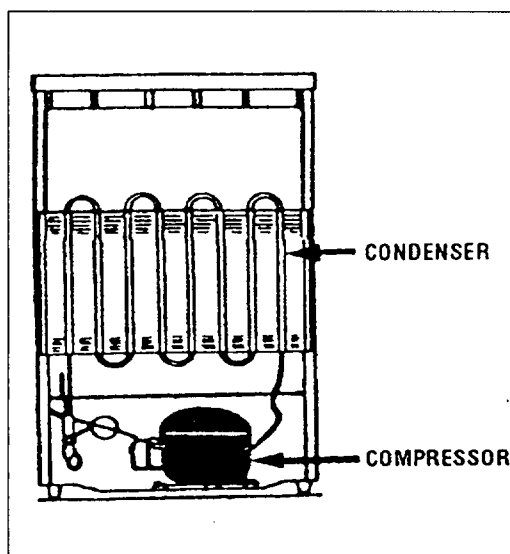 


Fig 6

**You MUST ensure the appliance is switched OFF at the mains supply before carrying out this operation.**

---

# SOMETHING NOT WORKING

---

Before contacting your local Electrolux Service Force Centre, please make the following checks:

## **The appliance does not work...**

Check that:

- There is power at the socket.
- Ensure that there is not a power cut by checking the household lights.
- The fuse has not blown.
- The air circulation passages are not covered.
- The thermostat dial is in the correct position.

## **Vibration or abnormal noises...**

- You may hear faint gurgling or bubbling sounds when the refrigerant is pumped through the coils of tubing at the rear, to the cooling plate/evaporator. When the compressor is on, the refrigerant is being pumped round, and you will hear a whirring or pulsating noise from the compressor.
- A thermostat controls the compressor, and you will hear a faint "click" when the thermostat cuts in and out.

## **Other points to check...**

Check that:

- Have you turned the thermostat to the correct setting?
- Has the door been left open causing the temperature to rise?
- Sometimes the freezer door will be difficult to open shortly after you have closed it. Don't worry this is due to pressure difference which will quickly equalise and allow the door to open normally.

If after carrying out the necessary checks the fault remains, please call your local Electrolux Service Force Centre. The address and telephone number can be found, at the back of this instruction manual and can also be found in your local telephone directory under 'E'.

**In-guarantee customers should ensure that the necessary checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.**

**Please note that proof of purchase is required for any in-guarantee service calls.**

Before contacting your local Electrolux Service Force Centre, make a note of the model and date of purchase of your machine, the Service Department require this information.

## **Spare Parts**

Electrolux spare parts, may be purchased through your local Electrolux Service Force Centre.

## **Customer Care**

For general enquiries concerning your Electrolux appliance, or for further information on Electrolux products, you are invited to contact our Customer Care Department by letter or telephone as follows:

Customer Care  
Electrolux Limited  
101 Oakley Road  
Luton  
Beds  
LU4 9QQ

TEL: 01582 585858

---

# GUARANTEE

---

## Electrolux Standard Guarantee Conditions

This guarantee is in addition to your statutory and other legal rights.

We, Electrolux Ltd., undertake that if, within twelve months of the date of the purchase, this ELECTROLUX appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, the company will, at its option, repair or replace the same **FREE OF ANY CHARGE** for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's operating and maintenance instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- The appliance is still in the possession of the original purchaser.

All service work under this guarantee must be undertaken by a Electrolux Service Force Centre.

Home visits are made between **8:30am** and **5:30pm** Monday to Friday. Visits may be available outside these hours in which case **a premium will be charged**.

Any appliance or defective part replaced shall become the property of this company.

## Exclusions

**This guarantee does not cover:**

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right machines improperly installed or calls to machines outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of Electrolux manufacture which are **NOT** marketed by Electrolux Ltd.

EU Countries - The standard guarantee is applicable but is subject to the owner's responsibility and cost to ensure the appliance meets the standards set by the country to which the product is taken. The Electrolux Company in the country concerned will be pleased to advise further. Sight of your purchase receipt will be required by them.

# Electrolux Service Force - Postcode Cross Reference

Post Code	Telephone	Service Centre	Post Code	Telephone	Service Centre	Post Code	Telephone	Service Centre
AB	01224 696569	Aberdeen	HP	0181 965 9699	Canvey	PR	0990 929929	Preston
AL	0181 965 9699	Canvey	HR	01432 340334	Hereford	RG	01252 24505	Tonbridge
B1-48, 62-79, 90-94	0121 358 7076	Nuneaton	HS9	01871 890206	Isle of Barra	RH	01273 694341	Tonbridge
B49, 50, 60, 61, 80, 95-98	01527 512919	Redditch	HU	01482 585678	Hull	RM	01268 694144	Canvey
BA	0117 921 1876	Bristol	HX	0113 260 8511	Leeds	S	0113 260 8511	Leeds
BB	0990 929929	Preston	IG	01268 694144	Canvey	SA1-18, 21-32	01222 460131	Cardiff
BD	0113 260 8511	Leeds	IM	01624 687794	Manx Electricity	SA19, 20, 40, 45-48	01222 461972	Cardiff
BH	01705 667411	South Coast	IP	01603 667017	Canvey	SA33-39,41-44, 61-73	01437 710914	Haverfordwest
BL	0990 929929	Manchester	IV1-39, 52-56	01463 792952	Highland Appl.	SE	0181 658 9069	Tonbridge
BN1-18, 20-27	01273 694341	Tonbridge	IV40-51 Inverness	01855 821315	G Ross	SG	0181 965 9699	Canvey
BR	0181 658 9069	Tonbridge	Jersey	01534 505050	Jersey Electricity	Shetland -	01595 692855	Bolts
BS	0117 921 1876	Bristol	KA1-26, 28-30	0141 647 4381	Glasgow	Retailers' own sales	01806 566546	Leask Electrical
BT1-30, 36-57, 63-67	01232 746591	Northern Ireland	KA27	01773 302909	Isle of Arran		01595 692915	G Robertson
BT31-35, 60-62, 68-82, 92-94	01861 510400		KT	0181 658 9069	Tonbridge		01595 692225	Tait Electronics
CA	0990 929929	Carlisle	KW1-14	01463 792952	Highland Appl.	SK	0990 929929	Stockport
CB	0181 965 9699	Canvey	KW15-17	01856 875457	Orkney	SL	01252 24505	Tonbridge
CF	01222 460131	Cardiff	KY	0141 647 4381	Glasgow	SM	0181 658 9069	Tonbridge
CH	0990 929929	Birkenhead	L1-40	0990 929929	Liverpool	SN	01527 512919	Redditch
CM	01268 694144	Canvey	L41-46	0990 929929	Birkenhead	SO	01705 667411	South Coast
CO	01268 694144	Canvey	LA	01772 316175	Preston	SP	0117 921 1876	Bristol
CR	0181 658 9069	Tonbridge	LD	01432 340334	Hereford	SR	0191 493 2025	Northern
CT	01732 357722	Tonbridge	LE	01203 354424	Nuneaton	SS	01268 694144	Canvey
CV	01203 354424	Nuneaton	LL	0990 929929	North Wales	ST	0990 929929	Newcastle under Lyme
CW	0151 254 1724	Liverpool	LN1, 2, 4-6	01522 514603	Lincoln	SW	0181 658 9069	Tonbridge
DA	01732 357722	Tonbridge	LN3 Subcodes 4 & 5	01522 514603	Lincoln	SY1-6, 8-17, 19-22	01743 450279	Shrewsbury
DD	01250 876285	Dundee	LN3 Subcode 6 only	01472 267978	S. Humberside	SY7, 18	0990 929929	Oswestry
DE	0113 260 8511	Leeds	LN7, 11-13	01472 267978	S. Humberside	SY23-25		
DG	01387 265166	Dumfries	LN8-10	01522 514603	Lincoln	TA	0117 921 1876	Bristol
DH	01325 310400 / Northern 0191 493 2025		LS	0113 260 8511	Leeds	TD	01573 224411	Borders
DL	01325 301400	Northern	LU	0181 965 9699	Canvey	TF	01743 450279	Shrewsbury
DN1-7, 10-12	0113 260 8511	Leeds	M	0990 929929	Manchester	TN	01732 357722	Tonbridge
DN8-9, 15-20, 31-40	01472 267978	S. Humberside	ME	01732 357722	Tonbridge	TQ	01626 65909	Newton Abbott
DN14	01482 585678	Hull	MK	0181 965 9699	Canvey	TR1-20, 26, 27	01209 314407	Redruth
DN21			ML	0141 647 4381	Glasgow	TR21-25	0117 921 1876	South Coast
Subcodes 1, 2, 5	01522 514603	Lincoln	N	0181 443 3464	Canvey	TS	01325 301400	Northern
DN21			NE	0191 493 2025	Northern	TW	0181 658 9069	Tonbridge
Subcodes 3, 4	01472 267978	S. Humberside	NG1-22, 25	0113 260 8511	Leeds	UB	0181 965 9699	Canvey
DT	01705 667411	South Coast	NG23, 24, 31-34	01522 514603	Lincoln	W	0181 443 3464	Canvey
Dundee Gas Only	01382 642828	Tayside Refrigeration	NN	01203 354424	Nuneaton	WA	0990 929929	Stockport
DY	0121 358 7076	Nuneaton	NP1-4, 6, 9-44	01222 460131	Cardiff	WC	0181 443 3464	Canvey
E	0181 443 3464	Canvey	NP5, 7, 8	01432 340334	Hereford	WD	0181 965 9699	Canvey
EC	0181 443 3464	Canvey	NR	01603 667017	Canvey	WF	0113 260 8511	Leeds
EH	0141 647 4381	Glasgow	NW	0181 443 3464	Canvey	WN	0990 929929	Liverpool
EN	0181 443 3464	Canvey	OL	0990 929929	Manchester	WR (Not WR15)	01527 512919	Redditch
EX1-17	01626 65909	Newton Abbott	OX	01527 512919	Redditch	WR15	01203 354424	Nuneaton
EX18-23	01271 328826	Barnstaple	PA1-19, 21-23	0141 647 4381	Glasgow	WS	0121 358 5051	Nuneaton
EX31-39	01271 328826	Barnstaple	PA20	01700 504777	Rothesay	WV	0121 358 5051	Nuneaton
FK	0141 647 4381	Glasgow	PA24-26, 28-61	01369 703161	Argyll	YO1-3, 5-8	0113 260 8511	Leeds
FY	0990 929929	Preston	PA62-75	01688 302262	Isle of Mull	YO4,11-18, 25	01482 585678	Hull
G	0141 647 4381	Glasgow	PA83-87	01851 705555	Isle of Lewis	YO21, 22	01325 301400	Northern
GL	01527 512919	Redditch	PE1-13, 20-25	01522 514603	Lincoln			
GU 1-35	01252 24505	Tonbridge	PE14-19,30-38	01603 667017	Canvey			
Guernsey	01481 46931	Guernsey Elec.	PH1-7	0141 647 4381	Glasgow			
HA	0181 965 9699	Canvey	PH8-18	01250 876285	Dundee			
HD	0113 260 8511	Leeds	PH19-26,42-44	01463 792952	Highland Appl.			
HG	0113 260 8511	Leeds	PH30-41 Inverness	01855 821315	G. Ross			
			PL1-9,16,19-21	01626 65909	Newton Abbott			
			PL10-15,17,18, 22-35	01209 314407	Redruth			
			PO1-22	01705 667411	South Coast			
			PO30-41	01983 872552	Isle of Wight			

# Electrolux Service Force Addresses

Centre	Address	Centre	Address	Centre	Address
<b>ABERDEEN</b>	8 Cornhill Arcade Cornhill Drive Aberdeen AB2 5UT	<b>ISLE OF ARRAN</b>	Unit 4 The Douglas Centre Broddick Isle of Arran KA27 8AJ	<b>PRESTON (M13)</b>	Unit 333 Ranglet Road Walton Summit Bamber Bridge Preston Lancashire PR5 8AR
<b>ARGYLL</b>	Briar Hill 7 Hill Street, Dunoon Argyll PA23 7AL	<b>ISLE OF BARRA</b>	244 Bruernish Isle of Barra Western Islands HS9 5QY	<b>ORKNEY</b>	Refrigeration Sales & Service Hatson Industrial Estate Kirkwall Orkney KW15 1RE
<b>BARNSTAPLE</b>	P.O. Box 12 Barnstaple North Devon EX31 2YB	<b>ISLE OF LEWIS</b>	Churchouse 16 James Street Stornoway Isle of Lewis PA87 2QW	<b>OSWESTRY (M17)</b>	Plas Funnon Warehouse Middleton Road Oswestry SY11 2PP
<b>BIRKENHEAD (M11)</b>	Unit 14 Logan Road Dock Road Birkenhead L41 1JJ	<b>ISLE OF MAN</b>	Manx Electricity Service Workshop North Quay Douglas Isle of Man	<b>REDDITCH</b>	Heming Road Washford Redditch Worcestershire B98 0DH
<b>BORDERS</b>	2-8 Wood Market Kelso Borders TD5 7AX	<b>ISLE OF MULL</b>	Brian Hogg Braeside Raeric Road Tobermory Isle of Mull PA75 6PU	<b>REDRUTH</b>	Unit 7D Pool Industrial Estate Wilson Way, Redruth, Cornwall TR15 3QW
<b>BRISTOL</b>	Unit BE46 P.O. Box 372 Bristol BS99 1UD	<b>ISLE OF WIGHT</b>	4 Forelands Road Bembridge Isle of Wight PO35 5XW	<b>ROTHESAY</b>	D. McGlashan Walker Eng. Glenmhor Upper Serpentine Rothesay, Strathclyde PA20
<b>CANVEY</b>	2-4 Sandhurst Kings Road Canvey Island SS8 0QY	<b>JERSEY</b>	Jersey Electricity Company PO Box 45 Queens Road St Helier Jersey Channel Islands JE4 8NY	<b>SHETLAND</b>	George Robertson 3/4 Carlton Place Lerwick Shetland ZE1 0ED
<b>CARDIFF</b>	Guardian Industrial Estate Clydesmuir Road Tremorfa, Cardiff CF2 2QS	<b>LEEDS</b>	64-66 Cross Gates Road Leeds LS15 7NN	<b>SHETLAND</b>	Tait Electronic Systems Ltd Holmsgarth Road Lerwick Shetland ZE1 0PW
<b>CARLISLE (M10)</b>	Carlisle Enterprise Centre James Street Carlisle CA2 5AP	<b>LINCOLN</b>	Unit 8 Stonefield Park Clifton Street Lincoln LN5 8AA	<b>SHETLAND</b>	Bolts Shetland Ltd 26 North Road Lerwick Shetland ZE1 0PE
<b>DUMFRIES &amp; GALLOWAY</b>	93 Irish Street Dumfries Scotland DG1 2PQ	<b>LIVERPOOL (M15)</b>	1 Honeys Green Precinct Honeys Green Lane West Derby Liverpool L12 9JH	<b>SHETLAND</b>	Leask Electrical Harisdale Symbister, Whalsay Shetland ZE2 9AA
<b>DUNDEE (Gas only)</b>	3-7 Blackness Street Dundee DD1 5LR	<b>MANCHESTER (M09)</b>	Unit 30, Oakhill Trading Estate Devonshire Road Worsley Manchester M28 3PT	<b>SHREWSBURY</b>	6 Harlescott Barn Harlescott Lane Shrewsbury SY1 3SY
<b>DUNDEE</b>	41 Lesley Street Blairgowrie Perthshire PH10 6AT	<b>NEWCASTLE UNDER LYME (M12)</b>	Unit 8 Croft Road Newcastle under Lyme	<b>SOUTH COAST</b>	Limberline Road Hilsea, Portsmouth Hampshire PO3 5JJ
<b>GLASGOW</b>	20 Cunningham Road Clyde Estate Rutherglen, Glasgow G73 1PP	<b>NEWTON ABBOT</b>	Unit 2 Zealley Industrial Estate Kingsteignton Newton Abbot S. Devon TQ12 3TD	<b>SOUTH HUMBERSIDE</b>	81 Pasture Street Grimsby DN32 9EP
<b>GUERNSEY</b>	Guernsey Electricity PO Box 4 Vale, Guernsey Channel Islands	<b>NORTH WALES (M14)</b>	Unit 2 Coed - Parc Abergele Road Rhuddlan Clwyd Wales LL18 5UG	<b>STOCKPORT (M16)</b>	Unit 20 Haigh park Haigh Avenue Stockport SK4 1QR
<b>HAVERFORDWEST</b>	1 Church Road Roch Haverfordwest Dyfed, Wales SA62 6AG	<b>NORTHERN</b>	PO Box 40 Preston Road Aycliffe Industrial Estate Newton Aycliffe Co Durham DL5 6XA	<b>TONBRIDGE</b>	Unit 30 Deacon Trading Estate Morley Road Tonbridge Kent TN9 1RA
<b>HEREFORD</b>	Unit 3 Bank Buildings Cattle Market Hereford HR4 9HX	<b>NORTHERN IRELAND</b>	Owenmore House Kilwee Industrial Estate Upper Dunmury Lane Belfast BT17 0HD		
<b>HULL</b>	Unit 1 Boulevard Unit Factory Estate Hull HU3 4AY	<b>NUNEATON</b>	Unit 23-24 Alliance Business Pk Townsend Drive Nuneaton Warwickshire CV11 6RX		
<b>INVERNESS</b>	Unit 3B3 Smithton Indust. Est. Smithton Inverness IV1 2PD				
<b>INVERNESS</b>	George Ross Forrestry Workshop Inchree Onich Invernesshire PH33 6SE				

