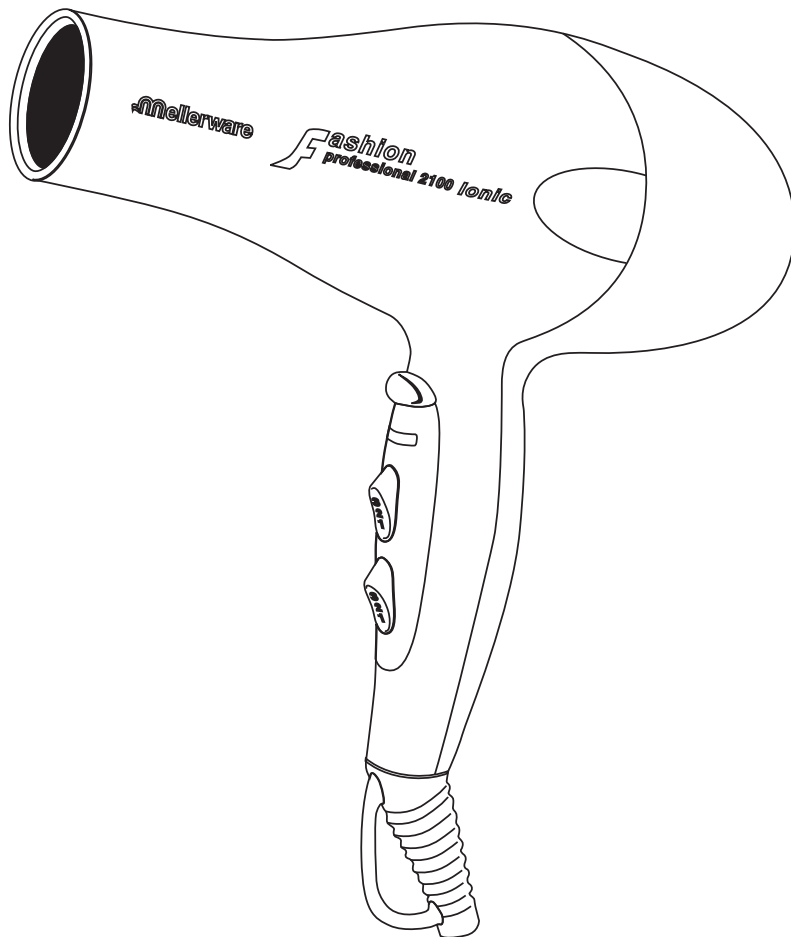




mellerware®

P E R S O N A L

Fashion Pro 2100 Ionic Hair Dryer



complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS


2100W

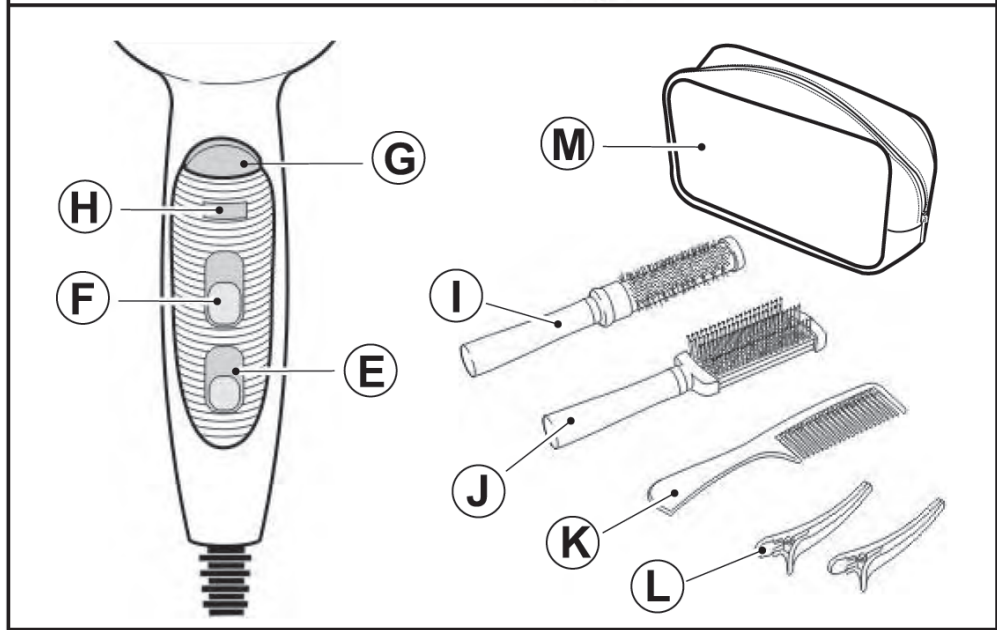
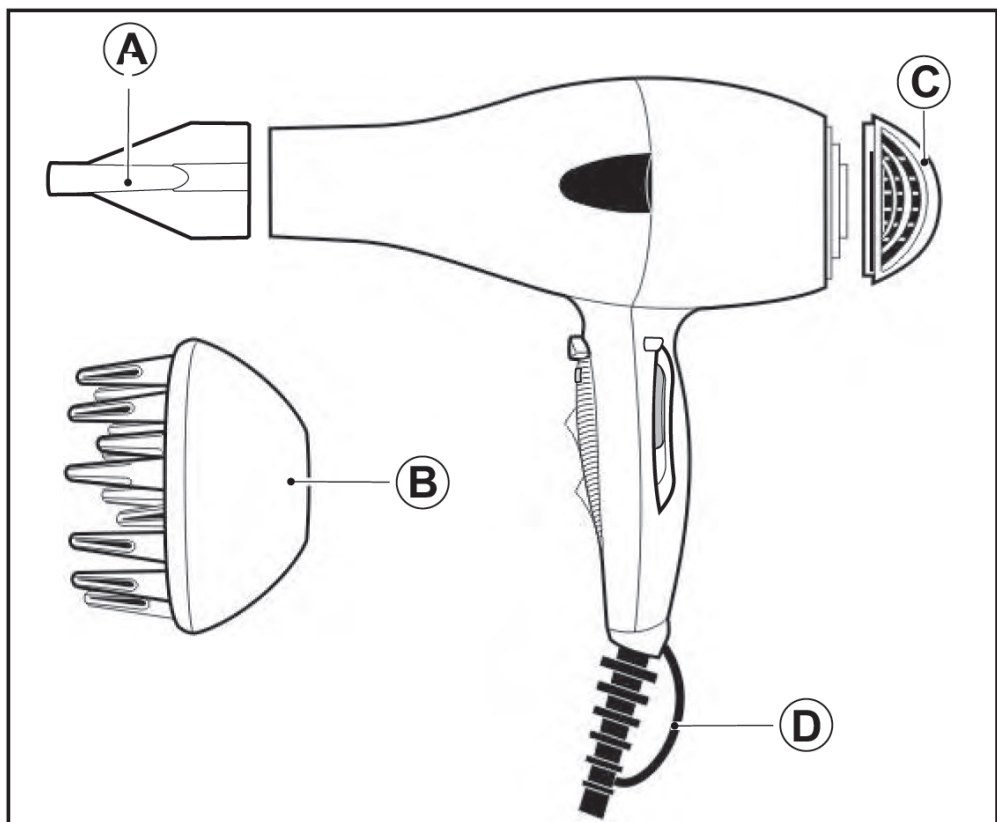

2 YEAR
GUARANTEE

Model:
20125

PLEASE READ ALL INSTRUCTIONS BEFORE USE

2 year guarantee







KEY AND CHARACTERISTICS

- A Air concentrator
- B Professional diffuser
- C Filter
- D Hanging ring
- E Power selector
- F Temperature control
- G Cold blast button
- H Ionizer function indicator
- I Round brush
- J Semi-circular brush
- K Comb
- L Tweezers
- M Vanity case

Safety advice and warnings:

- Please read this instruction leaflet carefully before using the appliance and keep the leaflet for future reference.
- Check the mains voltage is the same as the products.
- Unpack it completely and check it is in perfect condition and functioning well, as any factory defect or damage caused during transport is covered by the Mellerware guarantee.

WARNING

- Do not use this product near bathtubs, washbasins or other receptacles that contain water.
- Do not use the product if your hands or feet are wet or when barefoot.
- Switch the hairdryer off if you need to set it down, even if just for a moment.
- If using the hairdryer in a bathroom, unplug it after use, as the closeness to water may be dangerous even when the hairdryer is switched off.
- As an additional safety measure, we advise you to ensure that the electricity circuit that supplies the bathroom has a residual current device (RCD) with differential operating current that does not exceed 30mA. Please ask your electrical installer for advice on this matter.
- To prevent the product from overheating, ensure that the air inlet holes are not blocked. If this happens, the automatic safety device will switch the resistance off.
- If the resistance repeatedly stops working, unplug it from the mains and wait about 10 to 15 minutes until the hairdryer cools down before plugging it in again.
- Ensure that the air inlet holes are not blocked before using the hairdryer.
- Never wind the cable around the hairdryer when it is still hot.

- Always straighten the cable if it has become twisted and gently roll it up around the hairdryer.
- Do not use this device in closed spaces with limited ventilation.

Usage instructions:

- Set the power and temperature selectors to the desired position, always starting from the OFF position.
- Slide the power selector from the lower position to the upper position to increase drying speed.
- Slide the temperature selector from the lower position to the upper position to increase the temperature of the air flow.

Professional diffuser:

- Attach the diffuser to give the hairstyle volume.
- For best results, the hairdryer should be used at low power and slow speed settings.

Air concentrator:

- Attach the concentrator to direct the air flow to the desired area (ends, curls, etc.)
- This is especially useful for setting and shaping the hairstyle.

Removable filter:

- Do not use the product without the removable filter.
- Easy to clean filter.

Ionizer:

- Ions flow constantly from the drier as long as it is working, whatever position is selected.

Cleaning:

- unplug the product from the mains and let it cool down before cleaning it.
- Clean the filter by shaking it.

Breakdowns and repairs:

- In the event of any anomaly in the connection to the mains, do not try to replace the cord yourself as it may be dangerous. Take the appliance to an Authorised Technical Department. The same applies to any other breakdown.

This appliance complies with the principles of the EEC 73/23 Directive on Low Voltage and with EEC Directive 89/336 on Electro-magnetic compatibility.





creative housewares

27 Nourse Avenue Epping 2 Cape Town
P.O. Box 975 Eppindust 7475 South Africa
Tel: +27 21 534 8114 Fax: +27 21 534 8086
Service Centre Share Call: 086 111 5006
web: www.creativehousewares.co.za

