REMINGTON



Use and Care Guide



D-3200dC

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

KEEP AWAY FROM WATER.

DANGER

As with most electrical appliances, electrical parts are electrically live even when switch is off.

To reduce the risk of death by electric shock:

- Always unplug hair dryer immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- If an appliance falls into water, "unplug it" immediately. DO NOT REACH INTO THE WATER.
- Unplug this appliance before cleaning it.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when it's plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Spectrum Brands, Inc.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to Spectrum Brands, Inc. Customer Service for repair or replacement.
- Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, etc.
- Never use while sleeping.

- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not direct hot air toward eyes or other heat-sensitive areas.
- Attachments may be hot during use. Allow them to cool before handling.
- Do not place appliance on any surface while it is operating.
- While using the appliance, keep your hair out of it–keep your hair away from the air inlets.

- Do not use in countries with 220/240 volt electrical systems; use only with 110/120 volt electrical systems.
- Do not operate with a voltage converter.
- Connect this appliance to a properly grounded outlet only.
- Do not use an extension cord with this appliance.
- This appliance is for household use only.
- Always store this appliance and cord in a moisture-free area.
- Do not plug or unplug this appliance when your hands are wet.

KEEP AWAY FROM CHILDREN

SAVE THESE INSTRUCTIONS

Product Features

Thank you for purchasing the Remington® ProAir® Ionic Plus ceramic hair dryer with 2x Protection against damage.

1600 watts



Negative ions neutralize the positive ions that cause static and frizz, giving hair a more healthy-looking shine.



Ceramic emits far-infrared, radiant heat to help dry water molecules inside the hair strand. This fast and efficient process helps prevent heat damage to the outer cuticle for less frizz and shine.

How to Use

Basic Drying Techniques

- 1. Gently towel dry hair to remove excess water. Avoid rubbing hair with towel this creates split ends and frizziness. Detangle hair with a wide-toothed comb.
- 2. Be sure dryer is turned off. Plug dryer into an electrical outlet.
- 3. Set dryer ion switch to negative (-) drying ion position. Turn the dryer on and set it to a high heat and speed. Remove some of the additional moisture form your hair by briskly blowing it all over, using your fingers to "comb" through hair.
- 4. When hair is almost dry, lower the heat and speed to the desired settings and begin to style.
- 5. Set ion switch to positive (+) styling ion position. Divide hair into manageable sections. Begin at the nape of your neck and brush hair, following the movement of the brush with the dryer. Continue working your way up to your scalp, then to the sides and the front, drying small sections at a time.
- 6. Once your desired style is achieved, push the Cool Shot button to set the style with a cool flow of air.

For straight, smooth hair:

With the dryer turned off, attach concentrator to the end of the nozzel. Brush hair from underneath using a large, round brush or paddle brush. Pull hair down until the hair is fully extended and taut. Run the dryer slowly down the length of the hair several times until dry. Repeat with all sections of hair until it is completely dried. Lock in the style with the Cool Shot.

For curly hair:

Use dryer on a low heat and speed setting and move it quickly about your head. As you dry your hair, scrunch it with your favorite styling product or twirl strands of hair around your fingers to add definition. When finished drying, lock in the style with the Cool Shot.

HAIR TYPE	RECOMMENDI Airflow	ED SETTINGS Heat
Short and Curly	Low	Low (1)
Short and Sculptured	High	Medium (2)
Mid-Length and Sculpt	ured Low	High (3)
Mid-Length and Sleek	High	High (3)
Mid-Length or Long an	d Curly Low	Medium (2)
Long and Sculptured	High	Optima (4)
Long and Sleek	High	Optima (4)

Hair Care Tips

Hair Care Tips

- Keep the dryer about 8 inches away from your head to avoid burning scalp or damaging hair.
- Always keep the dryer pointed down the hair shaft to smooth the cuticle and create a silky, shiny style.
- To help prevent heat damage and add shine, spritz damp hair with a heat protection spray before blow drying.
- To create a style with lots of body, apply volumizing mousse to towel dried hair. Distribute it evenly from roots to ends, then blow dry as usual. Hair will be soft, shiny, and full of volume.

- For a super smooth, salon-like blow dry, finish by running a straightening iron over dried hair.
- For a quick touch-up between shampoos, mist hair to dampen it, then style with dryer.

Ground Fault Circuit Interrupters



This message about Ground Fault Circuit Interrupters can save a life!

If you must use your hair dryer in the bathroom, install a GFCI* now!

Your local electrician can help you decide which type is best for you—a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCI's in bathrooms, garages, and outdoor outlets of all new homes.

Why do you need a GFCI?

Electricity and water don't mix. If your hair dryer falls in water while it's plugged in, the electric shock can kill you... even if the switch is "off." A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you greater protection.

A GFCI can save your life!

Compared to that, the price is small!

Don't wait... install one now!

*GFCI is a sensitive device which reacts immediately to a small electric current leak by stopping the electricity flow.



Cleaning and Maintenance

Maintenance Instructions

The dryer needs minimum maintenance to ensure the best performance and long life.

- Do not attempt to repair the appliance yourself.
- Keep all intake openings clear of dust accumulation. See "Cleaning Instructions" below. No other maintenance or lubrication is required.
- If the cord becomes twisted due to use, periodically straighten it. Store appliance and cord where they will not be damaged. Do not wrap cord around dryer.

Cleaning Instructions

The air filter should be cleaned regularly, since a dirty or clogged filter will impair the efficiency of the dryer.

- **1.** To clean air filter, make sure dryer is turned off and unplugged.
- **2.** Use a soft bristle brush to gently remove any particles that are lodged in filter.
- 3. If the unit is dirty, wipe it with a damp cloth

Storage

When not in use, unplug the unit. Allow it to cool, and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance, as this will cause the cord to wear prematurely and break. Handle cord carefully, and avoid jerking, twisting, or straining it, especially at plug connections.

Warranty

Full Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge. Please call 800-736-4648 in the US or 800-268-0425 in Canada.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental, special, or consequential damages.

Spectrum Brands, Inc. Money-Back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the US or 800-268-0425 in Canada.

125 VAC 60 Hz

Questions or comments: Call 800-736-4648 in the US or 800-268-0425 in Canada. or visit www.remington-products.com

Dist. by: Spectrum Brands, Inc., Madison, WI 53711 Dist. by: Rayovac Canada Inc., Mississauga, ON L4W 2T7

REMINGTON and PROAIR are trademarks of Spectrum Brands, Inc.

© 2005 ROVCAL, INC. 5/05 CS27927

T22-17639



This product is listed by Underwriters Laboratories, Inc.

MADE IN CHINA

REMINGTON®