

Sunbeam

Headlines

1600W Hairdryer & Straightener

Instruction Booklet

PU4800

Please read these instructions carefully
and retain for future reference.



Contents

Sunbeam's Safety Precautions	3
Features of your Hairdryer	4
Features of your Straightener	6
Using your Hairdryer	8
Using your Straightener	9
Care and Cleaning	10

Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich daß die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşılığundan emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR HAIRDRYER AND STRAIGHTENER.

- These appliances must not come into contact with water or any other liquid.
- Always switch off your appliances at the power outlet and remove the plug when not in use.
- Do not store your appliances near tubs, basins, baths or other vessels containing water or any other liquid.

Sunbeam are very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- Close supervision is necessary when your appliance is being used near children or infirm persons.
- Never leave an appliance unattended while in use.
- Young children should be supervised to ensure that they do not play with the

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line. Ensure the above safety precautions are understood.

- When the appliances are used in the bathroom, unplug it after use as the proximity of water presents a hazard even when the unit is switched off.
- Take care to avoid contact with the face and neck when the styling plates are hot.

- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- For safety reasons and to avoid maintenance by unskilled persons, some appliances are 'sealed' using tamperproof screws. Such appliances should always be returned to the nearest Sunbeam Appointed Service Centre for adjustment or repair if required.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been dropped or damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.

Features of your 1600W Dryer


1600 watt



Removable concentrator nozzle

Cool shot button

2 heat/speed settings

Soft touch

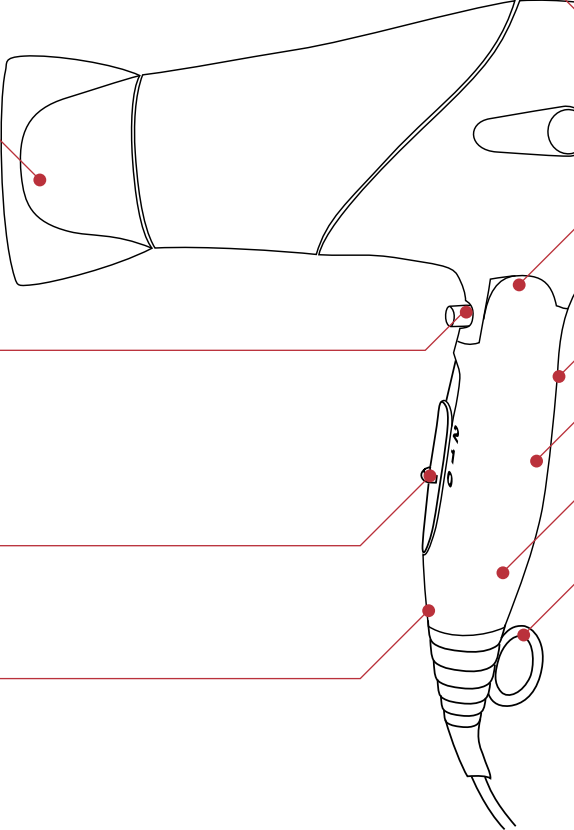


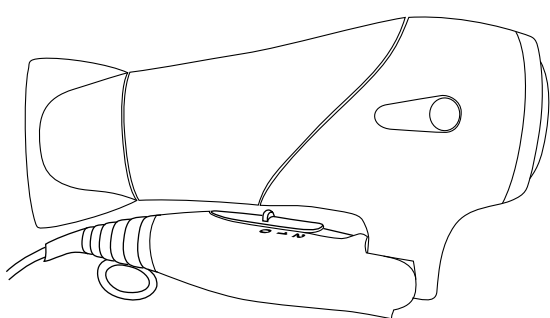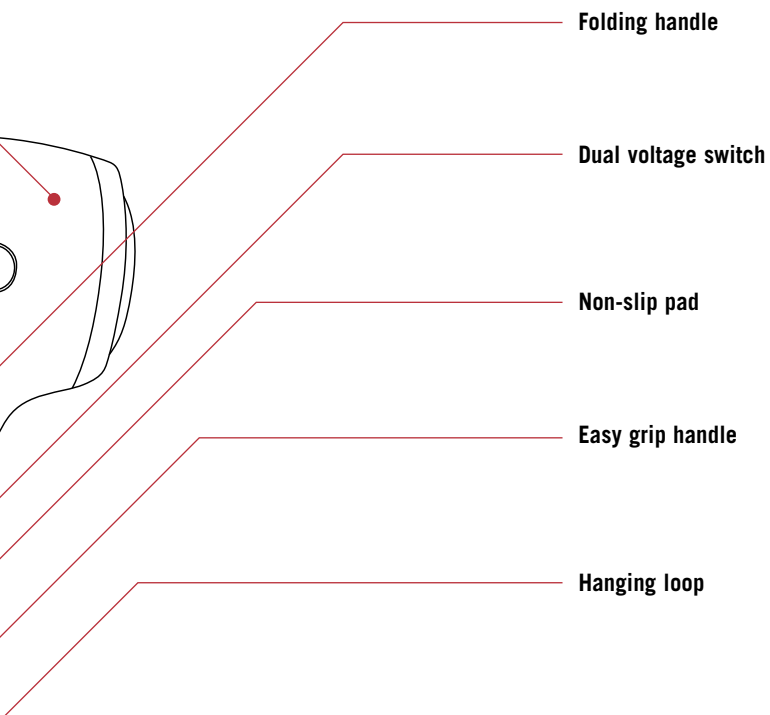


Features of your Straightener

Power on light

Straightening plates

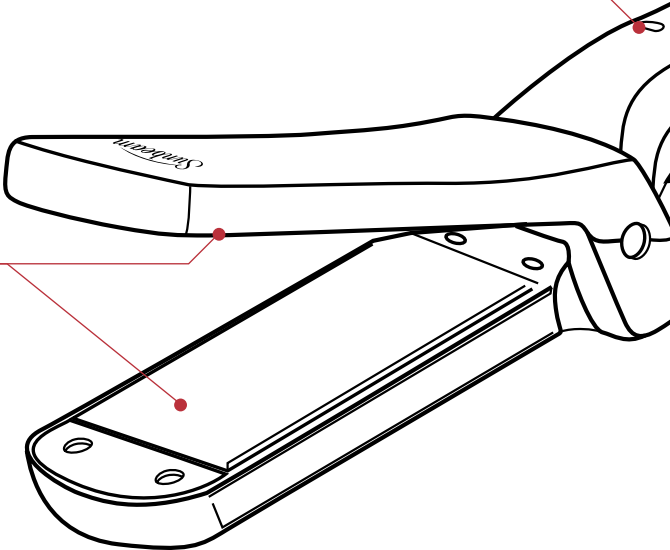

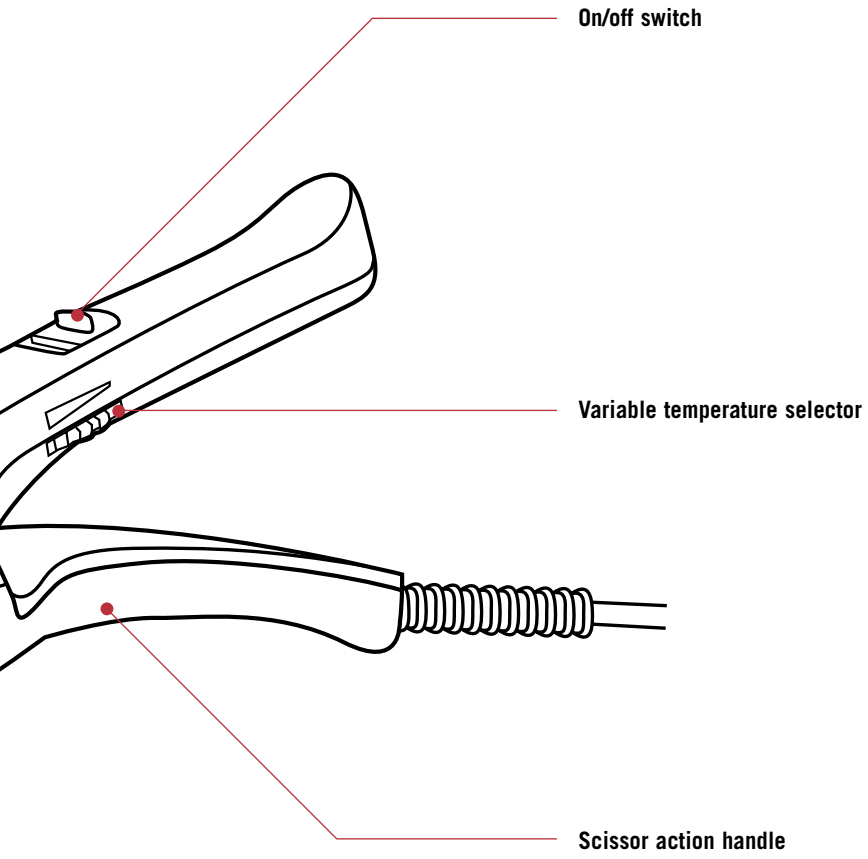

Using your 1600W Dryer

Before using your 1600W Dryer

- Squeeze excess moisture from your hair and towel dry.
- Comb hair free of tangles using a wide toothed comb.
- Apply your favourite styling product.

Using your hairdryer

- Fold the handle down away from the barrel until it clicks into the open position.
- Use a pen to select the appropriate setting on the voltage switch.
- Insert the plug into a power outlet and turn the power on.
- Select the desired heat / speed setting. Setting I is best for controlled styling whilst setting II is ideal for fast drying.
- Hold the hairdryer about 30 cm away from your hair.
- Section your hair in 4-5cm strips and dry each section before moving on to the next.
- Use the concentrator nozzle onto specific areas of the hair for spot drying or when styling.
- Once hair is dried use the cool shot setting to cool the hair and set the style.

Using your Straightener

Using your straightener

- Insert the plug into the power outlet and turn the power on.
- Move the on/off switch to the on position (I)
- Select the desired heat level by rotating the temperature dial on the side of the straightener. Use lower heat for fine hair or touch ups. Use higher heat for thicker hair or more resistant curls.
- Allow the straightener to heat up for a few moments before using.
- Brush hair thoroughly. Separate out section of hair approximately 4cm in width and smooth it with a comb.
- For best results start at the scalp and work to the ends of the hair. Place the separated section of hair between the flat plates and close the handle around the hair.
- Hold the styler in position for 3 to 5 seconds depending on the hair type.
- Once the hair is heated, carefully slide the styler along the section of separated hair, making sure that the hair is heated and straightened all the way to the ends.
- Select another section of hair and repeat the process.
- Use the cool shot setting on the hairdryer to set the style.

Care and Cleaning

- Turn your appliance off after use. Always turn the power off and remove the plug before cleaning.
 - Do not immerse the appliances in water or any other liquid.
 - To clean the exterior, simply wipe over with a dampened cloth and wipe dry.
 - To clean the straightening plates, wipe with a soft cloth moistened with a solution of shampoo and warm water.
 - Do not wind the power cord around appliances as this may cause strain and damage the wiring.
 - The hairdryer handle can be folded for easy storage or to save space in a suitcase or sports bag.
-

Help Line

If you have any additional questions about using your 1600W Hairdryer & Straightener, please call the Sunbeam help line in Australia on 1800 025 059. In New Zealand, please call 0800 786 232.

'Sunbeam', is a registered trademark of Sunbeam Corporation.

Made in China. Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet. Backed by Sunbeam's 2 Year Replacement Guarantee and National Service Network.

© Copyright. SUNBEAM CORPORATION LIMITED 2004.

(INCORPORATED IN N.S.W.) A.C.N. 000 006 771

Sunbeam Corporation is a division of GUD Holdings Ltd.

For more information or advice on this or any other Sunbeam appliance, visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

Australia 1800 025 059

New Zealand 0800 786 232.

Sunbeam

Consumer Hotline


Australia

1800 025 059

New Zealand

0800 786 232

www.sunbeam.com.au

 is a registered Trademark of Sunbeam Corporation Limited. ACN 000 006 771.

© Sunbeam Corporation Limited 2004.