

Explore your MOTOROLA **QUANTICO**™ **metro**PCS.

HOME »

LESSON:

KNOW YOUR PHONE >>

- phone overview
- military spec certified

BATTERY >>

- removing the door
- installing the door

MUSIC >>

- transfer music
- playing music
- creating playlists

CAMERA & PICTURES >>

- taking pictures
- editing pictures

YOUR MetroWEB >>

- using

MORE INFO >>

- support site
- download user guide (PDF)

PRINT >>

VIEW »

EXIT »





All screen images simulated









HOME »

LESSON:

KNOW YOUR PHONE >>

- phone overview
- military spec certified

BATTERY >>

- removing the door
- installing the door

MUSIC >>

- transfer music
- playing music
- creating playlists

CAMERA & PICTURES >>

- taking pictures
- editing pictures

YOUR MetroWEB >>

- using

MORE INFO »

- support site
- download user guide (PDF)

PRINT >>

VIEW »

EXIT »



Know your phone (basics)

The important keys and connectors.

Left Soft Key

Volume Keys

Camera Key

button

Send Key

metro chatLINKSM

Make & answer calls.

Micro USB Connector

Charge or connect to PC.

Navigation Key

Scroll up/down/left/right.



Center Key

Open menu & select.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.

© 2009 Motorola, Inc. All rights reserved.

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/ or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this tutorial, are based on the latest available information and are believed to be accurate at the time of publication. Motorola reserves the right to change or modify any information or specifications without notice or obligation.







HOME »

LESSON:

KNOW YOUR PHONE >>

- phone overview
- military spec certified

BATTERY >>

- removing the door
- installing the door

MUSIC >>

- transfer music
- playing music
- creating playlists

CAMERA & PICTURES >>

- taking pictures
- editing pictures

YOUR MetroWEB >>

- using

MORE INFO »

- support site
- download user guide (PDF)

PRINT >>

VIEW »

EXIT »

Military spec certified¹

Meet your everyday duties head on with MOTOROLA QUANTICO™. This rough and tumble device is built to survive and designed to let you thrive. Quantico is MilSpec certified, which means it can hold up against extreme pressure, temperature, dust, shock, vibration and blowing rain.

An accidental dip in water used to spell disaster for your mobile phone, but fret no more with QUANTICO – thanks to a submersible design that protects the device in up to three feet of water for up to 30 minutes.² Rubber overmold and sturdy gripping textures make sure you always have a handle, even after it's been dunked.







- 1 Military Specification 810F protects the device from low pressure, high temperature, low temperature, dust, shock, vibration, solar radiation, humidity, blowing rain and salt fog.
- 2 Both the charging and headset jack covers on your phone must be completely closed to maintain water resistance. Defects or damage from misuse, accident, abuse or neglect, including water damage caused from incorrectly securing the phone's waterproofing elements or immersing the phone in water beyond its stated limits is not covered by the Motorola warranty.









HOME »

LESSON:

KNOW YOUR PHONE >>

- phone overview
- military spec certified

BATTERY >>

- removing the door
- installing the door

MUSIC >>

- transfer music
- playing music
- creating playlists

CAMERA & PICTURES >>

- taking pictures
- editing pictures

YOUR MetroWEB >>

- using

MORE INFO >>

- support site
- download user guide (PDF)

PRINT >>

 
VIEW »

EXIT »

Battery

Removing the door

To remove the battery door:



1 First turn the lock to the vertical or unlocked position.



2 The door will automatically lift up.

 


3 Slide the door down and twist it to the left to remove.

Installing the door



1 Place the door in position and push on all four corners to close the gaps.



2 Turn the lock to the horizontal or locked position.



3 Push on the bottom corners to make sure no gaps are under the battery door.



Warning: Failure to properly secure battery door could

result in moisture damage if exposed to liquids.





HOME »

LESSON:

KNOW YOUR PHONE >>

- phone overview
- military spec certified

BATTERY >>

- removing the door
- installing the door

MUSIC >>

- transfer music
- playing music
- creating playlists

CAMERA & PICTURES >>

- taking pictures
- editing pictures

YOUR MetroWEB >>

- using

MORE INFO >>

- support site
- download user guide (PDF)

PRINT >>

VIEW »

EXIT »

Music¹

Transferring music²

To connect your phone to your Windows PC:

- 1 Insert a microSD memory card into your phone.
- 2 Set your phone to Mass Storage by pressing Menu > Settings > USB > Mass Storage.

3 Connect a Motorola Original USB cable (not included) to your phone and your PC.









- 1 Your phone's music player can play the following types of song files: MP3, AAC, M4A, WMA.
- 2 The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.









HOME »

LESSON:

KNOW YOUR PHONE >>

- phone overview
- military spec certified

BATTERY >>

- removing the door
- installing the door

MUSIC >>

- transfer music
- playing music
- creating playlists

CAMERA & PICTURES >>

- taking pictures
- editing pictures

YOUR MetroWEB >>

- using

MORE INFO »

- support site
- download user guide (PDF)

PRINT »

VIEW »


EXIT »




Music

Transferring music (cont.)

Now that you've connected, use USB drag and drop to copy your music:

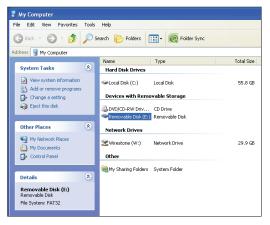

- 1 On your Windows PC, double-click on "My Computer" to find the "Removable Disk" icons for your phone/memory card.
- 2 Double-click the "Removable Disk" icon for the memory card.

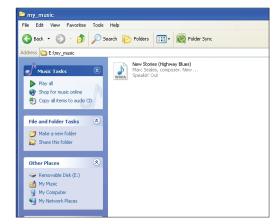

4 Drag and drop song files onto the "my_music" folder



3 In the "Removable Disk" window, create the "my_music" folder (if it doesn't already exist).



- 5 When you're done, right-click the "Safely Remove Hardware" icon in the system tray at the bottom of your computer screen, then select "USB Mass Storage Device" (your memory card).
- 6 Disconnect the USB cable.







HOME »

LESSON:

KNOW YOUR PHONE >>

- phone overview
- military spec certified

BATTERY >>

- removing the door
- installing the door

MUSIC >>

- transfer music
- playing music
- creating playlists

CAMERA & PICTURES >>

- taking pictures
- editing pictures

YOUR MetroWEB >>

- using

MORE INFO »

- support site
- download user guide (PDF)

PRINT >>

VIEW »

EXIT »

Music

Playing music


You can select a song or playlist from these categories: All Songs, Playlists, Artists, Albums, or Genres.

Shortcut: In a song list, press a key to jump to songs that begin with the letters on the key. While a song is playing, use the following keys to control song playback.

To hide the music player while music plays, press **Settings** > **Background Play**.

To return to the music player from the home screen, press **Menu** > **Music Player**.



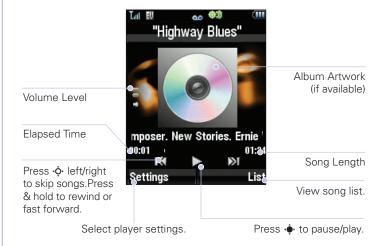

Note: If you can't find artist, album, or genre information for a song, the information may not be available.

If you receive a call during a song, the music player pauses the song until the call is over

Note: The playlist name cannot exceed 32 characters, and cannot include the characters / \: * ? < > | "









HOME »

LESSON:

KNOW YOUR PHONE >>

- phone overview
- military spec certified

BATTERY >>

- removing the door
- installing the door

MUSIC >>

- transfer music
- playing music
- creating playlists

CAMERA & PICTURES >>

- taking pictures
- editing pictures

YOUR MetroWEB >>

- using

MORE INFO >>

- support site
- download user guide (PDF)

PRINT >>

VIEW »


EXIT »




Music

Creating playlists

Personalize your music collection by creating your own playlists. To create a playlist:

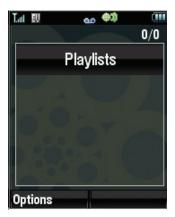

Find it: Menu > Music Player > Playlists

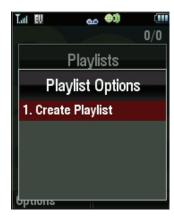

- 1 Press Options > Create Playlist.
- 2 Enter a name for the playlist and press **Done**.



- 3 With the new playlist highlighted on the Playlists screen, press **Options** > **Add a Song**. Scroll to a song and press
 - Repeat this step to add more songs.
- 4 Press ◀ to add the marked songs to the playlist.

To add a song to a playlist: Scroll to the playlist and press **Options** > **Add a Song**.

Note: If you can't find artist, album, or genre information for a song, the information may not be available.

If you receive a call during a song, the music player pauses the song until the call is over

Note: The playlist name cannot exceed 32 characters, and cannot include the characters / \: *? < > | "







HOME »

LESSON:

KNOW YOUR PHONE >>

- phone overview
- military spec certified

BATTERY >>

- removing the door
- installing the door

MUSIC >>

- transfer music
- playing music
- creating playlists

CAMERA & PICTURES >>>

- taking pictures
- editing pictures

YOUR MetroWEB >>

- using

MORE INFO >>

- support site
- download user guide (PDF)

PRINT >>

VIEW »

EXIT »

Camera & Pictures

Taking pictures

Find it: **Menu** > **Multimedia** > **Camera** Shortcut: From the home screen, press the camera key ...




Editing pictures

Select the photo and press **edit**. Select **crop**, **add text** or **color effects** options.



When you take a photo, your phone shows options to **Send the photo** or **Send to Online Album**. Select a send option, or press ◀ to see other options. You can:

- Press to save the photo. The photo is named after the date and time you took it.
- Press **Send** to send the photo.
- Press Options to delete the photo, save the photo with a name you specify, or set the photo as a wallpaper or picture ID.

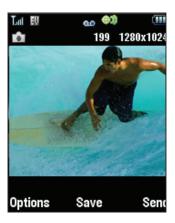









HOME »

LESSON:

KNOW YOUR PHONE >>

- phone overview
- military spec certified

BATTERY >>

- removing the door
- installing the door

MUSIC >>

- transfer music
- playing music
- creating playlists

CAMERA & PICTURES >>

- taking pictures
- editing pictures

YOUR MetroWEB >>

- using

MORE INFO »

- support site
- download user guide (PDF)

PRINT »

VIEW »

EXIT »

Your MetroWEB¹

MetroWEB is your unlimited connection to the Internet using your MetroPCS phone. Access local information, news, entertainment and more while surfing the web from the palm of your hand. MetroWEB is powered by Google™, which means you get the answers you're looking for—fast! Anything from flight updates and sports results, restaurants to the local dry cleaners, images and weather reports to web and mobile web pages—it's all just a click away. Just press the MetroWEB key on the main menu to get started.

Using Your MetroWEB



1 Search the web from the home page or enter a specific site by pressing Options > Go to URL.



3 The requested page appears. From the options menu, you can change the display mode from normal to wide or send the URL in a text message.



2 As you enter a URL, your phone will suggest websites. Select the one you want to view and press **OK**.



4 To bookmark a page or set it as your home page, press Options > Mark this page, then name the link. 1 Network and/or SIM card dependent feature, not available in all areas. Airtime, data charges and/ or additional charges may apply. Wireless email functionality requires an email account with wireless server capabilities.







HOME »

LESSON:

KNOW YOUR PHONE >>

- phone overview
- military spec certified

BATTERY >>

- removing the door
- installing the door

MUSIC >>

- transfer music
- playing music
- creating playlists

CAMERA & PICTURES >>

- taking pictures
- editing pictures

YOUR MetroWEB >>

- using

MORE INFO >>

- support site
- download user guide (PDF)

PRINT >>

VIEW »

EXIT »

More Info

Support site

We're here to help

Go to www.motorola.com/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

User Guide

The User Guide included in the box contains detailed instructions for using the phone. It's a helpful tool for learning about all the phone's features.

