IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER

DANGER - Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

- 1. Always unplug appliance immediately after using.
- 2. Do not use while bathing.
- 3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
- 4. Do not place in, or drop into, water or other liquid.
- 5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

WARNING - To reduce the risk of burns, electrocution, fire, or injury to persons:

- 1. This appliance should never be left unattended when plugged in.
- 2. Do not pull, twist, or wrap line cord around appliance.
- 3. This appliance should not be used by, on or near children or individuals with certain

disabilities.

- Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.
- 5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.
- 6. Keep the cord away from heated surfaces.
- 7. Never use while sleeping.
- 8. Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- 10. Unit is hot when in use. Do not let heated surfaces touch eyes or bare skin.
- 11. Do not place the heated unit directly on any surface while it is hot or plugged in.
- 12. Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air opening free of lint and other debris.
- 13. Do not use an extension cord with this appliance.
- 14. Do not touch hot surfaces of the appliance. Use handles or knobs.
- 15. Do not attempt to touch the housing of your appliance near the straightening plates, as it is hot when in use.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

This deep wave iron is intended for household use. Use on Alternating Current (60 hertz) only. This unit is designed to be operated at 120 volts AC.

This appliance has a polarized plug (one blade is wider than the other.) As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

TO DEEP WAVE HAIR

Hair should be clean and damp or dry before using the deep wave iron. For best results, use a light styling product before blow-drying hair. Plug the iron into an electrical outlet. Turn on unit. The Power/ Low 285°F default setting will become illuminated.

To turn off, press On/Off button. Never leave your Deep Waver™ on and unattended. However, should you fail to turn the unit off, it will shut itself off automatically within 60 minutes.

WARNING: The Deep Waver™ tourmaline and ceramic-coated plates will get very hot within a few seconds and should not be placed in contact with the skin after the Deep Waver™ has been turned on.

GETTING STARTED USING YOUR DEEP WAVER™ IRON

The iron's unique 5 ultra-high heat temperature settings and instant heat technology provide styling versatility for all hair types. If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or hard-to-style hair, keep the heat setting on high. You can vary the iron's temperature according to your particular need!

Temperature Setting Guide

LED TEMP. CONTROL	HAIR TYPE
Power/Low 285°F	Delicate, thin, easy-to-style hair
Medium 310°F	Average to thick or treated hair
Med/High 330°F	Thick hair
High/Max 360°F-395°F	Hard-to-style hair

Start with a hair section that is 1½" wide and no more than ½" thick. Open the iron and place a hair section between the two hot plates, close to the scalp. Trap hair between the plates by firmly squeezing the handles together. Once deep wave is set, release and move deep waver down hair strand creating a series of deep waves. At the end of hair section, release the pressure on the handle and allow the hair section to slide out. Repeat process on additional sections of hair until you achieve the hair style you desire. It may be necessary to repeat process on certain areas, depending on the texture of your hair.

Some experience is necessary when learning to use this Deep WaverTM. After using the iron

several times, you will learn the ideal way to deep wave and style your hair.

STYLING WITH THE NEW EASY-GLIDE TOURMALINE CERAMIC™ COATED PLATES

The plates of your new deep wave iron have a tourmaline-infused easy-glide ceramic surface, the latest in technological advances. The crushed tourmaline jewels provide



ionic and infrared benefits, and combined with ceramic technology produce the

ultimate in healthy, shiny, silky hair. The Tourmaline Ceramic™ surface also helps smooth down flyaways and frizzies. As you deep wave your hair, heat is evenly distributed



so that the style you create has silky, salonperfect deep waves. Hair also glides right through the plates while styling.

The new Tourmaline
Ceramic™ technology
is a pleasure to work with,
makes styling your hair
easier and provides more
professional results.


You'll find not only that hair glides easily over the surface of the plates as you're styling, but it's simpler to clean styling products residue, etc. off after each use.

USING INSTANT HEAT, THE 5 ULTRA-HIGH HEAT TEMPERATURE SETTINGS & UNIFORM HEAT RECOVERY SYSTEM

This styling iron features a powerful ceramic heater that maintains temperature during use for precision styling. It heats up to the temperature you've selected for your hair type.

This Instant Heat technology has 5 ultrahigh heat temperature settings. There is a temperature range that's gentle and safe for every type of hair, from the finest to the most resistant and helps you create the look you want. And that's not all. Conair's professional salon standards of engineering provide you with a uniform and improved heat recovery system that maintains the iron at constant temperatures. There is a constant surge of power to ensure that heat is continuously and quickly delivered for optimal styling results, unlike other units that lose heat during use. This provides consistent styling power so that every strand of your hair is set with the same level of heat and comes out the same way for a perfect finish.

GET TO KNOW YOUR DEEP WAVER™

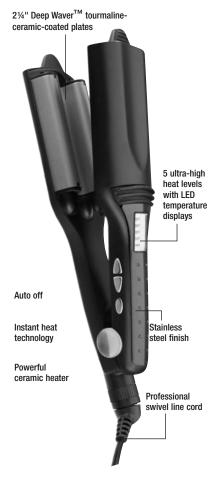

USER MAINTENANCE

Your Deep Waver™ is virtually maintenancefree. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit. allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION

 
NEVER allow the power supply cord to be pulled, twisted, or severely bent, Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

WARNING: IF YOU THINK THE **POWER IS OFF WHEN** THE SWITCH IS OFF YOU'RE WRONG.

KEEP AWAY FROM WATER



Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when vou are not using your appliances, keep them unplugged.

> **ALWAYS UNPLUG** SMALL APPLIANCES

LIMITED FIVE-YEAR WARRANTY

Conair will repair or replace (at our option) vour unit free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below, together with your purchase receipt and \$5.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 60 months from the date of manufacture.

ANY IMPLIED WARRANTIES. OBLIGATIONS. OR LIABILITIES. INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SHALL BE LIMITED IN DURATION TO THE 60-MONTH DURATION **OF THIS WRITTEN. LIMITED WARRANTY. Some** states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights. and you may also have other rights, which vary from state to state.



Service Center

Conair Corporation Service Department 7475 N. Glen Harbor Blvd. Glendale, AZ 85307

For information on any Conair or Infiniti by Conair product call 1-800-3-CONAIR or visit us on the web at: www.conair.com/infiniti

IB-7232

©2007 Conair Corporation 150 Milford Road, East Windsor, NJ 08520 7475 N. Glen Harbor Blvd., Glendale, AZ 85307 Patent Pending

product, always read the instruction book carefully before using.

Instruction

& Styling

For your safety

and continued

eniovment of this

Guide

PROFESSIONAL

Tourmaline Ceramic™

21/4" Deep Waver™

infini⊤i™

Model S5

06NP280