



Wiring

This product is fitted with a 13A (BS1363) plug. A 3 amp fuse (BS1362) must be used.

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.

WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with bared flexible cord is hazardous if engaged into a live socket outlet.

Mains Lead

As a safety precaution and to prolong the life of your appliance, do not wrap the mains lead around the appliance as this will cause damage.

Two Year Guarantee

It is in your interest to retain the retailers receipt as proof of purchase. Please quote the model number if the product develops a fault. This number can be found on the handle of the product.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If a fault develops after 28 days and within 24 months of original purchase, you should contact the helpline number quoting the model number of the product, or write to the address below. You will be asked to return the product (in secure packaging) to the address below along with a copy of proof of purchase.

The After Sales Division
Registered address
Morphy Richards Ltd
Mexborough
South Yorkshire
England
S64 8AJ

Helpline (8:30-5:00 Mon-Thur/ 8:30-4:00 Fri)
UK **0870 060 2614**
Replacement parts **0870 167 6645**,
Republic of Ireland **1800 409119**

Morphy Richards Website
www.morphyrichards.co.uk

Morphy Richards products are intended for household use only. Morphy Richards has a policy of continuous improvement in product quality and design. The Company, therefore, reserves the right to change the specification of its models at any time.

PC22037M UK Rev 1



Essentials
morphy richards

Hair straightener


MODEL : 22037



Instructions & Style Guide

Thank you for buying your new Essentials hair straightener from Morphy Richards. Please read these instructions carefully before use and keep in a safe place for future reference.

Key Features

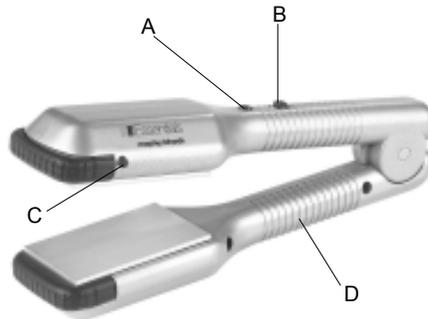

- A** LED power indicator
- B** On/off switch
- C** Plate release button
- D** Easy grip handle

- **Large ceramic plates** for easier styling
- **Auto temperature control** for optimum safety
- **Stylish metallic finish**
- **Salon length cable**
- **Removable plates** for easy cleaning

Styling tips

Having shampooed your hair, ensure that it is rinsed properly as shampoo that is left in the hair will leave it looking dull.

To maximise shine, rinse your hair in cool water when you have rinsed it thoroughly.

Comb your hair through with a wide toothed comb to remove tangles before styling.

Dry your hair thoroughly using a Morphy Richards hairdryer. By drying your hair thoroughly before using the straightener you will avoid creating frizz.

Avoid using styling products such as hairspray, gel or mousse before or during styling as it may cause your hair to stick to the plates.

Styling

Divide your hair into styling sections, brushing each section through thoroughly.

Clamp a section of the hair between the straightening plates as close to the roots as possible, gently and slowly pull the straightener down your hair shaft to the end.

The ceramic straightening plates have been designed to stop your hair from sticking to the plates.

To remove the styling plates

Your Essentials straightener has plates that remove for easy cleaning. To remove the plates unclip the fitted plates from each heater section by pressing the release button. Slide the plates from the heater unit.

Always unplug the unit and allow to cool before removing or fitting the plates.

To clean the plates

Your straighteners should be cleaned on a regular basis. When the product is unplugged and cooled down, press the plate release button and remove the plates. Use a damp cloth to wipe off any product build up. If this is not sufficient try a non abrasive kitchen cleaning wipe such as Cif wipes.

Important safeguards

When using your hair appliance, basic safety precautions should always be followed.

- 1 Read all instructions carefully.
- 2 Use the appliance for its intended use only.
- 3 To protect against the risk of electric shock, do not immerse the appliance in water or in any other liquids.
- 4 Be sure that your household voltage corresponds to the voltage marked on the straightener.
- 5 Always unplug your appliance when it is not in use.
- 6 It is recommended that this appliance should not be used by children.
- 7 Do not leave the straightener switched on whilst unattended.
- 8 **Do not use in a bathroom.**



Important safeguards

When using your hair appliance, basic safety precautions should always be followed.

- 1 Read all instructions carefully.
- 2 Use the appliance for its intended use only.
- 3 To protect against the risk of electric shock, do not immerse the appliance in water or in any other liquids.
- 4 Be sure that your household voltage corresponds to the voltage marked on the styling tong.
- 5 Always unplug your appliance when it is not in use.
- 6 It is recommended that this appliance should not be used by children.
- 7 Do not leave the styling tong switched on whilst unattended.
- 8 This appliance is equipped with a swivel cord which must if damaged, be replaced by a swivel cord of the same type. The cord must be replaced by Morphy Richards as special tools are required.
- 9 **Do not use in a bathroom.**

Two Year Guarantee

It is in your interest to retain the retailers receipt as proof of purchase. Please quote the model number if the product develops a fault. This number can be found on the handle of the product.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If a fault develops after 28 days and within 24 months of original purchase, you should contact the helpline number quoting the model number of the product, or write to the address below. You will be asked to return the product (in secure packaging) to the address below along with a copy of proof of purchase.

The After Sales Division
Registered address
Morphy Richards Ltd
Mexborough
South Yorkshire
England
S64 8AJ

Helpline (8:30-5:00 Mon-Thur/ 8:30-4:00 Fri)
UK **0870 060 2614**
Replacement parts **0870 167 6645**
Republic of Ireland **1800 409119**

Morphy Richards Website
www.morphyrichards.co.uk

Morphy Richards products are intended for household use only. Morphy Richards has a policy of continuous improvement in product quality and design. The Company, therefore, reserves the right to change the specification of its models at any time.

PC22044M UK Rev 1



 Essentials
morphy richards

Styling tong


MODEL : **22044**



Instructions & style guide

Thank you for buying your new Essentials styling tong from Morphy Richards. Please read these instructions carefully before use and keep in a safe place for future reference.

Key features

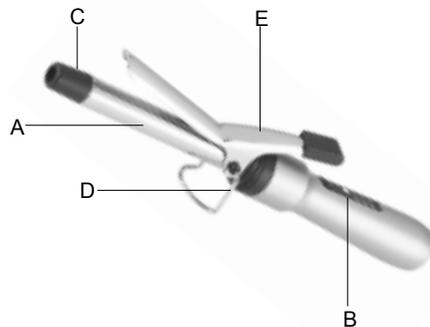

- A Coated curling barrel** for creating long-lasting rounded curls.
- B LED power on indicator.**
- C Cool tip** for more comfortable styling.
- D Safety stand.**
- E Clamp lever.**

- Ideal for creating flicks and curls.
- Salon length cable.

Styling tips

Your styling tong is one of the most important beauty aids you own, and the way you use it has a significant impact on the look and condition of your hair.

Having shampooed your hair, ensure that it is rinsed properly as shampoo that is left in the hair will leave it looking dull.

To maximise shine, rinse your hair in cool water when you have rinsed it thoroughly.

Comb your hair through with a wide toothed comb to remove tangles before styling.

Dry your hair with a Morphy Richards hairdryer.

Styling

Blow dry the hair, using a Morphy Richards Hairdryer, by brushing the hair from the roots to the ends in the direction of normal growth to add body. When dry, brush into the desired shape.

Using the curling tong

Take a small section of hair. Raise the tong by pressing the clamp lever. Place the outer end of the section of hair between the tong and the barrel. Lower the tong to trap the end of the hair. Rotate the handle to wind the hair around the outside of the tong. You may find this easier if you hold the cool tip loosely with the other hand.

Leave the tong in place for 10-15 seconds (depending on the length and thickness of hair) then unwind carefully.

Raise the tong to release the hair and leave the curl in position until it has cooled.

Mains lead

As a safety precaution and to prolong the life of your appliance, do not wrap the mains lead around the appliance as this will cause damage.

Wiring

This product is fitted with a 13A (BS1363) plug. A 3 amp fuse (BS1362) must be used.

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.

IMPORTANT: The plug removed from the mains lead, if severed, must be destroyed as a plug with bared flexible cord is hazardous if engaged into a live socket outlet.



Wiring

This product is fitted with a 13A (BS1363) plug. A 13 amp fuse (BS1362) must be used.

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.

WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with bared flexible cord is hazardous if engaged into a live socket outlet.

Mains Lead

As a safety precaution and to prolong the life of your appliance, do not wrap the mains lead around the appliance as this will cause damage.

Two Year Guarantee

It is in your interest to retain the retailers receipt as proof of purchase. Please quote the model number if the product develops a fault. This number can be found on the handle of the product.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If a fault develops after 28 days and within 24 months of original purchase, you should contact the helpline number quoting the model number of the product, or write to the address below. You will be asked to return the product (in secure packaging) to the address below along with a copy of proof of purchase.

The After Sales Division
Registered address
Morphy Richards Ltd
Mexborough
South Yorkshire
England
S64 8AJ

Helpline (8:30-5:00 Mon-Thur/ 8:30-4:00 Fri)
UK **0870 060 2614**
Replacement parts **0870 167 6645**,
Republic of Ireland **1800 409119**

Morphy Richards Website
www.morphyrichards.co.uk

Morphy Richards products are intended for household use only. Morphy Richards has a policy of continuous improvement in product quality and design. The Company, therefore, reserves the right to change the specification of its models at any time.

PC21022M UK Rev 1



Essentials
morphy richards

2000w Salon hairdryer
with concentrator nozzle

MODEL : 21022



Instructions & Style Guide

Thank you for buying your new 2000w Essential hairdryer from Morphy Richards. Please read these instructions carefully before use and keep in a safe place for future reference.

Key Features



- A 3 heat settings.**
- B 2 speed settings** for fast controlled drying.
- C Concentrator nozzle** for accurate styling.
- D Cool shot** to set style in place.
- E Removable air filter** for easy cleaning.
- F Hanging loop** for easy storage.
- G Non slip rubberised finish.**

- **Salon** length cable.

Styling

Towel dry hair before using the hairdryer.

Styling tips

Your hairdryer is one of the most important beauty aids you own, and the way you use it has a significant impact on the look and condition of your hair.

Having shampooed your hair, ensure that it is rinsed properly as shampoo that is left in the hair will leave it looking dull.

To maximise shine, rinse your hair in cool water when you have rinsed it thoroughly, comb your hair through with a wide toothed comb to remove tangles before styling.

When drying your hair smooth, make sure each section is completely dry before moving onto the next or your hair will kink or frizz.

The concentrator attachment allows you to direct heat for smooth styling.

For drying

Set the dryer on the highest setting/speed and circulate airflow through the hair, trying not to concentrate the airflow on any one section of hair for a long period of time.

As soon as the hair is almost dry, lower the speed setting and use a styling brush to shape the hair as desired.

Set your style in place after drying your hair with a flow of cool air by pressing the cool shot button.

To clean the air filter - The air filter ensures that only clean air is used to dry your hair. To remove the air filter, ensure the hairdryer is unplugged from the mains supply and clip off the rear cover to reveal the air filter. Take out the filter to clean away hair and lint using a vacuum cleaner. To refit locate the air filter into the filter cover and click back into place.

Important safeguards

When using your hair appliance, basic safety precautions should always be followed.

- 1 Read all instructions carefully.
- 2 Use the appliance for its intended use only.
- 3 To protect against the risk of electric shock, do not immerse the appliance in water or in any other liquids.
- 4 Be sure that your household voltage corresponds to the voltage marked on the dryer.
- 5 The air inlet grille should not be obstructed when the hairdryer is in use.
- 6 Always unplug your appliance when it is not in use.
- 7 It is recommended that this appliance should not be used by children.
- 8 Do not leave the hairdryer switched on whilst unattended.
- 9 **Do not use in a bathroom.**