



CI-75i, CI-100i, CI-150i, and CI-200i

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.

DANGER

To reduce the risk of electric shock:

- Always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning it.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- Never operate this appliance if it has a damaged cord or plug; if it is not working properly; if it has been dropped, damaged, or dropped into water.
- Keep the cord away from heated surfaces.
- Do not wrap the cord around the appliance.
- Never use while sleeping.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

- Do not use an extension cord with this appliance.
- The curling iron and clips are hot when in use. Do not let eyes and bare skin touch heated surfaces.
- Do not place the heated unit directly on any surface while it is hot or plugged in. Use the stand provided.
- This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way.

If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- This appliance is for household use only.
- Do not plug or unplug this appliance when your hands are wet.

3



KEEP AWAY FROM CHILDREN

SAVE THESE INSTRUCTIONS

Product Features

Thank you for purchasing the Remington[®] Protect & Shine[™] Curling Iron with triple protection. This unique styler combines optimum styling features with an exclusive Teflon[®] plus black Ceramic coating with lons to provide your hair the ultimate protection and superior shine. Please carefully read the instructions contained in this booklet, and keep them in a safe place for future reference.

4

Key Features

Triple Protection:

Remington[®] Protect & ShineTM triple protection products have an exclusive Teflon[®] plus black Ceramic coating and lons for the ultimate defense against damage – for superior shine.







Styler Parts

- 1. Safety tip
- 2. Clamp, coated with Teflon[®] plus Ceramic
- 3. lons
- 4. Cool-touch thumb lever
- 5. Power indicator and ready light
- 6. ON/OFF switch
- 7. Hang loop
- 8. Tangle-free swivel cord
 9. L0 (1) to HI (30) temperature control
- **10.** Safety stand
- **11.** Barrel, coated with Tef lon[®] plus black Ceramic



How to Use

Line Cord Safety Tips

- To insert plug, grasp it firmly and guide it into outlet.
- The appliance has a polarized plug, so it will only fit into the outlet one way. (See safety warnings for more details.)
- To disconnect the appliance, grasp the plug and remove it from outlet. Do not pull or yank on the cord or appliance.

Do not wrap the cord around the appliance.

Note: Before each use, inspect the line cord for cuts and/or abrasion marks. DO NOT OPERATE THE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE.

Important

6

During the first few minutes of initial use, there may be a slight odor. This is normal and will quickly disappear.

Heat Cautions

This multi-temperature curling iron has been specially designed to be able to curl very coarse, thick, hard-to-curl hair. Due to this special application, the barrel of this curling iron will be hotter on the HI (25-30) settings than regular dual-heat curling irons. **Due to the extreme capabilities of this iron, the barrel will be very hot in the HI** (25-30) settings, so extra care should be taken when using.

- Keep unit away from contact with all skin areas. Do not touch barrel with fingertips.
- For shorter hair, place a thin plastic comb between scalp and curling iron barrel to avoid touching scalp.
- Place fingers of free hand on safety tip when you need more control for curling.
- Test a small section of hair to determine correct heat setting for your hair type.

Special Reheating Feature

This iron features solid-state electronic circuitry with a heat sensor that detects temperature loss and quickly boosts the power to bring the heat level back to optimum styling temperature. During use the indicator light will repeatedly go through cycles of flashing and becoming steady as the appliance is constantly bringing itself back to optimum styling temperature.

Auto-off

After approximately one hour, the unit will automatically shut itself off. To reactivate the unit, press the ON/OFF switch.

Dual Voltage Use

This appliance contains a special electronic circuit that automatically converts it for worldwide usage–from 100 to 240 volts AC, 50 to 60 Hz. Just plug it into the local outlet and use it as normal; the styler will automatically adjust to the local current. (You may need an adapter to allow the plug to fit into the local outlets, however.)

How to Use

Hair should be clean, dry or nearly dry, and free of tangles before using. (This iron can also be used for quick touch-ups any time.)

- 1. Rest the iron on its stand on a smooth, flat surface, and plug it in.
- 2. Press the ON/OFF switch, and the power indicator light will flash.
- **3** Select a temperature according to the type and texture of your hair.
- 4. With the heat control dial set at the desired setting, allow the unit to pre-heat. The power indicator light will begin to flash, signaling that the appliance is heating up. When the appliance is heated the indicator light will glow steadily.

7

Usage Tips

How to Get Professional Results with Your Curling Iron

This unique curling iron has been designed with multiple temperatures, providing very high heat in the HI (25-30) settings for curling very coarse, thick, hard-to-curl hair; and very low heat in the LO (1-6) settings for curling extra fine, damaged or dry hair. It also provides a full range of heat settings between LO and HI, for all normal textures and thicknesses of hair. **TEST A SMALL SECTION OF HAIR BEFORE USING; THEN ADJUST TEMPERATURE DEPENDING ON HAIR TYPE.**

Heat Settings

HI (25-30)

These settings are very hot. Use only if hair is very coarse and highly resistant, but in good condition.

MED/HI (19-24)

8

Use heat settings in this range for dense, hard-to-curl hair in good condition.

MEDIUM (13-18) Use heat settings in this range for thick,

wavy hair in good condition.

L0/MED (7-12) Use heat settings in this range for easy-tocurl, normal hair.

L0 (1-6) Use L0 heat setting for very fine, fragile, light-colored hair.

Styling

1. Start by dividing hair into sections not more than 1 inch deep and 2 inches wide.

- Keep the section smooth by brushing or combing through it while holding the ends taut with the other hand.
- 3. Taking one section at a time, place the ends of hair over the barrel with the clamp open. Then close the clamp, making sure that the ends extend just a tiny bit beyond the clamp.
- Grasp the safety tip with the other hand, and it will be easy to roll hair.
- Keep the section of hair taut as you wind it around the hot barrel. Wind the curl toward the scalp as far as you wish to go without touching scalp with the hot barrel.
 Hold the curl in place for up to 20 seconds for tight curls or if hair is hard to curl.
- Hold for less time if hair is easy to curl, or if you want loose curls or just waves. 7. When ready to release curl, unwind
- about half a turn (for longer hair, unwind a bit more) and push down on the clamp release lever to open the clamp. Now, gently withdraw the barrel from the center of curl. Allow curl to cool, and try not to disturb curls while proceeding in the same manner around whole head.
- 8. When completely finished, and all curls have cooled thoroughly, gently brush and comb hair into the style desired.

For a Flip, the clamp should be under and the barrel over the section of hair at the start of the curl.

For a Curl, the clamp should be over and the barrel under the section of hair at the start of the curl.

For Volume and Body, roll hair loosely around the barrel. Allow hair to cool slightly before brushing.

Maintenance and Storage

Maintenance

- To clean the unit, be sure the unit is cool and unplugged. Wipe the handle and barrel with a damp cloth. No other maintenance is necessary.
- Do not attempt to repair the appliance yourself.

Storage

When not in use, unplug the unit. Allow it to cool, and store it out of reach of children in a safe, dry location.

Never wrap the cord around the appliance as this will cause the cord to wear prematurely and break, thus voiding warranty. Handle cord carefully for long life, and avoid jerking, twisting or straining it, especially at plug connections.

9

Performance Guarantee

Full Two-Year Warranty

Rayovac Corporation warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Rayovac Corporation, Attention: Comsumer Services, 601 Rayovac Drive, Madison, Wi 53711. For more information call 800-736-4648.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

10

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

RAYOVAC CORPORATION SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Rayovac[®] Money-back Offer

If within 30 days after you have purchased your Remington[®] branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Rayovac Corporation will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648.

120-240 VAC 50-60 Hz

Questions or comments: Call 800-736-4648 in U.S. Or visit www.remington-products.com

REMINGTON and PROTECT&SHINE[®] are trademarks of Rayovac Corporation. TEFLON is a registered trademark of E.I. du Pont de Nemours and Company and is used under license by Rayovac Corporation.

©2004 RAYOVAC CORPORATION 11/04 Job# CS27432 Rayovac Corporation 800-736-4648

MADE IN CHINA



11

