 
 


How to Use

IMPORTANT INFORMATION

- Before using make sure your hair is clean, dry, and tangle-free.
- For best results use steam. **However, the product can be used without steam if you prefer.**
- DO NOT get too close to scalp.
- Hold unit only by the handle, as other areas get hot when in use.
- Use only water in the reservoir (except when cleaning).
- It is important to regularly clean the unit to prevent any build-up in the water reservoir
- DO NOT use an abrasive cleaning fluid or material to clean the coated plates, as damage will occur. Instead, use warm water and a soft cloth.
- DO NOT scratch the surface of the plates, as this will deteriorate the effectiveness of the non-stick **Teflon®** coating.

OPERATING INSTRUCTIONS

1. With the unit switched off and unplugged, grip the water reservoir at both sides. Push in the tabs and pull away from the unit.
2. Twist the wick holder to the right by 90 degrees and pull away from the reservoir.
3. Fill the unit with water, replace the wick holder and turn 90 degrees to lock again.
Do not remove wick from wick holder as damage could occur.
4. Snap the reservoir back into place by lining up the tabs on either side of the unit.
5. Select the plates you wish to use. Release plates by sliding the thumb tab at the front of the plate toward the front of the unit and releasing the plates with your other hand.
6. If you are using the straightening plates, you may wish to use the detangling comb, which helps to guide plates over the surface. This is easily slid on and off the plate.
The detangling comb cannot be used with the crimping and waving plates.
7. **Always heat the unit with the locking switch in the UNLOCKED  position. NEVER heat the unit when the locking switch is in the LOCKED  position.**

8. Plug in the Protect & Shine™ 3-in-1 Steam Straightener. In a few minutes it will be ready to use.
9. The steam is continuous so it will come out of the holes as soon as the styler is hot enough. Please be aware that steam is not necessarily visible.
10. Keep note of how much water is left in the reservoir. It usually runs out after being used for between 35 and 40 minutes.
11. If you run out of water while styling, unplug the straightener and leave it to cool before filling up again.

ADDITIONAL INFORMATION

Locking Switch
The locking switch can be used for easy storage and for use when traveling. To close and lock the straightener, squeeze the unit and slide the switch to lock. Make sure the lock is released before you use the unit.

DUAL VOLTAGE USE
This product contains a special electronic circuit. This circuit automatically adjusts to worldwide voltage. When traveling overseas, this product can be plugged into any voltage outlet without your having to adjust the product manually in any way. In some overseas countries, an attachment plug adapter of the proper configuration for the power supply receptacle may be required. **DO NOT USE** a voltage converter or extension cord with this product.

STRAIGHTENING YOUR HAIR

1. Take one section of hair approximately 2" wide, and smooth it out with a comb.
2. Place hair section between the hot plates and clamp down firmly on the handles. You will achieve professional results if you work from the scalp to the ends of the hair.
3. Hold the unit in position for a few seconds depending on type of hair (5 seconds for fine hair and up to 8 seconds for medium to coarse hair).
4. To remove hair from the unit, simply release pressure on the handles and allow hair to gently slip out from the straightening plates.
5. The straightening process requires some overlapping: match the outermost ridge of your hair with the ridge at the end of the plates. Close the straightener around the hair and hold in position again for 5 to 8 seconds.
6. Repeat the process until you have achieved the look you desire. With a little experimentation you can attain a hairstyle that is completely your own.

Maintenance

USER MAINTENANCE INSTRUCTIONS

To clean the plate surface, make sure the unit is cool and unplugged before detaching the plates. Wipe the coated plates with a damp cloth. No other maintenance is required.

To prevent a build-up of hard water limescale in the water reservoir, add 3-4 drops of vinegar to the water reservoir, top up to the fill line with water and plug in the Protect & Shine™ 3-in-1 Steam Straightener. Close the unit to allow it to steam for around 5 minutes then unplug it and rinse out the water reservoir.

STORAGE

When not in use, unplug the unit. Allow it to cool, empty tank and store out of reach of children in a safe, dry location.

Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break. Handle cord carefully, and avoid jerking, twisting or straining it especially at plug connections.

Use & Care Guide

REMINGTON®

PROTECT&SHINE™
3-in-1 Steam Straightener
with 3X protection



Teflon®
+ Ceramic
+ Ions
for beautiful, healthy,
shiny hair
C-1100i

IMPORTANT SAFEGUARDS

When using electrical appliances,especially when children are present,basic safety precautions should always be followed,including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER. DANGER!

As with most electrical appliances, electrical parts are electrically live even when the switch is off.

TO REDUCE THE RISK OF DEATH BY ELECTRIC SHOCK:

1. Always unplug this appliance immediately after using.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. Do not reach for an appliance that has fallen into water. Unplug immediately.

WARNING

TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

1. This appliance is for household use only.
2. An appliance should never be left unattended when plugged in.

3. Close supervision is necessary when this appliance is used by, on,or near children or invalids.
4. Use this appliance only for its intended use as described in this manual.Do not use attachments not recommended by Remington.
5. Never operate this appliance if it has a damaged cord or plug; if it is not working properly; if it has been dropped,damaged,or dropped into water. If any of these things happen return the appliance to the Remington Customer Service Center for examination and repair.
6. Keep the cord away from heated surfaces. **Do not wrap the cord around the appliance.**
7. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint,hair, etc.
8. Do not place the heated unit directly on any surface while it is hot or plugged in.
9. Never use while sleeping.
10. Never drop or insert any object into any opening or hose.
11. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
12. The plates of this appliance are hot when in use.Do not let eyes and bare skin touch heated surfaces.
13. Do not touch hot surfaces of this appliance. Use handles or knobs.
14. While emitting steam, this appliance may cause burns if it is used too close to the skin, scalp or eyes, or if it is used incorrectly.
15. To reduce the risk of contact with hot water emitted from steam vents, test unit before each use by holding it away from body and operating.
16. Fill reservoir with water only.

17. Before plugging in, read the information about dual voltage contained in the instruction section of this manual.
18. Do not use with a voltage converter, or extension cord.
19. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.



KEEP AWAY FROM CHILDREN

SAVE THESE INSTRUCTIONS

Thank you for purchasing the Remington® 3-in-1 Steam Straightener. This unique straightener combines optimum styling features with an exclusive Teflon®, plus Ceramic coating with Ions to provide your hair the ultimate protection and superior shine. Please carefully read the instructions contained in this leaflet, and keepthem in a safe place for future reference.

Key Features

 
3X Protection: Protect & Shine™ products from Remington® have an exclusive Teflon® plus Ceramic coating and ions for the ultimate defense against damage – for superior shine.

Teflon® coating: Non-stick Teflon® coating glides through any type of hair, preventing static, stickiness and build-up of mousses, gels, and hair sprays for smooth, shiny results – every time!

Ceramic coating: Ceramic protects against damaging hot spots with high, even heat to lock in moisture and create long-lasting styles.

Ionic conditioning: Negative ions are created which neutralize positive ions to reduce static and the “frizzies”, leaving your hair looking shiny and healthy.

Product Features

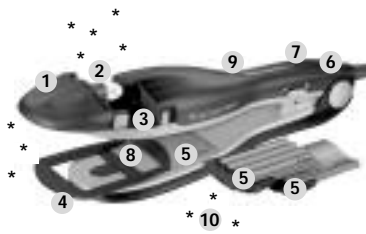

1. Water reservoir
2. Removable wick holder
3. Reservoir release tabs
4. Removable detangling comb
5. Straightening, waving, and crimping plates with **Teflon®** plus Ceramic coating
6. Closing lock for easy storage
7. Handle
8. Thumb tab to release plates
9. ON/OFF indicator light
10. Ions

Warranty Service

Full Two-Year Warranty

Remington® Products Company, L.L.C.warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period,we will repair it or elect to replace it free of charge. We will return your product, transportation charges prepaid,provided it is delivered prepaid to:Remington Products Company, L.L.C.,60 Main Street,Bridgeport,CT 06604,Attention:Service Department.Include a letter stating the reason for the return and the original receipt.


REMINGTON SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL,SPECIAL OR CONSEQUENTIAL DAMAGES.

This warranty gives you specific legal rights and you may also have other rights that vary from state to state.Some states do not allow the exclusion or limitation of incidental,special or consequential damages.


REMINGTON MONEY BACK OFFER

If within 30 days after you have purchased your Remington® product,you are not satisfied and would like a refund,take back the product and sales slip indicating purchase price and date of purchase to the retailer from whom the product was purchased.Remington® will reimburse all retailers who accept the product within 30 days from the date of purchase.If you have any questions concerning the money back guarantee,please call 800-736-4648.

KEEP SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES

 **Questions or Comments:**
Please call **800-736-4648**

 Visit us at www.remington-products.com

 This product will bear one or more compliance marks, Listed by Underwriters Laboratories, Inc.

120-240 VAC 50/60Hz

Remington and Protect & Shine are trademarks of Remington Products Company, L.L.C.
Teflon® s a registered trademark of E. I. du Pont de Nemours Company and is used under license by Remington Products Company, L.L.C.
© 2003 R.P.C., L.L.C. Job #WPC03-125 11/03 Part No. 15045

Remington Products Company, L.L.C.
60 Main Street
Bridgeport, CT 06604

MADEINCHINA