 
 


Welcome

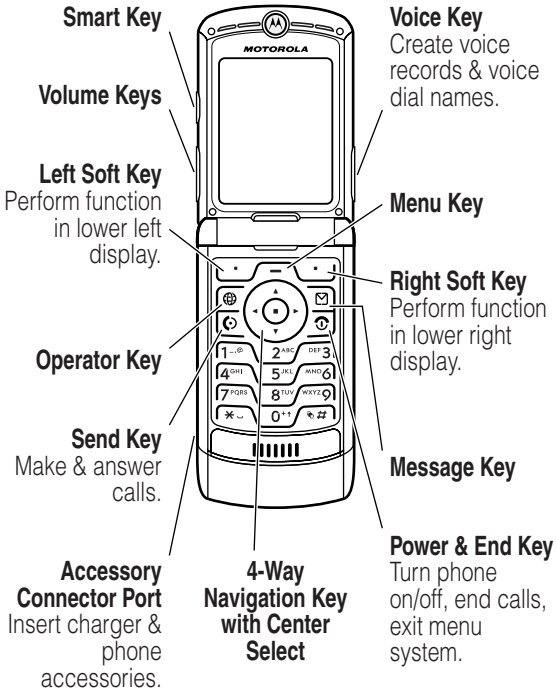

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola V3 GSM wireless phone.

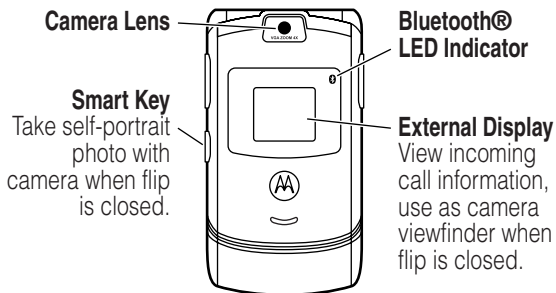

Check It Out!



| Feature | Description |
|--|--|
| Take Photo | Press CAMERA (📷) to activate the camera, point lens at subject, press CAPTURE (📷) to take a photo. |
| Take Self-Portrait (flip closed) | Activate the camera, close the flip, use viewfinder to aim lens, press smart key to take a photo. |
| Send Photo | Send a photo to a phone number or email address: Take photo, then press STORE (📷) > Send In Message. |

| Feature | Description |
|--------------------------------|---|
| Set Photo as Picture ID | Assign a photo to a phonebook entry to allow picture caller ID: Take photo, then press STORE () > Apply as Phonebook Entry. |
| Send Multimedia Message | Send a multimedia message with pictures, animations, sounds, and videos:  > Create Message > New Multimedia Msg |
| Wireless Connection | Set up a Bluetooth® wireless connection to a headset accessory, car kit, or external device:  > Settings > Connection > Bluetooth Link > Setup > Power > On , press BACK (), press > Handsfree > [Look For Devices] |



Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

1-800-331-6456 (United States)
1-888-390-6456 (TTY/TDD United States)
1-800-461-4575 (Canada)

www.motorola.com (United States)

www.motorola.ca (Canada)

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2004.

The information contained in Motorola's user's guides is believed to be correct at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice. The contents of Motorola's user's guides are provided "as is." Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this guide.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Contents

| | |
|--|----|
| Safety and General Information | 8 |
| European Union Directives Conformance Statement . . | 14 |
| Getting Started | 15 |
| About This Guide | 15 |
| Installing the SIM Card | 17 |
| Battery Use | 17 |
| Installing the Battery | 19 |
| Charging the Battery | 19 |
| Turning Your Phone On | 21 |
| Turning Your Phone Off | 21 |
| Adjusting Volume | 22 |
| Making a Call | 22 |
| Answering a Call | 23 |
| Viewing Your Phone Number | 23 |
| Highlight Features | 24 |
| Taking and Sending a Photo | 24 |
| Sending a Multimedia Message | 27 |
| Using a Bluetooth® Wireless Connection | 31 |
| Learning to Use Your Phone | 34 |
| Using the Display | 34 |
| Using the 4-Way Navigation Key | 39 |
| Using the Operator Key | 39 |
| Using the Message Key | 39 |
| Using Menus | 40 |
| Entering Text | 42 |
| Using the Smart Key | 55 |
| Using the External Display | 56 |

| | |
|--|-----------|
| Using the Handsfree Speaker | 57 |
| Changing a Code, PIN, or Password | 58 |
| Locking and Unlocking Your Phone | 58 |
| If You Forget a Code, PIN, or Password | 60 |
| Using the Phonebook | 60 |
| Setting Up Your Phone | 63 |
| Setting a Ring Style | 63 |
| Changing the Call Alert | 64 |
| Setting the Time and Date | 64 |
| Setting a Wallpaper Image | 65 |
| Setting a Screen Saver Image | 66 |
| Changing Phone Skin | 67 |
| Setting a Phone Theme | 67 |
| Setting Answer Options | 68 |
| Setting Display Brightness | 69 |
| Adjusting the Backlight | 69 |
| Setting Display Timeout | 69 |
| Storing Your Name and Phone Number | 70 |
| Calling Features | 71 |
| Turning Off a Call Alert | 71 |
| Viewing Recent Calls | 71 |
| Redialing a Number | 73 |
| Using Automatic Redial | 73 |
| Returning an Unanswered Call | 74 |
| Using the Notepad | 74 |
| Putting a Call On Hold or Mute | 75 |
| Using Call Waiting | 75 |
| Using Caller ID (Incoming Calls) | 76 |
| Calling an Emergency Number | 77 |
| Dialing International Numbers | 77 |
| Calling With 1-Touch Dial | 77 |

| | |
|--|------------|
| Using Voicemail | 78 |
| Changing the Active Line | 80 |
| Phone Features | 81 |
| Main Menu | 81 |
| Settings Menu | 82 |
| Feature Quick Reference | 83 |
| Calling Features | 83 |
| Messages | 84 |
| Phonebook | 85 |
| Personalizing Features | 88 |
| Instant Messaging | 90 |
| Chat | 91 |
| Email | 91 |
| Menu Features | 91 |
| Special Dialing Features | 92 |
| Call Monitoring | 93 |
| Handsfree Features | 94 |
| Data and Fax Calls | 95 |
| Bluetooth® Wireless Connections | 96 |
| Network Features | 97 |
| Personal Organizer Features | 98 |
| Security | 99 |
| News and Entertainment | 100 |
| Specific Absorption Rate Data | 103 |
| Index | 105 |

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION.
READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information in user's guides published prior to December 1, 2002.

Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following procedures.

External Antenna Care

Use only the supplied or Motorola-approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorized antennas may result in non-compliance with the local regulatory requirements in your country.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline telephone.

Body-Worn Operation

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines. If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 1 inch (2.5 centimeters) from your body when transmitting.

Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 1 inch (2.5 centimeters) from your body.

Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries and antennas, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at www.Motorola.com.

RF Energy Interference/Compatibility

Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimeters) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 6 inches (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving best practices may be found in the “Wireless Phone Safety Tips” at the end of this manual and at the Motorola website:

www.Motorola.com/callsmart.

Operational Warnings

For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere. Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.






Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted “Turn off electronic devices.” Obey all signs and instructions.

Batteries

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola original batteries and chargers.**

Your battery or phone may contain symbols, defined as follows:

| Symbol | Definition |
|---|--|
|  | Important safety information will follow. |
|  | Your battery or phone should not be disposed of in a fire. |
|  | Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information. |
|  | Your battery or phone should not be thrown in the trash. |
|  | Your phone contains an internal lithium ion battery. |

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing

video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone. (The flashing-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

Repetitive Motion Injuries

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

 
European Union Directives Conformance Statement



[France Only]

Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

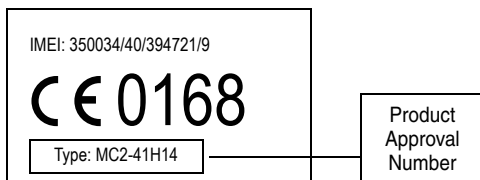

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at www.motorola.com/rtte - to find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site.

Getting Started



CAUTION: Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.

About This Guide

This guide describes the basic features of your Motorola wireless phone.

Note: A *More Here* reference guide for your phone is also available that describes your phone's features in more detail.

To obtain the *More Here* guide for your phone, or another copy of this guide, see the Motorola Web site at:

<http://motorola.com/consumer/manuals> (U.S.A.)


<http://motorola.ca/consumer> (Canada)



or contact the Motorola Customer Call Center at 1-800-331-6456 (U.S.A.) or 1-800-461-4575 (Canada).


 
Selecting a Menu Feature

Use the menu system to access your phone's features.

This guide shows you how to select a menu feature from the home screen as follows:

Find the Feature  > **Recent Calls** > **Dialed Calls**

This example shows that, from the home screen, you must press the menu key  to open the menu, scroll to and select  **Recent Calls**, then scroll to and select **Dialed Calls**.

Press the 4-way navigation key  to scroll and highlight a menu feature. Press **SELECT** () to select the highlighted menu feature.

Optional Features



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

Optional Accessories



 
This label identifies a feature that requires an optional Motorola Original™ accessory.

Installing the SIM Card

Your *Subscriber Identity Module* (SIM) card contains your phone number, service details, and phonebook/message memory.

Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

Slide the SIM card under the retention strap to insert it into the card slot as shown below:

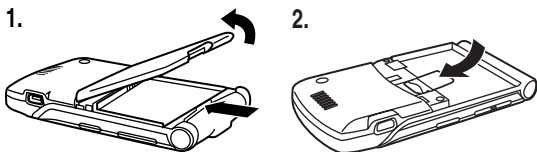

Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; items attached to the phone's accessory connector; and your voice, data, and other application usage patterns.

Caution: To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximize your battery's performance:

- Always use Motorola Original batteries and battery chargers. The phone warranty does not cover damage





caused from using non-Motorola batteries and/or battery chargers.

- New batteries or batteries that have been stored for a long time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



 
 
 
 
The rechargeable batteries that power this phone must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods.

Warning: Never dispose of batteries in a fire because they may explode.

Installing the Battery



™ Your phone is designed to use only Motorola Original batteries and accessories.

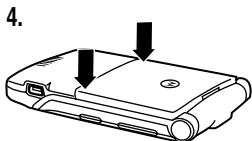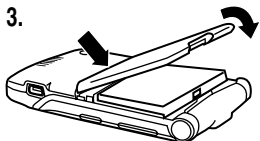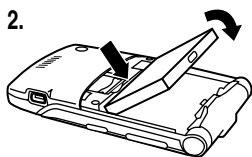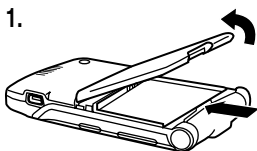

Getting Started

Charging the Battery

 
New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

Tip: The angle connector provided with your phone makes it easier for you to use the phone with an attached battery charger or phone accessory.



Action

- 1 Insert the travel charger plug into the detachable angle connector as shown.
- 2 Insert the angle connector plug into the USB connector port on your phone.

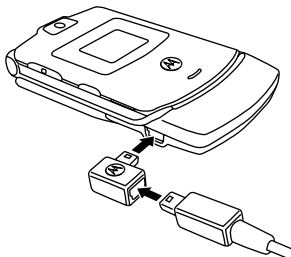

- 3 Plug the other end of the travel charger into the appropriate electrical outlet.


Note: It may take up to 10 seconds for your phone to provide a visible or audible indication that the battery is charging.

- 4 When your phone indicates **Charge Complete**, remove the travel charger and angle connector.

Note: You can safely leave the travel charger connected to the phone after charging is complete. This will **not** damage the battery.


Turning Your Phone On

Action


- 1 Press and hold the power key  for 2 seconds to turn the phone on.



Note: It may take up to 4 seconds for the display to illuminate after you turn the phone on.



- 2 If necessary, enter your SIM card PIN code and press **OK** () to unlock the SIM card.


Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays **SIM Blocked**.

- 3 If necessary, enter your 4-digit unlock code and press **OK** () to unlock the phone.

At startup, you may be prompted to personalize your phone. Select **YES** () to set personal phone options, or **NO** () to go to the home screen. For more information about personalizing your phone, see page 88.

Turning Your Phone Off

Action

Press and hold the power key  for 2 seconds to turn the phone off.

 


Adjusting Volume

Press the up or down volume keys to:



- silence an incoming call alert
- increase or decrease earpiece volume during a call
- increase or decrease ringer volume when the home screen is visible (flip must be open)

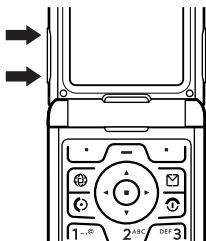Tip: At the lowest volume setting, press the down volume key once to switch to vibrate alert. Press it again to switch to silent alert. Press the up volume key to switch back to vibrate alert, then ring alert.



Making a Call


You must be in the home screen to dial a phone number (see page 34).

| Press | To |
|---|--|
| 1 keypad keys | dial the phone number |
| 2  | make the call |
| 3  | end the call and “hang up” the phone when you are finished |




Tip: You can also close the phone flip to end the call.

Answering a Call


 
When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

When the phone flip is active, open the phone to answer the call. (To activate, press  > **Settings** > **In Call Setup** > **Answer Options** > **Open To Answer.**)

If the phone flip is **not** active:

| Press | To |
|---|--|
| 1  or ANSWER () | answer the call |
| 2  | end the call and “hang up” the phone when you are finished |

Viewing Your Phone Number

To view your phone number from the home screen, press  .

While you are on a call, press  > **My Tel. Numbers.**

Note: Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 70. If you do not know your phone number, contact your service provider.




Highlight Features




You can do much more with your phone than make and receive calls!

 
Taking and Sending a Photo

Shortcut: From the home screen, press **CAMERA** () to activate the camera.


To activate your phone's camera from the menu system:

Find the Feature  > **Multimedia** > **Camera**

The active viewfinder image appears on your display.

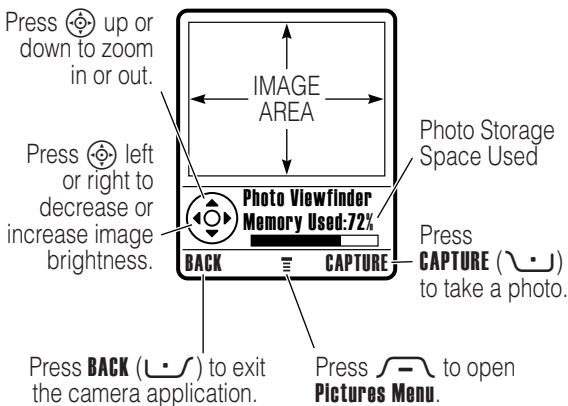

Point the camera lens at the photo subject, then:

| Press | To |
|---|--|
| 1 CAPTURE (⏺) | take a photo |
| 2 STORE (⏺) | view storage options If you choose to store the photo, continue to step 3. |
| or | |
| DISCARD (⏺) | delete the photo and return to active viewfinder |
| 3  | scroll to Send in Message, Store Only, Apply as Wallpaper, Apply as Screen Saver, or Apply as Phonebook Entry |
| 4 SELECT (⏺) | perform the storage option |



Taking a Self-Portrait

| Action |
|---|
| 1 From the home screen, press CAMERA (⏺) to activate the camera, then close the flip. or Close the flip, then press and hold the smart key to activate the camera and external display viewfinder. |
| 2 Use the external viewfinder to aim the camera lens. |

Action

- 3 Press the smart key to take a photo.
- 4 Wait 5 seconds for your phone to save the photo and reset the external viewfinder.

or

Open the flip to store or discard the photo.



Adjusting Camera Settings

Press  to open the **Pictures Menu** when the camera is active. The **Pictures Menu** can include the following options:

| Option | Description |
|---------------------------|---|
| Go To Pictures | View pictures and photos stored on your phone. |
| Auto-Timed Capture | Set a timer for the camera to take a photo. |
| Pictures Setup | Open the setup menu to adjust the following settings: |
| | <ul style="list-style-type: none">• Auto Repeat: Return to the beginning when the last picture displays in a picture album slideshow.• Shuffle: Set pictures to display randomly when viewing a picture album slideshow.• Allow Alert: Enable or disable all phone sound/vibration alerts when taking a picture. |
| | <ul style="list-style-type: none">• Lighting Conditions: Set to Automatic, Sunny, Cloudy, Indoor (Home), Indoor (Office), or Night. |
| | <ul style="list-style-type: none">• Exposure: Set to +2, +1, 0, -1, or -2. |



| Option | Description |
|------------------------|---|
| | <ul style="list-style-type: none"> • Resolution: Set the camera to capture photos at the following resolutions: MMS (160x120 pixels), Medium (320x240 pixels, or High (640x480 pixels) |
| | <ul style="list-style-type: none"> • Shutter Tone: Activate a tone that sounds when you take a photo. Can be set to None, Chimp, Quack, Flix, Boing, or Click. |
| View Free Space | See how much memory remains for storing pictures. |



Sending a Multimedia Message



A *Multimedia Messaging Service* (MMS) multimedia message contains one or more pages with text and embedded media objects (including photos, pictures, animations, sounds, voice records, and video clips). You can send a multimedia message to other wireless phone users, and to email addresses.












Tip: The layout of all pages in a multimedia message is defined by the layout of the first page. To display a media object at the top of the page, insert it in the first half of the message text. To display a media object at the bottom of the page, insert it in the second half of the message text.

Find the Feature



- > **Create Message**
- > **New Multimedia Msg**

| Press | To |
|---------------|--------------------------|
| 1 keypad keys | enter text on the page |
| 2 | open the MMS Menu |



| Press | To |
|--|---|
| 3  | scroll to Insert |
| 4 SELECT () | display a list of items you can insert |
| 5  | scroll to Picture, Voice Record, Sound, Video, New Page, Quick Note, or Contact Info |
| 6 SELECT () | select the file type |
| 7  | highlight the file you want |
| 8 SELECT () | insert the file |
| | To add another page to the message, continue to step 9. |
| 9  | open the MMS Menu to insert a new page |
| 10  | scroll to Insert |
| 11 SELECT () | display a list of items you can insert |
| 12  | scroll to New Page |
| 13 SELECT () | insert a new page after the current page |
| | Repeat steps 1 to 8 to enter contents for the new page. |

When you finish composing the multimedia message:

| Press | To |
|---|---|
| 1 OK (↵) | store the message |
| 2  | scroll to a Send To option: Highlight an existing phonebook entry. Or highlight [One Time Entry] to enter one or more phone numbers or email addresses. Or highlight [New Phonebook Entry] to enter a number/address and add it to the phonebook. |
| 3 ADD (↵) | add the phonebook entry to the list of recipients Repeat steps 2 and 3 to add additional phonebook entries to the list. |
| or | |
| SELECT (↵) | select [One Time Entry] or [New Phonebook Entry] |
| 4 DONE (↵) | store the numbers/addresses |
| 5  | scroll to Subject |
| 6 CHANGE (↵) | select Subject |
| 7 keypad keys | enter the subject |





| Press | To |
|---|--|
| 8 OK (↵) | store the subject |
| 9 CHANGE (↵) | select Attachments to attach a file to the message, if desired |
| 10 | scroll to Picture, Sounds, or Video |
| 11 SELECT (↵) | select the file type |
| 12 | highlight the file you want |
| 13 SELECT (↵) | attach the file |
| 14 BACK (↵) | return to the message editor |
| 15 | scroll to Receipt to request a receipt, if desired |
| 16 CHANGE (↵) | select Receipt |
| 17 ADD (↵) or REMOVE (↵) | activate/deactivate the delivery report |
| 18 DONE (↵) | return to the message editor |
| 19 SEND (↵) | send the message |
| or | |
| | view message details, save the message in the drafts folder, or cancel the message |

Using a Bluetooth® Wireless Connection

Your phone supports Bluetooth wireless connections. You can set up a wireless link with a Bluetooth headset or handsfree car kit, or connect to a computer or hand-held device to exchange and synchronize data.



Note: Your phone's Bluetooth features and Bluetooth Class 1 power levels are not allowed for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the Bluetooth features in France unless you are indoors.

Turning Bluetooth On or Off

The preferred method for connecting your phone to a Bluetooth headset or handsfree car kit is to turn on Bluetooth on your phone, then connect your phone to the headset or car kit.

To turn Bluetooth on:

Find the Feature

 > **Settings** > **Connection**
> **Bluetooth Link** > **Setup**
> **Power** > **On**

This procedure turns Bluetooth on and leaves it on until you turn it off. When your phone's Bluetooth power is on, your handsfree accessory can automatically reconnect to the phone when you turn on the accessory or move it within range of the phone.

Note: To extend battery life, use the above procedure and set Bluetooth power to **Off** when not in use.


Searching for Other Devices

To connect your phone to a Bluetooth headset or handsfree device:




Find the Feature

 

 > **Settings** > **Connection**
> **Bluetooth Link**
> **Handsfree**
> [**Look For Devices**]

If Bluetooth is turned off, your phone asks if you want to **Temporarily Power On?** Bluetooth. Press **YES** () to proceed. Alternatively, set **Power** to **On** in the **Setup** menu to turn Bluetooth on and leave it on.

Your phone scans for and displays a list of device(s) located within range of the phone.

Note: If your phone is already connected to a device, you must disconnect from it to search for other devices.

To connect to a device, highlight the device name and press **SELECT** ()

The device may request permission to bond with your phone. Select **YES** () and enter the correct PIN code to create a secure connection with the device. When the connection is made, the Bluetooth indicator  displays in the home screen, and the external Bluetooth LED indicator flashes.

Sending Objects to Another Device

You can use a Bluetooth wireless connection to send a picture, sound, video, phonebook entry, datebook event, or bookmark from your phone to another phone, computer, or hand-held device.



Sending a Picture, Sound, or Video

Highlight the object on your phone that you want to send to the other device, then press $\sqrt{\quad}$ > **Copy**.

Select a recognized device name listed in the **Object Exchange** menu, or **[Look For Devices]** to search for the device to which you want to send the object.

Sending a Phonebook Entry, Datebook Event, or Bookmark

Highlight the item on your phone that you want to send to the other device, then press $\sqrt{\quad}$ > **Send**.

 
Select a recognized device name listed in the **Object Exchange** menu, or **[Look For Devices]** to search for the device to which you want to send the item.



Learning to Use Your Phone



See page 1 for a basic phone diagram.

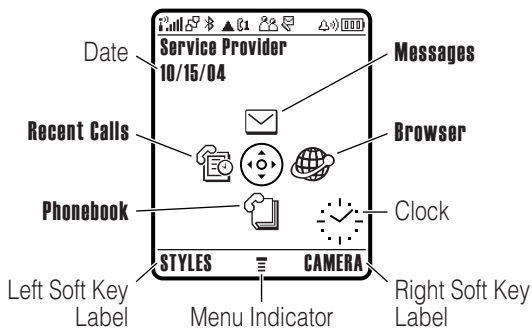
 
Using the Display

The *home screen* is displayed when you are **not** on a call or using the menu. You must be in the home screen to dial a phone number.



Press the 4-way navigation key  up, down, left, or right to select a menu feature icon. If you select a menu icon by mistake, press  to return to the home screen.

The menu indicator  shows that you can press the menu key  to enter the main menu.

 
Labels at the bottom corners of the display show the current soft key functions. Press the left soft key  or right soft key  to perform the indicated function.


Notes:


- Your home screen may appear different than shown. For example, the menu feature icons normally are hidden to allow a better view of the wallpaper image. You can still select the menu icons when they are hidden from view. To show or hide menu icons, see page 89.
- Your phone can display an analog or digital clock in the home screen (see page 89).
- Your phone's display normally is visible only when the display backlight is on, or when the display is viewed in direct sunlight. To extend battery life, the backlight turns off automatically when no activity is detected for a period of time. The backlight turns back on when you open the flip or press any key. To set the time that the backlight stays on, see page 69.
- To further extend battery life, you can set the display to turn off, in addition to the backlight, after a period of inactivity. The display turns back on when you open the flip or press any key. To set the time that the display stays on, see page 69.



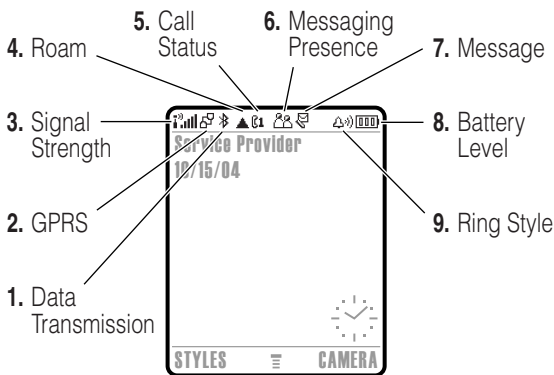

The following status indicators can display:




 
1. Data Transmission Indicator – Show connection and data transmission status. The Bluetooth® wireless connection indicator  shows when a Bluetooth connection is active. Other indicators can include:


 = secure packet data transfer

 = unsecure packet data transfer

 = secure application connection

 = unsecure application connection

 = secure *Circuit Switch Data* (CSD) call


 = unsecure CSD call





2. GPRS Indicator – Shows that your phone is using a high-speed *General Packet Radio Service* (GPRS) network connection. GPRS allows faster data transfer speeds. Other


indicators can include:

 = GPRS PDP context active

 = GPRS packet data available


3. Signal Strength Indicator – Vertical bars show the strength of the network connection. You cannot make or receive calls when the no signal indicator  or no transmit indicator  is displayed.

 


4. Roam Indicator – The roam indicator  shows when your phone is seeking or using another network outside your home network.




 
5. Call Status Indicator – Shows the call status of your phone. For dual-line-enabled SIM cards, shows the current active phone line. Indicators can include:


 = phone in call

 = call forward on

 = line 1 active

 = line 2 active

 = line 1 active, call forward on

 = line 2 active, call forward on





6. Messaging Presence Indicator – Shows when instant messaging is active. Indicators can include:

= IM active

= available for IM

= busy

= invisible to IM

= available for phone calls

= offline

When a Java™ application is active, the Java midlet indicator displays in this location.



7. Message Indicator – Displays when you receive a new message. Indicators can include:

= text message

= voicemail message

= voicemail and text message

= IM message

= active chat session

8. Battery Level Indicator – Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and the battery alert sounds.

9. Ring Style Indicator – Shows the ring style setting.

= loud ring

= soft ring




= vibrate

= vibrate then ring

= vibrate & ring


= silent

Using the 4-Way Navigation Key

 
Press the 4-way navigation key  up, down, left, or right to scroll through the menu system, highlight menu items, change feature settings, and play games. Press the *center select* key  in the center of the 4-way navigation key to select a highlighted menu item. The center select key usually performs the same function as the right soft key .




Using the Operator Key

From the home screen, press the operator key  to go to your service provider's portal site to access customized content and services.

If a portal site is not available, pressing the operator key launches the micro-browser.

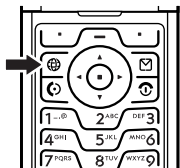

 
Using the Message Key

From the home screen, press the message key  to go to the message center, to send a message or read messages you have received.







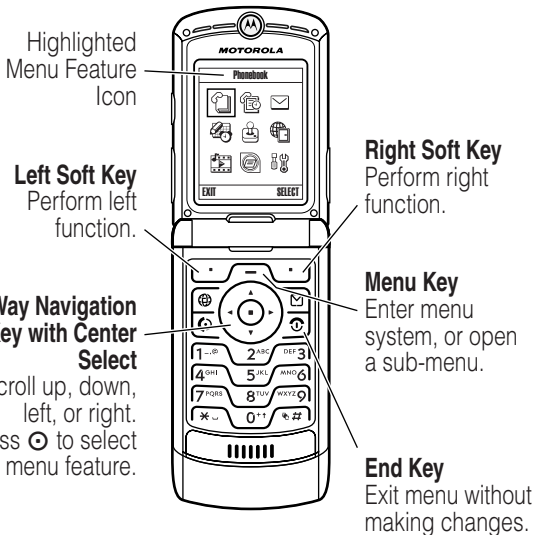




Using Menus

From the home screen, press $\sqrt{-}$ to enter the main menu.



Press \odot to scroll to and highlight a menu feature icon in the main menu. Press **SELECT** ($\sqrt{-}$) or \odot to select the highlighted menu feature.

 
The following icons represent features that may display in the main menu, depending on your service provider and service subscription options.

| Menu Icon | Feature | Menu Icon | Feature |
|---|--------------|---|--------------|
|  | Phonebook |  | Recent Calls |
|  | Messages |  | Office Tools |
|  | Games & Apps |  | Web Access |
|  | Multimedia |  | IM |
|  | Settings | | |




Selecting a Feature Option

Some features require you to select an option from a list:

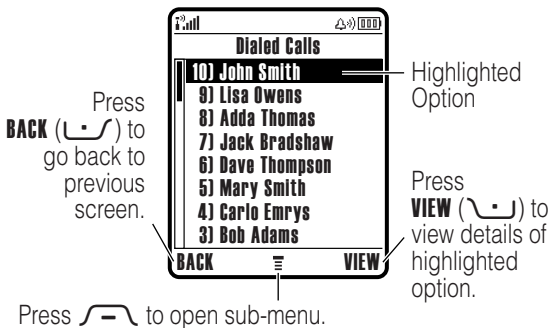

 
- Press (↑/↓) to scroll up or down to highlight the option you want.

- In a numbered list, press a number key to highlight the option.
- In an alphabetized list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.
- When an option has a list of possible values, press  left or right to scroll through and select a value.
 - When an option has a list of possible numeric values, press a number key to set the value.





Entering Text

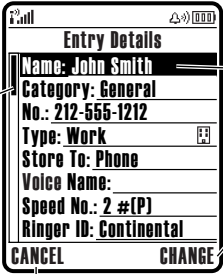
 
Some features require you to enter information.



 
Scroll down to bottom of list to view more options.

Highlighted option. Press  to scroll to other options.

Press **CHANGE** () to set or edit highlighted option.

Press **CANCEL** () to exit without making changes. **DONE** () displays when you enter or edit information.

The message center lets you compose text messages.

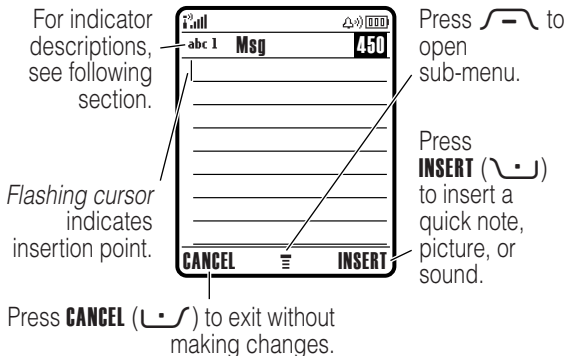

Selecting a Text Entry Mode

Multiple text entry modes make it easy for you to enter names, numbers, and messages. The mode you select remains active until you select another mode.

Press **⏏** in a text entry screen to select one of the following entry modes:

 
- Primary** Your primary text entry mode (see below to set).
- Numeric** Enter numbers only (see page 53).
- Symbol** Enter symbols only (see page 53).
- Secondary** Your secondary text entry mode (see below to set).


Alternatively, you can select a text entry mode in any text entry screen by pressing **⏏** > **Entry Mode**.



 
Setting Primary and Secondary Text Entry Modes

You can set different primary and secondary text entry modes, and easily switch between modes as needed when you enter data or compose a message.

Press  > **Entry Setup** in a text entry screen. Select **Primary Setup** or **Secondary Setup**, and choose:

- 
- ITAP** iTAP® software predicts each word as you enter it, to simplify and speed up text entry.
 - Tap** Enter individual letters and numbers by pressing a key one or more times.
 - Tap Extended** Enter individual letters, numbers, and symbols by pressing a key one or more times.
 - None** Hide the **Secondary** setting if you prefer not to set a secondary text entry mode (only available for **Secondary Setup**).

Using Capitalization

Press  in a text entry screen to change text case. Indicators at the top of the display show the capitalization setting:

abc = no capital letters

ABC = all capital letters

Abc = capitalize next letter only

Text Entry Mode Indicators

In **Primary** or **Secondary** text entry mode, indicators at the top of the display show the text entry setting:

| Primary | Secondary | |
|---------|-----------|-----------------------------------|
| 1 | 2 | Tap, no capital letters |
| 1↑ | 2↑ | Tap, capitalize next letter only |
| 1↑ | 2↑ | Tap, all capital letters |
| 1 | 2 | iTAP, no capital letters |
| 1↑ | 2↑ | iTAP, capitalize next letter only |
| 1↑ | 2↑ | iTAP, all capital letters |

The following indicators identify **Numeric** or **Symbol** entry mode:

123 = numeric mode


@ = symbol mode

 


Using iTAP® Mode


iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words, and predicts each word as you enter it.


 

For example, to type “the,” you would press

. The iTAP software recognizes that the most common word formed by this keypress combination is “the,” and predicts that “the” is the word you are spelling. Other common words or word fragments that can be spelled by the same keypress combination are presented as alternate choices at the bottom of the display.

If necessary, press  in a text entry screen to switch to iTAP mode. An indicator tells you which mode is active (see page 45). If iTAP mode is not set as the **Primary** or **Secondary** entry mode, see page 44.

Entering Words in iTAP Mode

| | Press | To |
|---|---|--|
| 1 | keypad keys (one press per letter) | show possible letter combinations at the bottom of the display |
| 2 |  left or right | highlight the combination you want |

 
| Press | To |
|---|---|
| 3  up | accept the predicted word completion, followed by a space |
| or | |
|  | enter the highlighted combination, followed by a space |
| or | |
| SELECT  | select the highlighted combination, with no space |
| <p>You can press keypad keys to add more letters at the end of the combination.</p> | |



For example, if you press $\overline{7^{PQRS}}$ $\overline{7^{PQRS}}$ $\overline{6^{MNO}}$ $\overline{4^{GHI}}$, your phone displays:

Press $\overline{* \wedge}$ to enter **Prog** and a space.

Press **DELETE** ($\overline{_}$) to delete last letter.

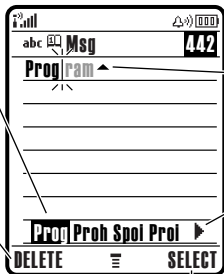

Press \odot up to accept **Program**.

Press \odot right to highlight another combination.

Press **SELECT** ($\overline{_}$) to select highlighted combination with no space.

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

Entering Novel Words in iTAP Mode

You may enter a word that the iTAP software does not recognize. If your word is not shown as a letter combination choice at the bottom of the display:

Action

- 1 Press **DELETE** ($\overline{_}$) one or more times to delete letters, until you see a letter combination at the bottom of the display that matches the start of the word you want to enter.
- 2 Press \odot left or right to highlight the letter combination.

Action

- 3 Press **SELECT** (↵) to select the letter combination.
- 4 Continue to enter letters and select letter combinations to spell the word.

Your phone automatically stores the novel word and displays it as an option the next time you enter its letter combination. When the memory space for storing novel words is filled, your phone deletes the oldest words to add new words.

Entering Numbers and Punctuation in iTAP Mode

To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to revert to **iTAP** mode.

Press **1...@** to enter punctuation or other characters as shown in the “Character Chart” on page 52.



Using Tap Mode

This is the basic text entry mode on your phone.

Tap mode cycles through the letters and number of the key you press. **Tap Extended** mode also cycles through additional symbols as shown in the “Character Chart” on page 52.


 

If necessary, press $\sqrt{\text{*.#}}$ in a text entry screen to switch to **Tap** mode. An indicator shows which mode is active (see page 45). If **Tap** or **Tap Extended** is not set as the **Primary** or **Secondary** entry mode, see page 44.


Tap Mode Text Entry Rules

 
- Press a keypad key repeatedly to cycle through its characters. For example, you would press $\sqrt{\text{2ABC}}$ one time to enter “a,” two times to enter “b,” three times to enter “c,” or four times to enter “2.”
- After 2 seconds, **Tap** mode accepts the character, and the cursor moves to the next position.
- The first character of every sentence is capitalized. If necessary, press \odot down to change the character to lowercase before the cursor moves to the next position.
- Press \odot to move the flashing cursor to enter or edit message text.
- If you do not want to save your text or text edits, press \odot to exit without saving.




Entering Words in Tap Mode

| Press | To |
|---|--|
| 1 a keypad key one or more times | enter a letter, number, or symbol |
| 2 keypad keys | enter remaining characters |
| | Tip: Press  right to accept a word completion, or  to insert a space. |
| 3 OK () | store the text |


For example, if you press  one time, your phone displays:

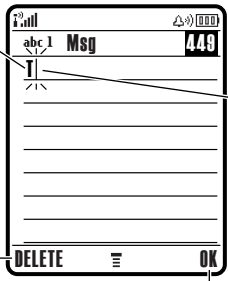

Character displays at insertion point.

Press **DELETE** () to delete last character entered.

 
After 2 seconds, character is accepted and cursor moves to next position.

Press **OK** () to accept and store text.



When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog** your phone might display:



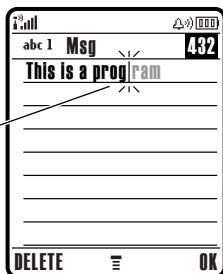






Press  right to accept **program**. Press  to reject it and enter a space after **prog**.

 
 
 


 
To enter a different word (such as **progress**), press keys to enter remaining characters.

Character Chart

 
Use this chart as a guide for entering characters with **Tap Extended** mode.

 
| | |
|---|--|
|  | . 1 ? ! , @ _ & ~ : ; " - () ' ÷ ÿ % £ \$ ¥ ¤ € + x * / \ [] = > < # § |
|  | a b c 2 ä å á à â ã α β ç |
|  | d e f 3 δ ε é è ê φ |
|  | g h i 4 ï í î γ |
|  | j k l 5 λ |
|  | m n o 6 ñ ö ø ó ò ô õ ω |
|  | p q r s 7 π β σ |
|  | t u v 8 θ ü ú ù û |
|  | w x y z 9 ξ ψ |

| | |
|---|--|
|  | <i>change text case, for capital letters</i> |
|  | <i>enter a space (hold to enter a return)</i> |
|  | <i>change text entry mode (hold for default)</i> |

 
Note: This chart may not reflect the exact character set available on your phone. In an email or Web address editor,  first shows common characters for that editor.

Using Numeric Mode

In a text entry screen, press  to switch entry modes until the numeric indicator **123** displays.

Press the number keys to enter the numbers you want. When you finish entering numbers, press  to switch to another entry mode.

Using Symbol Mode

In a text entry screen, press  to switch entry modes until the symbol indicator **@** displays.

| Press | To |
|--|--|
| 1 keypad keys (one press per symbol) | show possible symbol combinations at the bottom of the display |



Press**To**2  left or right

highlight the combination you want

3 **SELECT** ()

select the highlighted combination

You can press keypad keys to add more symbols to the end of the combination.










 
or

 
 



enter the highlighted combination

Symbol Chart

Use this chart as a guide for entering characters with symbol mode.



| | |
|---|---|
|  | . ? ! , @ _ & ~ : ; " - () ' ` ; ; % £ \$ ¥ ¤ € |
|  | @ _ \ |
|  | / : ; |
|  | " & ' |
|  | () [] { } |
|  | ¿ ¡ ~ |
|  | < > = |
|  | \$ £ ¥ ¤ € |
|  | # % * |
|  | + - x * / = > < # § |

| | |
|---|--|
|  | <i>enter a space (hold to enter a return)</i> |
|  | <i>change text entry mode (hold for default)</i> |

Note: This chart may not reflect the exact character set available on your phone. In an email or Web address editor,  first shows common characters for that editor.

Deleting Letters and Words


Place the cursor to the right of the text you want to delete, and then:

 
| Action |
|---|
| Press DELETE () to delete one letter at a time. |
| Hold DELETE () to delete all entered text. |

Using the Smart Key

The *smart key* gives you another way to perform many basic phone functions. It anticipates the next action you are likely to perform. For example, when you highlight a menu item, you can press the smart key to select it.

You can use the smart key to make and end calls, turn

features on and off, and open your phonebook. The smart key usually performs the same function as the right soft key .

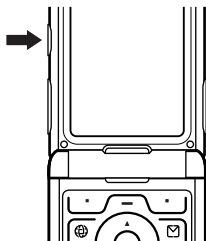

Using the External Display

When the flip is closed, the external display shows time and phone status information. It also displays messages to notify you of incoming calls and other events. You can perform the following functions in the external display.

Setting Phone Ring Style



| | Press | To |
|---|-------------|---------------------------|
| 1 | volume keys | select Ring Styles |
| 2 | smart key | set a ring style |
| 3 | volume keys | return to the home screen |

Returning an Unanswered Call

Your phone keeps a record of your unanswered calls and displays **X Missed Calls** in the external display.

| | Action |
|---|---|
| 1 | Press the smart key to display the received calls list. |
| | or |
| | Press the volume keys to dismiss the Missed Calls message. |

Action

- 2 If necessary, press the volume keys to scroll through the list and highlight an unanswered call.
- 3 If a headset is connected to your phone, press and hold the smart key to call the number.

or

Press the smart key to exit without calling.

Note: Because the microphone and earpiece are unavailable when the phone is closed, you must use a headset or other handsfree device with this feature.



Using the Handsfree Speaker

When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear.

Press **SPEAKER** (ﻟﻮ) to turn the handsfree speaker on or off during a call.

When you turn the handsfree speaker on, your phone displays **Spkrphone On** in the home screen. The handsfree speaker remains on until you press **SPEAKER** (ﻟﻮ) again or end the call.

Note: The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.

Changing a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has **not** reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

You can also reset your SIM card PIN code, PIN2 code, and/or call barring password if necessary.

To change a code or password:

Find the Feature

 **> Settings > Security
> New Passwords**

Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.


To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, **but you must unlock it to answer.**

You can make emergency calls on your phone even when it is locked (see page 77).

Locking Your Phone Manually

Find the Feature


 > **Settings** > **Security**
> **Phone Lock** > **Lock Now**

| Press | To |
|---|------------------------|
| 1 keypad keys | enter your unlock code |
| 2 OK () | lock the phone |

Unlocking Your Phone

Tip: Your phone's unlock code is originally set to 1234. Your service provider may reset the unlock code to the last 4 digits of your phone number.

At the **Enter Unlock Code** prompt:


| Press | To |
|---|------------------------|
| 1 keypad keys | enter your unlock code |
| 2 OK () | unlock your phone |

Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

Find the Feature

 > **Settings** > **Security**
> **Phone Lock**
> **Automatic Lock** > **On**



| Press | To |
|---|-------------------------|
| 1 keypad keys | enter your unlock code |
| 2 OK () | activate automatic lock |



If You Forget a Code, PIN, or Password

Note: Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, do the following at the **Enter Unlock Code** prompt:

| Press | To |
|---|---------------------------------------|
| 1  | display the unlock code bypass screen |
| 2 keypad keys | enter your security code |
| 3 OK () | submit your security code |

If you forget your security code, SIM card PIN code, PIN2 code, or call barring password, contact your service provider.

Using the Phonebook

This section describes basic phonebook operations. For more information about using the phonebook, see page 85 and the *More Here* guide (described on page 15).

Storing a Phone Number

Enter a phone number in the home screen, then press **STORE** (⌘) to create a phonebook entry with that number. Press **DONE** (⌘) to store the number by itself, or fill in the other fields as necessary to complete the entry.

If you assign a **Name** to the phonebook entry, you can select **MORE** to store another number (for example, a work number) for the same **Name**.

Recording a Voice Name

When creating a phonebook entry, scroll to **Voice Name** and press **RECORD** (⌘). Press and release the voice key and say the entry's name (within 2 seconds). When prompted, press and release the voice key and repeat the name.

Note: This option is not available for entries stored on the SIM card.

Dialing a Number

Press $\sqrt{-}$ > **Phonebook**, highlight the phonebook entry, press \odot to call.

Shortcut: In the phonebook, press a keypad key one or more times to jump to entries that begin with the key's letters.

Voice Dialing a Number

Press and release the voice key, and say the entry's name (within 2 seconds).



Sorting Phonebook Entries

Press $\sqrt{-}$ > **Phonebook**, press $\sqrt{-}$ > **Setup** > **Sort by**, then select whether you want to sort the phonebook list by **Name**, **Speed No.**, **Voice Name**, or **Email**.

When sorting by name, you can view **All** numbers or just the **Primary** number for each name. To set the primary number for a name, see page 87.

Tip: In **Primary** number view mode, highlight a name and press \odot left or right to view other numbers associated with the name.



Setting a Picture ID for a Phonebook Entry

Press $\sqrt{-}$ > **Phonebook** > *entry*, press $\sqrt{-}$ > **Edit** > **Picture** > *picture name*.

Also see pages 2 and 24.

Setting Picture ID View

Press $\sqrt{-}$ > **Phonebook**, press $\sqrt{-}$ > **Setup** > **View by** > **Picture**.

Viewing Entries By Category

Press $\sqrt{-}$ > **Phonebook**, press $\sqrt{-}$ > **Categories**, then select whether you want to view **All** entries, entries in a predefined category (**Business**, **Personal**, **General**, **VIPs**), or entries in a category you created.

To set the category for a phonebook entry, see page 87.

Setting Up Your Phone

Setting a Ring Style

You can set the following ring styles on your phone:

- **Loud**
- **Soft**
- **Vibrate**
- **Vibe then Ring**
- **Vibe & Ring**
- **Silent**

Each ring style is a profile that uses a different set of ring tone alerts or vibration alerts to notify you of incoming calls, text messages, and other events. The **Silent** setting silences your phone until you set another ring style.

To set a ring style:

Find the Feature


 > **Settings** > **Ring Styles**
> **Style** > *style name*

The ring style indicator shows the current ring style setting (see page 38).








Changing the Call Alert

You can change the alert that a ring style uses to notify you of incoming calls or other events. Any changes you make are saved to the ring style profile.

Find the Feature  > **Settings** > **Ring Styles**
> **Style Detail**


Note: *Style* represents the current ring style. You cannot set an alert for the **Silent** ring style setting.

| | Press | To |
|---|---|---|
| 1 |  | scroll to Calls (or Line 1 or Line 2 for dual line phones) |
| 2 | CHANGE () | select the event |
| 3 |  | scroll to the alert you want |
| 4 | SELECT () | select the alert |
| 5 | BACK () | save the alert setting |

The ring style profile contains additional settings for other events, and settings for ringer ID, ringer and keypad volume. You can change ring style profile settings as desired to personalize the ring style.

Setting the Time and Date

You must set the time and date to use the datebook.









 
Find the Feature  > **Settings** > **Initial Setup**
> **Time and Date**

Setting a Wallpaper Image

Set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen. The wallpaper image appears as a faint watermark in text and menu displays.

Find the Feature

 > Settings > Personalize
> Wallpaper

| Press | To |
|---|--|
| 1  | scroll to Picture |
| 2 CHANGE () | open the picture viewer |
| 3  up or down | scroll to a picture/animation Scroll to (None) to turn off the wallpaper image. |
| 4 SELECT () | select the image |
| 5  | scroll to Layout |
| 6 CHANGE () | adjust the image layout |
| 7  | scroll to Center , Tile , or Fit-to-screen Center places the image in the center of the display. Tile fills the display with adjacent copies of the image. Fit-to-screen resizes the image, if necessary, to fit the display. |
| 8 SELECT () | confirm the layout setting |
| 9 BACK () | save wallpaper settings |












Setting a Screen Saver Image

Set a photo, picture, or animation as a screen saver image. The screen saver image displays when the flip is open and no activity is detected for a period of time. If necessary, the image shrinks to fill the display. An animation repeats for 1 minute, then the first frame of the animation displays.

Tip: Turn off the screen saver to extend battery life.

Find the Feature

 > **Settings** > **Personalize**
> **Screen Saver**


| | Press | To |
|---|---|--|
| 1 |  | scroll to Picture |
| 2 | CHANGE () | open the picture viewer |
| 3 |  up or down | scroll to a picture/animation Scroll to (None) to turn off the screen saver image. |
| 4 | SELECT () | select the image |
| 5 |  | scroll to Delay |
| 6 | CHANGE () | set the delay interval |
| 7 |  | scroll to the inactivity interval that starts the screen saver |
| 8 | SELECT () | select the inactivity interval |
| 9 | BACK () | save screen saver settings |



Changing Phone Skin

Change the look and feel of your phone's user interface by selecting a different skin setting.

Find the Feature

 > Settings > Personalize
> Skin > skin

Your phone displays the new skin.

Setting a Phone Theme

A *phone theme* consists of a bundled set of image and sound files with a specific theme (such as a special event or cartoon character) that you can apply collectively to your phone. Phone themes typically include a wallpaper image, screen saver image, and ring tone. Your phone includes several preloaded themes. You can download and install additional themes on your phone.



Downloading a Theme

To download a theme from a Web page with the micro-browser, see page 101. When you install the theme, you can instantly apply its screen saver, wallpaper, and ring tone when your phone prompts you to **Apply Theme Now?**

Selecting a Theme

You can apply any of the themes installed on your phone.

Note: If one of a theme's components is not available, then a default setting is applied.

Find the Feature

 > Multimedia > Themes
> theme

Setting Display Brightness

Find the Feature

 > Settings > Initial Setup
> Brightness

Adjusting the Backlight

Set the amount of time that the display backlight remains on.

Find the Feature

 > Settings > Initial Setup
> Backlight

Note: Your phone's display normally is visible only when the display backlight is on, or when the display is viewed in direct sunlight. To extend battery life, the backlight turns off automatically when no activity is detected for a period of time. The backlight turns back on when you open the flip or press any key.

Setting Display Timeout

To further extend battery life, you can set the display to turn off (in addition to the backlight) when no activity is detected for a period of time.

Find the Feature

 > Settings > Initial Setup
> Display Timeout

You can set the display to stay on for 1 or 2 minutes, or set **Off** to disable display timeout.

Note: The display turns back on when you open the flip or press any key.



 

Storing Your Name and Phone Number



To store or edit your name and phone number information on your SIM card:

Find the Feature

 > **Settings** > **Phone Status**
> **My Tel. Numbers**

Shortcut: Press   from the home screen to view and edit your name and phone number(s).

If you do not know your phone number, contact your service provider.



Calling Features

For basic instructions on how to make and answer calls, see page 22.

Turning Off a Call Alert


You can turn off your phone's incoming call alert before answering the call.

Action

- 1 Press the volume keys to turn off the alert.
- 2 Open the flip (or press the button on a handsfree headset) to answer the call.

Viewing Recent Calls

Your phone keeps lists of incoming and outgoing calls, even for calls that did not connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.



Shortcut: Press  from the home screen to view the dialed calls list.

Find the Feature





 > Recent Calls

Press

To


- 1  scroll to **Received Calls** or **Dialed Calls**
- 2 **SELECT** () select the list






| Press | To |
|--|--|
| 3  | scroll to an entry Note: ✓ means the call connected. |
| 4  | call the entry's number |
| or | |
| VIEW  | view entry details (such as time and date of call) |
| or | |
|  | open the Last Calls Menu to perform other procedures |

The **Last Calls Menu** can include the following options:

| Option | Description |
|------------------------|---|
| Store | Create a phonebook entry with the number in the No. field. |
| Delete | Delete the entry. |
| Delete All | Delete all entries in the list. |
| Hide ID/Show ID | Hide or show your caller ID for the next call. |
| Send Message | Open a new text message with the number in the To field. |
| Add Digits | Add digits after the number. |
| Attach Number | Attach a number from the phonebook or recent calls lists. |

| Option | Description |
|----------------------|---|
| Send Tones | Send the number to the network as DTMF tones. Note: This option displays only during a call. |
| Talk then Fax | Talk and then send a fax in the same call (see page 95).  |



Redialing a Number

| Press | To |
|---|--------------------------------------|
| 1  | view the dialed calls list |
| 2  | scroll to the entry you want to call |
| 3  | redial the number |

Using Automatic Redial



When you receive a busy signal, your phone displays **Call Failed, Number Busy**.


| Press | To |
|---|-------------------|
|  or RETRY () | redial the number |



When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and connects the call.



Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

- the missed call indicator 
- **X Missed Calls**, where **X** is the number of missed calls

| | Press | To |
|---|---|---------------------------------|
| 1 | VIEW (⏪) | display the received calls list |
| 2 |  | select a call to return |
| 3 |  | make the call |

Using the Notepad

The most recent set of digits entered on the keypad are stored in your phone's *notepad* memory. This can be a phone number that you called, or a number that you jot down during a call, for later use. To retrieve the number stored in the notepad:

Find the Feature

 > **Recent Calls** > **Notepad**



Press



or

STORE ()

or



To

call the number

create a phonebook entry
with the number in the **No.** field

 
open the **Dialing Menu** to attach
a number or insert a special
character

Putting a Call On Hold or Mute

Press



or



To

put all active calls on hold




 
mute all active calls

Using Call Waiting



When you are on a call, an alert tone sounds to indicate that you have received a second call.



| Press | To |
|---|----------------------|
| 1  | answer the new call |
| 2 SWITCH () | switch between calls |
| or | |
| LINK () | connect the 2 calls |
| or | |
|  > End Call On Hold | end the call on hold |

If necessary, you must turn on call waiting to use the feature. To turn call waiting on or off:

Find the Feature

 > **Settings** > **In-Call Setup**
> **Call Waiting**

Using Caller ID (Incoming Calls)



Calling line identification (caller ID) displays the phone number for incoming calls in your phone's external and internal displays.


The phone displays the caller's name (and picture ID, if available) when the name is stored in your phonebook, or **Incoming Call** when caller ID information is not available.

You can also set your phone to play a distinctive ringer ID for specific entries stored in your phonebook. For more information, see page 85.

Calling an Emergency Number


Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

| Press | To |
|---|---------------------------|
| 1 keypad keys | dial the emergency number |
| 2  | call the emergency number |

Dialing International Numbers



If your phone service includes international dialing, press and hold  to insert the local international access code (+) for the country from which you are calling.


(Inserting + enables your phone to make an international call.) Then press the keypad keys as usual to dial the country code and phone number.



Calling With 1-Touch Dial

To call phonebook entries 1 through 9, press and hold the single-digit speed dial number for one second.



You can set 1-touch dial to call the entries in your phone memory phonebook or the SIM card phonebook:

Find the Feature  > **Settings** > **Initial Setup**
> **1-Touch Dial**

| | Press | To |
|---|---|---------------------------------|
| 1 |  | scroll to the location you want |
| 2 | SELECT () | select the location |

Using Voicemail



Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.

Note: Your service provider may include additional information about using this feature.


Listening to Voicemail Messages


Find the Feature  > **Voicemail**

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.



Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the voicemail message indicator  and the **New Voicemail** notification.


| Press | To |
|---|-----------------------|
| CALL () | listen to the message |

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Storing Your Voicemail Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

Find the Feature   > **Voicemail Setup**

| Press | To |
|--|-----------------------------|
| 1 keypad keys | enter your voicemail number |
| 2 OK () | store the number |

Note: You cannot store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail. For more information about these characters, see the *More Here* guide.



Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.

Note: This feature is available only for dual-line-enabled SIM cards.

Find the Feature

 > **Settings** > **Phone Status**
> **Active Line**

The call status indicator in the display shows the currently active phone line (see page 37).



Phone Features

Main Menu

This is the standard main menu layout. **Menu organization and feature names may vary on your phone.** Not all features may be available on your phone.

 **Phonebook** **Recent Calls**

- Received Calls
- Dialed Calls
- Notepad
- Call Times
- Call Cost
- Data Times
- Data Volumes

 **Messages**

- Create Message
- Email Msgs
- Message Inbox
- Voicemail
- Browser Msgs
- Info Services
- Quick Notes
- Outbox
- Drafts
- MMS Templates

 **Office Tools**

- SIM Apps
- Calculator
- Datebook
- Shortcuts
- Voice Records
- Alarm Clock
- Dialing Services
 - Fixed Dial
 - Service Dial
 - Quick Dial
- Chat

 **Games & Apps** **Web Access**

- Browser
- Web Shortcuts
- Stored Pages
- History
- Go To URL
- Browser Setup
- Web Sessions

 **Multimedia**

- Themes
- Camera
- Pictures
- Sounds
- MotoMixer
- Videos

 **IM** **Settings**
(see next page)

Settings Menu



Personalize

- Home Screen
- Main Menu
- Skin
- Greeting
- Wallpaper
- Screen Saver
- Quick Dial



Ring Styles

- Style
- Style Detail



Connection

- Bluetooth Link
- Sync



Call Forward

- Voice Calls
- Fax Calls
- Data Calls
- Cancel All
- Forward Status



In-Call Setup

- In-Call Timer
- Call Cost Setup
- My Caller ID
- Talk and Fax
- Answer Options
- Call Waiting



Initial Setup

- Time and Date
- 1-Touch Dial
- Display Timeout
- Backlight
- TTY Setup
- Scroll
- Language
- Brightness
- DTMF
- Master Reset
- Master Clear



Phone Status

- My Tel. Numbers
- Credit Info/Available
- Active Line
- Battery Meter
- Other Information



Headset

- Auto Answer
- Voice Dial



Car Settings

- Auto Answer
- Auto Handsfree



Network

- New Network
- Network Setup
- Available Networks
- My Network List
- Service Tone
- Call Drop Tone



Security

- Phone Lock
- Lock Application
- Fixed Dial
- Call Barring
- SIM PIN
- New Passwords
- Certificate Mgmt
















Java Settings

- Java App Loader
- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Priority
- App Backlight
- Set Standby App
- DNS IP








Feature Quick Reference

This section helps you locate and use additional phone features that are not described in this guide. For more detailed information, see the *More Here* guide (described on page 15).







Calling Features










| Feature | Description |
|-----------------------------|--|
| Conference Call | During a call: Dial next number, press  , press LINK ()  |
| Transferring a Call | During a call:  > Transfer , dial transfer number, press  .  |
| Caller ID (Outgoing) | Hide or show your caller ID phone number for the next outgoing call:  > Settings > In-Call Setup > My Caller ID. > Next Call Only > Hide ID or Show ID  |
| Attaching a Number | Dial an area code or prefix for a phonebook number, then:  > Attach Number  |
| Speed Dial | Speed dial and call a phonebook entry: Enter speed dial number, press  , press  .  |




| Feature | Description |
|------------------------|--|
| Call Forwarding | Set up or cancel call forwarding:  > Settings > Call Forward  |
| Call Barring | Restrict outgoing or incoming calls:  > Settings > Security > Call Barring  |
| TTY Calls | Set up your phone for use with an optional TTY device:  > Settings > Initial Setup > TTY Setup   |

Messages








 
| Feature | Description |
|--------------------------------|---|
| Send Text Message | Send a text message:  > Create Message > New Short Message  |
| Send Multimedia Message | Send a multimedia message:  > Create Message > New Multimedia Msg  |
| Send Letter | Send a multimedia letter:  > Create Message > New Letter  |

| Feature | Description |
|------------------------------|--|
| Use MMS Template | Open an MMS template with preloaded media:  > MMS Templates  |
| Read New Message | Read a new text or multimedia message that you have received: Press READ () when the New Message notification is displayed.  |
| Received Messages | Read received messages:  > Message Inbox Tip: Press  to perform various operations on the message.  |
| Store Message Objects | Go to a multimedia message page, or highlight an object in a letter, then:  > Store  |

Phonebook





| Feature | Description |
|----------------------|---|
| Add New Entry | Add a new entry to the phonebook:  > Phonebook  > New > Phone Number or Email Address  |




 


| Feature | Description |
|---------------------------------|--|
| Dial Number | Call a number stored in the phonebook:  > Phonebook , highlight the phonebook entry, press  to call |
| Voice Dial Number | Voice dial a number stored in the phonebook: Press and release the voice key, and say the entry's name (within 2 seconds). |
| Set Ringer ID for Entry | Assign a distinctive ringer alert to a phonebook entry:  > Phonebook > <i>entry</i>  > Edit > Ringer ID > <i>ringer name</i> Note: The Ringer ID option is not available for entries stored on the SIM card. |
| Set Picture ID for Entry | Assign a photo or picture to a phonebook entry:  > Phonebook > <i>entry</i>  > Edit > Picture > <i>picture name</i> Note: The Picture option is not available for entries stored on the SIM card. |
| Set Picture ID View | View phonebook entries as text list, or with picture caller ID photos:  > Phonebook  > Setup > View by > <i>view name</i> |








| Feature | Description |
|-------------------------------|---|
| Set Category for Entry | Set the category for a phonebook entry: ⏪ > Phonebook > <i>entry</i> ⏪ > Edit > Category > <i>category name</i> Note: The Category option is not available for entries stored on the SIM card. |
| Set Category View | Set a phonebook category view: ⏪ > Phonebook ⏪ > Categories > <i>category view</i> |
| Sort Phonebook List | Set the order in which phonebook entries are listed: ⏪ > Phonebook ⏪ > Setup > Sort by > <i>sort order</i> |
| Set Primary Number | Set the primary number for a phonebook entry with multiple numbers: ⏪ > Phonebook , highlight the entry, press ⏪ > Set Primary > <i>phone number</i> . |
| Copy Phonebook Entry | Copy a phonebook entry between the phone and SIM card: ⏪ > Phonebook , highlight the entry, press ⏪ > Copy > Entries > To |



| Feature | Description |
|---|--|
| Send Phonebook Entry to Another Device | Send a phonebook entry to another phone, computer, or device:  > Phonebook , highlight the entry, press  > Send |
| Create Group Mailing List | Create a group mailing list as a phonebook entry:  > Phonebook  > New > Mailing List |






 


Personalizing Features

| Feature | Description |
|----------------------|--|
| Ringer IDs | Activate distinctive ring alerts assigned to phonebook entries:  > Settings > Ring Styles > Style Detail > Ringer IDs |
| Ring Volume | Set ringer volume:  > Settings > Ring Styles > Style Detail > Ring Volume |
| Keypad Volume | Set keypad keypress volume:  > Settings > Ring Styles > Style Detail > Key Volume |
| Reminders | Set reminder alerts for messages that you receive:  > Settings > Ring Styles > Style Detail > Reminders |






| Feature | Description |
|--|---|
| Clock View | Display an analog clock or digital time readout in the home screen:  > Settings > Personalize > Home Screen > Clock |
| Menu View | Display the main menu as graphic icons or as a text-based list:  > Settings > Personalize > Main Menu > View |
| Main Menu | Reorder your phone's main menu:  > Settings > Personalize > Main Menu > Reorder |
| Show or Hide Menu Icons | Show or hide menu feature icons in the home screen:  > Settings > Personalize > Home Screen > Home Keys > Icons |
| Change Soft Keys & Menu Icons | Change soft key labels and menu feature icons in the home screen:  > Settings > Personalize > Home Screen > Home Keys |
| Shortcuts | Create a shortcut to a menu item: Highlight the menu item, then press and hold  . Use a shortcut: Press  , then press the shortcut number. |



Instant Messaging

| Feature | Description |
|---------------------------------|--|
| Log In | Log in to instant messaging:  > IM > Log In  |
| Find Others Online | After you sign on: Select Contact List to see a list of other users.  |
| Start Conversation | Start a conversation: From your Contact List , highlight a name in Online Contacts , press SEND IM (). |
| Open Active Conversation | Open a conversation in progress: From your Contact List , highlight a name in Conversations , press VIEW (). |
| End Conversation | From the conversation display:  > End Conversation  |
| Log Out | Log out of instant messaging: Select Log Out from the IM Online menu.  |

Chat

| Feature | Description |
|-----------------------------|---|
| Start Chat | Start a new chat session:  > Office Tools > Chat  > New Chat |
| Receive Chat Request | When you receive a chat request: Press ACCEPT () or IGNORE () |
| End Chat | During a chat session:  > End Chat |



Email



| Feature | Description |
|---------------------------|---|
| Send Email Message | Send an email message:  > Create Message > New Email |
| Read Email Message | Read a new email message that you have received: Press READ () |





Menu Features

| Feature | Description |
|-----------------|--|
| Language | Set menu language:  > Settings > Initial Setup > Language |









| Feature | Description |
|---------------------|---|
| Master Reset | Reset all options <i>except</i> unlock code, security code, and lifetime timer:  > Settings > Initial Setup > Master Reset |
| Master Clear | Clear all user settings and entries <i>except</i> SIM card information, erase all downloaded pictures and sound files, reset all options <i>except</i> unlock code, security code, and lifetime timer:  > Settings > Initial Setup > Master Clear Caution: Master clear erases all user-entered information (including phonebook and datebook entries) and user-downloaded content (including photos and sounds) stored in your phone's memory. After you erase the information, you cannot recover it. |


Special Dialing Features

| Feature | Description |
|-------------------|---|
| Fixed Dial | Turn fixed dialing on or off:  > Settings > Security > Fixed Dial Use the fixed dial list:  > Office Tools > Dialing Services > Fixed Dial |



| Feature | Description |
|---------------------|--|
| Service Dial | Dial service phone numbers:  > Office Tools > Dialing Services > Service Dial  |
| Quick Dial | Dial preprogrammed phone numbers:  > Office Tools > Dialing Services > Quick Dial  |
| DTMF Tones | Activate DTMF tones:  > Settings > Initial Setup > DTMF Send DTMF tones during a call: Press number keys. Send stored numbers as DTMF tones during a call: Highlight a number in the phonebook or recent calls lists, then press  > Send Tones . |







Call Monitoring

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service









provider. For billing information, please contact your service provider directly.

| Feature | Description |
|----------------------|--|
| Call Times | View call timers:  > Recent Calls > Call Times  |
| In-Call Timer | Display time or cost information during a call:  > Settings > In-Call Setup > In-Call Timer  |
| Call Cost | View call cost trackers:  > Recent Calls > Call Cost  |






Handsfree Features

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

| Feature | Description |
|--|--|
| Auto Answer (car kit or headset) | Automatically answer calls when connected to a car kit or headset:  > Settings > Car Settings or Headset > Auto Answer  |

| Feature | Description | |
|------------------------------------|--|---|
| Voice Dial (headset) | Enable voice dial with headset send/end key:  > Settings > Headset > Voice Dial |  |
| Auto Handsfree (car kit) | Automatically route calls to a car kit when connected:  > Settings > Car Settings > Auto Handsfree |  |











Data and Fax Calls





| Feature | Description | |
|----------------------------|---|--|
| Send Data or Fax | Connect your phone to the device, then place the call through the device application. |  |
| Receive Data or Fax | Connect your phone to the device, then answer the call through the device application. |  |
| Talk Then Fax | Connect your phone to the device, enter the number, press  > Dialing Menu > Talk Then Fax , then press  to make the call. |  |



Bluetooth® Wireless Connections


Note: Your phone's Bluetooth features and Bluetooth Class 1 power levels are not allowed for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the Bluetooth features in France unless you are indoors.

| Feature | Description | |
|---|--|---|
| Make Phone Visible to Other Device | Allow a Bluetooth device to discover your phone:  > Settings > Connection > Bluetooth Link > Setup > Find Me |  |
| Connect to Recognized Device | Connect to a recognized handsfree device:  > Settings > Connection > Bluetooth Link > Handsfree > <i>device name</i> |  |
| Disconnect From Device | Disconnect from a device: Highlight the device name and press DROP ( . |  |
| Switch to Device During Call | Switch to a headset or car kit during a call:  > Use Bluetooth |  |
| Send Multimedia Object to Device | Send a multimedia object to another device: Highlight the object, press  > Copy , select the device name. |  |

| Feature | Description |
|---|---|
| Move Multimedia Object to Device | <p>Move a multimedia object to another device: Highlight the object, press  > Move, select the device name.</p> <p>Caution: Moving an object deletes the original object from your phone.</p> |
| Send Data to Another Device | <p>Copy a phonebook entry, datebook event, or bookmark to another device: Highlight the item, press  > Send.</p> |
| Edit Device Properties | <p>Edit the properties of a recognized device: Highlight the device name and press  > Edit.</p> |
| Set Bluetooth Options | <p>Set your phone's Bluetooth options:  > Settings > Connection > Bluetooth Link > Setup</p> |



 









Network Features

| Feature | Description |
|-------------------------|--|
| Network Settings | <p>View network information and adjust network settings:  > Settings > Network</p> |




Personal Organizer Features



| Feature | Description |
|--|---|
| Set Alarm | Set an alarm:  > Office Tools > Alarm Clock |
| Turn Off Alarm | Turn off alarm: Press DISABLE () or  . Set 8-minute delay: Press SNOOZE (). |
| Add New Datebook Event | Add a new event to the datebook:  > Office Tools > Datebook , highlight the day, press  , press  > New |
| View Datebook Event | View or edit event details:  > Office Tools > Datebook , highlight the day, press  , press VIEW () |
| Event Reminder | View an event reminder: VIEW () Dismiss an event reminder: EXIT () |
| Send Datebook Event to Another Device | Send a datebook event to another phone, computer, or device:  > Office Tools > Datebook , highlight the day, press  , highlight the event, press  > Send |

| Feature | Description |
|----------------------------|--|
| Create Voice Record | <p>Create a voice record: Press and hold voice key, speak into the phone, release voice key</p> <p>Note: Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.</p> |
| Play Voice Record | <p>Play back a voice record:  > Office Tools > Voice Records > <i>voice record</i></p> |
| Calculator | <p>Calculate numbers:  > Office Tools > Calculator</p> |
| Currency Converter | <p>Convert currency:  > Office Tools > Calculator  > Exchange Rate</p> <p>Enter exchange rate, press OK () enter amount, press  > Convert Currency.</p> |








Security






| Feature | Description |
|----------------|--|
| SIM PIN | <p>Lock or unlock the SIM card:  > Settings > Security > SIM PIN</p> <p>Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked.</p> |



| Feature | Description |
|-------------------------------|---|
| Lock Application | Lock phone applications:  > Settings > Security > Lock Application |
| Certificate Management | Enable or disable security certificates stored on your phone:  > Settings > Security > Certificate Mgmt |


News and Entertainment

| Feature | Description |
|-----------------------------------|--|
| Manage Pictures | Manage pictures and animations:  > Multimedia > Pictures  |
| Manage Sounds | Manage ring tones and music that you have downloaded or composed:  > Multimedia > Sounds |
| Manage Video Clips | Manage video clips:  > Multimedia > Videos |
| Edit Sounds With MotoMixer | Edit MIDI-based songs that you can use with your phone:  > Multimedia > MotoMixer > [New Mix] or <i>mix file name</i> |
| Launch Micro-Browser | Start a micro-browser session: Press   |

| Feature | Description |
|---|---|
| Download Objects from Web Page | Download a picture, sound, or phone theme from a Web page: Highlight the file, press SELECT (↵), press STORE (⏏).  |
| Web Sessions | Select or create a Web session: ↵ > Web Access > Web Sessions  |
| Download Game or Application (Micro-Browser) | Download a Java™ game or application with the micro-browser: ↵ > Web Access > Browser , highlight the application, press SELECT (↵), press DOWNLOAD (⏏)  |
| Download Game or Application (Computer) | Download a Java game or application from a computer: Press ↵ > Settings > Java Settings > Java App Loader , connect your phone to the computer when prompted.  |
| Launch Game or Application | Launch a Java game or application: ↵ > Games & Apps , highlight the application, press SELECT (↵)  |





| Feature | Description |
|--------------------------|--|
| Create Ring Tones | Create iMelody ring tones that you can use with your phone:  > Multimedia > Sounds > [New iMelody] |

Specific Absorption Rate Data

This model phone meets the international standards for exposure to radio waves.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. Under the guidelines for your phone model, the SAR limit is 2.0 W/kg.¹ Tests for SAR are conducted in accordance with CENELEC² testing procedures using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a phone model is available for sale to the public, it is tested to confirm compliance with the guidelines. The tests are performed in positions that conform to a uniform testing methodology determined by an expert standards body. The highest SAR value for this model phone when tested for use at the ear is 0.62 W/kg.³

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model

could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

1. The SAR limit recommended by international guidelines (ICNIRP) for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements.
2. CENELEC is a European Union standards body.
3. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

Index

A

accessories 16, 57, 84

active line indicator 37

active line, changing 80

alarm clock 98

alert

 creating 102

 defined 63

 setting 22, 56, 63, 64

 turning off 22, 71

animation

 downloading 85, 101

 screen saver 66

 viewing 100

 wallpaper 65

answering a call 23, 68

application, locking and

 unlocking 100

automatic redial 73

B

backlight 69

barring calls 84

battery

 charging 19

 extending battery life 17,
 31, 35, 66, 69

 installing 19

 level indicator 38

Bluetooth 3, 31, 88, 96, 97,
 98

brightness, setting 69

browser. *See* micro-browser

C

calculator 99

call

 adding digits after phone
 number 72

 alert, setting 64

 alert, turning off 22, 71

 answer options 68

 answering 23

 barring 84

 barring password,
 changing 58

 call waiting 75

 costs 94

 deleting 71

 dialed calls list 71

 dialing 22

 emergency number 77

 ending 22, 23

 forwarding 84

 handsfree speaker 57

- call (continued)
 - hold 75
 - international access code 77
 - making 22
 - received calls list 71
 - receiving 23
 - recent calls 71
 - ring style 22, 56, 63
 - storing 71
 - talk then fax 73
 - timers 94
 - transferring 83
 - unanswered call 56, 74
- Call Failed, Number Busy message 73
- call waiting 75
- caller ID 3, 25, 62, 72, 76, 83, 86
- calling line identification.
See caller ID
- camera
 - self portrait 25
 - taking a photo 2, 24
- car kit 94
- center select key 39
- certificate management 100
- character chart 52
- chat 91
- clock 34, 64, 89

- codes
 - changing 58
 - default 58, 59, 60
 - forgetting 60
- conference call 83
- cursor 43
- customizing the menu 89

D

- data call 95
- date, setting 64
- datebook 98
- deleting a call 71
- dialed calls list 71
- dialing a number 22, 92, 93
- display
 - backlight 69
 - brightness 69
 - description 34
 - home screen 34
 - language 91
 - personalizing 89
 - skin 67
 - timeout 69
- distinctive ringer alert 88
- drafts folder 30
- DTMF tones
 - activating 93
 - sending 73, 93

E

- earpiece volume 22
- email 88, 91
- emergency number 77
- end key 22, 23
- ending a call 22, 23
- Enter Unlock Code
 - message 59, 60
- event alert 64
- external display 56

F

- fax call 73, 95
- fixed dial 92
- flashing cursor 43
- flip
 - external display 56
 - open to answer 23, 68
 - screen saver 66
- forwarding calls 84
- 4-way navigation key 39

G

- games 101
- GPRS indicator 37
- groove tunes 100

H

- handsfree speaker 57
- handsfree use 94
- headset 94, 57

- Hide ID feature 72
- hold a call 75
- home keys, personalizing 89
- home screen
 - clock 89
 - defined 34

I

- IM 90
- incoming call
 - answering 23
 - forwarding 84
- Incoming Call message 76
- indicators
 - active line 37
 - battery level 38
 - GPRS 37
 - Java midlet 38
 - loud ring style 38
 - message 38
 - messaging presence 38
 - missed call 74
 - ring style 38
 - roam 37
 - signal strength 37
 - silent alert 38
 - soft ring style 38
 - text case 45
 - text entry mode 45
 - transmission 36

indicators (continued)
vibrate & ring style 38
vibrate alert 38
vibrate then ring style 38
voicemail message 38,
79

instant messaging. *See* IM
international access code
77

iTAP software 46

J

Java applications 101
Java midlet indicator 38

K

key

center select 39
end 22, 23
4-way navigation 39
left soft key 35, 89
menu 16
message 39
operator 39
power 21
right soft key 35, 89
send 22, 23, 71
smart 55, 56
volume control 22

keypad
answering calls 68
volume, setting 88

L

language, setting 91
left soft key
functions 35
personalizing 89
line, changing 80
lock
application 100
phone 58
SIM card 99
Low Battery message 38

M

making a call 22
master clear 92
master reset 92
menu
entering text 42
features, rearranging 89
features, selecting 41
icons, changing in home
screen 89
icons, converting to text
89
icons, described 34
icons, showing or hiding
89

- language, setting 91
- lists 41
- navigating 40
- personalizing 89
- view, changing 89
- menu key 16
- message
 - chat 91
 - draft 30
 - menu feature icon 34
 - MMS template 85
 - MMS, defined 27
 - multimedia letter 84
 - multimedia message 84
 - reading 85
 - reminders, turning on/off 88
 - text 84, 85
- message indicator 38
- message key 39
- messages menu feature icon 34
- messaging presence indicator 38
- micro-browser
 - browser setup 101
 - Java applications 101
 - menu feature icon 34
 - using 100
 - Web sessions 101
- missed call indicator 74

- Missed Calls message 56, 74
- MMS template 85
- MMS. *See* message
- More Here* guide 15
- MotoMixer 100
- multimedia letter, sending 84
- multimedia message
 - reading 85
 - sending 3, 27, 84
- multimedia messaging service. *See* message
- music
 - downloading 85, 101
 - managing 100
- my telephone number 23, 70

N

- network settings 97
- notepad 74
- number
 - entering 53
 - storing your number 70
 - viewing your number 23

O

- object exchange 33
- 1-touch dial 77

- open to answer 68
- operator key 39
- optional accessory, defined 16
- optional feature, defined 16

P

passwords. *See* codes

phone

- active line indicator 37
- active line, changing 80
- alert, setting 64
- alert, turning off 22, 71
- answer options 68
- clear stored information 92
- codes 58
- date, setting 64
- flip 23
- keypad, answering calls 68
- language, setting 91
- locking 58
- network settings 97
- reset all options 92
- ring style 22, 56, 63
- security code 58
- skin 67
- time, setting 64
- turning off 21
- turning on 21

- unlock code 58
- unlocking 21, 58, 59, 60

phone number

- active line indicator 37
- active line, changing 80
- adding digits after 72
- attaching 2 numbers 72
- attaching to prefix 83
- international access code 77
- redialing 73
- storing in phonebook 85
- storing your number 70
- viewing your number 23

phone theme 67

phonebook

- adding an entry 85
- attaching 2 numbers 72
- attaching a number 83
- category views 62, 87
- copying entries 87
- dialing a number 86
- entry category 87
- group mailing list 88
- 1-touch dial 77
- picture ID 3, 25, 62, 76, 86
- primary number, setting 87
- ringer ID 86, 88
- sending entries 88
- sorting entries 62, 87

- speed dial number 83
- voice dialing 86
- photo
 - downloading 85, 101
 - picture ID 3, 25, 62, 76, 86
 - self portrait 25
 - self-portrait 2
 - sending 2, 24
 - taking 2, 24
- picture
 - downloading 85, 101
 - screen saver 66
 - viewing 100
 - wallpaper 65
- picture ID 3, 25, 62, 76, 86
- PIN code
 - changing 58
 - entering 99
- PIN2 code, changing 58
- power key 21
- predictive text entry 46
- primary text entry mode 43

Q

- quick dial 93

R

- received calls list 71
- recent calls 71

- redial
 - automatic redial 73
 - busy number 73
- reference guide 15
- reminders
 - turning on/off 88
- right soft key
 - functions 35
 - personalizing 89
- ring style indicators 38
- ring style, setting 22, 56, 63
- ring tone
 - creating 102
 - downloading 85, 101
 - editing with MotoMixer 100
 - managing 100
- ringer ID
 - setting 86
 - turning on/off 88
- ringer volume, setting 22, 88
- roam indicator 37

S

- screen saver 66
- secondary text entry mode 43

- security code
 - changing 58
 - default 58
 - forgetting 60
 - self-portrait 2
 - send key 22, 23, 71
 - service dial 93
 - shortcuts 89
 - Show ID feature 72
 - signal strength indicator 37
 - silent alert indicator 38
 - silent alert, setting 22, 56, 63, 64
 - SIM Blocked message 21, 99
 - SIM card
 - defined 17
 - installing 17
 - locking 99
 - PIN code entry 21
 - PIN code, changing 58
 - PIN2 code, changing 58
 - precautions 17
 - SIM Blocked message 21, 99
 - SIM PIN code
 - changing 58
 - entering 99
 - SIM PIN2 code, changing 58
 - skin 67
 - smart key 55, 56
 - soft keys
 - functions 35
 - personalizing 89
 - song
 - downloading 85, 101
 - managing 100
 - sound
 - downloading 85, 101
 - managing 100
 - Speaker On message 57
 - speakerphone
 - automatic answer 94
 - speed dial 83
 - standby time, increasing 66, 69
 - storing a call 71
 - symbol chart 54
 - symbols, entering 53
- ## T
- talk then fax call 73
 - tap mode text entry 50
 - telephone number
 - storing your number 70
 - viewing your number 23
 - text
 - capitalization, changing 44
 - character chart 52
 - entering 42
 - entry mode, selecting 43

- entry mode, setup 44
- flashing cursor 43
- iTAP software predictive
 - text entry 46
- numeric mode 53
- symbol chart 54
- symbol mode 53
- tap mode 50
- text case indicator 45
- text entry mode
 - selecting 43
 - setup 44
- text entry mode indicator 45
- theme 67
- time, setting 64
- timers 94
- transfer a call 83
- transmission indicator 36
- travel charger 20
- TTY device 84

U

- unlock
 - application 100
 - phone 58
- unlock code
 - bypassing 60
 - changing 58
 - default 58, 59, 60
 - entering 21, 59
 - forgetting 60

V

- vibrate alert
 - setting 22, 56, 63
 - turning off 22, 71
- video clip
 - downloading 85, 101
 - managing 100
- voice dial 86, 95
- voice key
 - dialing a number 86
- voice record 99
- voicemail 78
- voicemail message indicator
 - 38, 79
- volume
 - earpiece 22
 - keypad 88
 - ringer 22, 88
- volume keys 22

W

- wallpaper 65
- Web pages 100
- Web sessions 101