### Welcome

Thank you for choosing Motorola—a global leader in communications technology.

All Motorola phones are designed and manufactured in the United States to meet Motorola's exacting specifications and world-class quality standards. During development, our laboratory testing team took the durable Digital StarTAC® phone through its paces. They cooked it, steamed it, shook it, shocked it, dusted it, and dropped it—and the phone still worked! We are confident that the one you purchased will meet your own exacting standards.

Thank you for choosing Motorola, and we hope you enjoy your Digital StarTAC wireless phone!

### **Guide Overview**

Okay, you've got a brand new phone with a bunch of nifty features.

Now what?

Afraid you'll press the wrong key?

Or forget a feature or two?

Don't sweat it!

We've designed this guide to take you step-by-step through each feature of your new Digital StarTAC® phone.



We'll show you what key to press and what happens when you press it. Follow along, chapter-by-chapter, and you'll find it's as easy as 1-2-3.

Here's an idea of what you'll learn in each chapter.

### **Getting Started**

First things first. Once the box is open, this section will show you where to begin. We will explain what came with your new phone and show you how to use the battery. Turn to page 10 to get started.

### The Basics

What do all those buttons and lights mean? How do I make my first phone call? In this section, we'll answer those questions and teach you everything necessary to start using your Digital StarTAC phone. Begin learning "The Basics" on page 22.

### **Guide Overview**

### **Using Memory**

Read "Using Memory," beginning on page 36, and we will explain how to make the most of your new phone's internal Phone Book. You will save time with dialing shortcuts and memory features that make it easy to place quick calls.

### **Using Messaging**

This Digital StarTAC® phone supports optional messaging services, like Caller  ${\rm ID}^*$ , which allows you to see who is calling before you answer. It can even receive alphanumeric messages just like a pager and tell you when you have Voice Mail. Turn to page 48 to begin "Using Messaging."

#### The Works

When you are ready to learn the advanced features of your new phone, turn to page 56 for "The Works." We will explain everything from navigating the menu system to electronically locking your phone.

So relax!

Let us show you what your Digital StarTAC phone can do!



### Contents

### Introduction

| Guide Overview             | 2  |
|----------------------------|----|
| Safety Information         | 6  |
| Getting Started            |    |
| Package Content Options    | 10 |
| Introduction to Batteries  | 12 |
| Installing Batteries       | 14 |
| Charging Batteries         | 16 |
| Phone Overview             | 20 |
| Using the Smart Button     | 21 |
| The Basics                 |    |
| Turning Your Phone On      | 22 |
| Reading the Indicators     | 24 |
| Placing and Ending Calls   | 28 |
| Receiving Calls            | 29 |
| Redialing Numbers          | 31 |
| Basic Tone Controls        | 32 |
| Your Phone & Its Shortcuts | 34 |
| <b>Using Memory</b>        |    |
| Introduction               | 36 |
| Making the Most of Memory  | 37 |
| Storing                    | 38 |
| Recalling                  | 40 |
| Pause Dialing              | 44 |
| Using Calling Cards        | 46 |

## **Using Messaging** Viewing Your Caller IDs......50 The Works Introducing the Menu Features......56 Store and recall numbers Monitor the length of your calls Setting Tone Controls......72 Adjust your phone's tone controls Lock/Security Features......78 Control access to your phone Personalize your phone's operation Reference Information

Exposure to Radio Frequency Signals



Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

- ANSI C95.1 (1992)\*
- NCRP Report 86 (1986)\*
- ICNIRP (1996)\*

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

### Phone Operation

Antenna Care

#### Normal Position:

Hold the phone as you would any other telephone, with the antenna pointed up and over your shoulder.

### Tips on Efficient Operation:

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use.
   Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

<sup>\*</sup> American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection

**Caution:** All batteries can cause property damage, injury or burns if a conductive material, such as jewelry, keys or beaded chains, touches exposed terminals. The material may complete an electrical circuit and become quite hot. To protect against such unwanted current drain, exercise care in handling any charged battery, particularly when placing it inside your pocket, purse or other container with metal objects. When the battery is detached from the phone: your battery is packed with a protective cover.; please use this cover for storing your battery when not in use.

Check the laws and regulations on the use of wireless telephones in the areas where you drive. Always obey them. Also, if using your phone while driving, please:

- Give full attention to driving-driving safely is your first responsibility;
- · Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions so require.

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

### **Pacemakers**

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

### Persons with pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

#### **Batteries**



#### Driving



#### Electronic Devices



### **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

#### Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

### **Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

#### **Posted Facilities**

Turn your phone OFF in any facility where posted notices so require.

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.





To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

Turn your phone OFF when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gasoline stations; below deck on boats; fuel or chemical transfer or storage facilities; areas where fuel odors are present, i.e. if a gas/propane leak occurs in a car or home; areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

An air bag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Your wireless radiotelephone is designed for excellent durability under normal use conditions. Protect your wireless telephone from water damage that could result from spills or excessive exposure to rain. Never submerge your wireless phone.

Cleaning of this product should only be done with a damp cloth. The use of chemical cleaners may harm the finish and integrity of the radio housing and is not recommended.

### Blasting Areas



### Potentially Explosive Atmospheres



Vehicles Equipped with Air Bags

Equipment Care

Cleaning the Phone

# **Getting Started**

## **Package Content Options**

The Digital StarTAC® phone comes equipped with a standard battery and an AC Adapter to get you up and running. An exciting line of accessory options, now smaller and lighter than ever, can customize your wireless package for maximum performance and portability.





## **Package Content Options**



Your phone and accessories may not look exactly as pictured.

### Introduction to Batteries

Each battery is shipped in an uncharged state with a protective cover on it. Before you can use your phone, you will need to remove the cover from the battery and charge it.

 
### **Battery Covers**

It is a good idea to save the protective cover to store and carry the battery when not in use. The cover prevents objects from touching the battery terminals, thereby reducing the risk of injury or damage from a short circuit.

### **Removing the Main Battery Cover**

Press In Press in the release latch.
 Latch

2. Remove Rotate the batter upward and lift it out of Battery the cover.



### **Attaching the Main Battery Cover**

**1. Lower** Lower the side, opposite the release latch, **Side** into the cover.

2. Click Drop the side with the release latch down Latch until the latch clicks.



### Introduction to Batteries

### **Removing the Auxiliary Battery Cover**

Boundary

 Cover
 Hold the auxiliary battery securely with one hand. With your other hand's thumb, push up on the bottom of the cover.


2. Remove
Battery
Continue to push up until the cover slides free
of the pins on the bottom of the battery and
swing the cover outward.



### **Attaching the Auxiliary Battery Cover**

1. Insert Slide the cover's narrow end into the small grooved hook on the top of the auxiliary battery.

2. Secure Push the cover firmly so the base slides past Cover the pins on the auxiliary battery, and release.

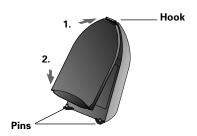


### Installing Batteries

### **Main Battery Installation**

To install a battery:

 1 Insert





2. Snap Press the side with the release latch down Heel until vou hear it click into place.



### **Main Battery Removal**

To remove a battery:

Phone

1 Turn OFF If another battery is not attached, press and hold to turn your phone OFF.

2. Remove Pull the release latch back toward the battery Batterv and lift the battery out.



Tip: If you have a charged auxiliary battery attached to your phone, vou can remove and change your main battery at anv time - even during a call.

## **Installing Batteries**

### **Auxiliary Battery Installation**

The auxiliary battery clips onto the back of your phone.

1. Place Hook Place the hook located on the narrow end of the battery into the slot on the back of the phone.

2. Pull Battery Down Pull the battery down and slide the battery pegs over the bottom of the phone.

3. Release Battery Once the battery clears the bottom of the phone, release it. Make sure that the pegs fit securely into place.



### **Auxiliary Battery Removal**

To remove the auxiliary battery:

1. Pull Battery Down Pull the battery down until the pegs come free, and pull the base away from the phone.

2. Remove Battery

Lift the battery's hook out of the slot on the back of the phone.



Tip:
If you have a charged main battery attached to your phone, you can remove and change your auxiliary battery at any time – even during a call.

### **Using the Internal Rapid Charger**

Believe it or not, there is a battery charger built right into your phone! To make use of the internal charger, you will need one of the three available adapters, either a standard AC Adapter, a rapid rate AC Adapter, or a cigarette lighter adapter.\*

**Keep in mind:** When the internal charger is in use and the phone is ON, you can still place and receive calls. However, talking on the phone requires energy, so your phone may not charge while the call is in progress.

1. Attach
Adapter
to Phone

Adapter
Adapter
to Phone

Plug the AC or cigarette lighter adapter into the accessory connector on the bottom of your phone as shown, with the release tab facing up.

**2. Plug In** Plug the adapter into the appropriate power source.



**Keep in mind:** In some cars, the ignition must be ON to use the cigarette lighter.

<sup>\*</sup>Check with your dealer for availability of the adapters.

### The Battery Indicator

In the upper right corner of your phone's display, there is a battery indicator filled with three segments. The more segments you see, the greater the charge.

- The border of the battery icon will flash during charging.
- When both batteries are fully charged, the battery icon will stop flashing and become solid.



### **Battery Storage and Disposal**

To prolong the life of batteries, avoid exposing them to temperatures below -10°C (14°F) or above 45°C (113°F). It is a good idea to take your phone with you when you leave your car. Never dispose of batteries in fire.

**Caution:** To prevent injuries or burns, do not allow metal objects to contact or short circuit the battery terminals.

### Expert Performance (E•P®)Charging System


The E•P system enables your phone's built-in charger to communicate with installed batteries and tailor its charging cycle to optimize performance. If you see Invalid Battery when you power up the phone, the built-in charger is not able to communicate with the battery and cannot charge it. There are several possible reasons for this message. The most likely one is that the battery is not a Motorola original and it does not have the appropriate E•P technology. We recommend that you use only Motorola original batteries and accessories and that you store your batteries in their protective covers when not in use.

### **Using the Desktop Charger**

The Desktop Charger's front pocket can charge batteries while they are attached to your phone, and the rear pocket can charge batteries separately.

If you have a Desktop Charger:

| 1. Attach<br>Adapter  | Plug the AC Adapter into the back of the charger, with the release tab facing up.     |
|-----------------------|---|
| 2. Plug In<br>Adapter | Plug the other end of the AC Adapter into a wall socket.                              |
| 3. Insert<br>Phone    | Insert the phone into the front pocket with a main and/or auxiliary battery attached. |
| & Insert<br>Battery   | If you like, insert a main or auxiliary battery into the rear pocket.                 |

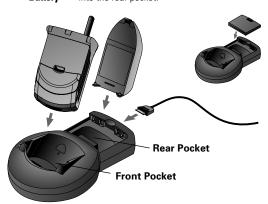

**Note:** If two or three batteries are loaded in the charger, the batteries will charge one at a time. The main battery attached to the phone will charge first, the attached auxiliary second, and the battery in the rear pocket last.

### **Desktop Charger Indicators**

The three LED indicators on the left front of the Desktop Charger let you know the current state of any charging batteries. The first light provides information on the main battery attached to the phone, the second on the attached auxiliary battery, and the third on any battery loaded in the rear pocket.

- · Red means the battery is charging.
- Flashing yellow means the battery is waiting to be charged.
- Green means the battery is charged within 90% of its capacity and can be used. An additional hour of charging will bring your battery up to 100% capacity.
- Flashing red means the battery is damaged and cannot be charged.

### **Desktop Charger Charging Times**

The time it takes for your battery to obtain a full charge is affected by a variety of factors, including:

- Temperature Batteries should be at or near room temperature when charging. To prolong battery life and charge capacity, avoid exposing your batteries to temperatures below -10°C (14°F) or above 45°C (113°F). It is a good idea to take your phone with you when you leave your car.
- Inactivity New batteries, or batteries that have been stored for long periods of time, may not rapid charge properly. In these instances, the battery requires an overnight charge.
- Extended Usage Over extended periods of time, batteries gradually wear down and require longer charging times.
   This is normal. If you charge your battery regularly and notice a decrease in talk-time or an increase in charging time, then it is probably time to purchase a new battery.

### **Phone Overview**

### **Function Keys**

Turns the phone your ON and OFF.

Opens messaging menus.

Acts as a "shift" key to access the secondary functions of other keys.

Recalls phone numbers from memory.

Stores phone numbers into memory.

Clears characters from the screen.

Ends phone calls and exits the menu.

Places or answers calls. Your phone will have one

of these two keys.

Can be used to scroll through memory entries

# and menu features.

**Alphanumeric Display** Displays your input from the keypad, information recalled from memory, and other messages.

**Microphone** Positioned for convenient conversation.

**Retractable Antenna** Extend for best performance.

**Earpiece** Ultra-compact phone speaker.

**Headset Jack** Provides the connection for an optional headset.

**Accessory Connector** Provides the connection for an external power supply.

**Volume Keys** Represented in this manual by **①** and **①**, these keys adjust keypad, earpiece, and ringer volume. They also scroll up and down through memory locations and menu features.

## Using the Smart Button

When in doubt, press the Smart Button! Easily recognized in this User's Guide by ♠ and in your phone's display by ♦ — the handy Smart Button puts a variety of functions at your fingertip.



Use the Smart Button's fingertip convenience for:

### Opening the Quick Menu

Press • when your phone is idle to display a menu containing shortcuts to your phone's most popular features. See page 34.

### **Opening Your Phone Book**

Press twice to open the Phone Book with your names and numbers. Turn to page 40 in "Using Memory" to learn more.

### **Entering the Menu System**

Press then press to enter your phone's menu system. See page 56 for information on navigating the menu system.

### Selecting Items in the Menu

The primary use of the Smart Button is to select. Whenever the phone offers you a choice, such as setting a ringer style, press to select. You will see: Press \* to Select.

### **Turning Features ON and OFF**

Press to toggle ON and OFF many menu features, like the call timers (pg. 66). You will see: Press \* to Toggle.

### **Placing and Ending Calls**

Press & hold • to place a call when the number you want to call is on the display. Press & hold • again to end a call. See page 28 for information on placing and ending calls.

## The Basics

The next few pages will introduce you to the basic features of your phone. In the chapters that follow, we will explain every one of your phone's features, including storing names and numbers, using the call timers, locking the phone, and more.

## **Turning Your Phone On**

Follow these steps to turn your phone ON:

1. Extend Extend the antenna completely for best performance.

**2. Open** Open the phone to expose the keypad. **Phone** 

**3. Turn ON** Press once to turn the phone ON. Phone

### What you will see:

Each time you turn your phone ON, it performs a short self-test to make sure it is operational and then it scans for service. While the phone scans, the display reads:



## **Turning Your Phone On**

### **CDMA Digital**

When your phone finds a CDMA digital system, you will see the time and date, the **D** icon, and either Ready or the personalizable banner (if programmed).



 
### Standby Mode

To conserve energy, your phone enters standby mode and turns off the backlight when you have not touched a key for a few seconds. The backlight will come back on as soon you press a key or open the phone. If you like, you can choose how long the backlight remains ON. See page 94.

### **Turning Your Phone OFF**

**Turn OFF** Press and hold **to turn the phone OFF. Phone** 







Strong

(<sub>(i)</sub>)\_\_

Weak



High



Low

### (¹) = ■■■ Signal Strength (1)

Displays the strength of the connection between your phone and the digital network.

### #2:00 Clock (2)

When your phone is on a CDMA digital network, the display shows the current time and date. Wherever you are, you will have the correct local time. You can set your clock for 12- or 24-hour format. See page 95 for more information.

### Battery Level (3)

The three bar segments on the phone's Battery Level Indicator show the amount of charge remaining in your battery. The more bar segments you see, the higher the charge. If your battery is low, the phone alerts you in three ways:

- No bar segments on the indicator will be highlighted.
- Low Battery will appear on your display.
- A hi-lo tone will sound periodically.

If you ignore these warnings, the phone will automatically turn itself OFF when the battery is exhausted. At this point, you should charge the battery or insert a new battery.

## D Digital (4)

Indicates you are receiving a digital signal.

### |U In Use (5)

Appears when a call is in progress.

### Rm Roam (6)

Lights up when your phone accesses a digital wireless service outside of your home system. When you leave your wireless Service Area, your phone roams (seeks another CDMA wireless system).

### NS No Service (7)

Appears when calls cannot be placed or received from your location.

### 

Appears when you receive a Caller  ${
m ID}^*$  or alphanumeric message. It will disappear after you have viewed the Caller ID or read the message.

### 

Indicates that you have received a Voice Mail message in your Voice Mailbox. It will disappear after you have listened to the message.

When you select one of the VibraCall® Alert combinations (see page 75), the following indicators appear in the display:

## VibraCall On (10)

Indicates that your phone's ringer is turned OFF and the VibraCall Alert is ON.

### ₩ Silent Mode (10)

Indicates that all of your phone's tones are silenced and the VibraCall Alert is ON


## Vibrate Then Ring (10)

Indicates that both the ringer and VibraCall Alert are ON.

### **Detailed Battery Level Reading**

Press **FCN** then press **4**.

The bar graph in the display represents the battery level. The higher the graph, the closer the battery is to full charge.

 

If you are using an auxiliary battery with the main battery, the display will indicate which one is in use.

**Important:** If the phone is being powered externally—from the cigarette lighter adapter for example—you will see:



### **Service Light**

The Service Light is on top of your phone and lights up when your phone is ON. The color it flashes depends on your phone's current state of service. Please read the chart below to learn how to understand your phone's state of service at a glance.



| Red & Green,<br>alternating | Incoming call or message      |
|-----------------------------|-------------------------------|
| Green, flashing             | In Service: home type system  |
| Red, flashing               | No Service                    |
| Yellow, flashing slow       | Roaming: home type system     |
| Yellow, flashing fast       | Roaming: non-home type system |

**Note:** If you would like to increase your phone's standby-time, you can turn the Service Light OFF. See page 95.

## **Placing and Ending Calls**

### **Placing a Call**

**1. Extend** Extend the antenna completely for best performance.

2. Open Open the phone to expose the keypad.

Phone If necessary, press to turn the phone ON.

**3. Enter** Enter the number you want to call,

**Number** for example: 555-1212.

Correct Press I to erase one digit at a time if you make a mistake. Press & hold I to erase

the entire entry and start again.

4. Place Press (or (or (all)) to place the call.

Press & hold of until you hear a high tone. You will see: Calling 555-1212.

You can dial phone numbers with up to 32 digits, but only the last twenty-four digits will appear in the display.

Press (RCL) to see the rest of the number.

Your phone will display the first 24 digits, then a second screen will show the digits remaining in the phone number.

### **Ending a Call**

There are three ways to end a call:

**Close** Close the phone to end a call. **Phone** 

or Press Key Press END.

or Hold Press & hold Quntil you hear a high tone.

Smart You will see: Press + to End Call.

Button Press Quoin to end the call.

Tip:
If you press (or (as) without entering a number, your phone will dial the last number entered.

## **Receiving Calls**

Your phone must be ON to receive calls. When a call is incoming:

- an alert will sound and/or vibrate.
- the Service Light (pg. 27) will flash red and green.

You can choose your phone's alert, selecting from nine ringer styles or silent vibration mode. See page 75.

### **Answering a Call**

To answer a call:

**1. Extend** Extend the antenna completely for best **Antenna** performance.

2. Open Open the phone to expose the keypad.
Phone or

Press (or TALK) if the phone is already open.

### **Caller ID**

If Caller  ${\rm ID}^*$  is active on your phone, you will be able to see who is calling before you answer. The display will show either your caller's name (if it is in your Phone Book) or your caller's number. If you prefer to always see your caller's number, see page 63 to turn Number Preference ON.





The Caller IDs for your last 16 callers will be saved. See page 50 to learn how to view your stored Caller IDs.

<sup>\*</sup>Contact your Service Provider for availability.

### Receiving Calls

### **Ringer/Vibrator Suppress**

If an incoming call catches you by surprise, you can turn the alert OFF using the upper or lower volume key. Your phone's ringer or vibrator will be OFF while the current call lasts. The caller will still hear ringing and you can still answer the call by pressing (or (as)).

**Suppress** When the phone rings or vibrates, press the **Alert** upper or lower volume key.

**Note:** This feature works the same with a headset. To answer the call with a headset, press either volume key again or the Smart Button.

#### **Unanswered Call Indicator**

Even with the latest wireless technology, sometimes you are unavailable to answer calls. If your phone is ON, it keeps a count of unanswered calls. For example, if you miss two calls, your display will show: 2 Calls Unanswered.

**Clear** Press or press to clear the display, **Display** and you can begin placing calls again.

If you subscribe to Caller ID service, you can easily return the calls that you missed. See page 50 to learn how.

### **Call Waiting**

If you subscribe to Call Waiting through your Service Provider, you may hear a tone while on a call, indicating that you are receiving a second call.

|    | Answer<br>Call         | automatically place the current call on hold.  |
|----|------------------------|--|
| or | End<br>Current<br>Call | Press to end the current call. Your phone will then ring and/or vibrate as usual. Press (or (ALK)) to answer the call. |

### **Redialing Numbers**

### **Automatic Redial**

The wireless system may at times be too busy to handle your call. If this is the case, you may hear a fast busy signal and see Press SND +o Redial on the display. Using Automatic Redial, your phone will repeat the call attempt over the next four minutes. When the call succeeds, your phone will ring or vibrate until the person you are calling answers.

Auto Press (or (a)) or press & hold until you hear a high tone.
You will see: Redial inc.

To make this feature even easier, turn Instant Redial ON. Your phone will instantly redial after a fast busy signal, and you will not have to push a button. To find out more, see page 91.

#### Redial

If you hear an ordinary busy signal:

**1. Hang Up** Press **ID** to hang up.

2. Redial Press (or (ALK)) to redial.

or

Press & hold . You will see: Calling.

### **Display Last Ten Numbers Dialed**

Your phone keeps track of the last ten numbers you have dialed.

1. Enter Press (CD) then press (CD), (CD). The display will show the last number you dialed.

Review Press or to scroll through the last ten numbers dialed, starting with the most recent.

3. Call Press (or (ax)) or press & hold to call the number in your display. You will see:

Calling.

### Tip:

Your phone automatically remembers the last number entered. See page 43 to learn more.

### Tip:

This feature is available through the Quick Menu. See page 34 to learn more.

### **Basic Tone Controls**

#### **Vibration Mode**

In situations where ringing may not be appropriate, or in noisy places where you may not hear your phone, select the VibraCall® Alert. Ringing will be replaced by gentle vibrations.

Toggle Press then press to switch between ringer and vibrator alerts.

#### Silent Mode

For complete discretion, turn Silent Mode ON. All tones will be silenced. You can dial silently, and the ringer will be replaced by gentle vibrations.

Activate Press then press thold until you see: Silent Mode On.

**Note:** This shortcut allows you to activate Silent Mode quickly. To learn how to turn Silent Mode OFF, see page 74.

### **Muting the Microphone**

If you would like privacy while a call is in progress, you may mute the microphone—you will be able to hear the party on the other end, but they will not hear you.

Mute Press ♠ then press ♠ to mute the microphone. You will see: Muted.

**Unmute** Press **f** then press **6** again to

**Phone** resume your conversation.

### **Basic Tone Controls**

The upper and lower volume keys are left of the display and can be used to adjust the earpiece, keypad, and ringer volume. As you press these keys, the phone's speaker will demonstrate the new volume level

### **Adjusting Earpiece and Keypad Volume**

The audio feedback your phone gives you when you press a key is called keypad tones. When your phone is idle, pressing the volume keys adjusts the volume of these tones. To adjust the volume of your conversation (the earpiece volume) use the volume keys during a call.

| Raise<br>Volume | Press • to raise the volume. |
|-----------------|------------------------------|
| Lower<br>Volume | Press 🖣 to lower the volume. |

The bar graph in the display represents the volume level. The higher the graph, the louder the volume is.







Low Volume

### **Adjusting Ringer Volume**

To adjust ringer volume:

| Raise<br>Volume | Press then press to raise the ringer volume. |
|-----------------|--|
| Lower<br>Volume | Press then press to lower the ringer volume  |

Tip: See page 75 if you would like to silence the keypad tones.

### Your Phone & Its Shortcuts


Throughout this guide you will see shortcuts that point out simple ways to reach some of your phone's features. If you have owned a Motorola phone before, some of these shortcuts will already be familiar to you.

#### The Quick Menu

Press the Smart Button and the Quick Menu opens on the display! The Quick Menu contains shortcuts to your phone's most popular features. Press the volume keys to scroll through the options shown below and the Smart Button to choose one.

Press • to open the Quick Menu:

#### Start:

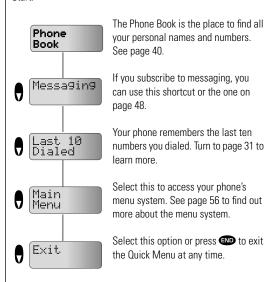

### Your Phone & Its Shortcuts

### The Usual Shortcuts

The words "menu," "batt," "lock," "mute," and "vib" appear on the 1, 4, 5, 6, and 8 buttons. Press the key first, then any one of these buttons, and your phone will perform that function.



Enter Press then press to enter the menu system.

**Display** Press then press to display the battery meter.

Lock Press then press .

You will see: Lock? Press to lock.

MutePressthen pressto toggle mutePhoneON and OFF during a conversation.

**Silence** Press then press to toggle your phone's VibraCall® Alert ON and OFF.

Silence Press I then press and hold I to turn
All Tones ON Silent Mode.

Tip: Your factory lock code is set to 123. See Locking the Phone on page 80 for more information

# **Using Memory**

Do you have places to go and people to see? Too many phone numbers to remember? Let your phone remember them for you. The internal Phone Book can store up to 99 names and numbers for easy access on the go!

### In this chapter we will explain how to:

- · store names and numbers into the Phone Book.
- recall phone numbers from memory.
- dial in a flash with the Super Speed Dial and Turbo Dial<sup>®</sup> functions
- · simplify automated calling systems and credit card calls.


Follow these symbols as a guide for using the keys on the side of your phone.



## Making the Most of Memory

Each phone number is stored in a "memory location" numbered 01-99. You can arrange your Phone Book for convenient recall by storing related numbers in groups of ten. For example, store your ten most frequently called numbers in locations 01-09, then you can use the Turbo Dial® keys to call them with the push of a key. You could store business numbers in locations 10-19, family numbers in 20-29, friends in 30-39, and so on.

You can also store names to help identify phone numbers. If someone you know has more than one phone number, you could make the number easy to recall by storing the name with a descriptive label. Your new phone makes it simple to attach common labels to names in your Phone Book. See page 39 for more information.

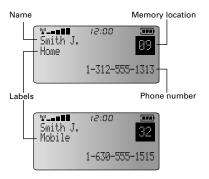

When you feel ready for more, try the advanced storing features at the end of the chapter. For instance, pages 44-45 describe how the Phone Book can help you access Voice Mail and other automated calling systems with only a few keystrokes.

## **Storing Names and Numbers**

To take advantage of the internal Phone Book, you will need to store some names and numbers into memory. Your phone's dedicated we makes storing quick and easy.

| 1. Enter | Enter the phone number you want to store. |
|----------|---|
| Number   |   |

2. Begin Press to begin storing.

Storing You will see: Location XX? XX is the number of the lowest available location

3. Accept Press so or to store the sequence in the displayed location.

or Enter Press CES to clear the location number from the display and enter a new two-digit location number.

or Select Enter the first digit of the memory location and press ❖ to store the sequence in the first available location beginning with that digit.

4. Enter
Name

Enter a name to identify the phone number.
(See the next page for help entering names.)
Press of the when finished. Your phone will confirm the entry by displaying the information stored

 
**Keep in mind:** Your Phone Book sorts alphabetically by the first letter in the entry. If you store an entry without a name it will be placed at the back of the Phone Book.

Tip: Always store your Voice Mail number in location 98

Tip:
The " # " symbol in your display represents the Smart Button ...

## **Entering Names**

When the display shows filpha or Press \*, you can use the keypad to produce any letter in the alphabet. Use the letters printed on the key as a guide. For example, press to enter the letters "A," "B," or "C" as shown:



To enter a name into the Phone Book:

| 0 011 | tor a marie i     | nto the I none book.  |
|-------|-------------------|---|
| 1.    | Enter<br>Letter   | Press a key as many times as necessary to enter a letter. The next letter on the key will appear with each press.           |
|       | Toggle<br>Case    | Press  or  to switch between upper and lowercase.   |
| 2.    | Advance<br>Cursor | After each character, press <b>*</b> to advance the cursor to the next space.   |
|       | Clear<br>Letter   | Press <b>CLP</b> to erase a letter if you make a mistake.   |
|       | Back<br>Space     | Press to move the cursor backward if you would like to insert a letter earlier in the sequence.                             |
| 3.    | Choose<br>Label   | Press to scroll through the available labels. After 0 you will see Home, Mobile, Pager, or Work.                            |
| 4.    | Enter<br>Marks    | Press   |
| 5.    | Finish<br>Storing | Enter up to 20 letters, including labels.  Press when you are finished. Your phone will confirm the entry by displaying the |

information stored

**Tip:**The preset labels make storing names simple!

## **Recalling from Memory**

#### **Recall by Name**

Once you have stored names and numbers, you can recall them alphabetically and immediately place calls.

- 1. Enter Press \$\(\begin{align\*}
  \text{ twice to enter your name directory.}
  \end{align\*}
- 2. Scroll to Press of or to scroll to the name you are looking for.
- or Search for Name

  Enter the first letter of the name. (See page 39 for details on entering letters.) The display will show the name, phone number, and memory location of the first entry beginning with that letter.



- 3. Place Press & hold or press (or w) to call the selected number. You will see: Calling.
- 4. End Press or close the phone.

  or Press & hold of until you hear a high tone.
  You will see: Press \* to End Call.
  then
  Press of again.

## **Recalling from Memory**

#### **Recall by Memory Location**

Each name and number you store is placed in a memory location numbered 01-99. Once you have stored names and numbers, you can recall them by memory location.

| 1. | Begin     | Press RCL | to begin recalling. |
|----|-----------|-----------|---------------------|
|    | Recalling |           |                     |

**2. Enter** Enter the two-digit memory location of the **Location** phone number you are looking for.

3. Place Press & hold of or press (or (or a)) to call the number you selected.

4. End Press or close the phone.
Call or

Press & hold ountil you hear a high tone.
You will see: Press \* to End Call.
then

Press again.

#### **Clear an Entry**

To erase a memory entry:

| 1. Recall<br>Entry | Press twice then press or to scroll to the entry you want to erase.    |
|--------------------|--|
|                    | Press and the two-digit location number of the entry.                  |
| 2. Clear<br>Entry  | Press & hold •• to clear the entry. You will see: To Delete Press STO. |
| 3. Confirm         | Press to confirm that you want to                                      |

#### Recall Shortcuts

#### **Super Speed Dial**

If you know the memory location of the number you wish to call, you may use the Super Speed Dial function.

1. Enter Enter the two-digit memory location, 01-99. Location

2. Place Press & hold or press (or raw) to call the

number you selected. The number stored in the memory location you entered will be dialed. You will see: Calling.

**Note:** If you enter the number of an empty location, you will see: Location XX Is Empty.

#### **Turbo Dial**

The Turbo Dial® keys let you dial numbers stored in locations 01-09 with the push of a button.

Turbo Press & hold the memory location number of the entry you want to call, ◆ through ◆ , and your call is placed.
You will see: Calling.

Your phone's Emergency Call feature gives you unrestricted access to any number stored in location 01, even if your phone is locked. To learn how to activate this feature, see page 81.

## Scratchpad

If you need to take a quick note, but you do not want to save the number, use the Scratchpad, which always remembers the last phone number that was on your phone's display. The Scratchpad is helpful if you are on the phone and your party gives you another number to call.

1. Enter Enter the number with the keypad.

Number (The person on the line will hear tones as you dial.)

2. Store Number Press , enter a two-digit location, enter a name with the keypad, and press again. See page 38 for more details.

or End Press to end your current call if necessary.

& Place Press (or (a) to call the number in the Call Scratchpad.

## **Pause Dialing**

When you call automated systems like Voice Mail or bank by phone, a recorded message prompts you for PIN numbers, account numbers, etc. Pause Dialing can make using automated systems easy by allowing you to store these numbers in the same memory location as the automated system's access number. Separate each set of numbers with a "pause"—a special character that tells your phone to wait before sending additional numbers.

#### Storing a Number with Pause Dialing

The pause occupies a one-digit space in your phone's memory. Once you have entered a string of numbers and pauses (up to 32 digits, including pauses), store the string in the same way you store other entries.

| 1. Enter<br>Number   | Enter the phone number you use to access the automated system.  |
|----------------------|---|
| 2. Insert<br>Pause   | Press and press (or ALK). You will see: Insert Pause o. Press . You will see a pause circle o inserted into the number entry.   |
| 3. Enter<br>PIN      | Enter the next group of numbers, for example, your PIN number. If the automated system requires a $\ast$ or $\#$ , enter those symbols, too.                          |
| 4. Insert<br>Pause   | Press and press (or As) then . Repeat steps 3 and 4 as many times as necessary.   |
| 5. Store<br>Sequence | Press . Enter a two-digit location, enter a name if you like, and press or when finished. Your phone will confirm the entry by displaying the information you stored. |

#### **Using Pause Dialing**

Once stored, you may recall the entry and place the call. All of the digits you have stored will be recalled, but your phone will only send the tones for the set of numbers before the first pause.

#### 1. Place Call

Enter the two-digit memory location of the Pause Dialing number and press & hold or press (or ). Your phone will dial the access number and wait for your input when it reaches the first pause.

#### 2. Send More Numbers

When the automated system prompts you for information, press of the local to send the next group of numbers. Repeat this step to send each group of numbers that you have stored.

#### 3. End Call

Press No. close the phone, or press & hold until you hear a high tone and press again.

#### **Using Memory Linking**

Each memory location holds up to 32 digits, including pauses. Some automated systems, however, may require you to enter more than 32 digits. If this is required, split the numbers into two memory locations and recall the second set of digits as you need them.

#### 1. Recall 2nd Location

Once you have sent the tones from the 1st location, press and the two-digit memory location where you stored the second set of digits.

#### 2. Send Tones

Press and (or (or ) to send the tones in the 2nd location. If you have stored a pause in the 2nd location, your phone will pause as usual when it reaches the pause character.

## **Using Calling Cards**

#### **Storing Calling Card Numbers**

Number Characters are another way your phone can save you time in dialing. The Number Character saves a place in the memory sequence for whatever number you are calling when you use your calling card. You may use the Number Character along with Pause Dialing.

1. Enter Access Number

Enter the phone number you use to access the calling card system, usually a 1-800 phone number. Skip this step if you only dial 0.

2. Insert Pause Press then press (or AL). You will see: Insert Pause o. Press .

3. Insert Number Character Press then press (or N.). Press or to scroll to Insert Number 'M. Press . You will see the number character 'M inserted into the sequence. This special character saves a place for the number you will be calling when you use your calling card.

4. Insert Pause

Press  $\bigcirc$  then  $\bigcirc$  (or  $\bigcirc$  then  $\bigcirc$  as in step 2.

5. Enter Code

When you use your calling card, the system prompts you for an access code, usually a PIN code. Enter this number. Repeat steps 4 & 5 if your card requires more access codes.

6. Store Sequence

Press . Enter a two-digit location, enter a name if you like, and press or when finished. Your phone will confirm the entry by displaying the information you stored.

Tip:
You can protect
your calling card
information with
your phone's call
restriction features. See page
85 for details

#### **Placing a Calling Card Call**

Once you have stored your calling card information, recall the information and place the call whenever you want to use your calling card. Before your phone begins dialing, it will prompt you for the number you want to call. Once you have entered the number, your phone will automatically insert the number in place of the Number Character you stored.

- 1. Recall Entry
- Press then enter the location number where your calling card sequence is stored.
- 2. Enter Number
- Press (or (a). You will see: Enterneur Humber. Enter the phone number you are calling. You may enter the number manually or recall it by location.
- 3. Place Call

Press & hold of to place the call. Your phone will dial the number to access your long distance provider, then wait for your input when it reaches the first pause.

4. Send More Numbers Press or press or press for (or or to send the next group of numbers when the recording prompts you. The phone will automatically insert the number to call at the appropriate spot in the sequence. Press to send each set of numbers until finished.

5. End Call Press , close the phone, or press & hold until you hear a high tone, and press again to end the call.

# Using Messaging\*



The dedicated Message Key provides access to your phone's new and easy Messaging Menu. Through this menu, you can view Caller IDs, check your Voice Mail, and read your pager-like alphanumeric Messages.

#### In this chapter we will explain how to:

- · view your Caller IDs.
- · check your Voice Mail.
- read your Messages.
- explore your options with the Function Menus.

Follow these symbols as a guide for using the keys on your phone.



<sup>\*</sup>Contact your Service Provider for availability.

## Receiving Messages

If your phone is ON and you receive a Caller ID, Voice Mail, or alphanumeric message:

#### An alert sounds or vibrates:

Your phone will beep or vibrate three times. See Ringer or Vibrator Selection on page 75 to set your phone's alert. See page 77 to learn about Message Reminder Tones.

#### · An indicator appears on the display:

Appears on the lower line of the display when you receive a Caller ID or alphanumeric message. It will stay on the display until you have viewed the Caller ID or read the message.

Urgent Appears in the main display when you receive an urgent message and your phone is in idle mode. After a few seconds, the screen will change to Press and begin flashing.

Msg Mem Low Appears when your phone's message memory is almost full (at approximately 85% capacity).

Msg Mem Full Appears in the main display when the message memory is completely full and your phone is in idle mode.

Appears when you receive a Voice Mail message. It will stay on the display until you have listened to the message. Your Service Provider will then signal your phone to turn the indicator OFE

#### Press to open the Messaging Menu:

The specific icon will be flashing.



**Note:** See page 29 for more about receiving Caller IDs.

# Tip: Your Service Provider holds your messages and will forward them after you have made room. See page 55 to learn how to delete

messages.

## Viewing Your Caller IDs\*

Your phone supports Caller ID service, which lets you see who is calling before you answer. The Caller IDs for the last 16 different callers are stored so they can be viewed at any time.

- Enter Press to open the Messaging Menu.
   Messaging
- 2. Select Press of or to scroll to Caller ID and press to select.

You will see a Caller ID icon 🖛 for each stored Caller ID. Flashing icons represent Caller IDs that have not been viewed. Below the icons you will see information for the latest Caller ID:



3. Select Press ♠ or ♠ to highlight a Caller ID to view and press ♠ to view complete information for that call:



**Keep in mind:** You will see the caller's name only if it is stored in your Phone Book.

 
A check mark will appear in the corner if you have answered or returned the call. Press (or (arx)) to return the call of the displayed caller. Press (510) to store the information.

<sup>\*</sup>Contact your Service Provider for availability.

## **Caller ID Options**

When viewing Caller IDs, press the Message Key to see the options available for the highlighted Caller ID.

**4. Access** Press **②** to open the Caller ID **Options** Function Menu.



**5. Choose** Press of or to scroll to one of the following:

Go To Press to return your phone to the Msg Menu Messaging Menu.

**#** Exit Press **1** to exit Messaging to idle mode.

Delete Press of to delete the currently selected Message Caller ID. Press of again to confirm.

Delete Press to delete all your Caller IDs.
All Msqs Press again to confirm.

- CallBack Press **○** to return the call.

Stone Press to begin storing the number. Enter a two-digit location, enter a name, and press again.

## Checking Your Voice Mail\*

When you receive Voice Mail, your Service Provider sends a notification to your phone and your phone displays an indicator. This way, you will be able to check for new Voice Mail simply by glancing at your phone's display.

- Enter Press 
   □ to open the Messaging Menu.
   Messaging
- 2. Select Press of or to scroll to Voice Mail and Voice Mail press to select.

If you have one or more Voice Mail messages, you will see:



To listen to your messages, dial your access number. Your phone will do this automatically with one keypress.



See the following page for more options.

**Keep in mind:** Some Service Providers send the Voice Mailbox number to your phone automatically. If the number has not been sent, then store it in location 98 of your Phone Book. To learn how, see Pause Dialing on page 44.

If you have no new messages, you will see:



<sup>\*</sup>Contact your Service Provider for availability.

## **Voice Mail Options**

 
When checking Voice Mail, press the Message Key to see options for the highlighted Voice Mail notification.

3. Access Press 

Options Press 

to open the Voice Mail

Function Menu.



**4. Choose** Press of or to scroll to one of the following:

Menu Press ♦ to return your phone to the Messaging Menu.

**#** Exi† Press **1** to exit Messaging to idle mode.

Delete
Message
Press of to delete the currently selected
Voice Mail notification. Press of again to

CallBack Press 

to dial your Voice Mail box number.

□

## Reading Your Messages\*

Your phone can receive alphanumeric messages like a pager. The message memory stores up to 60 messages, depending on the size of each.

1. Enter Press ■ to open the Messaging Menu.

Messaging

2. Select Press of or to scroll to Messages and Messages press to select.





3. Select a Press of or of to highlight a message to read and press of to select the message.

Once a message is selected, the following keys will help you read through your messages:

**4. Scroll** Press or to scroll through the selected message.

Previous Press of or ◆ to go to the previous Message message.

**Next** Press **\*** to go to the next message. **Message** 

If the message includes a number in parentheses (a Call Back number) you can use the following shortcuts:

**Call Back** Press (or (ar to dial the Call Back number (in parentheses if included).

 
Store Press to store the Call Back number (in parentheses if included) in your Phone Book.

<sup>\*</sup>Contact your Service Provider for availability.

## **Message Options**

When reading your messages, press the Message Key to see the options available for the highlighted message.

**5. Access** Press **②** to open the Message **Options** Function Menu.



- **6. Choose** Press or to scroll to one of the following:
- Go To Press to return your phone to the Msg Menu Messaging Menu.
- **₩** Exi† Press to exit Messaging to idle mode.
- Delete Message Press to delete the currently selected message. Press again to confirm.
- Delete Press to delete all messages.
  AllMsgs Press again to confirm.
- Lock Press to lock or unlock the message.

  Lock important messages to protect them from accidental deletion.
- Unlock Messages must be unlocked before they can be deleted.

If the message contains a Call Back number (in parentheses), you will also see these options:

CallBack Press of to dial the sender's number.

Press to begin storing the number. Enter a two-digit location, enter a name, and press again.

# The Works

#### **Introducing the Menu Features**

The Digital StarTAC® phone is loaded with features that can help make life easier and more productive. The phone's user-friendly menu system will help you find what you need quickly and easily. You will see the following icons as you scroll through the menu system and each represents a menu.



Tone Control

## **Navigating the Menu**

You can navigate through the menu system using the three keys located on the left side of the phone. Use the volume keys to scroll up and down through the options available on one level, and the Smart Button, in the middle, to select.


This manual uses these symbols to instruct you to use the navigation keys.



#### **Road Maps**

To help you navigate through the phone's menu system, chapters begin with an easy-to-follow visual "road map"—a quick overview of what you will find in the chapter that follows.

To use the menu system:

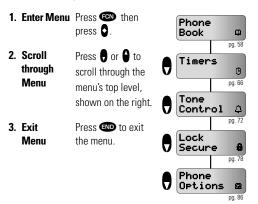

#### **Previous User Compatibility**

If you are already familiar with previous Motorola phones, you may prefer to use your phone's \* and \* keys to scroll through the menu system.

#### In the Works

In the chapters that follow, detailed instructions describe the operation of each feature. We will explain everything you need to know about your new phone, including how to access and use a feature and what happens when you do.

# Phone Book



In "Using Memory" you learned how to store and recall phone numbers with the internal Phone Book. You can access the same features, along with some other interesting features, using your phone's convenient menu system.

#### In this chapter we will explain how to:

- recall and store phone numbers using the menu system.
- · edit your memory information.
- view your own phone number.


Follow these symbols as a guide for using the keys on the side of your phone.



## **Road Map**

Press then press to enter the menu system.

Start:

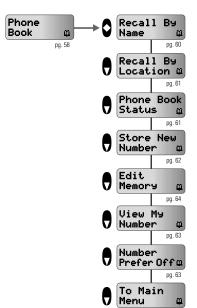

#### Getting to Phone Book...

**1. Enter Menu** Press then press .

2. Enter Press to enter Phone Book.
Phone Book

Recall By Name **o** 

## Recalling By Name

Once you have stored names and numbers, you can recall them alphabetically with the Phone Book menu.

3. Begin Press ♦ to select Recall By Name.

Recalling You will see: Enter 1st Letter.

4. Enter
Name
Press the appropriate digit key as many times
as necessary to enter the first letter of the
name. (See page 39 for help entering letters.)
You will see the first entry with that letter.

**5. Find** Press or to scroll to the name you are looking for.

6. Place Press & hold or press (or W).

Call You will see: Calling.

7. End Press or close the phone.
Call or

Press & hold until you hear a high tone.
You will see: Press \* to End Call.

then Press ◊ again.

## Recalling By Location

Each name and number you store is placed in a memory location numbered 01-99. Once you have stored names and numbers, you can use this feature to recall them by memory location.

Recall By Location **©** 

- 3. Begin Press or to scroll to Recall By Recalling Location and press to select.
- 4. Enter Location Enter the two-digit memory location of the number you are looking for. You will see the Phone Book screen for that memory location.
- 5. Place Press & hold or press (or AK).

  Call You will see: Calling.
- 6. End Press or close the phone.

  Call or

  Press & hold until you hear a high tone.

  You will see: Press \* to End Call.

  then

then Press ♠ again.

## Phone Book Status

You can use this feature to see how many of your Phone Book's 99 locations have been used.

- 3. Select Press of or to scroll to Phone Book Status and press of to select. You will see: XX Full XX Empty.
- **4. Exit** Press **1** to exit menu, or you may scroll to **Menu** other features.

the two-digit location and press END (or TALK).

To place a quick

call just enter

Tip:

Phone Book Status **©** 

#### Getting to Phone Book...

1. Enter Menu Press On then press .

2. Enter Press of to enter Phone Book.
Phone Book

Store New Number **P** 

## Storing a New Number

Whether you store numbers as described in "Using Memory" or store numbers with this menu feature, you will get the same results.

3. Begin Storing Press ♠ or ♠ to scroll to Storie New Number and press ♠ to select.
You will see: Enter Number.

4. Enter Number Enter the number you want to store and press

3. You will see: Location XX? XX is the number of the lowest available location.

5. Enter Press 500 or ★★ to store the sequence in the displayed location or enter a new two-digit location.

6. Enter Enter a name to identify the phone number or Name continue with step 7. See page 39 for details on entering names.

7. Store Press or O. Your phone will confirm the entry by displaying: Stored At XX.

8. Exit Press **1** to exit menu, or return to Step 3 to **Menu** store more numbers.

## Tip:

Press one digit and to store it in the first location beginning with that digit.

## Tip:

Always store your Voice Mail number in location 98

## **Viewing Your Number**

Use this feature to view your phone's currently active number.

3. View Number Press ♠ or ♠ to scroll to Uiew My Number and press ♠ to select. The display will show the currently active number on your phone.

4. Exit Press to exit the menu, or you may scroll to other features

View My Number **Q** 

Shortcut:
Press RCI #.

Number Prefer On **Q** 

## Number Preference

## When Placing Calls:

If you prefer to see the number (Calling 555-1212) instead of the name (Calling Jane Smith) when you place a call from the internal Phone Book, turn Number Preference ON.

#### When Receiving Calls:

5. Exit

Menu

If you subscribe to Caller ID, your phone automatically looks up callers in your Phone Book and displays the name stored in the entry. If you prefer to see the caller's number (555–1212), then turn Number Preference ON.

3. Find Feature
 4. Toggle Feature
 Press of to scroll to Number Prefer.
 Press of to toggle the feature ON or OFF.

to other features

Press to exit the menu, or you may scroll

63

## Getting to Phone Book...

**1. Enter Menu** Press then press .

2. Enter Press to enter Phone Book.
Phone Book

Edit Memory **Q** 

## Editing a Memory Location

You can edit an entry or move it to another location. When you move an entry, the original location remains untouched, allowing you to create a Phone Book entry similar to one you have already stored.

3. Begin Press of or to scroll to Edi+ Memory and press to select.

4. Find by
Location

Press of to scroll to Edi+By Location and press to select. You will see:
Location... Enter the two-digit memory location of the phone number you want to edit. Press to begin editing the displayed entry and continue with Step 5.

Name

Press ♠ or ♠ to scroll to Edi+ By Name and press ♠ to select. You will see: Enter 1st
Letter. Enter the first letter of the name you want to edit. (See page 39 for information on entering letters.) You will see the first entry beginning with that letter. Press ♠ or ♠ to scroll to the name you are looking for and

Find the phone number. Press Phone P

press to begin editing.

## Editing (cont'd)

6. Finish Number Press when you finish editing the phone number. The display will show the current location.

7. Move to a New Location If you would like to move the entry to a new location and preserve the original entry, then press and hold to erase the location and enter a new two-digit location. You will see the name associated with the entry.

or Overwrite Original If you would like to overwrite the original entry, then press of or so. You will see the name associated with the entry.

8. Edit Name Enter your changes to the name. (See page 39 for details on entering names.) Press to erase one letter at a time, or press and hold to erase the entire name. Press to move the cursor backward. Skip this step to leave the name unchanged.

9. Confirm Changes Press or when you finish editing the name. If you are overwriting an entry, then you will see: Location XX is Full. The display will then show the new information and you will see: Change? Press or again to save your changes. You will see: Stoned At XX.

or Choose Different Location Press **CLP** to choose a new memory location and return to step 6.

or Discard Changes Press **end** to exit without saving your changes.

10. Exit Menu Press **to** exit the menu, or you may scroll to other features.

# **Call Timers**



Your phone is equipped with three visual and three audible call timers. You can monitor or record the length of individual calls, set a timer to track monthly usage, or have the phone alert you at intervals that you specify.

#### In this chapter we will explain how to:

- monitor the length of your calls.
- set and view the resettable timer for long-term monitoring.
- program audible timers for your individual needs.

Follow these symbols as a guide for using the keys on the side of your phone.



## **Road Map**

Press **FCN** then press **\rightarrow** to enter the menu system.

#### Start:



#### **Getting to Call Timers...**

**1. Enter Menu** Press **1.** then press **2**.

2. Enter Press of or to scroll to Timers and press to select.

Individual XX:XX:XX 0

# Viewing the Individual Timer

The individual timer records the air-time of your most recent call in hours, minutes, and seconds. It resets before you place the next call and when you turn the phone OFF. You can have the timer display automatically while calls are in progress. See Auto Display Individual Timer on page 70.

3. View When you enter the Call Timers menu, you will see: Individual XX:XX:XX.

**4. Exit** Press **1** to exit the menu, or you may scroll **Menu** to other features.

Shortcut:
Press RCD then
The twice

Shortcut:
Press FCN, then 4, 5.

Resettable TimeXXXXXO

## Viewing the Resettable Timer

You can track how much air-time you have accumulated during any time period you choose. For example, reset this timer at the beginning of each billing period to know where you stand at any given moment. Use this feature to view the time elapsed, and follow the instructions on page 69 to reset the timer.

Shortcut:
Press (RCL) then
three times.

Shortcut:
Press (CN), (S)
then (4), (6).

3. View Press ① or ② to scroll to Reset+able Time.
You will see the air-time in minutes since you last reset the timer.

**4. Exit** Press **1** to exit the menu, or you may scroll **Menu** to other features.

## Viewing the Cumulative Timer

This is a non-resettable timer that keeps track of your phone's total air-time (in minutes) since your phone was activated.

| 3. | View  | Press ♠ or ♠ to scroll to Cumulative Time.  |  |
|----|-------|---|--|
|    | Timer | You will see the total air-time in minutes. |  |

4. Exit Press to exit the menu, or you may scroll Menu to other features.

Cumulative TimeXXXXXO

Shortcut:
Press RC1 then
#D four times.

Shortcut:
Press (CN), (2)
then (4), (7).

## Resetting the Timer

This feature allows you to monitor elapsed air-time over a period of time that you choose. After you reset the timer, it will continue to keep track of your air-time (in minutes) until you reset it again.

3. Find Feature
 4. Reset Timer
 Timer
 Press of to reset. You will see: Reset+able Timer

**5. Exit** Press to exit the menu, or you may scroll to other features.

**Keep in mind:** The shortcuts will not work if the Resettable Timer is already set at zero.



Shortcut:
Press FCN, then 4, 3
and continue
with step 4.

Shortcut:
Press FGN then

To, To, CLR
to reset the

#### **Getting to Call Timers...**

**1. Enter Menu** Press then press .

2. Enter Press of or to scroll to Timers and press to select.

Individual Timer On O

## **Auto Display Individual Timer**

When you turn this feature ON, your phone will automatically display your air-time in minutes and seconds during and after each call.

**Note:** Activating the Auto Display Timer may reduce standbytime and talk-time.

Shortcut:
Press FCN, then 4, 8 and continue
with step 4.

3. Find Press of or to scroll to Individual Feature Timer.

**4. Toggle** Press to toggle ON or OFF the automatic display of the individual timer.

5. Exit Press to exit the menu, or you may scroll to other features.

One Minute Timer Off O

## **One Minute Audible Timer**

Turn this feature ON to hear an audible beep 10 seconds before the end of every minute during a call. The party on the other end will not hear the beeps.

Shortcut:
Press FCN, then 4, 4 and continue
with step 4.

3. Find Press ♠ or ♠ to scroll to One Minute Feature Timer.

**4. Toggle** Press to toggle the timer ON or OFF. Timer

5. Exit Press to exit the menu, or you may scroll to other features.

## Repeating Audible Timer

You can set this timer to beep during your calls at an interval that you select—from 11-999 seconds. Like the One Minute Timer, you will hear the beep 10 seconds before the end of each interval, and the party on the other end will not hear the beeps.

Repeating Timer Off®

3. Find Feature

4. Toggle Timer

Fress of to toggle the timer ON or OFF.

Fress of to toggle the timer ON, you will see:

Enter Seconds

Enter Seconds. Enter the number of seconds you would like between beeps and press of to set the timer. You will see: Se+ A+ ★★★ Secs.

Press **END** to exit the menu, or you may scroll

Shortcut:
Press (C), (S)
then (4), (1)
and continue
with step 4.

Single Audible Timer

to other features

6 Fxit

6. Exit Menu

Menu

You can set the Single Timer to beep at a time that you select—from 11-999 seconds. It will beep once during each call, 10 seconds before the end of the preset time. The party on the other end will not hear the beeps.

Single Timer Off O

Find Feature
 Press of to scroll to Single Timer.
 Toggle Timer
 Enter Seconds
 If you toggle the timer ON, you will see:

 Enter Seconds.
 Enter the number of seconds you would like before the beep and press to set the timer. You will see: Set At XXX Secs.

to other features.

Press **END** to exit the menu, or you may scroll

Shortcut:
Press (CN), then (4), (2) and continue with step 4.

# **Tone Controls**



If you've been reading along diligently, this may be a good time for a break—put your feet up and have some fun with these features. Use the Tone Control features to select Silent Mode, personalize your phone's ringer styles, or set the phone to remind you of new messages.

#### In this chapter we will explain how to:

- · choose from nine different ringer styles.
- activate and deactivate the VibraCall® Alert.
- · silence the keypad.
- silence all your phone's tones with one convenient feature.
- · set the Message Reminder.


Follow these symbols as a guide for using the keys on the side of your phone.



# **Road Map**

Press then press to enter the menu system.

Start:

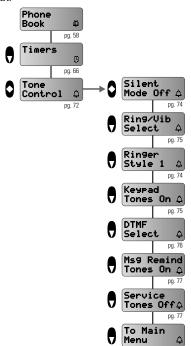

#### Getting to Tone Control...

1. Enter Menu Press En then press 5.

2. Enter Press of to scroll to Tone Control and press to select.

Silent Mode Off Δ

# Silent Mode

When you need to be discreet, just turn Silent Mode ON. All tones will be silenced. The ringer and incoming message tones will be replaced by vibrations.

Shortcut: Press (CN) then press & hold (B). 3. Find Press O or to scroll to Silent Mode.

**4. Toggle** Press to toggle the feature ON or OFF. Feature

5. Exit Press to exit the menu, or you may scroll to other features.

Ringer Style X Д

# Selecting a Ringer Style

Your new phone offers nine different ringer styles. After you choose a style, the phone will give you a brief sample of your new alert sound, or vibrate if you have the VibraCall® Alert selected.

3. Enter Press or to scroll to Ringer Style and press to select.

4. Select Ringer Press of to scroll through the ringer styles. As you scroll, your phone will give an audible sample of the currently displayed style. Press to select the displayed option.

**5. Exit** Press **1** to exit the menu, or you may scroll **Menu** to other features.

# Ringer or Vibrator Selection

Motorola's VibraCall® Alert is ideal for situations where ringing may not be appropriate, or in noisy places where you might not hear the ringer. You can choose to be alerted to incoming calls using the vibrator, ringer, both or neither.

| 3. | Enter<br>Feature | Press or to scroll to Ring/Vib<br>Select and press to select. |
|----|------------------|---|
|    | · outuro         | Seres and pross to soloct.                                    |

4. Select Press of or to scroll to Vibrate Only, Ringer/ Ring Only, or Vibrate Then Ring and press of to select the displayed option.

5. Exit Press to exit the menu, or you may scrollMenu to other features.

**Keep in mind:** When both the ringer and vibrator are ON, the phone alerts you by vibrating for three ring cycles then ringing.

# Keypad Tones

Keypad Tones are the sounds you hear when you press any key on the phone. If you want to be discreet, use this feature to silence the audio feedback from the keypad.

**Keep in mind:** Turning Keypad Tones OFF does not silence the tones your phone sends across the line. See Transmit Tones on the following page for more information.

| 3. Find<br>Feature   | Press 🐧 or 🖣 to scroll to Keypad Tones.                      |
|----------------------|--|
| 4. Toggle<br>Feature | Press <b>t</b> to toggle the feature ON or OFF.              |
| 5. Exit<br>Menu      | Press to exit the menu, or you may scroll to other features. |

Ring/Vib Select Δ

Shortcut:
Press FCN
then press B
to toggle the
VibraCall® Alert
ON and OFF.

Shortcut:
Press FCN, on and 3, or and and continue with step 4.

Keypad Tones On A

Shortcut: Press (CD), and (3), (2) and continue with step 4.

#### Getting to Tone Control...

**1. Enter Menu** Press **CN** then press **2**.

2. Enter Press of to scroll to Tone Control and press to select.

DTMF Select Δ

# **Transmit Tones**

Your phone transmits tones to communicate with automated calling systems like Voice Mail or bank by phone. These tones are called DTMF tones (Dual Tone Multi-Frequency tones), and this feature allows you to control the length of the tone your phone sends. For most systems, you should use the default setting of short tones, which sends the tones for a preset length of time. If you choose long tones, your phone will transmit the tones for as long as you press & hold the key. To silence the tones during conversations, turn the tones OFF.

Shortcut:
Press FCN, then 3, 3 and continue
with step 4.

3. Enter Press of or to scroll to DTMF Select and Feature press to select.

4. Select Press ♠ or ♠ to scroll to Transmi+ DTMF

Setting Long, Transmi+ DTMF Short, or

Transmi+ DTMF Off and press ♠ to select.

**5. Exit** Press to exit the menu, or you may scroll **Menu** to other features.

**Note:** If you turned the DTMF tones OFF, but you want to access a tone-activated system like Voice Mail, place your call, enter the numbers you need to transmit and:

**Send** Press then press (or A) to send the tones if DTMF tones are OFF.

# Message Reminder

If you subscribe to messaging services, this feature can help you remember to check your messages. Turn Message Reminder Tones ON and your phone will remind you of unread messages by beeping and /or vibrating every two minutes. This feature is especially helpful if you are busy or away from your phone.

Msg Remind Tones On A

**3. Find** Press ♠ or ♠ to scroll to Msg Remind Feature Tones.

Toggle Press to toggle the feature ON or OFF.
 Feature

5. Exit Press to exit the menu, or you may scroll to other features.

#### Service Tones On Δ

# Service Tones

When Service Tones are ON, you will be instantly alerted to any change in your wireless service. You will hear two short beeps when your phone (1) starts to roam, (2) returns to a home system after roaming, (3) loses service, or (4) finds service.

3. Find Press or to scroll to Service Tones. Feature

4. Toggle Press to toggle the feature ON or OFF.

**5. Exit** Press to exit the menu, or you may scroll **Menu** to other features.

**Keep in mind:** Your phone will always beep if a call is dropped.

# Lock/Security



While you probably would not want to leave your phone unattended, your phone has a number of built-in security features to prevent unauthorized use.

#### In this chapter we will explain how to:

- · lock and unlock your phone.
- · place emergency calls.
- · view and change your lock code.
- · restrict call placement and memory access.
- reset or clear your phone's settings.


Follow these symbols as a guide for using the keys on the side of your phone.



# **Road Map**

Press then press to enter the menu system.

#### Start:

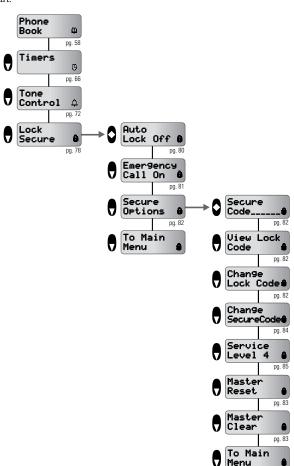

#### Getting to Lock/Security...

1. Enter Menu Press CN then press .

2. Enter Press or to scroll to Lock Secure and press to select.

Auto Lock Off 0

# **Auto Lock**

Turn this feature ON and your phone will automatically lock itself each time the phone is turned OFF.

3. Find Feature Press or to scroll to Auto Lock.

**4. Toggle Lock** Press **o** to toggle the feature ON or OFF.

**5. Exit** Press **1** to exit the menu, or you may **Menu** scroll to other features.

## **Locking the Phone**

You can lock your phone manually at any time to help prevent unwanted use. Once locked, you can leave the phone ON or turn it OFF and the phone will remain locked.

**1. Lock Phone** Press Then press You will see: Lock?

2. Confirm Press or so. You will see: Locked.

#### **Unlocking the Phone**

Unlocking your phone is quick and easy. Once your phone is ON, just enter your three-digit code. Your factory programmed lock code is 123. If you have changed this code and cannot remember what it is, see Viewing the Lock Code on page 82.

**Keep in mind:** You can still receive calls when the phone is locked. Follow these steps to answer an incoming call:

Unlock & Enter your three-digit code and press ♦ or Answer (or ♠) to answer.

# **Emergency Call**

Your phone's emergency call feature allows you to instantly place a call from location 01 — even when your phone is locked.

**3. Find Feature** Press ♠ or ♠ to scroll to Emergency Call.

**4. Toggle** Press **♦** to toggle the feature ON or OFF.

5. Exit Press to exit the menu, or you may Menu scroll to other features

**Keep in mind:** Some wireless systems only allow access to their own emergency numbers. Check with your Service Provider for more information

#### **Storing an Emergency Call Number**

You should reserve memory location 01 for an emergency number or the number of a family member or close friend. To store your emergency number, follow these steps:

**1. Enter** Enter your emergency number. **Number** 

2. Save Press 1 and 1, 1 to choose location
Number 01. You will see: Alpha or Press \*.

Enter Name
 Name
 Enter a name if you like and press when finished. Your phone will confirm the entry by displaying the stored information.

#### **Placing an Emergency Call**

Place When Emergency Call is ON, press & hold Call at any time.

**Keep in mind:** If call restriction Service Level 1 is enabled, the Turbo Dial<sup>®</sup> Keys will not be active. To override the restriction and place an emergency call, press (or ALK). See page 85 for information on your phone's service levels.



Shortcut:
Press (1), then (2), (9)
and continue
with step 4.

# **Getting to Secure Options...**

Press then press . 1. Enter Menu

Press or to scroll to Lock Secure 2. Enter and press to select. Lock/Secure

Press or to scroll to Secure Options 3. Access and press . You will see: Secure Code. Secure **Options** Enter your six-digit secure code.

# Secure Options

# Secure Options Submenu

For your protection, you must enter a six-digit secure code in order to access the features in the Secure Options submenu. The factory programmed secure code is 000000.

# View Lock Code

### Viewing the Lock Code

To view the three-digit lock code:

4 View Press to select View Lock Code. You will see: Lock Code XXX. Code

5 Fxit Press **END** to exit the menu, or you may scroll to other features. Menu

# Shortcut:

Press EN. III. enter six-digit security code, then 🙉.

Chanae

# Lock Code 8

# **Changing the Lock Code**

To change the three-digit lock code:

Press or to scroll to Change Lock 4. Begin Code and press to select. Change You will see: Enter New Code\_\_\_

5. Enter New Enter a new three-digit lock code. You will Code see: New Lock Code XXX.

6. Exit Press **t** o exit the menu, or you may Menu scroll to other features.

#### Shortcut: Press EN. O. enter your sixdiait secure code, enter a new lock code.

then 👀

#### **Master Reset**

Use this feature to reset all user-selectable options back to their original factory settings.

**Keep in mind:** Once you select this feature, the reset process cannot be canceled or reversed.

| 4. | Reset<br>Features | Press • or • to scroll to Master Reset and press • to select. You will see: Reset? |
|----|-------------------|--|
| 5. | Confirm<br>Reset  | Press • to confirm. You will see: Standard Setting.                                |
| or | Exit              | Press <b>END</b> to exit without resetting.  |
| 6. | Exit<br>Menu      | Press to exit the menu, or you may scroll to other features.                       |

#### **Master Clear**

Use Master Clear to clear all user-selectable options, the resettable timer, the Phone Book, and the Messaging memory.

**Keep in mind:** Once you select this feature, the process cannot be canceled or reversed.

| 4. Clear<br>Settir | and press to select. You will see: Clear  |
|--------------------|---|
| 5. Confi<br>Clear  | Press to confirm. You will see: Busy. It will take a few seconds to reset all of your phone's options back to their factory settings. |
| or Exit            | Press <b>END</b> to exit without resetting.   |
| 6. Exit<br>Menu    | Press  to exit the menu, or you may scroll to other features.   |





#### **Getting to Secure Options...**

1. Enter Menu Press En then press .

2. Enter Press of to scroll to Lock Secure Lock/Secure and press to select.

3. Access
Secure
Options
Options
Press of to scroll to Secure Options
Secure
Options
Options
Options
Options
Options
Options
Options

# Secure Options Submenu

Change SecureCode **6** 

### **Changing the Secure Code**

The Secure Code is a six-digit number factory set to 000000. You will probably want to change it to something unique and easy to remember.

4. Select Press o or to scroll to Change Secure Code and press to select. You will see:
New Code \_\_\_\_\_

**5. Enter New** Enter a new six-digit Secure Code. Your **Code** phone will briefly display the new code.

**6. Exit** Press **1** to exit the menu, or you may **Menu** scroll to other features.

ô

Level 4

#### Service Level

When loaning your phone to others, you may want to restrict call placement or protect memory information. Your phone has two service levels that allow you to control the types of outgoing calls that can be made from your phone.

| 4. | Select<br>Feature | Press of or to scroll to Service Level and press to select.   |
|----|-------------------|---|
| 5. | Choose<br>Level   | Press of or to scroll through service level settings and press to select the setting. (See the chart below for descriptions.) |
| 6. | Exit<br>Menu      | Press to exit the menu, or you may scroll to other features.  |

Your phone has two service levels:

| Level 1: Calls can be placed from memory locations 1-10 only.      No dialing from keypad.     No memory edit or storage.     No access to name directory. | 1 Memory<br>1-10 Only |
|--|-----------------------|
| Level 4: This is the default setting.  • No restrictions.  | 4 Std<br>Setting      |

# **Phone Options**



The Phone Options menu is your "command center" for adjusting the way your phone sends and receives calls. You can fine tune your phone for optimal performance, view information about your phone's settings, and much more.

#### In this chapter we will explain how to:

- · switch phone numbers.
- review your phone's settings.
- select a variety of system specific settings.


Follow these symbols as a guide for using the keys on the side of your phone.



# **Road Map**

Press then press to enter the menu system.

Start:

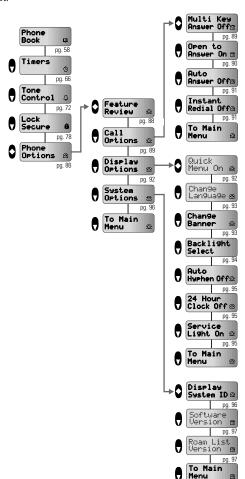

### **Getting to Phone Options...**

1. Enter Menu Press En then press 5.

2. Enter Press or to scroll to Phone Options
Phone Options and press to select.

Feature Review 🕿

# Feature Review

After you have spent some time adjusting your phone's settings, use this feature to review the changes you have made. When you enter Feature Review, your phone will display any features that you have changed from their default factory settings.

**Keep in mind:** Feature Review is simply an opportunity to review – but not change – your current settings.

Shortcut: Press (CN) then (D), (S), (RCL). 3. Begin Press ♠ or ♠ to scroll to Feature Review and press ♠ to enter.

4. Browse
Features

Press of to scroll through any features
you have changed from their default settings. If all features are set to their default
factory settings, the display will show:
Standard Settings.

**5. Exit** Press **COD** to exit the menu, or you may **Menu** scroll to other features.

#### Getting to Call Options...

- 1. Enter Menu Press CN then press .
- 2. Enter Press or to scroll to Phone Options
  Phone Options and press to select.
- 3. Enter Press of to scroll to Call Options
  Call Options and press to enter.

# **Call Options Submenu**

This submenu gives you control over the way your phone places and receives calls.

# Multiple Key Answer

- 4. Find Press O or to scroll to Multi Key Feature Answer.
- 5. Toggle Press to toggle the feature ON or OFF.
- **6. Exit** Press to exit the menu, or you may **Menu** scroll to other features.

**Keep in mind:** If there are any digits in your Scratchpad or if your phone is locked, this feature will not work.





### **Getting to Call Options...**

1. Enter Menu Press (Enter Menu Press ).

2. Enter Press O or to scroll to Phone Options
Phone Options and press to select.

3. Enter Press of or to scroll to Phone Options

Call Options and press to select.

#### Open to Answer On **2**3

# Call Options Submenu

#### Open to Answer

This feature allows you to set whether or not your phone automatically answers when opened. If you subscribe to Caller ID, you will probably want to set this feature OFF so you can open the phone and check who is calling before you answer.

4. Find Press or to scroll to Open to Feature Answer.

5. Toggle Press to toggle the feature ON or OFF.
Feature

**6. Exit** Press to exit the menu, or you may **Menu** scroll to other features.

**Note:** To answer calls with Open to Answer OFF, press (or (ark)).

#### **Automatic Answer**

Turn Auto Answer ON to have your phone automatically answer incoming calls after two ring cycles.

| 4. | Find<br>Feature   | Press • or • to scroll to Auto Answer.          |
|----|-------------------|---|
| 5. | Toggle<br>Feature | Press <b>t</b> to toggle the feature ON or OFF. |
| 6. | Exit              | Press (END) to exit the menu or you may         |

**Note:** We recommend you use this feature only with vehicle accessories and with your phone's ringer active (pg. 75). Otherwise, your phone may answer a call in your absence.

scroll to other features

#### **Instant Redial**

Menu

When placing calls, you may hear a fast busy signal and see Press SND to Redial. This probably means the network is temporarily busy. If you turn Instant Redial ON, your phone will redial for the next four minutes or until the call goes through. You will see: Redialing.

| 4. | Find<br>Feature   | Press ♥ or ♥ to scroll to Instant<br>Redial.                 |
|----|-------------------|--|
| 5. | Toggle<br>Feature | Press <b>t</b> to toggle the feature ON or OFF.              |
| 6. | Exit<br>Menu      | Press to exit the menu, or you may scroll to other features. |

**Keep in mind:** This feature redials only when the network is busy. If you hear a normal busy signal, this feature will not work.

Auto AnswerOff**®** 

Shortcut:
Press (CD), (S)
then (2), (6)
and continue
with step 4.

Instant Redial Off &

**Tip:** See page 31 for more redialing options.

#### Getting to Display Options...

1. Enter Menu Press CN then press .

2. Enter Press O or to scroll to Phone Options
Phone Options and press to select.

3. Enter Press or to scroll to Display Options
Display Options and press to enter.

Display Options 🕿

Quick

# Display Options Submenu

This submenu allows you to customize your phone's display.

#### **Activating the Quick Menu**

Press the Smart Button once and the Quick Menu appears on the display, offering shortcuts to the most popular features. This feature turns the Quick Menu OFF if you would rather use the Smart Button to go straight into the Phone Book. See page 34 for more information.

4. Toggle When you enter Display Options, you will see: Quick Menu. Press • to toggle the

feature ON or OFF

**5. Exit** Press **END** to exit the menu, or you may

**Menu** scroll to other features.

Menu On 🕿

### **Changing the Language**

This feature allows you to select the language in the display.

|           | Press or to scroll to Change    |  |  |
|-----------|---------------------------------|--|--|
| Selection | Language and press • to select. |  |  |

**5. Choose** Press or to scroll through the available languages and press to select.

**6. Exit** Press to exit the menu, or you may scroll to other features.

# **Changing the Banner**

You may create your own message banner for the phone to display when it is idle. Your banner can be up to 12 characters long.

4. Enter Press of or to scroll to Change Banner and press to select. You will see the current banner or Alpha on Press \*.

5. Enter Enter your message using the alphanumeric keypad. Press when your message is complete.

**6. Exit** Press to exit the menu, or you may **Menu** scroll to other features.

Change Language 🕿

Change Banner 🕿

### Getting to Display Options...

1. Enter Menu Press En then press 5.

2. Enter Press or to scroll to Phone Options
Phone Options and press to select.

3. Enter Press 🐧 or 🐧 to scroll to Display Options
Display Options and press 🐧 to enter.

# **Display Options Submenu**

Backlight Selection ☎

### **Customizing the Backlight**

Your phone's backlight illuminates when you open the phone, press a key, or receive an incoming call signal. This feature allows you to choose how long it remains ON.

4. Find Press of or to scroll to Backlight
Feature Selection and press to select.

5. Toggle Press on to scroll to 15 Seconds, 30 Feature Seconds, or Always On and press to select the displayed option.

**6. Exit** Press **10** to exit the menu, or you may **10** menu scroll to other features.

**Keep in mind:** The backlight will always be illuminated when your phone is connected to an external power supply, like a charger or vehicle accessory.

#### **Auto Hyphen**

Just turn Auto Hyphen ON to have all phone numbers automatically hyphenated on the display. This allows you to easily distinguish between area codes, call prefixes, and other numbers. Auto HyphenOff 🕿

| 4. | Find<br>Feature   | Press O or to scroll to Auto Hyphen.                                    |
|----|-------------------|---|
| 5. | Toggle<br>Feature | Press <b>t</b> to toggle the feature ON or OFF.                         |
| 6. | Exit<br>Menu      | Press <b>END</b> to exit the menu, or you may scroll to other features. |

24 Hour Clock Off**®** 

# Displaying the 24-Hour Clock

Your phone can display the current time in 12-hour or 24-hour format. Use this feature to turn the 24-hour clock ON or OFF.

| 4. Find<br>Feature   | Press • or • to scroll to 24 Hour Clock.                     |
|----------------------|--|
| 5. Toggle<br>Feature | Press <b>t</b> to toggle the feature ON or OFF.              |
| 6. Exit<br>Menu      | Press to exit the menu, or you may scroll to other features. |

Service Light

The Service Light can be useful to quickly check the current state of your phone's service. If you prefer to conserve standby-time, you can turn the Service Light OFF with this feature.





### Getting to System Options...

1. Enter Menu Press CN then press .

2. Enter Press or to scroll to Phone Options
Phone Options and press to select.

3. Enter Press O or to scroll to System Options
System Options and press to enter.



# System Options Submenu

The System Options submenu offers a couple features that will help you use your wireless network.



# **Displaying the System ID**

Use this feature to determine the unique System ID for your wireless phone.

4. View SID Press ♦ to select Display SID. You will see the System ID for your phone.

**5. Exit** Press **to** exit the menu, or you may **Menu** scroll to other features.

### **Displaying the Software Version**

This feature displays the Software Version used by your phone and may be useful if you require technical assistance.

4. View SID Press or to scroll to Software

Version then press to select. You will see: Version XXXX.

See. version naan.

**5. Exit** Press **1** to exit the menu, or you may **1** scroll to other features.

## **Displaying the Roam List Version**

This feature displays the Roam List Version used by your phone. If you require technical assistance, you may be asked to check this feature.

**4. View SID** Press  $\bullet$  or  $\bullet$  to scroll to Room List

Version then press to select. You will see: Version XXXX.

see:Version XXXX.

**5. Exit** Press **1** Press **1** to exit the menu, or you may scroll to other features.

Software Version 🕿

Roam List Version 🕿

# **Accessory Options**

An exciting line of accessories can enhance and personalize your digital wireless experience.

#### Lithium Ion Batteries



Motorola's Lithium Ion (LiIon) batteries are high energy-density batteries that offer increased capacity and are lighter in weight than similar sized Nickel Cadmium and Nickel Metal Hydride batteries.

### **Nickel Metal Hydride Batteries**

Nickel Metal Hydride batteries (NiMH) are high-capacity batteries that offer up to 30% more talk-time than comparable Nickel Cadmium batteries. To help achieve maximum life and capacity for your NiMH battery, do not leave the battery in the charger for more than 24 hours, and use only Motorola-approved chargers.

#### **Cigarette Lighter Adapter**

Lets you plug into a reliable power source on the road. Uses your car's battery to power your phone and rapid charge its battery at the same time. The Cigarette Lighter Adapter will not overcharge your battery and contains circuitry to protect against overvoltage and power surges in the vehicle. In some cars, the engine must be running in order for the cigarette lighter to operate.



# **Accessory Options**

# Desktop Charger (AC Adapter Required)



This charger can be loaded with up to three batteries. Equipped with one LED charging status indicator for each battery, the charger's front pocket can charge both a main and an auxiliary battery attached to a phone, and the rear pocket can charge one battery by itself. For use with Lithium Ion, Nickel Cadmium and Nickel Metal Hydride batteries.

#### Holster

Your Digital StarTAC® phone is so small and light, it is positively wearable. Slip it in the holster and clip the holster on—for the ultimate in high-tech fashion.



#### Headset



The convenient headset provides both an earphone and microphone in one small piece for simple hands-free and private telephone conversations. The headset plugs directly into the jack on the top of your phone, so that you can wear your phone and move freely. Place the foam cover on the earpiece for a more comfortable fit. See pages 89-91 for Call Options that make using a headset with your phone even more convenient.

# **Accessory Options**

#### Hands-Free Vehicle Kit

Optional Hands-Free Kits give you the convenience of hands-free, speaker phone operation while in your car. Full duplex operation lets you simultaneously talk and listen, so both parties can interrupt each other for a normal sounding conversation.

The Hands-Free Kit powers the phone and charges its battery whenever your car's engine is running.

**Keep in mind:** Motorola offers a 3-Watt Vehicular Kit, which includes a 3-watt booster for analog signals. Since the your new phone is a digital phone, it is not compatible with the 3-Watt Kit.

**Important:** We recommend you use genuine Motorola batteries and accessories. Under its wireless telephone warranty, Motorola specifically disclaims any responsibility for damage caused by the use of portable wireless telephone accessories not manufactured by Motorola.

#### Zero Install Car Kit

For the quickest and easiest mobile solution, use the Zero Install Car Kit. Just plug it in, attach the microphone, and you are ready to go!



# **Troubleshooting**

# Q. I pressed the power button, but nothing happened. What's wrong with my phone?

**A.** Check that you have installed a battery and that the battery is charged. See page 12 for information about installing your battery.

### Q. The display says Looked. How do I unlock my phone?

A. Try entering the last three digits of your wireless number. If that does not work, try using the factory preset lock code: 123. If this fails, call your Service Provider (the company that sends you your monthly wireless bill) for assistance. For more information on your phone's security features, see the Lock/Security chapter, page 78.

# Q. My battery did not last as long as I expected. What can I do to extend battery life?

A. To get the most from your battery, make sure it is fully charged. To charge the battery to 100% of its capacity, leave it in the charger for an extra hour after the charger's light turns green.

Exposing your battery to extreme temperatures—below -10°C (14°F) or above 45°C (113°F)—can shorten battery life. Batteries are especially sensitive to high temperature extremes. It is a good idea to always take your phone with you when you leave your car.

# Q. I tried to place a call and received a fast busy signal.

A. This sound means that your call was not processed. For example, the network may be temporarily busy. To redial the number, press the Smart Button or press (or ) before ending your call attempt, or press and try the call again later. See page 91 for more information on redialing.

# **Troubleshooting**

# Q. I tried to place a call but received an alternating high/low tone.

A. This sound means your call did not connect to the network. Most likely, you dialed the number too soon after turning the phone ON. Wait until the NS indicator disappears before placing a call.

An alternating tone may also indicate that your phone's signal is blocked. Make sure the antenna is fully extended and move clear of any obstructions, like bridges, parking garages, tall buildings, etc.

# Q. Whenever I turn the phone ON, the display says: Invalid Battery. What does this mean and why am I not able to charge the battery?

A. Your wireless phone uses the Motorola Expert Performance (E•P) Charging System. The E•P system enables the built-in charger to communicate with attached batteries and tailor its charging cycle to optimize performance.

If you see Invalid Battery when you power up the phone, the built-in charger is not able to communicate with the battery and cannot charge it. You could see this message for several reasons. The most likely one is that the battery is not a Motorola original and it does not have the appropriate  $E \bullet P$  technology. We recommend that you use only Motorola original batteries and accessories and that you store your batteries in their protective covers when not in use.

# Q. My phone started beeping, and the display says: 1 Call Unanswered. What happened?

A. Someone tried to call you while you were in an area where the signal was weak. Press to clear your display, extend your phone's antenna, and avoid obstructions like tunnels, parking garages and tall buildings whenever possible.

### Q. My phone was stolen. What should I report and to whom?

A. Report a stolen phone to the police and to your Service Provider (the company that sends you your monthly wireless service bills).

#### A

- AC Adapter An accessory device that allows you to power and/or charge your phone from a wall outlet. See page 16.
- accessory connector A socket on the bottom of the phone where you can attach accessories such as an AC Adapter or cigarette lighter adapter. To learn more, see page 16.
- air-time The amount of time you spend using a wireless system, between the time you successfully place a call and the termination of that call.
- **alkaline** A battery technology used in personal wireless telephones.
- antenna The device on your phone that sends and receives wireless signals.
- Auto Answer When you activate this feature, your phone automatically answers after two rings. See page 91.
- **Automatic Redial** When your wireless network cannot handle your call, this feature enables your phone to automatically redial with one button push. See page 31.

#### C

- **Call Back number** A phone number in an text message, provided by the sender. See page 54.
- Caller ID A network/subscription dependent service that allows you to view information on incoming calls before answering. See page 50.
- CDMA (Code Division Multiple Access) CDMA takes digitized voice and encodes it in a unique scheme that is sent out over the air. CDMA digital reduces the probability of dropped calls. Your phone is equipped to handle CDMA digital voice transmission.
- cigarette lighter adapter An accessory device that allows you to power and/or charge your phone from a car's cigarette lighter.

#### D

dedicated Message Key See Message Key.

**default** A feature's original setting as programmed in the factory.

digital See CDMA.

DTMF Dual Tone Multi-Frequency are the tones that your phone transmits to communicate with tone activated phone systems like Voice Mail or bank-by-phone. See page 76. Keep in mind: "DTMF Tones" does not refer to the sounds produced by your phone's speaker. See Keypad Tones for information on the sounds produced by your phone's speaker.

E

Emergency Call This feature allows you to place a call from memory location 01 even if the phone is locked. See page 81.

F

fringe area The outermost range of a wireless system where wireless signals are weak.

function keys The non-numeric keys on your phone used to access and navigate menu features, as well as perform memory functions. See page 20.

1

icon One of the variety of symbols used to designate menu features and messages.

indicator A symbol on your phone that gives you information about your phone's status. See pages 24-27.

Instant Redial This feature enables your phone to redial when your wireless network is temporarily unable to handle your call. Your phone will automatically attempt the call for four minutes or until it is picked up by the network. See page 91.

Internal Rapid Charger A charger built into your phone for use with an AC Adapter or cigarette lighter adapter. See page 16.

K

Keypad Tones The sounds produced through your phone's speaker when you press the keys.
See page 75. Keep in mind: "Keypad Tones" does not refer to the tones sent by your phone to communicate with automated phone systems. See Transmit Tones for information on the tones used to access automated phone systems.

L

landline The telephone system used for conventional office and home phones.

- Lithium Ion (LiIon) A battery technology used in personal wireless telephones. Lithium Ion batteries generally provide more energy capacity than Nickel Metal Hydride batteries of the same weight.
- lock To prevent unauthorized access to the wireless telephone. See page 80.
- **lock code** A three-digit code used to access your phone once it has been locked. The factory programmed lock code is 123. To view or change your lock code, see page 82.

#### M

- memory location A space in the Phone Book where you can store a telephone number and a name. Each of the Phone Book's 99 memory locations (numbered 01-99) can hold up to 32 digits and 24 letters.
- menu This system contains five features: Phone Book, Timers, Tone Control, Lock/Secure, and Phone Options.
- menu feature Any feature that can be accessed through the menu system.
- Message Key Located on the bottom row of the keypad, the dedicated Message Key offers One-Touch Access to messages and messaging functions. See page 48. See also Caller ID, Messages, and Voice Mail.
- Messages A network/subscription dependent service that enables your phone to receive text messages and numeric pages just like a pager. See page 54.
- Messaging Function Menus While viewing your Caller IDs, reading your Messages, or checking your Voice Mail, you can use these menus to manage your messages: lock or unlock a text message, delete one or all of your Caller ID or text messages and numeric pages, or select a different message type.

#### N

- Nickel Cadmium (NiCd) A battery technology used in personal wireless telephone batteries.
- Nickel Metal Hydride (NiMH) A battery technology used in personal wireless telephone batteries.

p

pause A special character that tells your phone to wait before sending the next set of numbers stored in one memory location. See Pause Dialing.

Pause Dialing A method of storing Phone Book entries that allows you to store multiple strings of numbers in one memory location; useful, for instance, in accessing automated phone systems. See page 64.

Personal Identification Number (PIN) A private numeric password which protects personal accounts such as bank-by-phone or Voice Mail.

Phone Book An alphabetical list of the names and telephone numbers you have stored into your phone's internal memory.

prompt A display message requesting input.

#### R

road map The visual representation of your phone's menu system provided in this manual.

roam To use a wireless system outside of your home system, usually when you travel beyond the range of your home system.

#### S

**Scratchpad** A memory feature that automatically remembers the most recent number entered into the keypad. See page 43.

Scratchpad tones See DTMF.

scroll To move backward or forward through a list; for example, to move backward or forward through the menu system or the Phone Book using either the volume keys or the and keys.

secure code A six-digit code used to access and change certain security features. The factory programmed secure code is 000000.

Service Provider See Wireless Service Provider.

**Service Tones** Two short beeps used to alert you to changes in your wireless service. See page 77. **signal** See wireless signal.

Silent Mode Select this feature and all your phone's tones will be silenced and the VibraCall<sup>®</sup> Alert activated. See page 74.

Smart Button The middle key on the side of your phone used to access the Phone Book, place calls, end calls, select the Phone Book, enter the menu system, and toggle features ON and OFF.

soft-handoff Unlike traditional analog technology where you are disconnected from one site and then connected to another, CDMA digital technology connects you to a new site before disconnecting you

from the old site. This is known as a "soft-handoff." With soft-handoff technology, you could experience fewer dropped calls.

**standby-time** The total time your phone is ON but not used for talking.

Super Speed Dial A dialing shortcut that allows you to quickly dial any number in the Phone Book. To use this feature, enter the two-digit location of your number, 01-99, then press and hold Smart Button or press (or ) and the call is placed. See page 42.

**System ID** Every wireless system has a unique number to identify itself. See page 96.

#### T

talk-time The total time that you can talk on your phone before the battery is fully discharged.

toggle To switch between two possible options; for example: ON vs. OFE Pressing the Smart Button toggles features ON or OFE.

Transmit Tones See DTMF.

Turbo Dial® keys To use this feature, press and hold a number on the keypad, 

↑ through

↑, and your call is placed.

U

unlock code See lock code.

#### V

VibraCall® Alert When activated, this feature alerts you silently of incoming calls by vibrating. It can be used alone or in conjunction with the ringer. See page 75.

Voice Mail Contact your Service Provider for availability.

volume keys Located on the side of your phone, the upper and lower volume keys are used to adjust ringer and keypad volume. They also scroll within the menu system and the Phone Book.

#### W

- wireless carrier One of multiple competing companies in a given geographic area that owns and operates a wireless system.
- Wireless Service Provider A company affiliated with a wireless carrier that provides wireless service to its customers.
- wireless signal The radio waves that carry information between your wireless phone and the wireless system.
- wireless system The wireless equipment in a given geographic area that relays signals to and from individual wireless telephones and the landline telephone system.

# **Patent Information**

Manufactured under one or more of the following U.S. patents:

| 4121218            | 4630305                | D299136            | 5004992 | 5166596            | 5363071            | D367640 |  |
|--------------------|------------------------|--------------------|---------|--------------------|--------------------|---------|--|
| 4138681            | 4633141                | 4797929            | D315907 | 5175759            | 5365549            | 5499394 |  |
| 4193036            | 4636593                | 4798975            | 5008925 | 5175874            | D352497            | 5506490 |  |
| 4254382m           | 4636741                | 4800348            | D316417 | D332261            | 5366826            | D368696 |  |
| 4302845            | D288432                | 4802236            | D316859 | 5182749            | D353131            | 5510693 |  |
| 4312074            | 4648125                | 4809356            | 5017856 | D332785            | D353361            | 5511235 |  |
| 4327319            | 4649543                | 4811377            | 5018188 | 5185566            | 5375143            | D369162 |  |
| 4329666            | D288683                | 4811404            | 5020091 | 5187809            | 5375258            | 5513078 |  |
| 4369516            | 4654655                | 4827226            | 5020092 | 5193223            | 5379324            | D369359 |  |
| 4369522            | D289156                | 4827507            | 5020093 | 5195106            | D354055            | 5519303 |  |
| 4378603            | 4662691                | 4829274            | 5028083 | 5195108            | D354062            | 5519346 |  |
| 4390963            | 4667333                | 4837534            | 5028859 | 5201069            | 5384825            | 5524276 |  |
| D269873            | 4668917                | D301476            | 5029044 | 5204977            | D356084            | 5524278 |  |
| 4398265            | 4670747                | 4843621            | 5029233 | 5210793            | 5402447            | D370463 |  |
| 4400584            | 4672502                | 4845772            | 5031028 | 5214675            | 5406146            | 5530922 |  |
| 4400585            | 4680787                | D302015            | 5036532 | 5222104            | 5406562            | 5542116 |  |
| D270835            | 4681476                | 4851966            | 5053924 | 5222251            | D357224            | 5544250 |  |
| D271491            | 4683585                | 4868576            | 5057762 | D337332            | D357457            | D372481 |  |
| Re.31470           | 4692726                | 4870686            | D320780 | 5230007            | 5410741            | 5546275 |  |
| 4431977            | 4704588                | D303656            | 5059885 | 5230093            | D357680            | 5546380 |  |
| 4434461            | D292578                | 4876552            | 5060294 | 5233633            | D357681            | D372896 |  |
| 4455534            | 4706036                | 4879533            | D322783 | 5235492            | 5428836            | 5551078 |  |
| 4462098            | D292920                | D305427            | D322955 | 5237257            | D359734            | 5559471 |  |
| D275951            | 4710724                | 4896124            | 5081674 | 5239127            | D359735            | D374424 |  |
| 4484153            | 4711361                | 4897873            | 5083304 | 5241545            | D359959            | D374872 |  |
| 4485486            | 4715063                | D305717            | D324024 | 5241548            | 5432017            | 5572193 |  |
| 4486624            | 4716319                | 4904549            | D324388 | 5241650            | D360632            | 5574976 |  |
| D276809            | 4716391                | 4905288            | 5095503 | 5241693            | 5438684            | 5577268 |  |
| 4491972            | 4723305                | 4905301            | D325028 | 5242767            | D361070            | D375732 |  |
| D277667            | D294257                | D306293            | D325583 | D339582            | 5442680            | D375733 |  |
| 4504834            | 4727306                | D306441            | 5109536 | 5249302            | 5446763            | D375734 |  |
| D278708            | 4727583                | D306594            | D325915 | 5251331            | 5448763            | D375932 |  |
| 4523155            | 4730195                | 4912602            | 5113436 | D340710            | 5448771            | D375952 |  |
| 4546329            | 4734635                | 4918732            | 5117450 | 5260988            | 5453997            | D376127 |  |
| 4550426            | 4736277                | 4922178            | 5121047 | 5261119            | D362840            | 5588041 |  |
| 4551696            | 4737976                | 4945570            | 5122480 | 5262710            | 5457744            | 5589796 |  |
| 4564821            | 4740794                | 4954796            | 5122722 | 5263052            | 5459640            | 5590177 |  |
| D282169            | 4741018                | 4959851            | D327061 | 5276707            | 5463646            | 5594778 |  |
| 4571595            | 4741034                | 4963812            | 5128834 | 5278994            | 5465412            | 5594951 |  |
| 4573017            | 4742562                | 4963843            | D328302 | D343173            | 5469177            | D377792 |  |
| 4574243            | D295627                | 4965537            | 5142551 | 5280637            | 5475752            | D377934 |  |
| 4585957            | 4746242                | 4972355            | 5142696 | D344087            | D365094            | 5604050 |  |
| 4602218            | D295973                | 4972432            | 5146620 | 5287553            | D365817            | 5606730 |  |
| D284759            | D295975                | 4972455            | 5148471 | 5287555            | 5486843            | D378366 |  |
| D285439            | 4751737                | 4975808            | 5148473 | 5287556            | 5487184            | 5613229 |  |
| 4616314            | D296187                | 4984290            | 5148961 | D344511            | 5488335            | 5613863 |  |
| 4617520            | 4761621                | D314173            | 5150359 | 5301365            | 5488649            | 5615233 |  |
| D286778            | 4764737                | D314173            | 5150384 | 5321847            | D366872            | 5621763 |  |
| 4626309            | 4764737<br>D297734     | D315346            | 5152006 | D348880            | 5493198            | 3021703 |  |
| 4628529            | D297734<br>D297735     | D315546<br>D315543 | 5157693 | 5349588            | 5493714            |         |  |
| 4628529<br>4629829 | 4777564                | D315559            | 5163159 | 5359696            | 5493714<br>5497126 |         |  |
| 4629829<br>4630304 | 4///564<br>Re.32768    | D315565            | 5164652 | 5359696<br>5361400 | 5497382            |         |  |
|                    |                        |                    | 0104002 | 3301400            | 040730Z            |         |  |
| Otner pa           | Other patents pending. |                    |         |                    |                    |         |  |
|                    |                        |                    |         |                    |                    |         |  |

109

# Index

| A                                     | storing numbers 46               |
|---------------------------------------|----------------------------------|
| AC adapter 16—18                      | using 47                         |
| accessory connector 20                | changing lock code 82            |
| account numbers, storing 44-45        | changing secure code 84          |
| adjusting volume 33                   | changing the banner 93           |
| alpha characters, entering 39         | chargers 16—19                   |
| answering calls 29-30                 | desktop 18—19                    |
| automatic answer 91                   | Internal Rapid 16                |
| multiple key answer 89                | charging batteries 16—19         |
| antenna 20                            | checking your voice mail 52      |
| audible timers                        | cigarette lighter adapter 16, 98 |
| one minute 70                         | clear key 20                     |
| repeating 71                          | Clear, Master 83                 |
| single 71                             | clearing                         |
| Authentication Entry 85               | Caller ID 51                     |
| auto display timer 70                 | Messages 55                      |
| auto lock 80                          | Phone Book entries 41            |
| automated systems                     | settings 83                      |
| calling 44—45                         | Voice Mail notification 53       |
| storing number 44—45                  | clock 24                         |
| automatic answer 91                   | display format 95                |
| automatic redial 31                   | cumulative call timer 69         |
| В                                     | D                                |
|                                       | deleting                         |
| banner 93<br>batteries 12—17          | Caller ID 51                     |
| chargers 16—19                        | Messages 55                      |
|                                       | Phone Book entries 41            |
| charging 16—21 covers 12—13           | Voice Mail notification 53       |
| installing 14—15                      | desktop charger 18—19            |
| •                                     | indicator lights 19              |
| storage & disposal 17<br>varieties 98 | times 19                         |
| battery level                         | dialing                          |
| indicator 24                          | emergency call 81                |
|                                       | restricting 85                   |
| shortcut 35                           | Digital Indicator 24             |
| <u></u>                               | display 20                       |
| Call Back Messages 54                 | individual call timer 68, 70     |
| Call Options 89—91                    | last ten numbers dialed 31       |
| Call Timers 66—71                     | lock code 82                     |
| road map 67                           | system ID 96                     |
| Caller ID 29                          | your number 63                   |
| deleting 51                           | Display Options 93—95            |
| Message Indicator 25                  | displaying                       |
|                                       | caller's numbers 63              |
| number preference 63                  | displaying the 24-Hour Clock 95  |
| options 51                            | DTMF tones 76                    |
| viewing 50                            | storing 44—47                    |
| calling cards                         | Storing 44 47                    |
| 110                                   |                                  |

| E                          | L                                 |
|----------------------------|-----------------------------------|
| earpiece 20                | last ten numbers dialed 31        |
| editing memory 64-65       | letters, entering 39              |
| emergency call 81          | Lithium Ion Batteries 98          |
| ending calls 28            | locations 61                      |
| entering names 39          | lock                              |
| entries, clearing 41       | automatically 80                  |
| onthee, ordaning 11        | manually 80                       |
| F                          | messages 55                       |
| flip 20                    | lock code                         |
| function key 20            | changing 82                       |
|                            | viewing 82                        |
| $\boldsymbol{G}$           | Lock/Security 78—84               |
| Getting Started 10-21      | road map 79                       |
| Glossary 103-108           | Todd Map 75                       |
|                            | M                                 |
| H                          | Master Clear 83                   |
| Hands-Free Vehicle Kit 98  | Master Reset 83                   |
| headset 99                 | memory 36-43                      |
| headset jack 20            | editing 64—65                     |
| holster 99                 | Phone Book 58-63                  |
|                            | recalling 40-42, 60-61            |
| <b>!</b>                   | storing 38, 62                    |
| In Use Indicator 25        | tips 37                           |
| incoming calls 29—30       | menu features 56                  |
| indicators                 | Message Indicator 25              |
| battery level 24, 26       | Messages                          |
| Caller ID/Message 25       | Call Back 54                      |
| desktop charger lights 19  | lock/unlock 55                    |
| Digital 24                 | options 55                        |
| In Use 25                  | reading 54                        |
| No Service 25              | receiving 49                      |
| Roam 25                    | Messaging Menu 48                 |
| Service Light 27           | microphone 20                     |
| Signal Strength 24         | multiple key answer 89            |
| Silent Mode 25             | mute the phone 32                 |
| Unanswered Call 30         | <b>A</b> /                        |
| VibraCall™ On 25           | N                                 |
| Vibrate Then Ring 25       | names                             |
| individual call timer 68   | clearing 41                       |
| auto display 70            | entering 39                       |
| installing batteries 14—15 | recalling 40, 60                  |
| Instant Redial 91          | viewing 63                        |
| Internal Rapid Charger 16  | navigating the menu 56            |
| K                          | Nickel Metal Hydride Batteries 98 |
|                            | No Service Indicator 25           |
| keypad cover 20            | number                            |
| Keypad Tones 75            | viewing others 63                 |
|                            | viewing yours 63                  |
|                            | number character 46—47            |

| Number Preference 63         | last ten numbers dialed 31 |
|------------------------------|----------------------------|
| numbers                      | repeating timer 71         |
| recalling 40—42              | Reset, Master 83           |
| storing 38                   | resettable call timer      |
| Storing 55                   | resetting 69               |
| 0                            | viewing 68                 |
| one minute timer 70          | ringer                     |
| outgoing calls               | silencing 74—75            |
| controlling 85               | style 74                   |
| placing 28                   | volume 33                  |
| , ,                          | ringer/vibrator 74—75      |
| P                            | road maps 57               |
| Pause Dialing 44—45          | Call Timers 67             |
| personalizable banner 93     | Lock/Security 79           |
| Phone Book 58—63             | Phone Book 59              |
| editing 64-65                | Phone Options 87           |
| memory 36-43                 | Tone Control 73            |
| recalling 60—61              | Roam Indicator 25          |
| road map 59                  | roam list version 97       |
| status 61                    |                            |
| storing 38, 62               | $\boldsymbol{s}$           |
| phone lock                   | Safety Information 6-9     |
| automatically 80             | Scratchpad 43              |
| manually 80                  | Scratchpad Tones 76        |
| phone number                 | scroll keys 20             |
| viewing others 63            | secure code, changing 84   |
| viewing yours 63             | Secure Options 82—84       |
| Phone Options 86—97          | security 78—84             |
| road map 87                  | selecting ringer style 74  |
| placing calls 28             | send key 20                |
| emergency call 81            | service level 85           |
| redial 31                    | Service Light 27, 95       |
| power key 20, 22             | Service Tones 77           |
| _                            | shortcuts 34               |
| R                            | signal strength 24         |
| reading the indicators 24—27 | Silent Mode 74-75          |
| reading your messages 54     | Indicator 25               |
| real time clock 24           | silent mode 32             |
| recall key 20                | single timer 71            |
| recalling 61                 | Smart Button 21            |
| by location 41, 61           | software version 97        |
| by name 40, 60               | store key 20               |
| shortcuts 42                 | storing 38, 62             |
| receiving calls 29—30        | Call Back number 54        |
| automatic answer 91          | while on a call 43         |
| multiple key answer 89       | Super Speed Dial 42        |
| Receiving Messages 49        | system ID, viewing 96      |
| redial 31                    | System Options 96-97       |
| automatic 31                 | , ,                        |
| Instant 91                   |                            |

| <b>T</b> Three-Watt Vehicular Kit 100 timers             |
|--|
| audible 70—71  |
| cumulative 69  |
| individual 68, 70  |
| one minute 70  |
| repeating 71   |
| resettable 68, 69  |
| single 71  |
| Tone Controls 72—76 Basic 32—33                          |
| road map 73  |
| volume 33  |
| tones  |
| keypad 75  |
| service 77   |
| storing 44—47  |
| Transmit Tones 76  |
| storing 44—47  |
| Turbo Dial™ keys 42<br>emergency call 81                 |
| Turning Your Phone On 22                                 |
|  |
| U  |
| unanswered call indicator 30<br>unlock/lock 80           |
| Using Messaging 48—55                                    |
|  |
| <b>V</b>   |
| VibraCall™ Alert 32, 74—75<br>VibraCall™ On Indicator 25 |
| Vibrate Then Ring Indicator 25                           |
| vibration mode 32  |
| viewing  |
| cumulative call timer 69                                 |
| individual call timer 68, 70                             |
| lock code 82   |
| resettable call timer 68                                 |
| your number 63   |
| Viewing Your Caller IDs 50                               |
| Voice Mail calling 44—45                                 |
| checking 52  |
| deleting notification 53                                 |
| options 53   |
| storing number 44-45                                     |
| volume keys 20   |
| volume, adjusting 33                                     |

Y
Your Phone & Its Shortcuts 34
Z
Zero Install Car Kit 100