



MOTOROLA SPICE™

## Welcome

Introducing MOTOROLA SPICE™—stay in touch with your surroundings, feel connected, and experience new things at the touch of a button with the most affordable touch phone on the market.

Use the BACKTRACK™ touchpad for unobstructed navigation without blocking the screen.

**Note:** You may not have some features depending on your service provider.



## Your phone

Most of what you need is in the touchscreen and four simple keys on the front:


- **Menu:** Open menu options.
- **Home:** Go to the home screen.
- **Back:** Go back one screen.
- **Search:** Press for text search.



If you want a full keypad for texting or searching in your **Contacts** list, just slide your phone open.

**Tip:** You can set the screen to automatically adjust for you when you turn the phone. Touch Menu > **Settings** > **Sound & display** > **Orientation**.


**Tip:** To turn on or off the BACKTRACK™ touchpad on the back of your phone, touch Menu > **Settings** > **BACKTRACK**.

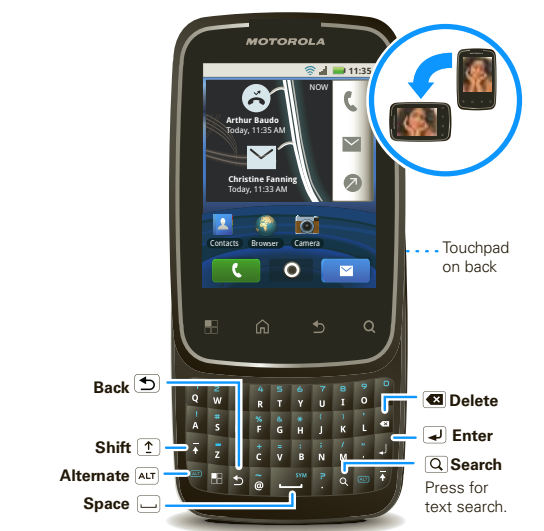

## Let's go

**Tip:** Your phone comes with a microSD memory card already installed. Make sure it's inserted. Some apps, like camera and music, need the memory card to work.

**Caution:** Before assembling, charging, or using your phone for the first time, please read the important legal and safety information packaged with your product.

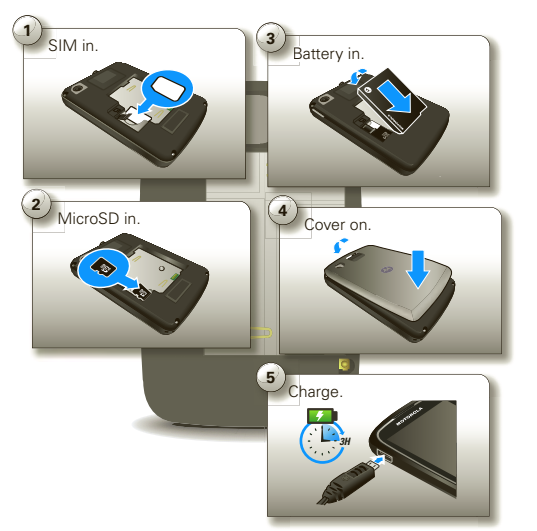

Create or log into a Google™ account. If you don't have a Google account, you can create one using the wizard. Enter your name and a password. Registration/sign on is secure, and should only take a few minutes.


**Note:** This phone supports data-intensive apps and services. It is strongly recommended that you purchase a data plan that meets your needs. Contact your service provider for details.



## Touch tips

It's all in the touch:

- **Touch:** Choose an icon or option.
- **Touch & hold:** Open options.
- **Drag:** Scroll or move slowly.
- **Flick:** Scroll or move quickly.
- **Pinch:** Get a closer look at maps, web pages, or photos.

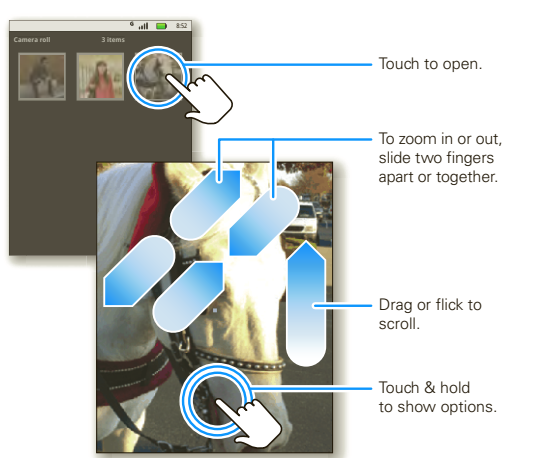


## Home screen

The home screen gives you all your latest information in one place. It's what you see when you turn on the phone or touch Home from a menu.

Use the widgets, shortcuts and panels to see what's important to you—whether it's home, work or play. To make the home screen yours, see "Personalize".


**Note:** Your home screen may look a little different.

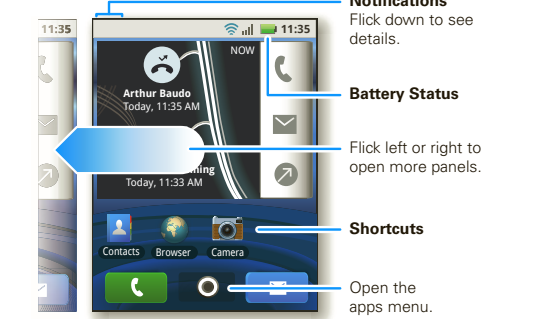

## Flashback

Check out Flashback. It's a unique, fun way to look at your phone activity and manage your communications.

 From the home screen, touch the Flashback widget to see your messages, calendar, pictures & videos, calls, Facebook™, and more.

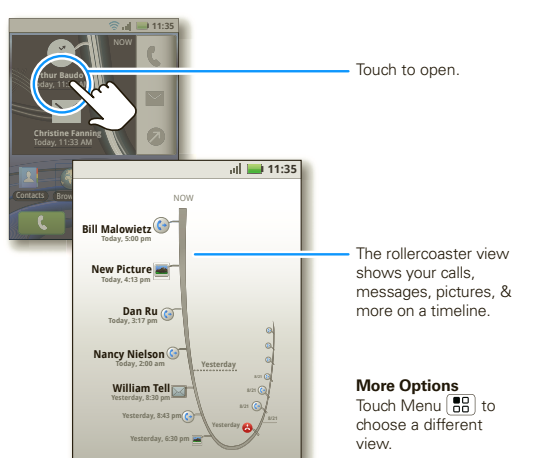


MOTOROLA, the Stylized M Logo, MOTOBLUR, and the MOTOBLUR logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. The Bluetooth trademarks are owned by their proprietor and used by Motorola Mobility, Inc. under license. WiFi is a Certification Mark of the Wireless Fidelity Alliance, Inc. Google, the Google logo, Google Maps, Gmail, YouTube, Picasa, Android and Android Market are trademarks of Google, Inc. Facebook is a registered trademark of Facebook, Inc. All other product or service names are the property of their respective owners. © 2010 Motorola Mobility, Inc. All rights reserved. Changes or modifications made in the phone, not expressly approved by Motorola, will void the user's authority to operate the equipment. Product ID: Motorola XT300 Manual Number: 68014377001-A


MOTOROLA. GET READY.






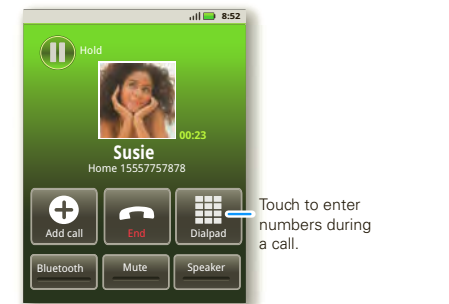 
## Calls

Your dialpad and call lists are only a touch or two away—no menus needed. Touch  **Phone** in the home screen.




During a call, your touchscreen goes dark to avoid accidental touches. To wake it up, press Power .


**Tip:** You can touch Home  or Back  to hide the active call display. To reopen it, touch  **Phone** in the notification bar.




## Contacts

 Contacts like never before! View, search, and use them your way. Touch  **Contacts** in the home screen.


**Tip:** When you flick or drag this list, a scroll bar appears on the right. Drag the scroll bar to move the list faster. To search the list, open your phone and type a name.

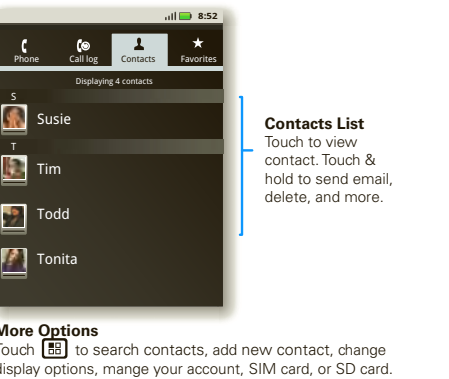

## Messages

 
Your messages at your fingertips—touch  **Messaging** in the home screen. Then touch **New message** and you're ready to text.

 
**Tip:** To type your message, open your phone or touch a text field to open the touchscreen keypad.

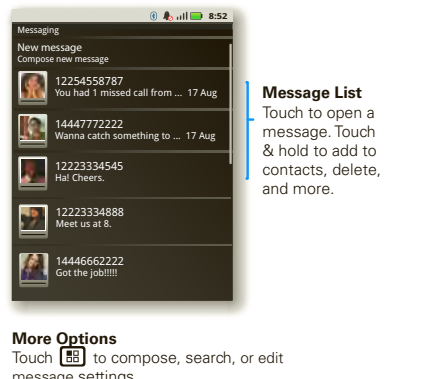

## Personalize

 
 




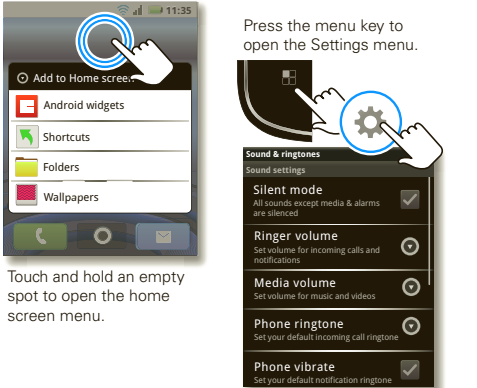




Go ahead, add your personal touch. Change your widgets, wallpaper, ringtone, and more—make it yours.

 
- **Home screen:** Touch and hold an empty spot until you see the **Add to Home screen** menu.  
**Tip:** To move or delete something, touch and hold it.
- **Ringtones & sounds:** Touch Menu  > **Settings** > **Sound & display**.



## Media



 See it, capture it, share it! You'll even have time to relax to some music.

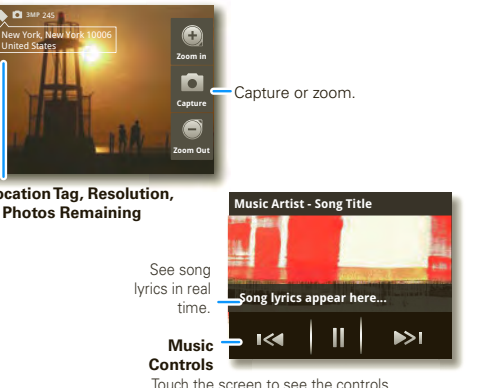- **Photos:** Touch  >  **Camera**. To take the photo, touch .
- **Videos:** Touch  >  **Camcorder**. To start the video, touch . Touch  to stop the video. To see your photos and videos, touch  >  **Gallery**.
- **Music:** Touch  >  **Music** > **My Music**, and touch a category.




## Web

 
Browse, download, and search. And if you need to know where you are or where you're going, we've got that covered too.


Touch  >  **Browser** and surf to your heart's content.


**Tip:** Touch **More** for options like **Add bookmark**, **Find on page**, **Add shortcut to Home**, **Select text**, **Page info**, **Share page**, **Downloads**, and **Settings**.

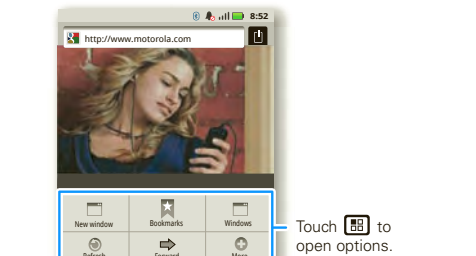

## Wireless

 

  
Lose the wires—touch Menu  > **Settings** > **Wireless & networks**.

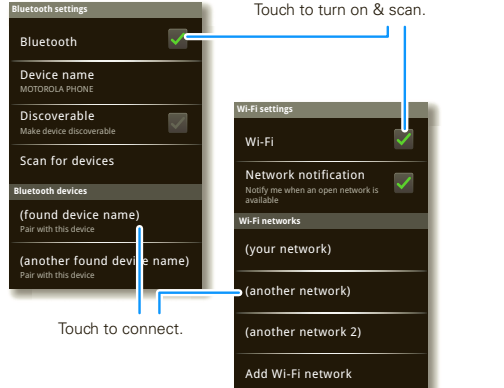
- **Bluetooth™:** For handsfree calls and wireless music, touch **Bluetooth settings** and connect to your accessory.
- **Wi-Fi™:** For fast internet access, touch **Wi-Fi Settings** and connect to a home, office or hotspot network. For connection details, touch Menu  > **Advanced**.



## Tips

 Here are some good things to know:

- **Set lock screen:** Touch Menu  > **Settings** > **Location & security** > **Screen lock**.
- **Control Bluetooth:** Add a widget to your homescreen. See "Personalize."
- **See Recent Apps:** Touch and hold Home .
- **Search:** Press Search .



To zoom in on a Web site:

Double-touch to zoom in or out.



## More

Want more? You got it.

- **Updates:** Phone updates, online help, User's Guide, and more at [www.motorola.com/myspice](http://www.motorola.com/myspice).
- **Accessories:** Find more for your phone at Canada: [www.motorola.ca](http://www.motorola.ca) USA: [www.motorola.com/products](http://www.motorola.com/products).
- **Load your files:** Download Media Link at [www.motorola.com/mymedialink](http://www.motorola.com/mymedialink).

