



motorola W215/W218

Getting to Know Your Phone




MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office.
© Motorola, Inc. 2007

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this tutorial, are based on the latest available information and believed to be accurate at the time of publication. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

Note: Your phone may not appear exactly as shown, however, all key locations, sequences, and functions remain the same.





Make, End, and Answer Calls

- 1 From the home screen, enter a number and press .


Tip: Press **DELETE** to delete the last digit. Press **STORE**, and then **DONE** to add the number to your phonebook.



- 2 To call a contact from your phonebook, press , select **Phonebook**, scroll to the name, and press .



- 3 To end a call, press .


- 4 To answer a call, press .


Tip: To answer a call by pressing any key, press , then select **Settings > In Call Setup**. Set **Answer Options** to **Multi-key On**.



Add Contacts to Your Phonebook


- 1 You can store up to 500 contacts in your phonebook!

From the home screen, press , and select **Phonebook**.

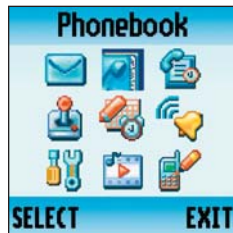

- 2 Select **New Entry**.



- 3 To enter your contact, press , enter the name, and press **OK**. Repeat this process to enter the contact's number.



- 4 Scroll to the remaining fields (Store To and Speed No) and enter the information.



- 5 When you are finished, press **DONE**.

Tip: To find contacts in your phonebook, type the first letters of the contact on your keypad.






motorola W215/W218

Send a Text Message

- 1 Your phone can store up to 750 SMS messages!

From the home screen, press , and select **Messages**.



- 2 Select **Create Message**.



- 3 Enter your message and press **OK**.



- 4 Enter the recipient's number, and press **OK** or press **BROWSE** to select the recipient(s) from a list. When you are finished press **OK**.



- 5 Press **SEND** to send the message.






Add a Datebook Event

1 From the home screen, press and select **Office Tools > Datebook**.



2 Scroll to the day you want to schedule an event and press . Select **Day View > New Entry**.

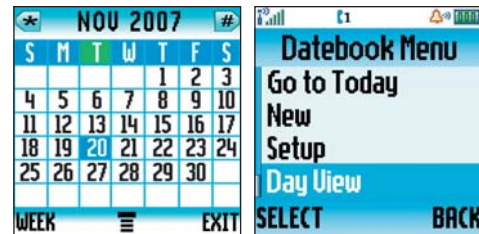

3 Press , enter the title of your event, and press **OK**. Scroll to the other fields and enter start time, event duration, event date, repeat the event, or event reminder.


When you are finished, press **DONE**.





motorola W215/W218

Customize Your Ring Style and Ring Tone

- 1 From the home screen, press  and select **Ring Styles**.



- 2 Scroll to **Style**, then press **CHANGE**.
Select the ring style for your incoming call, message or other event: Loud, Soft, Vibrate, Vibe and Ring, Vibe then Ring, or Silent.



- 3 To change the ring tone for incoming calls, select <ring style> **Detail**.



- 4 Scroll to **In Call** and press **CHANGE**.
Select the desired ring tone.





Play the FM Radio

1 Insert the headset into the phone. The earpiece acts as an antenna and must be inserted for the FM radio to function.

Inserting the headset changes **MESSAGE** to **FM RADIO** and **SETTING** to **SPEAKER** on the home screen.

2 To turn on FM Radio, press **FM RADIO**.

To turn off FM Radio, press **FM RADIO** again.

Press **SPEAKER** – play the radio through the speaker.

Press **EARPIECE** – play the radio through the headset.

Tip: The FM radio automatically tunes in to the lowest available frequency when you use it for the first time. After that, it tunes in to the frequency last used.



3 Use the navigation keys to control the radio:

Press **◂** or **▸** – adjust the frequency.

Press and hold **◂** or **▸** – scan to the next usable frequency.

Press **⬆** or **⬇** – adjust the volume.

Tip: Set radio presets by tuning in to the station, then pressing and holding a number on the keypad. The Stored window displays when the preset is set.



Take, Store, and View Pictures

- 1 You can take and save pictures on your phone.

To take a picture, press and select **Multimedia > Camera**.



- 2 Point the camera lens at the subject and press **CAPTURE**.

Tip: Press up or down to zoom in or out. Press right or left to increase or decrease brightness.



- 3 Select **STORE > Store Only** to store picture. Select **STORE > Apply as Wallpaper** to set picture as wallpaper. Select **STORE > Apply as Phonebook Entry >** contact to assign picture to caller ID.

Tip: Press **DISCARD** to discard the picture.



- 4 To view pictures, from the home screen press and select **Multimedia > Pictures**. Scroll to the picture and press **VIEW**.





Use the Lantern

- 1 The lantern lets you to change your phone's idle display into a flashlight.

An incoming event such as a call, message, or alarm turns the lantern off immediately.

- 2 To turn on the lantern, press and select **Office Tools > Lantern**.

Press any key to turn off the lantern.



- 3 To select how long you want the lantern to remain lit, press and select **Settings > Initial Setup > Lantern**.

Select the desired time period.

