 


# HELLOMOTO

---

Introducing your new Motorola W510 GSM wireless phone. Here's a quick anatomy lesson.

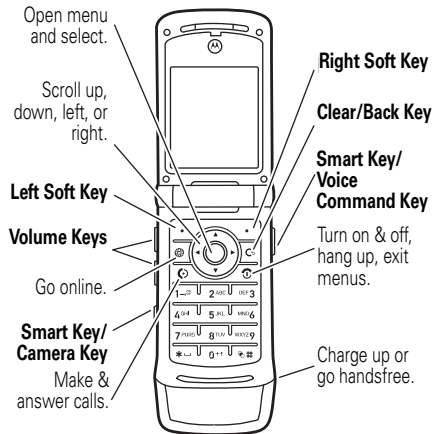

To change your home screen shortcuts and your main menu appearance, see page 57.

 
## Home Screen




① Press and hold the **Power Key**  for a few seconds or until the display lights up to turn on your phone.

② Press the **Centre Key**  to open the **Main Menu**

## Main Menu

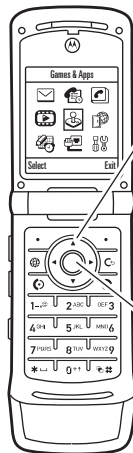

③ Press the **Navigation Key** **up, down, left, or right**  to highlight a menu feature.

④ Press the **Centre Key**  to select it.

[www.hellomoto.com](http://www.hellomoto.com)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, other product specifications and information contained in this user guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under licence. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft, Windows and Windows Me are registered trademarks of Microsoft Corporation; and Windows XP is a trademark of Microsoft Corporation.

© Motorola, Inc., 2007.

**Caution:** Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

## Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve certain exclusive rights for copyrighted software for Motorola and third-party software providers, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel or otherwise, any licence under the copyrights, patents or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product.

# contents

---

<b>menu map</b> . . . . .	<b>6</b>	<b>main attractions</b> . . . . .	<b>24</b>	handsfree speaker . . . . .	50
<b>Safety Information</b> . . . . .	<b>8</b>	Bluetooth™ wireless . . . . .	24	codes & passwords . . . . .	51
<b>FCC Notice To Users</b> . . . . .	<b>13</b>	digital audio player . . . . .	27	lock & unlock phone . . . . .	51
<b>Use and Care</b> . . . . .	<b>14</b>	photos . . . . .	29	lock & unlock external keys . . . . .	52
<b>EUnion Conformance</b> . . . . .	<b>15</b>	videos . . . . .	33	<b>customise</b> . . . . .	<b>53</b>
<b>Recycling Information</b> . . . . .	<b>16</b>	text messages . . . . .	35	talking phone . . . . .	53
<b>essentials</b> . . . . .	<b>17</b>	memory card . . . . .	36	ring style . . . . .	53
about this guide . . . . .	17	cable connections . . . . .	38	time & date . . . . .	54
SIM card . . . . .	18	phone updates . . . . .	40	wallpaper . . . . .	55
battery . . . . .	18	<b>basics</b> . . . . .	<b>41</b>	screen saver . . . . .	55
turn it on & off . . . . .	20	display . . . . .	41	themes . . . . .	56
make a call . . . . .	21	text entry . . . . .	44	display appearance . . . . .	56
answer a call . . . . .	21	volume . . . . .	47	shortcuts and main menu . . . . .	57
store a phone number . . . . .	21	navigation key . . . . .	48	answer options . . . . .	58
call a stored phone number . . . . .	22	smart key . . . . .	48		
your phone number . . . . .	23	voice commands . . . . .	48		
		external display . . . . .	50		

<b>calls</b> . . . . .	<b>59</b>	<b>SAR Data</b> . . . . .	<b>90</b>
turn off a call alert. . . . .	59	<b>WHO Information</b> . . . . .	<b>91</b>
delay answering . . . . .	59	<b>index</b> . . . . .	<b>92</b>
recent calls . . . . .	59		
redial. . . . .	61		
return a call. . . . .	61		
caller ID . . . . .	62		
emergency calls . . . . .	62		
voicemail . . . . .	62		
<b>other features</b> . . . . .	<b>64</b>		
advanced calling . . . . .	64		
phonebook . . . . .	68		
messages. . . . .	73		
instant messaging . . . . .	76		
personalising . . . . .	77		
call times & costs . . . . .	78		
handsfree . . . . .	79		
data calls . . . . .	80		
network . . . . .	82		
personal organiser . . . . .	82		
security. . . . .	85		
fun & games. . . . .	85		

# menu map

## main menu



### Messages

- New Message
- Message Inbox
- Outbox
- Drafts
- Voicemail
- Templates
- Email Msgs
- Info Services \*
- Browser Msgs



### Calls

- (press the  or  to scroll through the call lists)



### Phonebook



### Multimedia

- Themes
- Voice Record
- Camera
- Video Camera
- Pictures
- Sounds
- Videos



### Games & Apps



### WebAccess \*

- Browser
- Bookmarks
- Google \*
- Stored Pages
- History
- Go To Page
- Browser Setup
- Web Sessions \*



### Extras

- IM \*
- SIM Applications \*
- Calculator
- Calendar
- Alarm Clock
- Dialling Services
  - Fixed Dial \*
  - Voice Dial
  - Service Dial \*
  - Quick Dial
- Activation List \*
- World Clock



### Connection

- Bluetooth™ Link
- USB Settings
- MOTOSYNC™ \*



### Settings



- (see next page)

\* Operator specific optional features

This is the standard main menu layout.

**Your phone's menu may be different.**

**To change your home screen shortcuts and your main menu appearance, see page 57.**

**Tip:** Press  to exit the current menu, or  to exit all menus.

## settings menu



### Personalise

- Home Screen
- Headlines \*
- Main Menu
- Voice Dial Setup
- Skin
- Greeting
- Wallpaper
- Screen Saver
- Sound Settings



### Ring Styles

- Style
- *(style)* Detail



### Call Divert \*

- Voice Calls
- Fax Calls
- Data Calls
- Cancel All
- Divert Status



### In-Call Setup

- In-Call Timer
- Call Cost Setup \*
- My Caller ID
- Talk and Fax
- Answer Options
- Call Waiting



### Initial Setup

- Time and Date
- Speed Dial
- Auto Redial
- Display Timeout
- Backlight
- TTY Setup \*
- Scroll
- Text Marquee
- Language
- Brightness
- DTMF
- Master Reset
- Master Clear



### Phone Status

- My Tel. Numbers
- Credit Info/Available \*
- Active Line \*
- Battery Meter
- Download Location
- Storage Devices
- Software Update \*
- Other Information



### Headset

- Auto Answer
- Voice Dial

\* Operator specific optional features



### Car Settings

- Auto Answer
- Auto Handsfree
- Power-Off Delay
- Charger Time



### Airplane Mode

- Airplane Mode
- Prompt at Power Up



### Network

- New Network
- Network Setup
- Available Networks
- My Network List \*
- Service Tone \*
- Network Jingle \*
- Call Drop Tone



### Security

- Phone Lock
- External Key Lock
- Lock Application
- Fixed Dial \*
- Restrict Calls \*
- Call Barring \*
- SIM PIN
- New Passwords
- Certificate Mgmt \*



### Java™ Settings

- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Priority \*

# Safety and General Information

---

**This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.**

## Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

## Operational Precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

---

\* The information provided in this document supersedes the general safety information in user's guides published prior to 1 May 2006.

## External Antenna Care

If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of unauthorised antennas, modifications or attachments could damage the mobile device and/or may result in your device not complying with local regulatory requirements in your country.

DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

## Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimetres (1 inch) from your body when transmitting.

When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimetres (1 inch) from your body.



Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our website at: [www.motorola.com](http://www.motorola.com).

## RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

### Follow These Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so. These locations include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

## Pacemakers

If you have a pacemaker, consult your doctor before using this device.

Persons with pacemakers should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimetres (8 inches) from your pacemaker when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the pacemaker to minimise the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

## Hearing Aids

Some mobile devices may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or doctor to discuss alternatives.

## Other Medical Devices

If you use any other personal medical device, consult your doctor or the manufacturer of your device to determine if it is adequately shielded from RF energy.

## Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

- Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue a call if you cannot concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving practices can be found in the "Smart Practices While Driving" section at the end of this guide and/or at the Motorola Web site: [www.motorola.com/callsmart](http://www.motorola.com/callsmart).

## Operational Warnings

Obey all posted signs when using mobile devices in public areas, such as health care facilities or blasting areas.

### Automobile Air Bags

Do not place a mobile device in the air bag deployment area.

### Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often but not always posted, and can include fuelling areas such as below decks on boats, fuel or chemical transfer or storage facilities, or areas

where the air contains chemicals or particles, such as grain, dust, or metal powders.

When you are in such an area, turn off your mobile device and do not remove, install or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

## Damaged Products

If your mobile device or battery has been submerged in water, punctured or subjected to a severe fall, do not use it until you take it to a Motorola Authorised Service Centre. Do not attempt to dry it with an external heat source, such as a microwave oven.





 


## Batteries and Chargers

If jewellery, keys, beaded chains or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse or other container with metal objects. **Use only Motorola Original batteries and chargers.**

**Caution:** To avoid risk of personal injury, do not dispose of your battery in a fire.

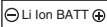

Your battery, charger or mobile device may contain symbols that are defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.
	Do not let your battery, charger or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

## Choking Hazards

Your mobile device or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your mobile device and its accessories away from small children.

## Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service centre.

## Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights

on in the room, take a 15-minute break every hour and stop use if you are very tired.

## Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

## Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a doctor.

# FCC Notice To Users

---

**The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label.**

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

If your mobile device or accessory has a USB connector, or is otherwise considered a computer peripheral device whereby it can be connected to a computer for purposes of transferring data, then it is considered a Class B device and the following statement applies:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# Use and Care

---

To care for your Motorola phone, please keep it away from:



## liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat or other moisture.



## dust and dirt

Don't expose your phone to dust, dirt, sand, food or other inappropriate materials.



## extreme heat or cold

Avoid temperatures below -10°C/14°F or above 45°C/113°F.



## cleaning solutions

To clean your phone, use only a dry soft cloth. Do not use alcohol or other cleaning solutions.



## microwaves

Don't try to dry your phone in a microwave oven.



## the ground

Don't drop your phone.

 
# European Union Directives Conformance Statement

---



Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

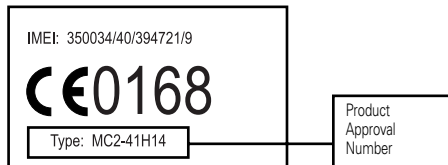

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at [www.motorola.com/rtte](http://www.motorola.com/rtte). To find your DoC, enter the Product Approval Number from your product's label in the "Search" bar on the Web site.

# Caring for the Environment by Recycling

---



This symbol on a Motorola product means the product should not be disposed of with household waste.

## Recycling Mobile Phones and Accessories

---

Please do not dispose of mobile telephones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems have been set up to handle waste electrical and electronic items. Please contact your regional authorities for more details. If no suitable scheme exists, you may return unwanted mobile telephones and electrical accessories to any Motorola Approved Service Centre in your region.



# essentials







---

## about this guide

This guide shows how to open a menu feature as follows:

**Find it:**  >  **Messages** > **New Message**

This means that, from the home screen:

- 1 Press the *centre key*  to open the menu.
- 2 Press the *navigation key*  to scroll to  **Messages**, and press the *centre key*  to select it.
- 3 Press the *navigation key*  to scroll to **New Message**, and press the *centre key*  to select it.

**Note:** If your phone supports **MOTOCAST**, you can access the main menu by pressing the right soft key main menu option instead.

### symbols



This means a feature is network, SIM card or subscription dependent and may not be available in all areas. Contact your service provider for more information.



This means a feature requires an optional accessory.

 
## SIM card

**Caution:** Do not bend or scratch your SIM card. Keep it away from static electricity, water and dirt.

Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and phonebook entries.


To insert and use a **memory card**, see page 36.

**Turn off your phone and remove your battery before you install or remove a SIM card.**

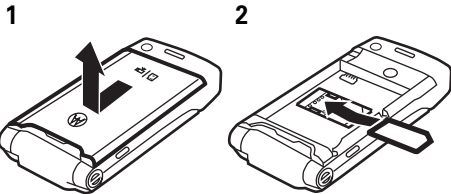


## battery
 
### battery installation

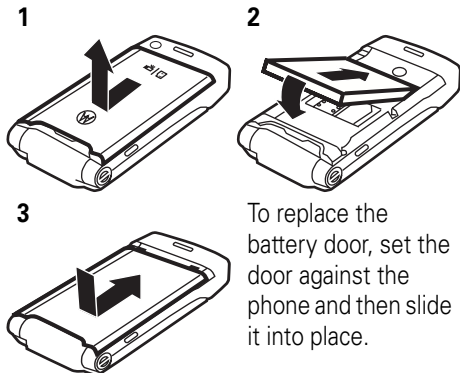

## battery charging

 New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. Your phone might take several seconds to start charging the battery. When finished, your display shows **Charge Complete**.

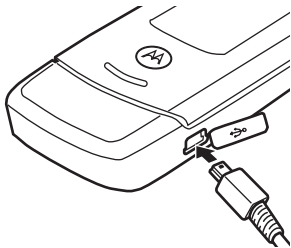

**Tip:** Relax, you cannot overcharge your battery. It will perform best after you fully charge and discharge it a few times.

You can charge your battery by connecting a **cable** from your phone's mini-USB port to a USB port on a computer. Both your phone and the computer must be turned on



and your computer must have the correct software drivers installed. Cables and software drivers are available in Motorola Original data kits, sold separately.

If your battery is completely dead and you plug in a **cable** to charge it, your keypad and display might not light up. Your battery will still charge.

## battery tips

Battery life depends on the network, signal strength, temperature, features and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.



- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.  
When storing your battery, keep it uncharged in a cool, dark, dry place.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.




Contact your local recycling centre for proper battery disposal.

**Warning:** Never dispose of batteries in a fire because they may explode.


Before using your phone, read the battery safety information in the "Safety and General Information" section included in this guide.

## turn it on & off

**Caution:** Some phones ask for your SIM card PIN code when you turn them on. If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled and your display shows **SIM Blocked**. Contact your service provider.



**To turn on your phone,** press and hold  for a few seconds or until the keypad or display lights up.

If prompted, enter your eight-digit SIM card PIN code and/or four-digit unlock code (for more about codes, see page 51).

**To turn off your phone,** press and hold  for a few seconds.





## make a call



**To make a call,** enter a phone number and press . **To "hang up",** close the flip or press .

To use voice commands for calling, see page 48.

## answer a call

**To answer a call** when your phone rings and/or vibrates, just open the flip or press .

**To "hang up",** close the flip or press .

**Note:** Your phone cannot receive data over an EDGE network while it is playing videos or some sound files. The EDGE  status indicator appears at the top of your display when you can receive data over an EDGE network. 


## store a phone number

You can store a phone number in your **Phonebook**:

**Find it:**  >  **Phonebook**, then press **Options** > **Create New** > **Phone Contact** or **SIM Contact**

**Note:** You can store new contacts in your **phone's memory** or on your **SIM card**.

Contacts on the SIM card only include a **Name** and **Number**.

- 1 Enter a name and other details for the phone number. To select a highlighted item, press the *centre key* .
- 2 Press **Done** to store the number.

To **edit** or **delete** a **Phonebook** entry, see page 69.

To store an **email** address from the home screen, follow the steps above and enter the new contact's name and **Email** information.


**Shortcut:** Enter a phone number in the home screen, then press **Store** to create a contact. To choose whether your phone stores these contacts in your phone's memory or on your SIM card, go back to the home screen and press  >  **Phonebook**, then press **Options** > **Setup** > **Default Storage** > **Phone** or **SIM Card**.



## call a stored phone number

**Find it:**  >  **Phonebook**

- 1 Scroll to the phonebook entry.


 
**Shortcut:** In the phonebook, press keypad keys to enter the first letters of an entry you want.

- 2 Press  to call the entry.



**Note:** You can show contacts stored in your phone's memory or on your SIM card. To choose which contacts you see, press  >  **Phonebook**, then press **Options** > **View**. You can select **Phone & SIM Card**, **SIM Card**, or **Phone Contacts**.

To use voice commands for calling, see page 48.

# your phone number

From the home screen, press *the clear key*  then  to see your number.

**Tip:** Want to see your phone number while you are on a call? Press **Options > My Tel. Number**.

You can edit the name and phone number stored on your SIM card. From the home screen, press  , select an entry, press **View**, press **Options**, and select **Edit**. If you do not know your phone number, contact your service provider.



# main attractions

---

You can do much more with your phone than make and receive calls!

## Bluetooth™ wireless

Your phone supports Bluetooth wireless connections. You can connect your phone with a Bluetooth headset or car kit to make handsfree calls. You can also connect your phone to a phone or computer that supports Bluetooth connections to exchange files.

**Note:** The use of wireless phones while driving may cause distraction. Discontinue a call if you cannot concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the

laws and regulations on the use of these products.

**For maximum Bluetooth security**, you should always connect Bluetooth devices in a safe, private environment.

## use a headset or handsfree car kit


**Before you try to connect your phone with a handsfree device**, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the user guide for the device). You can connect your phone to only one device at a time.


**Find it:**  >  Connection > Bluetooth Link > [Add Audio Device]





Your phone lists the devices it finds within range.

- 1 Scroll to a device in the list and press the *centre key* .
- 2 Press **Yes** or **Send Contact** to connect to the device.
- 3 If necessary, enter the device passkey (such as **0000**) and press **Send Contact**.

When your phone is connected, the Bluetooth indicator  appears in the home screen.

**Shortcut:** When your phone's Bluetooth power is on, your phone can automatically connect to a handsfree device you have used before. Just turn on the device or move it near the phone. If the device does not connect, turn it off and back on.

**Tip:** Want to know more about your headset or car kit? For specific information about a device, refer to the instructions that came with it.

## copy files to another device


You can use a Bluetooth connection to copy a media file, phonebook entry, calendar event or web shortcut from your phone to a computer or other device.




**Note:** You cannot copy some copyrighted objects.

- 1 On your phone, scroll to the object that you want to copy to the other device.
- 2 Press **Options**, then select:
  - **Manage > Copy** for media files.
  - **Send Contact** for phonebook entries.
  - **Send** for calendar events.
- 3 Select a recognised device name, or **[Look for devices]** to search for the device where you want to copy the file.

**If your phone could not copy the file to the other device**, make sure the device is **on** and **ready** in *discoverable* mode (see the user guide for the device). Also, make sure the device is not busy with another similar Bluetooth connection.

**Note:** Once you connect your phone to a Bluetooth device, that device can start similar Bluetooth connections with your phone. Your display shows the Bluetooth indicator  at the top when there is a Bluetooth connection.

## receive files from another device

If you do not see the Bluetooth indicator  at the top of your phone display, turn on your phone's Bluetooth feature by pressing

 >  **Connection** > **Bluetooth Link** > **Setup** > **Power** > **On**.



- 1 Place your phone near the device, and send the file from the device.


If your phone and the sending device do not recognise each other, place your phone in discoverable mode so the sending device can locate it: press

 >  **Connection** > **Bluetooth Link+** > **Find Me**.

- 2 Press **Accept** on your phone to accept the file from the other device.

Your phone notifies you when file transfer is complete. If necessary, press **Store** to save the file.

## send files to a printer

You can use a Bluetooth connection to send a picture, message, phonebook entry or calendar event from your phone to a printer. 

**Note:** You cannot print message **Templates** or a phonebook **Mailing List**.


- 1 On your phone, scroll to the object that you want to print, then press **Options > Print**.

**Tip:** If you see it, you can print it. After you capture a picture in the camera, you can press **Options** and select **Print**.

- 2 If available, choose additional objects or print options.
- 3 Select a recognised printer name listed in the **Printers** menu, or **[Look for devices]** to search for the printer where you want to print the object.



**Note:** If you see **Service not supported** when you try to print, select **Options > Manage > Copy > Bluetooth** instead. Always use this option to print 4x6 photos.

## digital audio player

Your phone can play and store MP3 and AAC song files. You can use a removable memory card with your phone to store more songs (see page 36). 




**Note:** You cannot use the audio player with a USB cable connected to your phone.





**Find it:**  >  **Games & Apps > Digital Audio Player**

Press  up or down to scroll to an option and press the *centre key*  to select it:

options	
<b>Playlists</b>	Create or play a playlist (see page 29).



options	
<b>Songs</b>	Show and play individual songs. <b>Note:</b> All of your phone's songs appear in the <b>Songs</b> list. Some songs do not have any <b>Artist</b> , <b>Album</b> or <b>Genre</b> information stored, so they do not appear in those lists.
<b>Albums</b>	Select an album to show or play its songs.
<b>Artists</b>	Select an artist to show or play their songs.
<b>Genres</b>	Select a type of music to show or play songs.
<b>About</b>	Show audio player version information.

When you select a song, press the *centre key*  to play  or pause , press

 left for previous  or press  right for next .

**Note:** To change repeat , shuffle  and other settings, press **Options**.

Use the volume keys on the left side of your phone to control volume.

Your phone also has a **Sounds** player that can play songs and ringtones, but it cannot store **Artists** or other song information. To use the **Sounds** player, press  >  **Multimedia** > **Sounds** and select the file you want to play.

## load music files


To download songs to your phone, see page 86. To copy files between your phone and a computer, see page 39.



**Note:** Your phone may not play audio files that have a bit rate higher than 128 kbps. If you try to download or play one of these files, your phone might show you an error or ask you to

delete the file. Metadata information is **not** supported for **MP4** or **WMA** formatted files.


## create a playlist

**Find it:**  >  Games & Apps > Digital Audio Player > Playlists > [New Playlist]

- 1 Enter a name for the playlist.
- 2 Press **Done**. Your display shows a list of song titles.
- 3 Press the *centre key*  to select songs for the playlist.
- 4 Press **Done** to store the list. Your display shows the songs in the playlist.

To reorder the songs in this list: Press > **Options** > **Reorder Playlist**. Press the *centre key*  to select a song, then press  to move it up or down in the order. When you have it in the right spot, press **Done**.

- 5 Press **Done** to store the list.

To hear your playlist, highlight it under **Playlists** and press play .

 
## photos


**Note:** Java games or applications will close and end when you open the camera.

### take & store or send photos

Your camera lens is on the back of your phone when the phone is open. **To get the clearest pictures, wipe the lens clean with a dry cloth before you take a picture.**

- 1 Press  >  **Multimedia** > **Camera** to see the camera viewfinder.

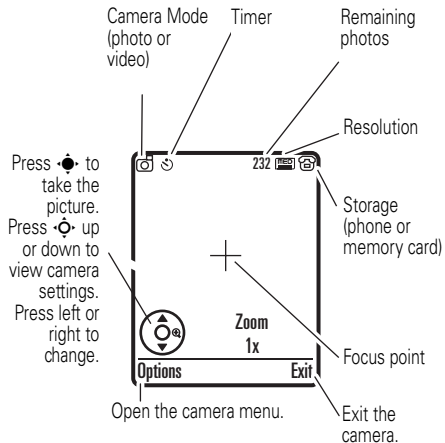


- 2 Press the *centre key*  to take the photo in the viewfinder. You can:

- Press **Options** to store the photo.

If you press **Options** > **Print**, you can print the picture over a Bluetooth™ connection (see page 26).


- Press **Send** to send the photo in a message.

Your phone might tell you that this is a **Multimedia Msg**, since it has a picture in it. Some other phones or networks do not support picture messages. Press **Yes** to send the message.

- Press  to discard the photo and return to the active viewfinder.

**Note:** Adjusting the exposure affects the brightness of both the viewfinder display and the captured photo.

Before you capture the photo, you can press **Options** to open the camera menu:

options	
<b>Go to Pictures</b>	See stored pictures and photos.
<b>Go to Video Mode</b>	Switch to the video camera.
<b>Auto-Timed Capture</b>	Set a timer for the camera to take a photo.
<b>Camera Setup</b>	Open the setup menu to adjust photo settings.
<b>Switch storage device</b>	Choose to store pictures on your phone or a memory card. 

## options

 
### Free Space

See how much memory remains.

**Note:** Your service provider may store some content in user memory before you receive the phone.

## self portrait

If you close your phone while the viewfinder is active, the external display shows the image. Press the

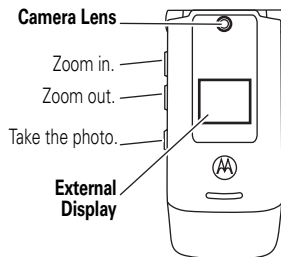




volume keys to zoom or press the *smart key* to capture and store the image.

When your phone is closed, it automatically stores the photos you take. To change where it stores the photos, see **Switch storage device** on page 31

## see stored photos




**Find it:**  >  **Multimedia**  
> **Pictures** > *picture name*



- To **delete** a picture, scroll to it in the list and press **Options** > **Manage** > **Delete**.
- To **copy or move** a picture from your memory card () to your phone memory () scroll to it in the list and press **Options** > **Manage** > **Copy** or **Move** > **Memory Card**. You cannot copy or move some copyrighted files. 

**Tip:** After you open a picture, you can press **Options** > **View Full Screen** to see the picture at the

full display size (press any key to return to the regular view).

## send a stored photo in a message

**Find it:**  >  **Messages** > **New Message**  
> **New Message**, then press **Options** > **Insert**  
> **Picture** 

- 1 Scroll to the picture you want and press **Insert**.
- 2 Enter the message text and press **Send To**.
- 3 Scroll to a recipient address and press the *centre key* .
- 4 Press **Send** to send the message. 

Your phone might tell you that this is a **Multimedia Msg**, since it has a picture in it. Some other phones or networks do not support picture messages. Press **Yes** to send the message.



# videos

**Tip:** Did you know your phone allows video streaming? If you go to a website that has videos, your phone can play the videos in your browser without downloading them onto your phone.

 


**Note:** Java games or applications will close and end when you open the camera.

## record video clips

Your camera lens is on the back of your phone, when your phone is open. **To get the clearest videos, wipe the lens clean with a dry cloth before you capture a video.**

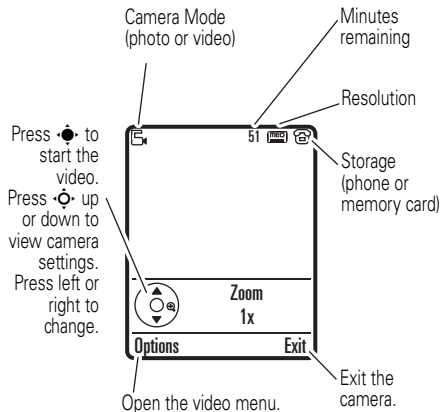

Press  >  **Multimedia** > **Video Camera** to see the video viewfinder.



**Note:** The number of minutes remaining is an estimate.

 
**Tip:** If you want to send your video in a message, the video length must be set to **MMS**. To set length, press

**Options** > **Video Camera Setup** > **Video length**.

- 1 Press the *centre key*  to start recording the video in the viewfinder.
- 2 Press **Stop** to stop recording the video. You can:
  - Press **Options** to preview, store or discard the video.
  - Press **Send**, then select **Send in Message** to send the video in a message. 


 

Enter text and press **Send To**, then scroll to a recipient address and press the *centre key*  to select it. Press **Options** to enter a new number. To send the message, press **Send**.

**Note:** Some other phones or networks do not support messages with videos.

- Press  to discard the video and return to the active viewfinder.

## play stored video clips

**Find it:**  >  **Multimedia** > **Videos**  
> *video name*

- To **delete** a file, scroll to it in the list and press **Options** > **Manage** > **Delete**.
- To **copy or move** a file from your memory card  to your phone memory , scroll to it in the list and press **Options** > **Manage** > **Copy or Move** > **Memory Card**. You cannot copy or move some copyrighted files. 

**Tip:** While a video is playing, you can press **Options** > **Play Full Screen** to see the video at the full display size (press any key to return to the regular view).

**Note:** There may be some default help videos already stored on your handsets depending on your service provider.

## text messages

To create a group mailing list, see page 71.  
For more message features, see page 73.

### send a text message

A text message can contain text and pictures, sounds or other media objects. You can add multiple pages to a message and you can put text and media objects on each page. You can send a message to other compatible phones or to email addresses.




**Find it:**  >  Messages > New Message > New Message

- 1 Press keypad keys to enter text on the page (for details about text entry, see page 44).

To insert a **picture, sound or other object** on the page, press **Options > Insert**. Select the file type and the file.

To insert **another page** in the message, enter text or objects on the current page and press **Options > Insert > New Page**. You can enter more text and objects on the new page.

- 2 When you finish the message, press **Send To**.
- 3 Scroll to a recipient and press the *centre key* . Repeat to add other recipients.

To enter a **new** number or email address, press **Options** and select **Enter Number** or **Enter Email**.

- 4 Before you send a message, you can press **Options** to choose **Save to Drafts**, **Cancel Message** or open **Sending Options** (such as message **Subject** or **cc** addresses).

5 To **send** the message, press **Send**.

Your phone might tell you that this is a **Multimedia Msg**, if it has multiple pages or media objects in it. Some other phones or networks do not support multimedia messages. Press **Yes** to send the message.

## receive a text message

When you receive a message, your phone plays an alert and the display shows **New Message** with a message indicator, such as . Press **Read** to open the message.



To see all of your text messages:

**Find it:**  >  **Messages** > **Message Inbox**

If a multimedia message contains media objects:

- Photos, pictures and animations show as you read the message.

- A sound file plays when its slide shows. Use the volume keys to adjust the sound volume.
- Attached files are added to the end of the message. To open an attachment, scroll to the file indicator/file name and press **View** (images), **Play** (sounds), or **Open** (phonebook vCards, calendar vCalendar entries, or unknown file types).

## memory card

You can use a removable memory card with your phone to store and retrieve multimedia objects (such as photos and sounds).

 


Your phone supports optional microSD memory cards with up to 2 GB capacity (greater than 1 GB capacity is guaranteed only for SanDisk microSD cards).

**Note:** If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy or change copyrighted files.

## install or remove a memory card

- 1 Remove the battery door.
- 2 Press the memory card into its slot until it clicks into place.
- 3 Set the battery door against the phone and then slide it into place.

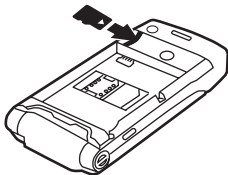

**To remove the memory card**, slide it back out.

Do not remove your memory card while your phone is using it or writing files on it.



## see and change memory card information

 To **see the files** stored on your memory card and on your phone, open a file list, such as **Pictures** (see page 32). Icons can indicate if a file is stored in your phone memory (📁) or on your memory card (📁). To copy or move a file from your phone to your memory card, highlight it in the list and press **Options > Manage > Copy** or **Move > Memory Card**. You cannot copy or move some copyrighted files.

To **copy files** between your memory card and a computer, you can use a cable connection (see page 39) or a Bluetooth™ connection (see page 25).

To see your **memory card name, available memory** and other information about the card:

**Find it:**  >  **Settings** > **Phone Status** > **Storage Devices**


- 1 Press  to scroll to the memory card that is installed.
- 2 Press the *centre key*  to see the memory card information. Your phone stores any content that you add, like ringtones or games, in *user memory*. Your service provider may store some content in user memory before you receive the phone.

**or**

 Press **Options** to see the **Storage Devices** menu, which lets you **Format** or **Rename** the memory card.

## cable connections

 Your phone has a mini-USB port so you can connect it to a computer to transfer data.

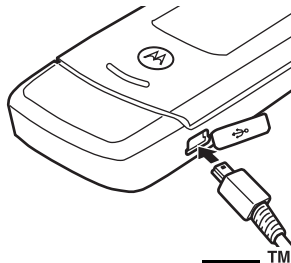

**Note:** Motorola

Original USB data cables and supporting software are sold separately. Check your computer or hand-held device to determine the type of cable you need. To **transfer data** between your phone and computer, you might need to install the software included with the Motorola Original data kit. See the data kit user guide for more information. To make **data calls** through a connected computer, see page 80.



## connect your memory card to a computer

You can use a cable connection to access your phone's memory card with a PC.

**Note:** When your phone is connected to a computer, you can only access the memory card through the computer.

### On your phone:

**Disconnect the cable** from your phone, if it is connected, then press  >  **Connection** > **USB Settings** > **Default Connection** > **Memory Card**.

This directs the USB connection to your memory card.

**Connect the cable** to your phone and to an available USB port on your computer. Then follow these steps:

### On your computer:

- 1 Open your "My Computer" window where your phone's memory card appears as a "Removable Disk" icon.
- 2 Click on the "Removable Disk" icon to access the files on your phone's memory card.
- 3 To store the desired files onto the memory card, drag and drop them as follows:  
**audio files:** > mobile > audio  
**screen savers:** > mobile > picture  
**wallpapers:** > mobile > picture  
**video clips:** > mobile > video
- 4 When you finish, disconnect your phone by selecting the "Safely Remove Hardware" icon in the system tray at the bottom of your computer screen. Then disconnect the "USB Mass Storage Device".

- 5 Disconnect the cable from your phone and computer.

### On your phone:

To return to **Data** as your USB default connection, press  >  **Connection**  
> **USB Settings** > **Default Connection** > **Data connection**.

## phone updates

Sometimes we think of ways to make your phone's software faster or more efficient after you have purchased your phone. You can find out if your phone can be updated at: <http://hellomoto.com/update>



**Note:** Software updates do not affect your phonebook entries or other personal entries. If you receive a software update but choose to install it later, see page 82.



 
# basics

---


See page 1 for a basic phone diagram.


## display


The *home screen* appears when you turn on the phone.

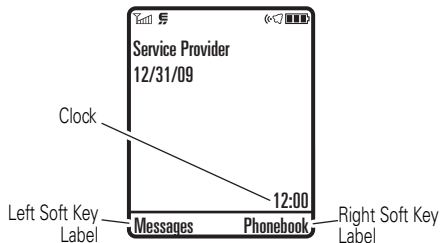


**Note:** Your home screen might look different from the one shown, depending on your service provider.



To dial a number from the home screen, press number keys and .

Press  up, down, left or right in the home screen to open basic menu features.

 Press the *centre key*  to open the menu. *Soft key labels* show the current soft key functions. For soft key locations, see page 1.

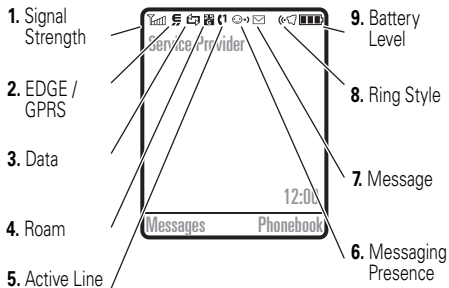


Status indicators can show at the top of the home screen:



 - 1 Signal Strength Indicator** — Vertical bars show the strength of the network connection. You cannot make or receive calls when  or  appears.
- 2 EDGE/GPRS Indicator** — Shows when your phone is using a high-speed *Enhanced Data for GSM Evolution* (EDGE) or *General Packet Radio*








*Service* (GPRS) network connection. Indicators can include:

 -  GPRS available
-  EDGE
-  GPRS active



- 3 Data Indicator** — Shows connection status.

 
 

 



-  secure/unsecure packet data transfer
-  secure/unsecure application connection
-  secure/unsecure *Circuit Switch Data* (CSD) call
-  Bluetooth™ connection is active


- 4 Roam Indicator** — Shows  when your phone is seeking or using a network outside your home network.




- 5 Active Line Indicator** — Shows  to indicate an active call, or  to indicate when call diverting is on. Indicators for dual-line-enabled SIM cards can include:


 line 1 active	 line 1 active, call divert on
 line 2 active	 line 2 active, call divert on





- 6 Messaging Presence/Reminder Indicator** — If you set a reminder for a calendar event,  can appear here.

When Instant Messaging (IM) is active, indicators can include: 

 IM active	 invisible to IM
 busy	 offline

When a Java™ application is active,  can show here.

- 7 Message Indicator** — Shows when you receive a new message.  Indicators can include:

 text message	 voice message
 voice & text message	
 IM message	

- 8 Ring Style Indicator** — Shows the ring style setting.


 loud ring	 vibrate & ring
 soft ring	 vibrate then ring
 vibrate	 silent

- 9 Battery Level Indicator** — Vertical bars show the battery charge level. Recharge the battery when your display shows **Low Battery**.

# text entry

 Some features let you enter text.

For indicator descriptions see following section.




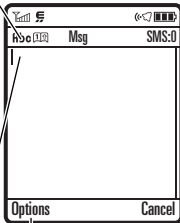


Flashing cursor indicates insertion point.

Press the **Options** key to open the submenu.

Press the **Cancel** key to exit without making changes.

    Press **#** in a text entry view to select an entry mode:

entry modes	
 or <b>1</b>	Your <b>Primary</b> text entry mode can be set to any iTAP™  or tap <b>1</b> mode.
 or <b>2</b>	Your <b>Secondary</b> text entry mode can be set to any iTAP  or tap <b>2</b> mode or set to <b>None</b> if you do not want a secondary entry mode.
<b>123</b>	<b>Numeric</b> mode enters numbers only.
<b>@%</b>	<b>Symbol</b> mode enters symbols only.

To set your primary and secondary text entry modes, press **Options > Text Setup** in a text entry view and select **Primary Text** or **Secondary Text**.

## iTAP™ and tap mode tips

- Press **0** in a text entry view to change text case to all capital letters

(**ABC**), no capitals (**abc**) or next letter capital (**Abc**).

- To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP or Tap mode.
- Press **[1]** to enter punctuation or other characters.
- Press **[⌂]** to move the flashing cursor to enter or edit message text.
- Press **[C]** to delete the character to the left of the cursor. Hold **[C]** to delete the word.
- To cancel your message, press **[⏏]**.

 
## iTAP™ mode

Press **[#]** in a text entry view to switch to iTAP mode. If you do not see **[1]** or **[2]**,

press **Options > Text Setup** to set iTAP mode as your primary or secondary text entry mode.

iTAP mode lets you enter words using one key stroke per letter. The iTAP software combines your key strokes into common words and predicts each word as you enter it.

For example, if you press **[7] [7] [6] [4]**, your display shows:

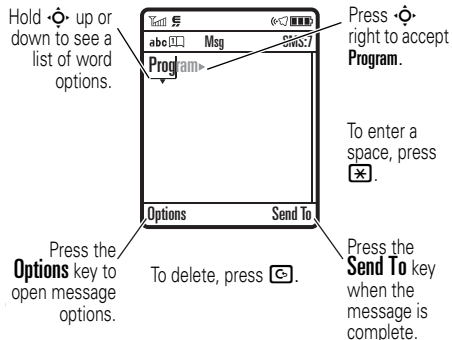

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining letters.


**Tip:** Do not worry if you forget how iTAP works. In a text entry display, you can press **Options** > **Text Setup** > **Text Tutorial** to see an explanation.

## tap and tap extended modes

 Press **#** in a text entry view to switch to tap mode. If you do not see **Abc 1** or **Abc 2**, press **Options** > **Text Setup** to set tap mode as your primary or secondary text entry mode.

To enter text in **Tap** mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter. The **Tap Extended** mode works the same way, but includes more special characters and symbols.

For example, if you press **7** one time, your display shows:

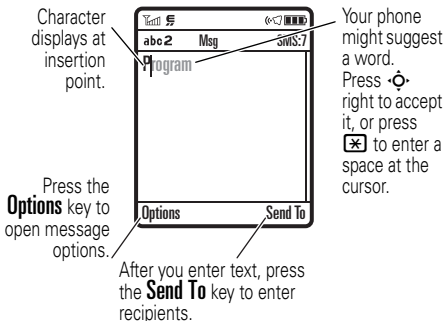


The first character of every sentence is capitalised. If necessary, press **⬇** down to change the character to lowercase before the cursor moves to the next position.

## numeric mode

Press **#** in a text entry view until you see **123**. Press the number keys to enter the numbers you want.

**Shortcut:** You can press and hold a number key to temporarily switch to numeric mode from iTAP™ or Tap modes. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP mode.

 
## symbol mode

Press **#** in a text entry view until your display shows a list of symbols. Scroll to the symbol you want, then press the *centre key* .

## volume



Press the volume keys to:

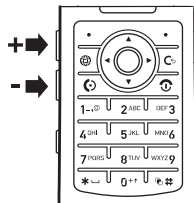
- turn off an incoming call alert
- change the earpiece volume during calls
- change the ringer volume from the home screen





**Tip:** Sometimes silence really is golden. That is why you can quickly set your ringer to **Vibrate** or **Silent** by holding the down volume key while you are in the home screen. You can also switch to **Silent** or back by holding **#** in the home screen.

## navigation key

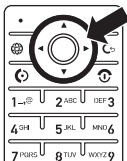 Press the *navigation key*  up, down, left or right to scroll to items in the display. When you scroll to an item, press the *centre key*  to select it.



## smart key

The smart key gives you another way to do things. For example, when you scroll to a menu item, you can press the smart key to select it (instead of pressing the *centre key* ). The smart key usually does the same thing as pressing the *centre key* . To find the smart key, see page 1. To change what the smart key does in the home screen, see page 57.

## voice commands

**Note:** This option is available only when the phone language supports voice commands. Voice names will be used when voice commands are not supported.

You can use voice commands to tell your phone what to do.

- 1 Press and release the **voice key** on the right hand side of your phone.  
Your phone prompts you to say a command.
- 2 Say a voice command from the list (replace *555-1212* with a phone number and replace *John Smith* with a phonebook entry name):

voice commands
"Call 555-1212"
"Call John Smith"



<b>voice commands</b>
" <b>Send Email</b> <i>John Smith</i> "
" <b>Send Voice Note</b> <i>555-1212</i> "
" <b>Send Voice Note</b> <i>John Smith</i> "
" <b>Send Message</b> <i>555-1212</i> "
" <b>Send Message</b> <i>John Smith</i> "
" <b>Lookup</b> <i>John Smith</i> "
" <b>Go to Voicemail</b> "
" <b>Go to Camera</b> "
" <b>Go to Redial</b> "
" <b>Go to Received Calls</b> "
" <b>Check Status</b> " Your phone tells you its battery strength, network signal strength and whether its coverage is normal or roaming.
" <b>Check Battery</b> "
" <b>Check Signal</b> "

<b>voice commands</b>
" <b>Check Network</b> "
" <b>Check My Phone Number</b> "
" <b>Turn Prompts Off</b> " Your phone turns off the sound on your voice command prompts (such as "Say a command"). To turn prompts on again, say " <b>Turn Prompts On</b> ". Your phone confirms by saying "Voice prompts on".

**Tip:**

- You can say a phonebook entry's name and number type together. For example, say "Call John Smith mobile" to call the mobile number stored for John Smith.
- Speak numbers at a normal speed and volume, pronouncing each digit distinctly. Do not pause between digits.

- For voice command help, press the **voice key**, then press **Help**.

## voice command setup

You can change voice command settings.

- 1 Press and release the **voice key** on the left side of the phone.
- 2 Press **Settings**.
- 3 Choose one of the settings below:

voice command settings	
<b>Choice Lists</b>	Turn choice lists on or off. Your phone uses choice lists to confirm voice commands by asking "Did you say..." followed by a choice list item.
<b>Sensitivity</b>	Make your phone more or less likely to reject a voice command.

voice command settings	
<b>Digit Dialling</b>	Train your phone to recognise how you say digits.
<b>Sound</b>	Adjust the sound settings for your voice commands.
<b>About</b>	See voice command software information.

## external display

When your phone is closed, the external display shows the time, date, status indicators and notifications for incoming calls and other events. For a list of phone status indicators, see page 42.

## handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

To turn the handsfree speaker on during a call, press **Speaker** (if available), or **Options > Spkrphone On**. Your display shows **Spkrphone On** until you turn it off or end the call.

**Note:** The handsfree speaker will not work when your phone is connected to a handsfree car kit or headset.

## codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider did not change these codes, you should change them:

**Find it:**  >  **Settings > Security > New Passwords**

You can also change your **SIM PIN** password.

**If you forget your unlock code:** At the **Enter Unlock Code** prompt, try entering 1234 or the

last four digits of your phone number. If that does not work, press  and enter your six-digit security code instead.

**If you forget other codes:** If you forget your security code, SIM PIN code, PIN2 code or call barring password, contact your service provider.

## lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the four-digit unlock code.

To **manually lock** your phone:  
Press  >  **Settings > Security > Phone Lock > Lock Now**.

To **automatically lock** your phone whenever you turn it off: Press  >  **Settings > Security > Phone Lock > Automatic Lock > On**.

**Note:** You can make emergency calls on a locked phone (see page 62). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer.**

## lock & unlock external keys

When your phone is closed, your external keys (such as the smart key and volume keys) lock to prevent accidental key presses.

**Note:** Your phone will not lock external keys if an action is in process. For instance, if you close your phone and press a volume key right away, your phone shows your ring style profile. Your external keys remain unlocked until you close the ring style profile.

To change how long your phone waits before it automatically locks your external keys:

⋮ > ⚙️ **Settings** > **Security** > **External Key Lock**  
> **Timer** > *a time interval* or **Off**

**Note:** If you choose **Off**, you can still manually lock your external keys by holding the smart key.

# customise

---

## talking phone

When you receive calls, your phone can "speak" the caller's number or name rather than ringing. Also, your phone can read names to you when you scroll through your **Phonebook** and can speak digits to you as you enter them to make a call. To turn these features on or off:

**Find it:**  >  **Settings** > **Personalise**  
> **Sound Settings** > **Talking Phone**

Your phone speaks the name for any caller stored in your **Phonebook** or speaks the digits for numbers not stored in your **Phonebook**.

**Note:** If you turn on **Talking Phone**, your phone **does not use** your **Ring Style** for incoming calls.

## ring style

**Note:** If you turn on **Talking Phone**, your phone **does not use** your **Ring Style** for incoming calls.

Each ring style profile uses a different set of sounds or vibrations for incoming calls and other events. Here are the profiles you can choose:

 **Loud**

 **Vibe & Ring**

 **Soft**

 **Vibe then Ring**

 **Vibrate**

 **Silent**

The ring style profile's indicator appears at the top of your home screen. To choose your profile:

**Find it:**  >  **Settings** > **Ring Styles**  
> **Style:** *style name*

**Shortcut:** To change your ring style profile from the **home screen**, just press the volume keys up or down. With your **phone closed**, press a volume key to see your ring style profile, press the smart key to change it, then press a volume key to store the change.


## change alerts in a ring style

You can change the alerts for incoming calls and other events. Your changes are saved in the current ring style profile.

**Find it:**  >  **Settings** > **Ring Styles**  
> *style* **Detail**

**Note:** *Style* represents the current ring style. You cannot set an alert for the **Silent** ring style setting.




**1** Scroll to **Calls** (or **Line 1** or **Line 2** for dual-line phones), then press **Change** to change it.



**2** Scroll to the alert you want, then press the *centre key* .



**3** Press **Back** to save the alert setting.



## time & date

Your phone can automatically update your time zone, time and date. It uses the time and date for the calendar.

To **synchronise** the time zone, time and date with the network: Press   >  **Settings** > **Initial Setup** > **Time and Date** > **Autoupdate** > **Time & Time Zone**. If you do not want your phone to automatically update your time zone and date, choose **Time Only** instead.

To **manually** set the time zone, time and date, turn off **Autoupdate**, then: Press  >  **Settings** > **Initial Setup** > **Time and Date** > **Time Zone**, *time* or *date*. To jump to a city in the time zone list, enter the first letter of its name by pressing keypad keys.

**Tip:** To choose three time zones for easier access, press  >  **Extras** > **World Clock**. When you open **World Clock**, you can press **Options** to see the **Map View** of time zones.


To choose an **analogue or digital** clock for your home screen, press  >  **Settings** > **Personalise** > **Home screen** > **Clock**.

**Note:** If your phone supports **MOTOCAST** and this is activated, the analogue/digital option is not available.

## wallpaper

Set a photo, picture or animation as a wallpaper (background) image in your home screen.


**Find it:**  >  **Settings** > **Personalise** > **Wallpaper**

options	
<b>Picture</b>	Press  up or down to select a picture or select <b>None</b> for no wallpaper.
<b>Layout</b>	Select <b>Centre</b> to centre the image in the display, <b>Tile</b> to repeat the image across the display or <b>Fit-to-screen</b> to stretch the image across the display.


## screen saver



Set a photo, picture or animation as a screen saver. The screen saver appears when the flip is open and no activity is detected for a specified time.

**Find it:**  >  **Settings** > **Personalise**  
> **Screen Saver**



options	
<b>Picture</b>	Press  up or down to select a picture or animation, or select <b>None</b> for no screen saver.
<b>Delay</b>	Select the length of inactivity before the screen saver appears.

## themes

A *phone theme* is a group of image and sound files that you can apply to your phone. Most themes include a wallpaper image, screen saver image and ringtone. Your phone may come with some themes and you can download more. 

To **apply** a theme, press  >  **Multimedia** > **Themes** > *theme*.

To **download** a theme, see page 86.


To **delete themes you downloaded**, press  >  **Multimedia** > **Themes**, scroll to the theme and press **Options** > **Delete** or **Delete All**.

## display appearance

To choose a phone **skin** that sets the look and feel of your phone's display: Press  >  **Settings** > **Personalise** > **Skin**.

To set your display **brightness**: Press  >  **Settings** > **Initial Setup** > **Brightness**.

To save battery life, your keypad **backlight** turns off when you are not using your phone. The backlight turns on when you open the flip or press any key. To set how long your phone waits before the backlight turns off:

Press  >  **Settings** > **Initial Setup** > **Backlight**.

To save battery life, the **display** can turn off when you are not using your phone. The display turns back on when you open the flip



or press any key. To set how long your phone waits before the display turns off:

Press  >  **Settings** > **Initial Setup**  
> **Display Timeout.**

## shortcuts and main menu

### home screen shortcuts

In the home screen, you can press the navigation key, soft keys or smart key as **shortcuts** to your favorite features. You can change the features that these keys open. For key locations, see page 1.




**Note:** You may not be able to customise all home keys if your phone supports **MOTOCAST**.

**Find it:**  >  **Settings** > **Personalise**  
> **Home screen** > **Home Keys**

options	
<b>Icons</b>	Show or hide your navigation key shortcut icons in the home screen.
<b>Up, Down, Left, Right</b>	Choose the features that open when you press the navigation key up, down, left, or right in the home screen.
<b>Left Soft Key</b>	Choose the feature that opens when you press the <i>left soft key</i> in the home screen.
<b>Right Soft Key</b>	Choose the feature that opens when you press the <i>right soft key</i> in the home screen.

options	
<b>Smart Key</b>	Choose the feature that opens when you press the <i>smart key</i> in the home screen.

## main menu appearance

To make your **main menu appearance** either graphic icons or a text-based list, press  >  **Settings** > **Personalise** > **Main Menu** > **View** > **Icons** or **List**.

To change your **main menu order**, press  >  **Settings** > **Personalise** > **Main Menu** > **Reorder**.

## answer options

You can use different ways to answer an incoming call. To turn on or turn off an answer option:

**Find it:**  >  **Settings** > **In-Call Setup**  
> **Answer Options**

options	
<b>Multi-key</b>	Answer by pressing any key.
<b>Open To Answer</b>	Answer by opening the flip.
<b>Delayed Answer</b>	Set up your delayed answering option (see page 59).

# calls

---

To make and answer calls, see page 21.





## turn off a call alert



You can press the volume keys to turn off a call alert before answering the call.

## delay answering

If you want to answer a call, but need to step outside first, you can delay answering the call.

When your phone rings, press **Delay** or your voice key. Your phone stops ringing and plays a brief message for the caller, such as "Please hold, your call will be answered in a moment". The call remains on hold until you press **Talk**.


**Find it:**  >  **Calls**, then press  or  to

To turn **Delayed Answer** on or record your **Delayed Answer** message (up to 10 seconds), press  >  **Settings** > **In-Call Setup** > **Answer Options** > **Delayed Answer**

**Note:** When **Delayed Answer** is on, the **Open To Answer** feature is disabled.



## recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that did not connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.


**Shortcut:** Press  from the home screen to see a list of dialled calls.





switch to **Dialled Calls**, **Received Calls** or **Missed Calls**

Scroll to a call. A ✓ next to a call means the call connected.


- To call the number, press .
- To see call details (like time and date), press the *centre key* .
- To see the **Last Calls Menu**, press **Options**. This menu can include:


options	
<b>Store</b>	Create a phonebook entry with the number in the <b>No.</b> field. <b>Store</b> does not appear if the number is already stored.
<b>Delete</b>	Delete the entry.
<b>Delete All</b>	Delete all entries in the list.
<b>Show ID</b>	Show your caller ID for the next call.



options	
<b>Hide ID</b>	Hide your caller ID for the next call.
<b>Send Message</b>	Open a new text message with the number in the <b>To</b> field.
<b>Send Voice Msg</b>	Record and send a voice message to the number.
<b>Add Digits</b>	Add digits after the number.
<b>Attach Number</b>	Attach a number from the phonebook or recent calls lists.
<b>Send Tones</b>	Send the number to the network as DTMF tones. <b>Note:</b> This option appears only <b>during a call</b> .
<b>Talk then Fax</b>	Talk and then send a fax in the same call  (see page 80).

options	
<b>Filter by</b>	Select all, dialled, received or missed calls.
<b>Notepad</b>	Open the number in a text editor.
<b>Call Times</b>	Open your call time information. 
<b>Call Cost</b>	Open your call cost information. 
<b>Data Times</b>	See how much time you have spent on data transfers. 
<b>Data Volumes</b>	See how much data you have transferred. 

## redial


- 1 Press  from the home screen to see a list of recent calls.

- 2 Scroll to the entry you want to call, then press .

If you hear a **busy signal**, and you see **Call Failed**, you can press  or **Retry**  to redial the number. When the call goes through, your phone rings or vibrates one time, shows **Redial Successful** and connects the call.

## return a call

Your phone keeps a record of your unanswered calls, and shows **X Missed Calls**, where **x** is the number of missed calls.

- 1 Press **View** to see the received calls list.
- 2 Scroll to the call you want to return, then press .

## caller ID

*Calling line identification* (caller ID) shows the phone number for an incoming call in your external and internal displays.



Your phone shows the caller's name and picture when they're stored in your phonebook or **Incoming Call** when caller ID information is not available.

You can set your phone to play a different ringer ID for an entry stored in your phonebook (see page 70).


To show or hide **your phone number** from the next person you call, enter the phone number and press **Options > Show ID/Hide ID**.

## emergency calls

Your service provider programmes one or more emergency phone numbers, such as

999, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

**Note:** Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations and sometimes an emergency call cannot be placed due to network, environmental or interference issues.

- 1 Press the keypad keys to dial the emergency number.
- 2 Press  to call the emergency number.

## voicemail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number.



**Note:** Your service provider may include additional information about using this feature.



When you **receive** a voicemail message, your phone shows the voicemail message indicator  and **New Voicemail**. Press **Call** to listen to the message.

To **check** voicemail messages:

**Find it:**  >  **Messages** > **Voicemail**

Your phone may prompt you to store your voicemail phone number. If you do not know your voicemail number, contact your service provider.

**Note:** You cannot store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then you can use the entry to call your voicemail.

To **change** your voicemail number or turn off voicemail notification, press  >  **Messages**, then press **Options** and select **Setup** > **Voicemail Setup**.

**Tip:** To open a list of your **Missed Calls**, see page 59.

# other features

---

## advanced calling

To use voice commands for calling, see page 48.

### features




#### attach a phone number



Dial an area code or prefix for a phonebook number, then press **Options** > **Attach Number**.

### features

#### notepad

-  >  **Calls**, press **Options**, then > **Notepad**
- To call the number, press .
  - To create a phonebook entry with the number in the **No.** field, press **Store**.
  - To open the **Dialling Menu** to attach a number or insert a special character, press **Options**.



## features

### international calls



If your phone service includes international dialling, press and hold **0** to insert your local international access code (indicated by +). Then press the keypad keys to dial the country code and phone number.

### hold a call

Press **Options > Hold** to put all active calls on hold.

### mute a call

Press **Mute** (if available) or **Options > Mute** to put all active calls on mute.

## features

### call waiting



When you are on a call, you will hear an alert if you receive a second call.

Press **[Call Waiting Icon]** to answer the new call.

- To switch between calls, press **Switch**.
- To connect the two calls, press **Options > Link**.
- To end the call on hold, press **Options > End Call on Hold**.

To turn the call waiting feature on or off:

**[Phone Icon]** > **[Settings Icon]** **Settings > In-Call Setup > Call Waiting > On** or **Off**

### conference call



During a call:

Dial the next number, press **[Call Waiting Icon]**, and press **Options > Link**.

## features

### transfer a call



During a call:

**Options** > **Transfer**, dial transfer number, press



### call diverting



Set up or cancel call forwarding:

 >  **Settings** > **Call Divert**

### restrict calls



Restrict outgoing or incoming calls:



 >  **Settings** > **Security** > **Restrict Calls**

Tell your phone to allow **All**, **None** or only the calls from your **Phonebook**.

### call barring



Restrict outgoing or incoming calls:

 >  **Settings** > **Security** > **Call Barring**

## features

### TTY calls



Set up your phone for use with an optional TTY device:

 >  **Settings** > **Initial Setup** > **TTY Setup**

### change phone line



If you have a dual-line-enabled SIM card, you can change your line to make and receive calls from your other phone number.

 >  **Settings** > **Phone Status** > **Active Line**



## features

### fixed dial



When you turn on fixed dialling, you can call only numbers stored in the fixed dial list.

Turn fixed dialling on or off:

 >  **Settings** > **Security** > **Fixed Dial**

Use the fixed dial list:

 >  **Extras** > **Dialling services** > **Fixed Dial**

### service dial



Your service provider might give you phone numbers for taxi companies or other services. These phone numbers are stored on your SIM card. To see them:

 >  **Extras** > **Dialling services** > **Service Dial**

## features

### quick dial





Dial preprogrammed phone numbers:

 >  **Extras** > **Dialling services** > **Quick Dial**

### DTMF tones

Activate DTMF tones:

 >  **Settings** > **Initial Setup** > **DTMF**



When you dial a number, your phone sends it to your network as *Dual Tone Multi Frequency* (DTMF) tones.

To send DTMF tones during a call, just press number keys or scroll to a number in the phonebook or recent calls lists and press **Options** > **Send Tones**.

# phonebook

To store and call phonebook entries, see page 21.


 
**Note:** You can show contacts stored in your phone's memory or on your SIM card. To choose which entries you see, press


 >  **Phonebook**, then press **Options** > **View**.



You can select **Phone & SIM Card**, **SIM Card** or **Phone Contacts**.

## features

### assign a speed dial key to a phonebook entry

You can assign the keys  to  to phonebook entries. Then when you press and hold a key, your phone calls the entry.

**Note:** Your service provider might assign some keys, such as  for your voicemail number.

Press  >  **Phonebook** and scroll to the phonebook entry. Then press **Options** > **Add to Speed Dial** and pick a speed dial key.

### use the speed dial key for a phonebook entry

To **use a speed dial key** that you assigned to a phonebook entry, just press and hold the key while in your home screen.

## features

### edit your speed dial keys

 >  **Phonebook**, then press  
**Options** > **Manage Contacts** > **Speed Dial**

### choose a speed dial key list

You can set speed dial to call the entries in your phone memory phonebook or your Fixed Dial list:







 >  **Settings** > **Initial Setup** > **Speed Dial**  
> **Phone Memory** or **Fixed Dial**.

## features

### edit or delete a phonebook entry

Edit a number stored in the phonebook:

 >  **Phonebook**, scroll to the phonebook entry and press **Options**. You can select **Edit Contact**, **Delete Contact** or other options.

**Shortcut:** In the phonebook, press keypad keys to enter the first letters of an entry you want. You can also press  and  to see the entries in your categories or entries you used recently.

## features

### set ringer ID for a phonebook entry

Assign a ring alert (ringer ID) to an entry:

📞 > 📁 Phonebook > *entry*, then press  
Options > Edit Contact > Ringer ID > *ringer name*

**Note:** The **Ringer ID** option is not available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 72.

To activate ringer IDs:

📞 > ⚙️ Settings > Ring Styles > *style Detail*  
> Ringer IDs > On

## features

### set picture ID for a phonebook entry

Assign a photo or picture to show when you receive a call from an entry:

📞 > 📁 Phonebook > *entry*, then press  
Options > Edit Contact > Picture > *picture name*

**Note:** The **Picture** option is not available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 72.

### set category for a phonebook entry

📞 > 📁 Phonebook > *entry*, then press  
Options > Edit Contact > Category > *category name*

**Note:** The **Category** option is not available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 72.

When you open your phonebook, press  
✳️ or # to see your categories.

## features

### set category view for phonebook

•☎ > ☑ Phonebook, then press **Options**  
> **Filter by** > **Category** > *category name*

You can show **All** entries, entries in a predefined category (**Business**, **Personal**, **General**, **VIP**) or entries in a category you create.

**Shortcut:** When you open your phonebook, press ☒ or ☓ to see your categories.

### create a new category

•☎ > ☑ Phonebook, then press  
**Options** > **Manage Contacts** > **Edit Phone Categories**  
> **[New Category]**

Enter the category name and select its members from your phonebook entries.

## features

### edit a category

•☎ > ☑ Phonebook, then press  
**Options** > **Manage Contacts** > **Edit Phone Categories**

Scroll to the category name and press  
**Options** > **Edit Category**.

You can edit the category name, members, ringer ID or picture. Your phone uses the ringer ID and picture whenever you receive calls from numbers in the category.

### create group mailing list

You can put several phonebook entries in a group mailing list, then send a message to the list. To create a list:



•☎ > ☑ Phonebook, then press  
**Options** > **Create New** > **Message List**

**Note:** A **Message List** cannot include entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 72.

## features



### sort phonebook list

Set the order in which entries are listed:

 >  **Phonebook**, then press  
**Options** > **Setup** > **Sort by** > **First Name** or **Last Name**



### copy one phonebook entry

Copy an entry from the phone to the SIM card or from the SIM card to the phone:

 >  **Phonebook**, scroll to the entry, press  
**Options** > **Copy to SIM Card** or **Copy to Phone**

### copy multiple phonebook entries



Copy multiple phonebook entries between the phone and SIM card:

 >  **Phonebook**, then press  
**Options** > **Select Multiple to**, and select  
**Copy Phone to SIM** or **Copy SIM to Phone**

## features

### send phonebook entry to another device

Send a phonebook entry to another phone, computer or device:

 >  **Phonebook**, scroll to the entry, press  
**Options** > **Send Contact**

### print phonebook entry over Bluetooth™ connection



You can use a Bluetooth wireless connection to send a phonebook entry from your phone to a printer.

 >  **Phonebook**







Scroll to the entry you want to print and press **Options** > **Print**.








 



You cannot print a **Mailing List**. For more about Bluetooth connections, see page 24.



# messages

For basic text message features, see page 35.

features	
<b>send email</b>	
 >  <b>Messages</b> > <b>New Message</b> > <b>New Email</b>	
<b>send voice message</b>	
 >  <b>Messages</b> > <b>New Message</b> > <b>New Voice Msg</b>	
Your phone starts recording the voice message. To stop recording, press <b>Stop</b> . Your phone inserts the voice recording into a message and lets you enter email addresses or phone numbers of the recipients.	

features	
<b>use a message template</b>	
 >  <b>Messages</b> > <b>Templates</b> > <b>Text Templates</b> or <b>Multimedia Templates</b>	
Select a template to create a new message based on the template.	
<b>read and manage messages</b>	
 >  <b>Messages</b> > <b>Message Inbox</b>	
Icons next to each message indicate if it is read  or unread  . Icons can also indicate if the message has an attachment  , might be SPAM ? or is locked  , urgent ! or low priority ↓.	
To <b>Reply</b> , <b>Forward</b> , <b>Lock</b> or <b>Delete</b> a message, scroll to it and press <b>Options</b> .	
To open a message, press  . Then you can press <b>Options</b> to use or store any phone numbers, email addresses, websites or files in the message.	

## features

### read and manage email



•◂◃ > ✉ Messages > Email Msgs

To **Reply**, **Forward**, **Lock** or **Delete** a message, scroll to it and press **Options**.

To open a message, press •◂◃. Then you can press **Options** to use or store any phone numbers, email addresses, websites or files in the message.

### store message objects



Go to a multimedia message page or scroll to an object in a message, then:

**Options** > **Store**

## features

### print message over Bluetooth™ connection



You can use a Bluetooth wireless connection to send a message from your phone to a printer.

•◂◃ > ✉ Messages > **Message Inbox**, **Email Msgs**, **Outbox** or **Drafts**

Scroll to the message you want to print and press **Options** > **Print**.

You cannot print message **Templates**. For more about Bluetooth connections, see page 24.

## features

### store text messages on your SIM card



To store incoming text messages on your SIM card, press:

•☛ > ✉ Messages, then press **Options > Setup > Message Setup > Text Msg Setup > Default Storage > SIM Card**

## features

### edit email settings



You can edit the settings for your email connections. To use email, you need to store your email **User ID** and **Password**.

•☛ > ✉ Messages, then press **Options > Setup > Email Msg Setup > Account Settings**

If you have more than one email account, select an account to edit.

Your phone shows a list of email settings. Here is where you store your email **User ID** and **Password**.

**Note:** To create a new account, select **[New Entry]** in the **Account Settings** list. Your display shows a folder for each email account under •☛ > ✉ Messages > **Email Msgs**.

## features

### browser messages



Read messages received by your micro-browser:

 >  **Messages** > **Browser Msgs**

### info services



Read subscription-based information services messages:

 >  **Messages** > **Info Services**

## features

### log in automatically



 >  **IM**, press **Options** then  
> **Offline settings**

Turn on **Auto-Login** to start the IM login whenever you select  > **IM**. Turn on **Power-on Login** to start the IM login whenever you turn on your phone.

### set IM ring style



Select a ring or vibration for new IM messages and contact alerts.

 >  **Settings** > **Ring Styles** > *style Detail* > **IM**

## instant messaging

## features


### log in



 >  **IM**

Select an IM account to log in or select **[New Account]** to set up an IM account.

# personalising

features
<b>language</b> Set menu language: •📶 > ⚙️ Settings > Initial Setup > Language
<b>scroll</b> Set the scroll bar to <b>Up/Down</b> or <b>Wrap Around</b> in menu lists: •📶 > ⚙️ Settings > Initial Setup > Scroll
<b>text marquee</b>  Set the speed for scrolling text in your display: •📶 > ⚙️ Settings > Initial Setup > Text Marquee

features
<b>activate ringer IDs</b> Activate ringer IDs assigned to phonebook entries and categories: •📶 > ⚙️ Settings > Ring Styles > <i>style</i> Detail > Ringer IDs
<b>ring volume</b> •📶 > ⚙️ Settings > Ring Styles > <i>style</i> Detail > Ring Volume
<b>keypad volume</b> •📶 > ⚙️ Settings > Ring Styles > <i>style</i> Detail > Key Volume
<b>reminders</b> Set a reminder for when you have not responded to an incoming call, message or other event: •📶 > ⚙️ Settings > Ring Styles > <i>style</i> Detail > Reminders

## features

### master reset

Reset all options **except** unlock code, security code and lifetime timer:

 >  Settings > Initial Setup > Master Reset


### master clear

**Caution:** Master clear **erases all information you have entered** (including phonebook and calendar entries) **and content you have downloaded** (including photos and sounds) stored in your phone's memory. After you erase the information, you cannot recover it.

 >  Settings > Initial Setup > Master Clear

## call times & costs

**Network connection time** is the elapsed time from the moment you connect to your

service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

**The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.**

## features

### call times

Show call timers:

 >  Calls, press Options, then > Call Times

### in-call timer

Show time or cost information during a call:

 >  Settings > In-Call Setup > In-Call Timer

## features

### call cost



Show call cost trackers:

 >  **Calls**, press **Options**, then > **Call Cost**

## handsfree

**Note:** The use of wireless phones while driving may cause distraction. Discontinue a call if you cannot concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the

laws and regulations on the use of these products.

## features

### speakerphone





Activate the speakerphone during a call:

Press **Speaker** (if available), or  
**Options** > **Spkrphone On**.

### auto answer (car kit or headset)





Automatically answer calls when connected to a car kit or headset:

 >  **Settings** > **Car Settings** or **Headset**  
> **Auto Answer**

### voice dial (headset)



Enable voice dial with headset send/end key:

 >  **Settings** > **Headset** > **Voice Dial**

## features

### auto handsfree (car kit)



Automatically route calls to a car kit when connected:

 >  **Settings** > **Car Settings** > **Auto Handsfree**

## data calls

To connect your phone with a USB cable, see page 38.

## features

### send data



Connect your phone to the device, then place the call through the device application.

## features


### receive data or fax



Connect your phone to the device, then answer the call through the device application.

### talk then fax



Connect your phone to the device, enter fax number, press **Options** > **Talk then Fax**, then press  to make the call.





## features

### set up Exchange ActiveSync

You can use the Internet to synchronise your phone's phonebook and calendar entries with an email account on a Microsoft® Exchange 2003 Server.



You need to know the email account's **user name** and **password**, the Microsoft® Exchange **server name** and the **user domain name**. Confirm that the **Mobility** option is enabled on the email account and that **data service** is activated with your phone service provider.

To **set up** an ActiveSync partner, press  >  **Connection** > **MOTOSYNC** > **Exchange**, press **Options**, then > **Setup**. Enter the server details, including **Server Name**, **Domain** and the **Web Session** to use. To set up a **Web Session**, see page 87.

## features

### use Exchange ActiveSync

Once you set up an Exchange ActiveSync partner, you can schedule your phone to synchronise with the account automatically.

To **schedule** synchronisation, press  >  **Connection** > **MOTOSYNC** > **Exchange**, press **Options**, then > **Auto Sync Setup**. Enter the time and days you want your phone to synchronise.

# network

## features

### network settings



See network information and adjust network settings:

 >  **Settings** > **Network**

### software update



Your service provider can send updated phone software over the air to your phone. When your phone receives a software update, you can choose to download it and install it later. To install a software update you downloaded:

 >  **Settings** > **Phone Status** > **Software Update**  
> **Install Now**

# personal organiser


## features

### set alarm

 >  **Extras** > **Alarm Clock**

### turn off alarm

When an alarm occurs:

To turn off the alarm, press **Disable** or .

To set an eight-minute delay, press **Snooze**.

### Notes:


There is no indication icon when the alarm is enabled. The alarm also works when the phone is turned off.

**Snooze** is available only if the phone is already powered on when the alarm sounds.

## features

### add new calendar event

•◂ >  **Extras** > **Calendar**, scroll to the day, press •◂, scroll to **Create New Event**, and press •◂.

If you set a reminder for a calendar event,  can appear at the top of your screen.

### see calendar event

See or edit event details:

•◂ >  **Extras** > **Calendar**, scroll to the day and press •◂.

Scroll to the event and press •◂. To edit the details, press **Options** > **Edit**.

**Tip:** Keeping up with life can be tough work. To see a list of your upcoming events, open the calendar and press **Options** > **View** > **Organised Events**.

## features

### event reminder

When an event reminder happens:  
To see reminder details, press **View**.  
To close the reminder, press **Exit**.

### send calendar event to another device

Send a calendar event to another phone, computer or device:

•◂ >  **Extras** > **Calendar**, scroll to the day, press •◂, scroll to the event, press **Options** > **Send** > **with Bluetooth**

## features

### print calendar month, week or day over Bluetooth™ connection

You can use a Bluetooth wireless connection to send a calendar month, week or day from your phone to a printer.

 >  Extras > Calendar

Go to the month, week or day view and press **Options** > **Print**.

For more about Bluetooth connections, see page 24.

### create voice record

Press and hold the voice key, speak into the phone, release the voice key.

**Note:** Recording phone calls is subject to varying regional and national laws regarding privacy and recording of conversations. Always obey the laws and regulations on the use of this feature.

## features

### play voice record



Play back a voice record:

 >  Multimedia > Sounds, scroll to the voice record, and press the *centre key* 

### calculator

 >  Extras > Calculator

### currency converter

 >  Extras > Calculator, then press **Options** > **Exchange Rate**

Enter exchange rate, press **Ok**, enter amount and press **Options** > **Convert Currency**.



# security

## features

### SIM PIN

**Caution:** If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled and your display shows **SIM Blocked**.

Lock or unlock the SIM card:

 >  **Settings** > **Security** > **SIM PIN**

### lock feature

 >  **Settings** > **Security** > **Lock Application**

## features

### manage certificates



Enable or disable Internet access certificates stored on your phone:

 >  **Settings** > **Security** > **Certificate Mgmt**

Certificates are used to verify the identity and security of websites when you download files or share information.

## fun & games

For basic information on the camera, see page 29.

## features

### listen to sound files

 >  **Multimedia** > **Sounds**


 
Scroll to a file and select it to listen.

## features

### delete or manage sound files

 >  Multimedia > Sounds

To **delete** a file, scroll to it in the list and press **Options** > **Manage** > **Delete**.

To **copy or move** a file from your memory card () to your phone memory () , scroll to it and press **Options** > **Manage** > **Copy** or **Move** > **Memory Card**. You cannot copy or move some copyrighted files.



To **categorise** sound files, press **Options** > **Categories**. You can create categories, assign files and choose which category shows in your **Sounds** list.

## features

### create ringtones

Create ringtones that you can use with your phone:

 >  Multimedia > Sounds > Create New > Melody

### start micro-browser






Just press .

### download objects from web page



Download a picture, sound or other object from a web page:

Press , go to the page that links to the file, scroll to the link and select it.

To activate downloaded copyrighted files, press  >  Extras > **Activation List** > *file type* > *file*. You can see file's **Status**, **Type**, **Activation** and **Counts Remaining**.

## features

### store downloaded files in your phone or memory card

You can choose to store your downloaded files on your phone or your memory card:

 >  **Settings** > **Phone Status**  
> **Download Location** > **Memory Card** or **Phone**

To see how much memory is available on your phone or memory card, see page 37.

### video streaming online



If you go to a website with videos, your phone can play the videos in your browser without downloading them onto your phone. This is called *video streaming*.

To try video streaming, just start your micro-browser and go to a page that provides videos for streaming.

## features

### Web sessions



A *Web Session* stores settings that your phone uses to access the Internet. To select or create a web session:

 >  **WebAccess** > **Web Sessions**

You can use Motorola SETUP (one of the Java apps) to set up your phone. If this fails, please visit your operator website to download phone settings. If this also fails, please contact your service provider.

### clear micro-browser history




Clear the micro-browser's history, cache or cookies:

 >  **WebAccess** > **Browser Setup**  
> **Clear History**, **Reset Cache**, or **Clear Cookie**

## features

### download game or application



 
You can download a Java™ game or application the same way you download pictures or other objects:


Press , go to the page that links to the file, scroll to the link and select it.

## features



### start game or application

Start a Java™ game or application:

 >  **Games & Apps**, scroll to the game or application, press the *centre key* .

To **pause** a Java app, press  or close the flip. When you start the Java app again, it will resume where you left off.

**Note:** Java apps will close and end if you open the camera.

To **install** and run games stored on your memory card, press  >  **Games & Apps** > **[Install New]**.

**Note:** W510 Help application may be available on your handset as an in-device user manual. This depends on your service provider.



## features

### airplane mode

You can switch your phone to airplane mode to prevent it from communicating with the network. This lets you use games or other applications while you are on an airplane, without interfering with airplane communications.

**Note:** Your phone cannot make Bluetooth™ connections when **Airplane Mode** is on.

 >  **Settings** > **Airplane Mode** > **Airplane Mode**  
> **On**

You can make the airplane mode option appear whenever you turn on your phone:

 >  **Settings** > **Airplane Mode**  
> **Prompt At Power Up** > **On**

# Specific Absorption Rate Data

---

## This model meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobile devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.55 W/kg.<sup>1</sup> As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.<sup>2</sup> In this case, the highest tested SAR value is 0.38 W/kg.<sup>1</sup>

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to

this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "hands-free" device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>).

1. The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.
2. Please see the Safety and General Information section about body worn operation.

# Information from the World Health Organisation

---

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: <http://www.who.int./peh-emf>

# index

---

## A

- accessories 17, 79
- accessory connector port 1
- activation list 86
- active line indicator 43
- active line, changing 66
- ActiveSync 81
- airplane mode 89
- alarm clock 82
- alert
  - set 47, 53, 54
  - turn off 47, 59
- answer a call 21, 58
- attach a number 60, 64
- audio player 27

## B

- backlight 56
- battery 18, 19
  - extending battery life 19
- battery indicator 43
- battery life, extending 56
- Bluetooth connection
  - calendar entry, printing 84
  - calendar entry, sending 83
  - description 24
  - messages, printing 74
  - phonebook entries 72
- brightness 56
- browser messages 76
- browser. See micro-browser

## C

- cables 38
- calculator 84
- calendar 83
- call
  - answering 21, 58
  - barring 66
  - end 21
  - ending 21
  - forwarding 66
  - making 21
  - timers 78
  - waiting 65
- call forward indicator 43
- caller ID 60, 62, 70
- camera 29
- car kit 79
- categories 71

centre key 1, 48  
centre select key 17  
certificate management 85  
clock 54  
codes 51  
conference call 65  
copy files 25  
copyrighted files, activating  
    86  
costs, tracking 79

## **D**

data call 80  
data indicator 42  
date, setting 54  
delayed answer 59  
dial a phone number 21, 67  
dialled calls 59  
digital audio 27  
display 2, 41, 56  
downloaded files  
    activating 86

    from web pages 86  
    in messages 74  
    storage location 87  
drafts folder 35  
DTMF tones 60, 67

## **E**

earpiece volume 47  
EDGE indicator 42  
email  
    reading and managing 74  
    sending 73  
    settings 75  
emergency number 62  
end a call 21  
end key 1, 21  
Enter Unlock Code message  
    51  
external display 31, 50

## **F**

fax call 60, 80  
fixed dial 67  
flip 21, 58  
forward calls 66

## **G**

games 88  
GPRS indicator 42  
group mailing list 71

## **H**

handsfree speaker 50  
headset 79  
headset jack 1  
hold a call 65  
home screen 2, 41, 57

## **I**

IM 76  
IM indicators 43

in-call indicator 43  
Incoming Call message 62  
information services 76  
instant messaging. See IM  
international access code 65  
iTAP text entry mode 45

## **J**

Java applications 88  
Java indicator 43

## **K**

keypad 58, 77

## **L**

language 77  
linking. See Bluetooth  
    connection  
lock  
    application 85  
    phone 51

SIM card 85  
Low Battery message 43

## **M**

make a call 21  
master clear 78  
master reset 78  
memory card 36  
menu 2, 17, 41, 58, 77  
menu icons 41, 57, 58  
message 73, 75  
message indicator 36, 43  
message reminders 77  
micro-browser 76, 86, 87, 88  
Missed Calls message 61  
MMS, defined 35  
MOTOSYNC 81  
MP3 sound files 27, 28  
multimedia message 35, 73,  
    75  
music 85, 86  
mute a call 65

## **N**

navigation key 1, 17, 48  
network settings 82  
notepad 64  
number. See phone number  
numeric entry mode 47

## **O**

object exchange 25  
1-touch dial 69  
open to answer 58  
optional accessory 17  
optional feature 17

## **P**

pairing. See Bluetooth  
    connection  
passwords. See codes  
personalise 77  
phone number 23, 66  
phonebook 60, 64, 68, 69

photo 29  
picture ID 62, 70  
PIN code 21, 51, 85  
PIN2 code 51  
power key 1, 21  
printing 26

## Q

quick dial 67

## R

received calls 59  
recent calls 59  
redial 61  
reminders 77  
restrict calls 66  
return a call 61  
ring style indicator 43  
ring style, setting 47, 53  
ringer ID 62, 70, 77  
ringer volume 47, 77

ringtone 85, 86  
roam indicator 42

## S

safety information 8  
screen saver 55  
scrolling 77  
security code 51  
send key 1, 21  
service dial 67  
signal strength indicator 42  
silent answer 59  
SIM Blocked message 20,  
85  
SIM card 18, 21, 51, 67, 75,  
85  
skin 56  
smart key 48, 57  
soft keys 1, 41, 57  
software update 82  
speakerphone 79  
speed dial 68, 69

store your number 23  
streaming video 87  
symbol entry mode 47  
synchronising 81

## T

talking phone 53  
tap text entry mode 46  
telephone number. See  
phone number  
text entry 44  
text marquee 77  
text message 73, 75  
theme 56  
time zone 54  
time, setting 54  
timers 78  
transfer a call 66  
TTY device 66  
turn on/off 20

## U

- unlock
  - application 85
  - phone 21, 51
  - SIM card 85
- unlock code 51
- USB cables 38

## V

- video clip 34
- videos 33, 87
- voice commands 48
- voice dial 48, 79
- voice message 73
- voice record 84
- voicemail 62
- voicemail message indicator
  - 43, 63
- volume 47, 77

## W

- wallpaper 55
- web pages 86
- web sessions 87

## Y

- your phone number 23