




**#813 MACDADDY
WATCH INSTRUCTIONS**

FEATURES:

- CURRENT TIME
- DAY/MONTH/DATE
- DAILY ALARM
- HOURLY CHIME
- STOPWATCH
- COUNTDOWN TIMER
- DUAL TIME
- WATER RESISTANT TO 165FT/50M
- NIGHT VISION™ BACK LIGHT

KEY TO SYMBOLS

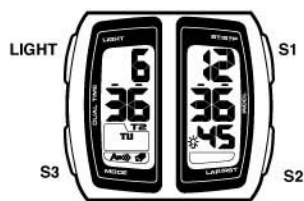

LIGHT BUTTON :

In order to activate the light feature on this display, simply press the light button. The light will remain on for a few seconds after you release your finger.

CONTROL OF WATCHES :

Normal display : Hour, minute, second and day of week.

- 1 x press of S3 button : Display shows alarm time in hour & minute.
- 2 x press of S3 button : Chronograph function will be set and will have symbol RUN.
- 3 x press of S3 button : Display shows Dual Time function and symbol T2.
- 4 x press of S3 button : Display shows Count Down Timer function and symbol TR.
- 5 x press of S3 button : Change back to normal time.

NORMAL TIME SETTING :

In normal time mode, hold S2 button, second will flash, it can be reset to zero by S1 button.

- 1 x press S3 button : Minute will flash which is advance by S1 button.
- 2 x press S3 button : Hour will flash and advance digit and choose 12 Hours mode AM/PM or 24 Hours mode by press S1 button.
- 3 x press S3 button :

Year will flash and advance digit by S1.

4 x press S3 button : Month will flash and advance digit by S1.

5 x press S3 button : Date will flash and advance digit by S1.

Complete and confirm the setting time by press S2. Day of week can be adjusted automatically.

HOW TO SET THE FLASHING EL ALARM OPTION:

- 1) To turn this feature on, press and hold LIGHT BUTTON for approximately 2-3 seconds until "☞" icons are indicated.
- 2) To turn this features off, press and hold LIGHT BUTTON until "☞" icons disappear.

ALARM TIME SETTING :

In normal time, press S3 button, and then hold S2 button about 3 seconds. Minute digits will flash which is advance through depression of S1 button. Press S3 button at once, Hour digits will flash and then press S1 button to set hour time. Press S2 to confirm and exit.

ALARM AND HOURLY CHIME ON/OFF :

- In alarm time mode
- 1 x press S1 button : Chime Bell will be on.
- 2 x press S1 button : Alarm mark will be on.
- 3 x press S1 button : Chime Bell and Alarm mark will be on.
- 4 x press S1 button : Chime Bell and Alarm mark will be off.

To stop the alarm sound, press any button.

CHRONOGRAPH MODE :

In normal time, 2 x press S3 button, Chronograph function will be set.

Start/Stop : Press S1 button, it operates in cumulative counting up to 1/100 second.

Lap time : change to Lap Time from chronograph time display is performed by pressing S2 button while chronograph is counting, Chronograph keeps counting after change. Press S2 button again to return to Chronograph Time display.

Reset : Press S1 button to stop counting and then press S2 button.

TIME ZONE SETTING OR DUAL TIME :

This feature allows you to conveniently change the time to that of another Time Zone in 15 minutes increments.

In normal time, 3 x press S3 button shows Dual Time(T2), hold S2 about 3 seconds. Minute will flash which is advance by 15 minutes when you press S1 button. Press S3 button, Hour will flash and advance digit as above. Press S2 to confirm and exit.

COUNT DOWN TIMER SETTING :

In normal time, 4 x press S3 button shows Timer function. Hold S2 button, second will flash which is advance by S1 button. 1 x press S3 button. Minute will flash and advance digit as above. 2 x press S3, Hour will flash and advance digit as above. Press S2 button again to confirm the setting time. Press S1 button to start and stop counting press S2 button will go back to preset time.

The count down timer can be set within the range of 0:00 to 23:59.59.

When the countdown finishes, the timer stops and a tune will go off for 20 seconds. The count down time will automatically be recalled.

WARRANTY INFORMATION

Freestyle U.S.A. warrants, to the original purchaser, that its watches are free from defects in materials and workmanship for a period of ten (10) years under normal use. The warranty excludes batteries, crystal, watch case plating, and strap/bracelet/ band. The warranty excludes normal wear and tear and abuse.

Special note: Freestyle® watches are designed and engineered to be highly water-resistant, and to withstand the most active of lifestyles. The most important component in keeping your watch water-resistant is the case back O-ring, which prevents water from entering the watch through the case back.

Water leakage most often occurs after improper battery replacement. We strongly recommend having a certified jeweler, watch repair technician or Freestyle's service center replace your battery. Water leakage due to improper battery replacement is not covered under warranty.

Should your Freestyle® watch require warranty service, send it along with the following:

1. A copy of your sales receipt
2. Your printed name and address
3. Your telephone number
4. A brief description of the problem
5. Please include \$8.50 for processing and handling, using one of the following payment methods:

- Check
- Money order
- Credit card (be sure to include card number and expiration date)

REMEMBER: NEVER INCLUDE A SPECIAL WATCHBAND OR ANY OTHER PERSONAL ARTICLES OF VALUE IN YOUR SHIPMENT.

Send to the following address:

Freestyle
Attn: Individual Returns
47-50 33rd Street
Long Island City, NY 11101

(718)-729-8890

Please allow 30 days for return of your watch.

Neither this warranty, nor any other warranty expressed, is assumed for any incidental or consequential damages, including but not limited to the mathematical accuracy of the product. Some states do not allow limitations on how long an implied warranty lasts, or the exclusions of or limitations on consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

This warranty applies to watches purchased in the United States. For watches purchased outside the United States, please contact your authorized Freestyle® dealer for warranty information.

If your watch requires servicing not covered under our warranty (battery, crystal, strap/bracelet/band, watch case plating), or refurbishing, complete the return form (next column) and return with your watch.

Visit our website at:
www.freestyleusa.com