



**816 SHARK TIDE™ INSTRUCTIONS**

**FEATURES:**

- CURRENT TIME (HR., MIN., & SEC.)
- DAY/DATE/MONTH/YEAR
- INDICATES PRESENT TIME, TIDE HEIGHT AND DIRECTION
- MOVEABLE CURSOR INDICATES HOURLY TIDE AND DIRECTION FOR PRESENT DAY
- FUTURE TIDE MODE INDICATES TIDE HEIGHT AND DIRECTION FOR 15 YEARS
- CHOOSE FROM FIFTEEN PRE-PROGRAMMED ZONES.
- CHOOSE FROM 128 PRE-PROGRAMMED BEACHES WITHIN THE FIFTEEN ZONES
- PROGRAM YOUR LOCAL BEACH BREAK IF NOT INCLUDED AMONG THE 128 PRE-PROGRAMMED BEACHES
- MULTIPLE COUNTDOWN TIMERS
- CHRONOGRAPH WITH SPLIT TIMES
- FOUR DAILY OR ONE TIME ALARMS AND HOURLY CHIME
- DUAL TIME AND OPTIONAL 24-HR. TIME
- WATER-RESISTANT TO 300 FEET
- NIGHT VISION™ ELECTRO-LUMINESCENT BACKLIGHTING

**KEY REFERENCES**



**HOW TO SET TIME 1, DATE, 24-HOUR FORMAT, AND BEACH LOCATION**

From TIME 1 mode, press and hold the LIGHT/SET button for approximately two seconds; the seconds digits will flash.



Pressing the START button will reset the seconds digits to 0. If seconds are 30 or greater, one will be added to the minutes digits.

To set hours digits, press MODE button; hours digits will flash. To advance hours digits, press START button; to retard hours digits press STOP/RESET button; hold for rapid advance.



To set minutes digits, press MODE button; minutes digits will flash. To advance minutes digits, press START button; to retard minutes digits, press STOP/RESET button; hold for rapid advance.



Continuing through the time and date setting mode, the setting sequence is seconds, hours, minutes, year, month, date, and 12/24-hour mode.



After 12/24-hour mode is selected, press MODE button; "SET TIDE?" will appear. Press MODE button, and one of the six zone options will appear: Caribbean, East USA, Hawaii, Japan, Mexico, or West USA. Press START button to select your choice of zone.



To set your choice of location or beach break, press MODE button; press START button to select location or beach break of choice.




Press MODE button; if you have selected the Caribbean, Mexico, West USA, or East USA, then DST ON or DST OFF will appear on the display. DST is an abbreviation for daylight savings time. Note: All of the western and eastern coastal states in USA observe DST, however, neither Hawaii nor Japan observe Daylight Savings Time. Note: The DST feature only needs to be activated once by pressing START button; it will adjust automatically thereafter. However, you will still need to adjust the time of day at daylight savings time changes. The DST flag will appear on the display when the DST feature is in the "ON" position.

Press MODE button; "USER OPT" will appear on the display. If your favorite location or beach break is not one of the pre-programmed locations, you may wish to add it. To do this, you will need to know the time difference between the high tide at your favorite beach and the high tide (for the same day) at

the closest pre-programmed beach. This time difference information is usually illustrated on tide calendars or local tide charts, and is indicated for example as (+ or -) 10, 20 or 30 minutes between two beach locations. For example, suppose your favorite beach break is Malibu, which is not pre-programmed in the watch, and your local tide calendar indicates that Malibu tides are (+10) minutes, compared to Los Angeles tides. After entering Malibu as your favorite beach, you would enter (+10) as your offset.

To program your location or beach break, press START button. Press START button again to enter the first letter, then press MODE button to advance to the second letter. If you advance any letter too far, simply press STOP/RESET button to back up. You may enter a total of up to twelve letters.

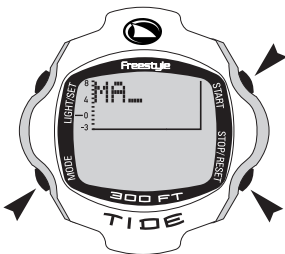

After entering the last letter of the name of your beach, press MODE button continuously, until the words "NO OFFSET" appear. Press

START button to enter your desired offset. Press LIGHT/SET button to return to TIME 1 mode.



At any time, while in TIME 1 mode, press START button; current tide conditions will appear on the top half of the display.


**HOW TO SET AND OPERATE CURRENT TIDE**

Press MODE button until "TIDE" appears. Current date will be displayed on the lower half, current daily tide will be displayed on the upper half.



Press START button; and cursor will scroll across tide graph, indicating high, low, rising and falling tide conditions for any hour of the current day.

You may also set tide zone, location, DST, or user option from this mode by pressing and holding LIGHT/SET button for two seconds. Then follow the sequence as outlined in "HOW TO SET TIME 1, DATE, 24-HOUR FORMAT, AND BEACH LOCATION."

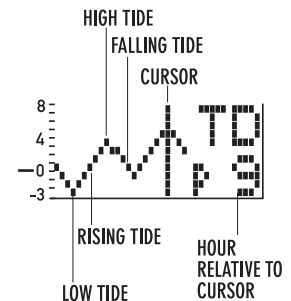


The above graph shows how to read the tide graph.

**HOW TO SET AND OPERATE FUTURE TIDE**

In this mode you may enter any future date for the next 15 years, to access future tide information for any selected location or beach break. If you desire future tide information for a location other than your previously selected beach, you will need to go back to either TIME 1 mode or TIDE mode, and enter that new location.

Press MODE button until "FUTURE

TIDE" appears. Future date will be displayed on the lower half, future tide graph and hourly time will be displayed on the upper half.

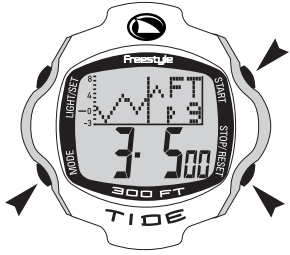

Press and hold LIGHT/SET button for two seconds; year digits will flash. To advance flashing year digits, press START button. Press MODE button; months digits will flash. To advance months digits, press START button. Press MODE button; date digits will flash. To advance date digits, press START button. When future date setting is complete, press LIGHT/SET button. Press START button; cursor will scroll across tide graph, indicating tide conditions for any hour of the day on the future date selected. Note: Hourly time is indicated beneath "FT" on the upper half of display.

#### HOW TO OPERATE CHRONOGRAPH/STOPWATCH

Press MODE button until "CHRONO" appears. "CHRONO RESET" will be displayed on the upper half; chronograph time on the lower half. Reset the chronograph to zero by pressing STOP/RESET button. Press START button to start chronograph.



Press START button to view split time. Split time is the time elapsed since the start of the chronograph. Chronograph will continue to count while split time is displayed. Each press of START button will display a split time.



To stop chronograph, press STOP/RESET button. Reset the chronograph to zero by pressing the STOP/RESET button.

#### HOW TO SET AND OPERATE THE ALARMS

Press MODE button until "ALARM" appears. There are four different alarms, which can be set as daily

repeating alarms, or one time only reminder alarms. To set a one time alarm, you must set a specific date. To set a daily repeating alarm, date position must be set to "----". Additionally, the four different alarms may be set to reference either "TIME-1" or dual time "TIME-2." Pressing STOP/RESET button will toggle between the four different alarms.



Press and hold LIGHT/SET button to enter alarm setting mode. The hours digits will flash. Press START button to advance the flashing hours digits; hold for rapid advance. Press MODE button; minutes digits will flash. Press START button to advance minutes digits. Press MODE button; months digits will flash; to set a one time only reminder alarm, you must set a date. Press START button to advance months digits. To set this alarm as a daily repeating alarm, enter (-) instead of specific months digits.



Press MODE button; date digits will flash. To set a one time only reminder alarm, press START button to advance date digits. To set this alarm as a daily repeating alarm, enter (-) instead of specific date digits. Press MODE button; "T1" or "T2" will flash. Press STOP/RESET button to indicate if this alarm is in reference to "TIME-1", or dual time "TIME-2". Press LIGHT/SET button when alarm 1 setting is complete. Press STOP/RESET button to advance to alarm 2, 3 or 4. To set any of these alarms, follow setting sequence for alarm 1 as detailed above.

Once any of the alarm times are set, the alarm is automatically activated (armed), and is indicated as "( )" on the display. To arm or disarm any of the four alarms while in alarm mode, press STOP/RESET button to select alarm. Once selected, press START button to arm or disarm the alarm "( )" and/or hourly chime "▲". The setting sequence is:

Hourly chime on: "▲"

Alarm on: "( )"

Both alarm and hourly chime on: "(▲)"

Both alarm and hourly chime off: no symbol

#### HOW TO OPERATE THE COUNTDOWN TIMER

Press MODE button until "TIMER" appears. During the setting process you can select from three different countdown timer functions. Countdown/stop (CS): timer counts down from a preset time to zero and stops. Countdown/repeat (CR): timer counts down from a preset time to zero, resets and repeats. Countdown/count up (CU): timer counts down from a preset time to zero and begins to count up.

Press and hold LIGHT/SET button to enter the countdown timer setting mode.



The seconds digits will flash. Press START button to advance seconds digits.



Press MODE button; hours digits will flash. Press START button to advance the hour digits.



Press MODE button; minutes digits will flash; press START button to advance minutes digits.



Press MODE button; CR, CS or CU will flash. Press START button to select which countdown timer you wish to use.



When countdown time setting is complete, press LIGHT/SET button to exit the setting mode. To start timer, press START button. To stop timer, press STOP/RESET button. To reset timer, press LIGHT/SET button.

#### HOW TO SET DUAL TIME

Press MODE button until "TIME-2" appears. To set dual time, press and hold LIGHT/SET button; seconds digits will flash. Press START button to reset the seconds digits to zero. Continue through the setting sequence as done in "TIME-1", setting by cycling between MODE button and START button. When dual time setting is complete, press LIGHT/SET button to exit the setting mode.



#### CARE AND MAINTENANCE

1. Back case cover should only be removed by an authorized watch repair specialist.
2. Always rinse your watch in fresh water after immersion in salt or chlorinated water.
3. Do not expose watch or band to chemicals such as gasoline, aerosol sprays, paint or solvents.
4. Periodically clean with a soft cloth and fresh water.

NOTE: Extreme electrostatic discharge can cause the LCD to 'freeze up'. In this event you could reset the watch by pressing all 4 buttons together for 5 seconds.

#### TIDE LOCATIONS

- WEST USA**  
 SAN DIEGO, CA  
 LA JOLLA, CA  
 SAN CLEMENTE, CA  
 NEWPORT BAY, CA  
 CABRILLO BEACH, CA  
 LOS ANGELES HARBOR, CA  
 SANTA MONICA, CA  
 MALIBU, CA  
 VENTURA, CA  
 RINCON, CA  
 SANTA BARBARA, CA  
 GAVIOTA, CA  
 POINT ARGUELLO, CA  
 MORRO BEACH, CA  
 CARMEL COVE, CA  
 MONTEREY BAY, CA  
 MOSS LANDING, CA  
 SANTA CRUZ, CA  
 OCEAN BEACH, CA

GOLDEN GATE (SF), CA  
BOLNAS LAGOON, CA  
BODEGA BAY, CA  
BIG RIVER, MENDOCINO, CA  
CAPE MENDOC, CA  
HUMBOLDT BAY, CA  
CRESCENT CITY, CA  
ABERDEEN, WA  
NEWPORT, WA

**GULF COAST**  
CORPUS CHRISTI, TX  
NEW ORLEANS, LA  
PENSACOLA, FL

**EAST COAST**  
KEY WEST, FL  
MIAMI HARBOR, FL  
FORT LAUDERDALE, FL  
SEBASTIAN INLET, FL  
DAYTONA BEACH, FL  
SAVANNAH RIVER, GA  
FOLLY BEACH, SC  
CHARLESTON, SC  
MYRTLE BEACH, SC  
CAPE FEAR, NC  
CAPE HATTERAS, NC  
KITTY HAWK, NC  
VIRGINIA BEACH, VA  
CAPE MAY, NJ  
ATLANTIC CITY, NJ  
LITTLE EGG HARBOR, NJ  
MANASQUAN INLET, NJ  
SANDY HOOK, NJ  
FIRE ISLAND, NY  
BRIDGEPORT, CT  
GREAT SALT POND, BLOCK  
ISLAND, RI  
NEW LONDON, CT  
NEWPORT, RI  
SAKONNET PNT, RI  
GAY HEAD, MARTHAS  
VINEYARD, MA  
NANTUCKET, MA  
CAPE COD, CHATHAM, MA  
BOSTON, MA  
GLOCHESTER, MA

**HAWAII**  
KAWAIHEE, BIG ISL.  
KAILUA KONA, BIG ISLAND  
HILO, BIG ISLAND  
KAHULULU, MAUI  
HANA, MAUI  
MAKENA, MAUI  
MALAEA, MAUI  
LAHINA, MAUI  
HALIWAI, OAHU  
WIANAE, OAHU  
HONOLULU, OAHU  
KANEHOE, OAHU  
HANAPEPE, KAUAI  
NWLILI, KAUAI  
HANALILI, KAUAI

**JAPAN**  
MIYAZAKI  
MUROTO  
ISE  
ENOSHIMA  
IRAGO  
SENDAI  
OMAEZAKI  
MAIZURU

**MEXICO**  
ENSENADA  
SAN CARLOS  
PUERTO PNASCO  
GUAYMAS, MEX  
MAZATLAN  
PUERTO VALLARTA  
ACAPULCO  
SALINA CRUZ

**AUSTRALIA**  
SYDNEY  
GOLD COAST  
PERTH

**PACIFIC**  
TAVARUA  
TEAHUPOO  
PAGO PAGO  
EASTER ISLAND  
DOMINICAL  
LA LIBERTAD, EL SALVADOR  
GUAM  
GALAPAGOS ISLAND

**ATLANTIC OCEAN**  
CANARY ISLAND  
FERRY REACH, BERMUDA  
NASSAU

**EUROPE**  
EL FERROL DEL CAUDILLO,  
SPAIN  
LISBON, PORTUGAL  
IMHAM, UK  
DUBLIN, IRELAND  
POINTE DE GRAVE, FRANCE  
VENEZA, ITALY

**BRAZIL**  
RIO DE JANEIRO  
FERNANDO DE NORONHA  
RECIFE

**INDIAN OCEAN**  
REUNION ISLAND  
COLOMBO, SRI LANKA  
MAALE, MALDIVES

**SOUTH AFRICA**  
DURBAN  
JEFFREYS BAY

**SOUTH EAST ASIA**  
PADANG, INDONESIA  
BALI, INDONESIA

#### DISCLAIMER ON TIDE DATA

Not for navigation. This program is furnished in the hope that it will be useful, without the implied warranty of merchantability or fitness for a particular purpose. Do not use this program as a basis for any decisions that could result in harm to people, other organisms, or property. Check these predictions against officially sanctioned tables. Agencies like NOAA exist because there is a need for certifiably correct tide predictions. Do not rely on these predictions if you need guaranteed results.

Remember that weather conditions affect tidal ranges and current speeds, sometimes very strongly.

#### WARRANTY INFORMATION

Freestyle U.S.A. warrants, to the original purchaser, that its watches are free from defects in materials and workmanship for a period of ten (10) years under normal use. The warranty excludes batteries, crystal, watch case plating, and strap/bracelet/ band. The warranty excludes normal wear and tear and abuse.

Special note: Freestyle® watches are designed and engineered to be highly water-resistant, and to withstand the most active of lifestyles. The most important component in keeping your watch water-resistant is the case back O-ring, which prevents water from entering the watch through the case back.

Water leakage most often occurs after improper battery replacement. We strongly recommend having a certified jeweler, watch repair technician or Freestyle's service center replace your battery. Water leakage due to improper battery replacement is not covered under warranty.

Should your Freestyle® watch require warranty service, send it along with the following:

1. A copy of your sales receipt
2. Your printed name and address
3. Your telephone number
4. A brief description of the problem
5. Please include \$8.50 for processing and handling, using one of the following payment methods:

- Check
- Money order
- Credit card (be sure to include card number and expiration date)

REMEMBER: NEVER INCLUDE A SPECIAL WATCHBAND OR ANY OTHER PERSONAL ARTICLES OF VALUE IN YOUR SHIPMENT.

Send to the following address:

Freestyle  
Attn: Individual Returns  
47-50 33rd Street  
Long Island City, NY 11101

(718)-729-8890

Please allow 30 days for return of your watch.

Neither this warranty, nor any other warranty expressed, is assumed for any incidental or consequential damages, including but not limited to the mathematical accuracy of the product. Some states do not allow limitations on how long an implied warranty lasts, or the exclusions of or limitations on consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

This warranty applies to watches purchased in the United States. For watches purchased outside the United States, please contact your authorized Freestyle® dealer for warranty information.

If your watch requires servicing not covered under our warranty (battery, crystal, strap/bracelet/band, watch case plating), or refurbishing, complete the return form (next column) and return with your watch.

Visit our website at:  
[www.freestyleusa.com](http://www.freestyleusa.com)



**Freestyle<sup>®</sup>**

Attn: Individual Returns  
47-50 33rd Street  
Long Island City, NY 11101  
(718)-729-8890

Battery	\$ 4.00
Case	10.00
Bezel	6.00
Band(Polyurethane)	12.00
Band(Leather)	12.00
Band(Metal)	20.00
Band(Nylon)	7.00
Processing and handling	8.50

Total \$ \_\_\_\_\_

- Check or Money Order
- Master Card
- Visa

Account# \_\_\_\_\_ Expiration Date \_\_\_\_\_

Printed Name \_\_\_\_\_

Address \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Phone Number \_\_\_\_\_

Signature \_\_\_\_\_