



**Freestyle**

#709 SHARK CX4™  
WATCH INSTRUCTIONS

**FEATURES:**

- CURRENT TIME
- DAY/MONTH/DATE
- CHRONOGRAPH
- LARGE DIGIT DISPLAY
- DAILY ALARM
- TWO TIMERS
- OPTIONAL 24-HOUR TIME
- WATER-RESISTANT TO 330FT/100M
- NIGHT VISION™ ILLUMINATION

**KEY REFERENCES**



In normal time mode, the button functions are as follows:

**LIGHT** - Turns on the Night Vision™  
**S1** - Lap/Reset and to select digits  
**S2** - Start/Stop and to set function  
**S3** - Changes the function

**HOW TO SET NORMAL TIME**

In normal time mode, push the S3 button seven times. The seconds digits will begin to flash. Push the S2 button to reset the seconds to zero.

Press the S1 button to set the minutes. When the first minute digit flashes, press the S2 button to advance the digits. Press the S1 button again. When the second minute digits flash, press the S2 button to advance the digits.

Press the S1 button again to set the hours. When the hour digits flash, press the S2 button to advance the digits.

Press the S1 button again to set the date. When the date digits flash, press the S2 button to advance the digits.

Press the S1 button again to set the month. When the month digits flash, press the S2 button to advance the digits.

Press the S1 button again to set the day. When the day digits flash, press the S2 button to advance the digits.

**24 - HOUR SETTING**

To toggle between 12 and 24-hour modes, press the S1 button seven times and then press the S2 button. 24H or AM/PM will be displayed on the screen. Press the S3 button to return to the normal time display.

**SETTING DUAL TIME**

From normal time mode, press the S3 button six times to enter the dual time setting mode. Press the S1 button to flash the hour digits. Advance the hour digits by pressing the S2 button. After setting dual time, push the S3 button twice to return to normal time mode.

**HOW TO SET TIMERS**

In normal time mode, push the S3 button four times to set Timer 1. To set Timer 2, press S3 five times from normal time mode. To set these timers, press the S1 button to flash the hour digits. Advance the hour digits by pressing the S2 button. Press the S1 button again to flash the first minute digit. When the digits flash, press the S2 button to advance them. Press the S1 button again to flash the second digit of the minutes. Press the S2 button advance the digits. Push the S1 button again to set the timer. Press the S2 button to start and stop the countdown timers.

**SETTING THE DAILY ALARM**

From normal time mode, press the S3 button once to enter AL 1 setting mode. Press the S1 button to flash the hour digits. Advance the digits by pressing the S2 button. Press the S1 button to flash the first minute digit. Advance by pressing the S2 button. Press the S1 button again to flash the second minute digit. Advance the digits by pressing the S2 button.

To turn AL1 on and off, push the S3 button once from normal time mode. AL1 will appear on the screen. Push the S2 button to toggle between on and off.

**SETTING THE SINGLE ALARM**

From normal time mode, press the S3 button twice to enter the AL2 setting mode. Push the S1 button to flash the hour digits. Advance the digits with the S2 button. Push S1 button again to flash the first minute digit. Advance with the S2 button. Press the S1 button again to flash the second minute digit. Advance with the S2 button.

To turn AL2 on and off, push the S3 button twice from normal time mode. AL2 will appear on the screen. Push the S2 button to toggle between on and off.

**CHIME SETTINGS**

To turn the chime on and off, hold the S2 button down in normal time mode. While holding the S2 button down, press the S1 button to turn on the chime, represented by a "bell" icon. Press the S1 button again to turn off the chime.

**USING THE CHRONOGRAPH**

In normal time mode, press the S3 button three times to enter the chronograph mode. Push the S2 button to start and stop the chronograph. To record a lap time, press the S1 button while the chronograph is running. The lap time will appear on the display while the chronograph continues to run. Press the S1 button again to return to the chronograph. When the chronograph is stopped, press the S1 button to reset it back to zero.

**HOW TO OPERATE THE NIGHT VISION™**

Press the LIGHT button to activate the Night Vision™ illumination. The light will remain illuminated for approximately four seconds.

**CARE AND MAINTENANCE**

1. Back case cover should only be removed by an authorized watch repair specialist.
2. Always rinse your watch in fresh water after immersion in salt or chlorinated water.
3. Do not expose watch or band to chemicals such as gasoline, aerosol sprays, paint or solvents.
4. Periodically clean with a soft cloth and fresh water.

**WARRANTY INFORMATION**

FreeStyle warrants, to the original purchaser, that its watches are free from defects in materials and workmanship for a period of ten (10) years under normal use. The warranty excludes batteries, crystal, watch case plating, and strap/bracelet/ band. The warranty excludes normal wear and tear and abuse.

Special note: FreeStyle® watches are designed and engineered to be highly water-resistant, and to withstand the most active of lifestyles. The most important component in keeping your watch water-resistant is the case back O-ring, which prevents water from entering the watch through the case back.

Water leakage most often occurs after improper battery replacement. We strongly recommend having a certified jeweler, watch repair technician or FreeStyle's service center replace your battery. Water leakage due to improper battery replacement is not covered under warranty.

Should your FreeStyle® watch require warranty service, send it along with the following:

1. A copy of your sales receipt
2. Your printed name and address
3. Your telephone number
4. A brief description of the problem

5. Include \$8.50 for processing and handling, using one of the following payment methods:

- Check
- Money order
- Credit card (be sure to include card number and expiration date)

**REMEMBER: NEVER INCLUDE A SPECIAL WATCHBAND OR ANY OTHER PERSONAL ARTICLES OF VALUE IN YOUR SHIPMENT.**

Send to the following address:

FreeStyle  
Attn: Individual Returns  
47-50 33rd Street  
Long Island City, NY, 11101

Phone: 718-729-8890

Please allow 30 days for return of your watch.

Neither this warranty, nor any other warranty expressed, is assumed for any incidental or consequential damages, including but not limited to the mathematical accuracy of the product. Some states do not allow limitations on how long an implied warranty lasts, or the exclusions of or limitations on consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

This warranty applies to watches purchased in the United States. For watches purchased outside the United States, please contact your authorized FreeStyle® dealer for warranty information.

If your watch requires servicing not covered under our warranty (battery, crystal, strap/bracelet/band, watch case plating), or refurbishing, complete the return form (next column) and return with your watch. Be sure to include a check, money order or credit card information for desired replacement parts. Please include \$8.50 for processing and handling.

Visit our website at:  
[www.freestyleusa.com](http://www.freestyleusa.com)



# Freestyle

Freestyle  
Attn: Individual Returns  
47-50 33rd Street  
Long Island City, NY. 11101

Phone# 718-729-8890

Battery	\$ 4.00
Case	10.00
Bezel	6.00
Band(Polyurethane)	12.00
Band(Nylon)	7.00
California residents add 7.25% tax	
Processing and handling	8.50
Total	\$ <u>          </u>

Check or Money Order  
Master Card  
Visa

Account# \_\_\_\_\_ Expiration Date \_\_\_\_\_

Printed Name \_\_\_\_\_

Address \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Phone Number \_\_\_\_\_

Signature \_\_\_\_\_