



Freestyle®
904 TARGA
WATCH INSTRUCTIONS

FEATURES:

- CURRENT TIME
- DAY/MONTH/DATE
- CHRONOGRAPH WITH SPLIT FUNCTION
- ALARM AND HOURLY CHIME FUNCTIONS
- OPTIONAL 24-HR. TIME
- WATER-RESISTANT TO 330 FT./100M
- NIGHT VISION™ ELECTRO-LUMINESCENT BACKLIGHTING

KEY REFERENCES



HOW TO SET TIME, DATE AND 24-HOUR FORMAT

From TIME mode: the MODE button three times to enter the time setting mode.

Pressing the ST/SP button resets the seconds to zero. Press RESET button to change to the next item. The setting sequence will be a cycle by seconds, hours, minutes, month, date and day of week. Pressing the ST/SP button to adjust the flashing digits. After the time and date have been set, press the MODE button to return to normal TIME mode.



To view the time in 24-hour format, simply press the ST/ STP button. A "24" icon would indicate that you are in this mode.

HOW TO SET THE ALARM

In TIME mode, press the MODE button once to enter the ALARM mode.

To set the the daily alarm, press RESET button for two seconds to enter into the ALARM setting mode.

First minutes will be set and flashing.

Press RESET button to change to the next item, setting sequence will be a cycle by minute, hour, month and date.

Press the ST/STP button to adjust the flashing digits. Once everything has been set press EL/SET button to exit the Alarm Setting Mode.

To turn on the alarm, press the ST/STP button until the "ALM" symbol shows. To turn on the hourly chime press the ST/STP button until the "■■■■" symbol shows.

STOPWATCH MODE

In TIME mode, press MODE button twice to enter the STOPWATCH mode.

To measure elapsed time, press the ST/STP button to start the counter. Press the ST/STP button to stop the counter.

To view split times, press the RESET button while the counter is running. Press the RESET button again to resume the counter.

To reset the chronograph, press the RESET button when the counter is stopped.

HOW TO OPERATE THE NIGHT VISION™ ELECTRO-LUMINESCENT BACKLIGHT

Press the EL/SET button to activate the Night Vision™ electro-luminescent backlight. The light will remain illuminated for approximately four seconds.

CARE AND MAINTENANCE

1. Back case cover should only be removed by an authorized watch repair specialist.
2. Always rinse your watch in fresh water after immersion in salt or chlorinated water.
3. Do not expose watch or band to chemicals such as gasoline, aerosol sprays, paint or solvents.
4. Periodically clean with a soft cloth and fresh water.

WARRANTY INFORMATION

Freestyle U.S.A. warrants, to the original purchaser, that its watches are free from defects in materials and workmanship for a period of ten (10) years under normal use. The warranty excludes batteries, crystal, watch case plating, and strap/bracelet/ band. The warranty excludes normal wear and tear and abuse.

Special note: Freestyle® watches are designed and engineered to be highly water-resistant, and to withstand the most active of lifestyles. The most important component in keeping your watch water-resistant is the case back O-ring, which prevents water from entering the watch through the case back.

Water leakage most often occurs after improper battery replacement. We strongly recommend having a certified jeweler, watch repair technician or Freestyle's service center replace your battery. Water leakage due to improper battery replacement is not covered under warranty.

Should your Freestyle® watch require warranty service, send it along with the following:

1. A copy of your sales receipt
2. Your printed name and address
3. Your telephone number
4. A brief description of the problem
5. Please include \$8.50 for processing and handling, using one of the following payment methods:

- Check
- Money order
- Credit card (be sure to include card number and expiration date)

REMEMBER: NEVER INCLUDE A SPECIAL WATCHBAND OR ANY OTHER PERSONAL ARTICLES OF VALUE IN YOUR SHIPMENT.

Send to the following address:

Freestyle
Attn: Individual Returns
47-50 33rd Street
Long Island City, NY 11101

(718)-729-8890

Please allow 30 days for return of your watch.

Neither this warranty, nor any other warranty expressed, is assumed for any incidental or consequential damages, including but not limited to the mathematical accuracy of the product. Some states do not allow limitations on how long an implied warranty lasts, or the exclusions of or limitations on consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

This warranty applies to watches purchased in the United States. For watches purchased outside the United States, please contact your authorized Freestyle® dealer for warranty information.

If your watch requires servicing not covered under our warranty (battery, crystal, strap/bracelet/band, watch case plating), or refurbishing, complete the return form (next column) and return with your watch.

Visit our website at:
www.freestyleusa.com

