

TIMEX®

Register your product at
www.timex.com

W-163 120-095007 NA



THANK YOU FOR PURCHASING YOUR TIMEX® WATCH.

EXTENDED WARRANTY

Available in U.S. only. Extend your warranty for an additional 4 years from date of purchase for \$5. You can pay with AMEX, Discover, Visa or MasterCard by calling 1 800-448-4639 during normal business hours. Payment must be made within 30 days of purchase. Name, address, telephone number, purchase date, and 5-digit model number required. You can also mail a check for \$5 to: Timex Extended Warranty, P.O. Box 1676, Dept. EF, Little Rock, AR 72203.


Please read instructions carefully to understand how to operate your Timex® watch.

Your model may not have all of the features described in this booklet.

FEATURES

- Time and date display • Daily alarm • Chronograph • Hourly chime

BASIC OPERATIONS

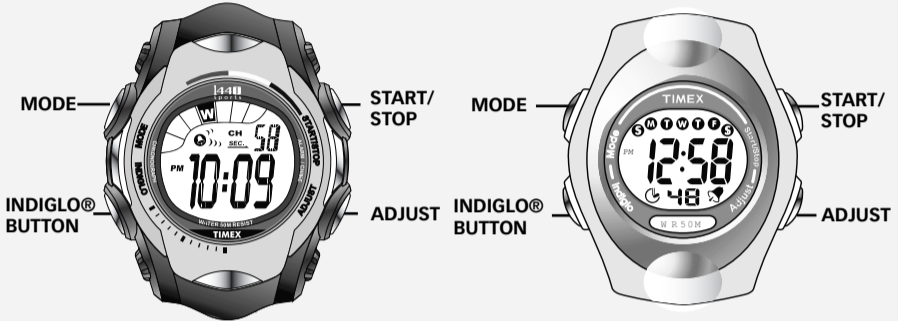

Press **MODE** to set time, date and alarm or enter Chrono Mode. Press **INDIGLO®** button to illuminate watch face. In any mode, press **MODE** to view time display. Press any button to stop alarm beeps.

TIME AND DATE

- Press and hold **MODE** until HOURS digits flash (you'll be in Alarm Mode). Press **MODE** again to enter TIME mode. SECONDS digits will flash.
- Press **ADJUST** to set SECONDS to zero.
- Press **START/STOP** to select MINUTES.
- Press **ADJUST** to change.
- Repeat to set HOURS, MONTH, DATE, and DAY of WEEK. Go through 12 hours to set AM or PM.
- Press **MODE** when done.
- To display DATE from TIME display, press **START/STOP**.
- With DATE displayed, press and hold **START/STOP**, then press **ADJUST** to change display between DATE-MONTH and MONTH-DATE.
- With TIME displayed, press and hold **ADJUST**, then press **MODE** to switch between 12- and 24-hour format.

ALARM AND HOURLY CHIME

- Press and hold **MODE** until HOURS digits, DAY, and A or P (for AM or PM) flash.
- Press **ADJUST** to change HOURS digits. Go through 12 hours for AM or PM.
- Press **START/STOP** to select MINUTES.
- Press **ADJUST** to change. Press **MODE** when done.
- Press and hold **ADJUST**, then press **START/STOP** to turn chime on/off. Press **START/STOP** again to turn alarm on/off. Release **START/STOP** when done.

When alarm time is reached, watch will beep until a button on the watch is pushed. Alarm will repeat every 24 hours until deactivated.

☀, ☁, or 🌙 will appear in display when alarm is on. CH or 🕒 will appear in display when hourly chime is on.

CHRONOGRAPH

Chronograph will count up to 24 hours. Lap times are not stored. After 40 minutes chrono display changes from seconds to minutes.

- With time displayed, press **MODE** to select Chrono Mode.
- Press **START/STOP** to start.
- Press **ADJUST** to view lap time. Press again to resume lap timing.
- Press **START/STOP** to stop timing. Press **ADJUST** to reset chrono to zero.
- Repeat for successive laps.

INDIGLO® NIGHT-LIGHT

Press **INDIGLO®** button to activate light.

Electroluminescent technology used in the INDIGLO® night-light illuminates watch face at night and in low light conditions.

WATER RESISTANCE

If your watch is water-resistant, meter marking or (≡) is indicated.


Water-Resistance Depth	p.s.i.a.* Water Pressure Below Surface
30m/98ft	60
50m/164ft	86

*pounds per square inch absolute

WARNING: TO MAINTAIN WATER-RESISTANCE, DO NOT PRESS ANY BUTTONS UNDER WATER.

- Watch is water-resistant only as long as lens, push buttons and case remain intact.
- Watch is not a diver watch and should not be used for diving.
- Rinse watch with fresh water after exposure to salt water.

FASTWRAP® STRAP ADJUSTMENT

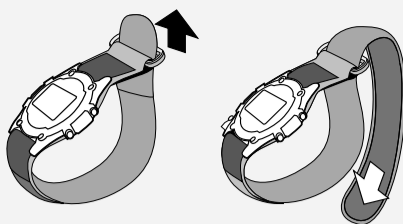

BATTERY

Timex strongly recommends that a retailer or jeweler replace battery. Battery type is on watch back. If present, push/short internal reset switch after replacing battery. Battery life estimates are based on certain assumptions regarding usage; battery life may vary depending on actual usage.

DO NOT DISPOSE OF BATTERY IN FIRE. DO NOT RECHARGE. KEEP LOOSE BATTERIES AWAY FROM CHILDREN.

TIMEX INTERNATIONAL WARRANTY

(U.S. – LIMITED WARRANTY – PLEASE SEE FRONT OF INSTRUCTION BOOKLET FOR TERMS OF EXTENDED WARRANTY OFFER)

Your TIMEX® watch is warranted against manufacturing defects by Timex Corporation for a period of ONE YEAR from the original purchase date. Timex and its worldwide affiliates will honor this International Warranty.

Please note that Timex may, at its option, repair your watch by installing new or thoroughly reconditioned and inspected components or replace it with an identical or similar model. **IMPORTANT — PLEASE NOTE THAT THIS WARRANTY DOES NOT COVER DEFECTS OR DAMAGES TO YOUR WATCH:**

- 1) after the warranty period expires;
- 2) if the watch was not originally purchased from an authorized Timex retailer;
- 3) from repair services not performed by Timex;
- 4) from accidents, tampering or abuse; and
- 5) lens or crystal, strap or band, watch case, attachments or battery. Timex may charge you for replacing any of these parts.

THIS WARRANTY AND THE REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE. TIMEX IS NOT LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some countries and states do not allow limitations on implied warranties and do not allow exclusions or limitations on damages, so these limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from country to country and state to state.

To obtain warranty service, please return your watch to Timex, one of its affiliates or the Timex retailer where the watch was purchased, together with a completed original Watch Repair Coupon or, in the U.S. and Canada only, the completed original Watch Repair Coupon or a written statement identifying your name, address, telephone number and date and place of purchase. Please include the following with your watch to cover postage and handling (this is not a repair charge): a US\$ 7.00 check or money order in the U.S.; a CANS\$6.00 cheque or money order in Canada; and a UK£2.50 cheque or money order in the U.K. In other countries, Timex will charge you for postage and handling. NEVER INCLUDE A SPECIAL WATCHBAND OR ANY OTHER ARTICLE OF PERSONAL VALUE IN YOUR SHIPMENT.

For the U.S., please call 1-800-448-4639 for additional warranty information. For Canada, call 1-800-263-0981. For Brazil, call +55 (11)5572-9733. For Mexico, call 01-800-01-060-00. For Central America, the Caribbean, Bermuda and the Bahamas, call (501) 370-5775 (U.S.). For Asia, call 852-2815-0091. For the U.K., call 44 020 8687 9620. For Portugal, call 351 212 946 017. For France, call 33 3 81 63 42 00. For Germany, call 49 7 231 494140. For the Middle East and Africa, call 971-4-310850. For other areas, please contact your local Timex retailer or Timex distributor for warranty information. In Canada, the U.S. and in certain other locations, participating Timex retailers can provide you with a postage-paid, pre-addressed Watch Repair Mailer for your convenience in obtaining factory service.

©2007 Timex Corporation. TIMEX and FAST-WRAP are registered trademarks of Timex Corporation. INDIGLO is a registered trademark of Indiglo Corporation in the U.S. and other countries.