


# Armitron®

## WORLD CLASS™

### WATCH INSTRUCTIONS

#### 6P00, 6P05 AND 6P89

20/1381BLU, 20/1414, 20/1415, 20/1457BLK, 20/1531GMG,  
20/1568, 20/1569, 20/1587BLU, 20/1599, 20/1652, 20/1691, 20/1697, 20/1707, 20/1719, 20/1723BLU,  
20/1775BLU, 20/1841, 20/1849, 20/1949BLU

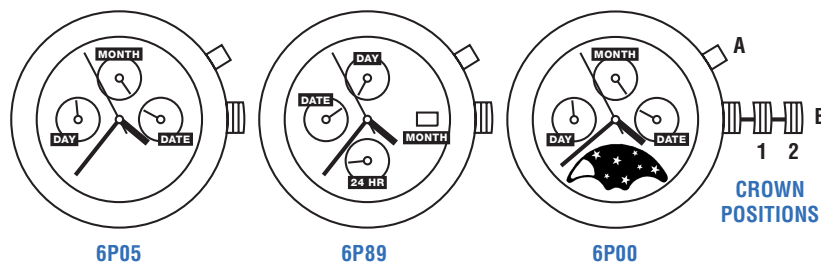

#### FEATURES OF 6P00, 6P05 AND 6P89

- Hours, Minutes, Seconds, Month, Date and Day of the Week are displayed
- Month/Date/Day Sub Dials
- Water Resistant as indicated on the watch

#### ADDITIONAL FEATURE OF 6P00

- 29.5 Day Moon Phase

#### ADDITIONAL FEATURE OF 6P89

- 24 Hour (Military Time) Sub Dial

#### SETTING FEATURES

1. To advance the Day, pull the Crown ('B') out to Position 2 and rotate the Crown clockwise. Push the Crown in when desired Day is obtained.
2. To advance the Date, pull the Crown ('B') out to Position 1 and rotate the Crown counter clockwise. Push Crown in when desired Date is obtained.
3. To advance the Hour and Minutes, pull the Crown ('B') out to Position 2 when the Second Hand is at 12 O'clock. Rotate the Crown clockwise until the Minute hand points to 5 Minutes earlier than the time to be set, then turn the Crown back to the correct time. Push Crown in when desired Time is obtained.
4. To advance the Month, push in 'A'.

#### CHANGING THE BATTERY

Change the battery when the watch becomes slow or does not operate. It is not necessary to return your watch to Armitron for battery replacement. However, it is recommended that you bring your watch to a local jeweler. Some important facts to remember when changing the battery are: (1) before removing the battery, be sure to denote polarity so that the new battery is installed exactly the same way and (2) replace with same or equivalent.

NOTE: BATTERIES ARE NOT COVERED UNDER THE WARRANTY.

Dear Customer:

Help your watch/jewelry retailer protect our environment by properly recycling the button cell battery in your watch. Professional jewelers and watch retailers are best equipped to replace the battery in your watch without damage to the watch case and movement inside. They have the specialized tools and experience to do the job right. Inexperienced people can scar the case and damage the water resistant seal – voiding your warranty.

It is important to recycle your watch battery in an environmentally safe way. Watch batteries contain very small amounts of mercury, which is required to prevent corrosion of the battery and damage to your watch. There is no danger to you or your watch from the mercury because it is in the sealed battery. But you need to recycle your watch battery properly. Your professional watch/jewelry retailer is the best person to do this for you. These professionals collect used batteries and recycle them through licensed waste management companies.

Do our environment and your watch a favor. Ask your watch/jewelry professional to replace your battery when it expires.

#### MOON PHASE SETTING (For 6P00 Only)

To set the dial to the correct Moon Phase, pull the Crown ('B') out to Position 1 and slowly rotate the Crown clockwise. Observe how the Moon moves across the dial. About every turn should produce a single, distinct movement of the Moon in a clockwise position. Each movement represents one day (24 hours). During a normal 24 hour period, (while the watch is working) the Moon will move in a clockwise direction.

See Chart below to accurately set the correct Phase of the Moon. Push Crown in when desired Moon Phase is obtained.

#### PHASES OF THE MOON



#### MOON PHASE CALENDAR

MONTH	2005		2006		2007	
	Full	New	Full	New	Full	New
January	25	10	14	29	3	19
February	24	8	13	28	2	17
March	25	10	14	29	3	19
April	24	8	13	27	2	17
May	23	8	13	27	2	16
June	22	6	11	25	1, 30	15
July	21	6	11	25	30	14
August	19	5	9	23	28	12
September	18	3	7	22	26	11
October	17	3	7	22	26	11
November	16	2	5	20	24	9
December	15	1, 31	5	20	24	9

#### WATER RESISTANCE


This Watch is Water Resistant to the depth specified on the back of the watch. DO NOT SUBMERGE IN WATER DEEPER THAN THAT SPECIFIED ON THE CASE BACK OF THE WATCH. If there are no markings, either on the front dial or case back of the watch to indicate water resistance, do not submerge the watch in water.

# Armitron®

## WATCH INSTRUCTIONS

6P29

20/1883BLK, 20/1891BLK, 20/1905GMG, 20/1952, 20/1953, 20/4141BLK, 20/4169BKBK, 20/4017GRY,  
20/4117BLK, 20/4121BLU, 20/4123BLU, 20/4127BLK, 20/4147BLU, 20/4163WHT

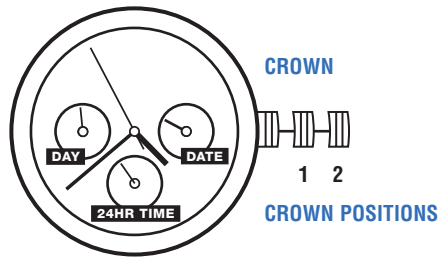

### FEATURES

- HOURS, MINUTES, SECONDS
- DAY OF THE WEEK, DATE AND 24 HOUR MILITARY TIME SUB DIALS
- WATER RESISTANT AS INDICATED ON THE WATCH

### SETTING THE FEATURES

1. To advance the Hour and Minutes, pull the crown out to position "2" when the second hand reaches the 12 o'clock position so that the second hand stops there. Then set the hour and minute hands to the desired time. When setting the minute hand, put it 5 minutes later than the time to be set, and then turn it back to the correct time. Note that the 24 hour military sub dial time zone also changes at the time of setting. Make sure that the 24 hour military time zone corresponds to the correct AM/PM TIME. Push in crown when desired time is obtained.
2. To advance the day, pull the crown out to position "2" and turn clockwise. Each full 24 hour turn will advance the day zone by one full day. Make sure that you then set the correct time with the corresponding 24 hour military time. Push in crown when desired day and correct time is obtained.
3. To Advance the date, pull the crown out to position "1." Rotate crown counter clockwise to advance the date. Push in the crown when desired date is obtained. Do not set the date between 9PM and Midnight as it will not change correctly.

### WATER RESISTANCE

This Watch is Water Resistant to the depth specified on the back of the watch. DO NOT SUBMERGE IN WATER DEEPER THAN THAT SPECIFIED ON THE CASE BACK OF THE WATCH. If there are no markings, either on the front dial or case back of the watch to indicate water resistance, do not submerge the watch in water.

### CHANGING THE BATTERY

Change the battery when the watch becomes slow or does not operate. It is not necessary to return your watch to Armitron for battery replacement. However, it is recommended that you bring your watch to a local jeweler. Some important facts to remember when changing the battery are: (1) before removing the battery, be sure to denote polarity so that the new battery is installed exactly the same way and (2) replace with same or equivalent.

NOTE: BATTERIES ARE NOT COVERED UNDER THE WARRANTY.

Dear Customer:

Help your watch/jewelry retailer protect our environment by properly recycling the button cell battery in your watch. Professional jewelers and watch retailers are best equipped to replace the battery in your watch without damage to the watch case and movement inside. They have the specialized tools and experience to do the job right. Inexperienced people can scar the case and damage the water resistant seal – voiding your warranty.

It is important to recycle your watch battery in an environmentally safe way. Watch batteries contain very small amounts of mercury, which is required to prevent corrosion of the battery and damage to your watch. There is no danger to you or your watch from the mercury because it is in the sealed battery. But you need to recycle your watch battery properly. Your professional watch/jewelry retailer is the best person to do this for you. These professionals collect used batteries and recycle them through licensed waste management companies.

Do our environment and your watch a favor. Ask your watch/jewelry professional to replace your battery when it expires.