

# **Nokia 3710 fold User Guide**

<b>Contents</b>	
<b>Safety</b>	<b>3</b>
<b>Get started</b>	<b>4</b>
Keys and parts	4
Insert the SIM card and battery	5
Insert and remove the memory card	7
Charge the battery	8
GSM antenna	9
Accessories	9
<b>Switch it on</b>	<b>10</b>
About your device	10
Network services	11
Access codes	11
Switch the device on and off	12
Home screen	12
Navigate the menus	15
Lock the keys	15
Functions without a SIM card	15
Flight profile	15
<b>Support and updates</b>	<b>16</b>
Support	16
My Nokia	16
Download content	17
Update device software using your PC	17
Software updates over the air	17
Restore factory settings	18
<b>Make it your device</b>	<b>18</b>
Basic settings	18
Personalise your device	19
Connect	22
Network provider services	24
<b>Stay in touch</b>	<b>26</b>
Make calls	26
Text and messages	29
Mail and Instant Messaging	33
<b>Image and video</b>	<b>38</b>
Capture images	38
Record video clips	39
Camera and video settings	39
Gallery	40
Print images	41
Share images and video clips online	41
Memory card	41
<b>Entertainment</b>	<b>42</b>
Listen to music	42
Web	46
Games and applications	49
<b>Maps</b>	<b>49</b>
About Maps	50
Nokia Map Loader	50
About GPS	51
GPS receiver	51
Navigate to your destination	51
<b>Organise</b>	<b>52</b>
Manage contacts	52
Business cards	54
Date and time	54
Alarm clock	54
Calendar	54
To-do list	55
Notes	55
Nokia PC Suite	56
Calculator	56
Countdown timer	56
Stopwatch	56
<b>Green tips</b>	<b>57</b>
Save energy	57
Recycle	57
Learn more	57
<b>Product and safety information</b>	<b>57</b>
<b>Index</b>	<b>64</b>

## Safety

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.

### SWITCH ON SAFELY



Do not switch the device on when wireless phone use is prohibited or when it may cause interference or danger.

### ROAD SAFETY COMES FIRST



Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

### INTERFERENCE



All wireless devices may be susceptible to interference, which could affect performance.

### SWITCH OFF IN RESTRICTED AREAS



Follow any restrictions. Switch the device off in aircraft, near medical equipment, fuel, chemicals, or blasting areas.

### QUALIFIED SERVICE



Only qualified personnel may install or repair this product.

### ACCESSORIES AND BATTERIES



Use only approved accessories and batteries. Do not connect incompatible products.

### WATER-RESISTANCE




Your device is not water-resistant. Keep it dry.


## Get started

Get to know your device, insert the battery, SIM card, and memory card, and learn some important information about your device.

### Keys and parts

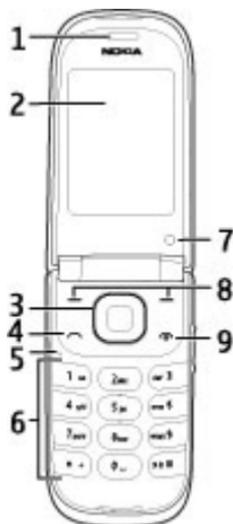

- 1 Earpiece
- 2 Display
- 3 Navi™ key (scroll key)
- 4 Call key
- 5 Microphone
- 6 Keypad
- 7 Secondary camera
- 8 Left and right selection keys
- 9 End/Power key

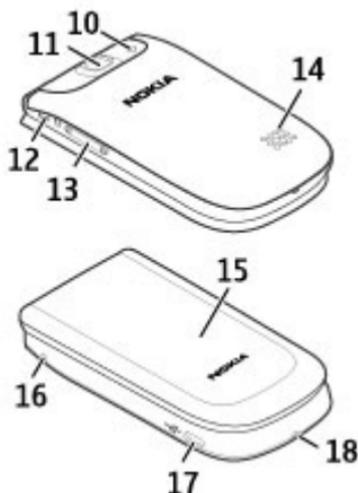

- 10 Camera flash
- 11 Camera lens
- 12 Nokia AV Connector (2.5 mm)
- 13 Volume keys
- 14 Loudspeaker
- 15 Hidden display
- 16 Charger connector
- 17 Micro USB cable connector
- 18 Wrist strap eyelet

### Insert the SIM card and battery



**Note:** Switch off the power and disconnect the charger and any other device before removing the covers. Avoid touching electronic components while changing the covers. Always store and use the device with the covers attached.

The SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting, or removing the card.


- 1 Open the back cover, and remove it.



- 2 Remove the battery.



- 3 Open the SIM card holder. Insert the SIM card into the holder with the bevelled corner facing down and the contact surface area facing toward the contacts of the device. The side with the bevelled corner fits below the rim of the device. Close the SIM card holder.

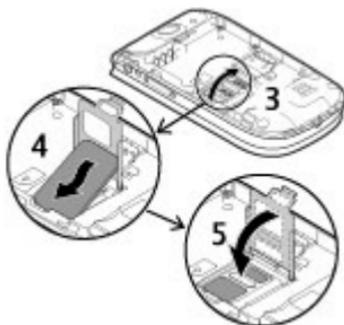

- 4 Line up the battery contacts, and insert the battery.



- Place the battery cover on the device, that the hooks at the upper part of the cover are aligned with the corresponding recesses on the device. Slide the back cover to close it.



### Insert and remove the memory card



Use only compatible microSD cards approved by Nokia for use with this device. Nokia uses approved industry standards for memory cards, but some brands may not be fully compatible with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.

Your device supports microSD cards with a capacity of up to 8 GB. The size of a single file must not exceed 2 GB.

#### Insert the memory card



- Switch the device off, and remove the back cover and battery.
- Slide the memory card holder inwards to unlock.

## 8 Get started

---

- 3 Open the card holder, and insert the memory card into the holder with the contact surface facing inwards.
- 4 Close the card holder, and slide it to lock.
- 5 Replace the battery and back cover.

### Remove the memory card

- 1 Remove the back cover and the battery.
- 2 Open the memory card holder, and remove the memory card. Close the memory card holder.
- 3 Replace the battery and back cover.

### Charge the battery

Your battery has been partially charged at the factory. If the device indicates a low charge, do the following:

- 1 Connect the charger to a wall outlet.



- 2 Connect the charger to the device.
- 3 When the device indicates a full charge, disconnect the charger from the device, then from the wall outlet.

You can also charge the battery with a USB cable, using power from a computer.

- 1 Connect the USB cable to a USB port of a computer and to your device.
- 2 When the battery is fully charged, disconnect the USB cable.

If the battery is completely discharged, USB charging may not work. Use the charger instead.

You do not need to charge the battery for a specific length of time, and you can use the device while it is charging. If the battery is completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made.

Charging the device while listening to the radio may affect the quality of reception.

## GSM antenna



Your device may have internal and external antennas. Avoid touching the antenna area unnecessarily while the antenna is transmitting or receiving. Contact with antennas affects the communication quality and may cause a higher power level during operation and may reduce the battery life.

The figure shows the GSM antenna area marked in grey.

## Accessories

### Connect a USB cable



## Headset




### Warning:

When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.


When connecting any external device or any headset, other than those approved by Nokia for use with this device, to the Nokia AV Connector, pay special attention to volume levels.

## 10 Switch it on

Do not connect products that create an output signal as this may cause damage to the device. Do not connect any voltage source to the Nokia AV Connector.

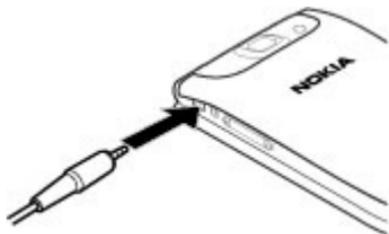

### Strap

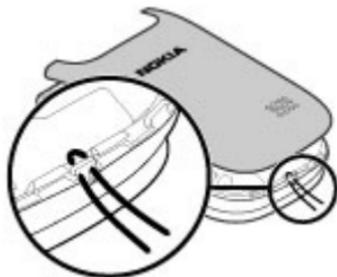

- 1 Open the back cover.
- 2 Thread the strap, and tighten it.
- 3 Close the back cover.

## Switch it on

Learn how to switch on your device, and how to use the basic functions.

### About your device

The wireless device described in this guide is approved for use on the GSM 850, 900, 1800, 1900 and WCDMA 900, 1700-2100, 2100 MHz networks. Contact your service provider for more information about networks.

Your device may have preinstalled bookmarks and links for third-party internet sites and may allow you to access third-party sites. These are not affiliated with Nokia, and Nokia does not endorse or assume liability for them. If you access such sites, take precautions for security or content.

**Warning:**

To use any features in this device, other than the alarm clock, the device must be switched on. Do not switch the device on when wireless device use may cause interference or danger.

When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights. Copyright protection may prevent some images, music, and other content from being copied, modified, or transferred.

Make back-up copies or keep a written record of all important information stored in your device.

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.

The images in this guide may differ from your device display.

Refer to the user guide for other important information about your device.

**Network services**

To use the device you must have service from a wireless service provider. Some features are not available on all networks; other features may require that you make specific arrangements with your service provider to use them. Network services involve transmission of data. Check with your service provider for details about fees in your home network and when roaming on other networks. Your service provider can explain what charges will apply.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, these features will not appear on your device menu. Your device may also have customized items such as menu names, menu order, and icons.

**Access codes**

To set how your device uses the access codes and security settings, select **Menu > Settings and Security > Access codes**.

- The security code helps to protect your device against unauthorised use. The preset code is 12345. You can change the code and set the device to request the code. Some operations require the security code regardless of the settings, for example, if you want to restore the factory settings. Keep the code secret and in a safe place separate from your device. If you forget the code and your device is locked, your device will require service and additional charges may apply. For more information, contact a Nokia Care point or your device dealer.
- The PIN code, supplied with the SIM card, helps to protect the card against unauthorised use.
- The PIN2 code, supplied with some SIM cards, is required to access certain services.

## 12 Switch it on

- PUK and PUK2 codes may be supplied with the SIM card. If you enter the PIN code incorrectly three times in succession, you are asked for the PUK code. If the codes are not supplied, contact your service provider.
- The barring password is required when using the call barring service to restrict calls to and from your device (network service).
- To view or change the security module settings for the browser, select **Menu > Settings and Security > Security module**.

### Switch the device on and off



#### Switch on and off

Press and hold the power key.

#### Enter the PIN code

If requested, enter the PIN code (displayed as \*\*\*\*).

#### Set the time and date


If requested, enter the time and date.

You may be prompted to get the configuration settings from your service provider (network service). For more information, contact your service provider.

#### Home screen

When the device is ready for use, and you have not entered any characters, the device is in the home screen.

## Display

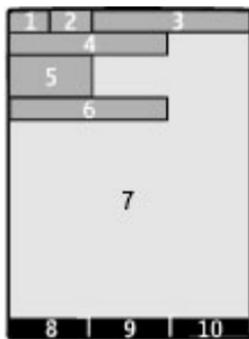

- 1 Signal strength of the cellular network
- 2 Battery charge status
- 3 Indicators
- 4 Name of the network or the operator logo
- 5 Clock
- 6 Date (only if the enhanced home screen is deactivated)
- 7 Display
- 8 Function of the left selection key
- 9 Function of the scroll key
- 10 Function of the right selection key

You can change the function of the left and right selection key. [See "Left and right selection keys", p. 21.](#)

### Enhanced home screen

With the enhanced home screen, you can display a list of selected information and features that you can directly access.

Select **Menu** > **Settings and Display** > **Home screen**.

#### Activate the enhanced home screen

Select **Home screen mode** > **On**.

#### Organise and personalise the enhanced home screen

Select **Personalise view**.

#### Select the key used to activate the enhanced home screen

Select **Home screen key**.

### Navigate in the home screen

Scroll up or down to navigate the list, and select **Select**, **View**, or **Edit**. The arrows indicate that further information is available.

### Stop navigating

Select **Exit**.

### Shortcuts

When your device is in the home screen, you can use shortcuts.

### List missed, received, and dialled calls

Press the call key. To make a call, scroll to the number or name, and press the call key.

### Open the web browser

Press and hold **0**.

### Call the voice mailbox

Press and hold **1**.

### Use other keys as shortcuts

[See "Dialling shortcuts", p. 27.](#)

### Indicators

- |   |   |
|---|---|
|    | You have unread messages.                                     |
|    | You have unsent, cancelled, or failed messages.               |
|    | The keypad is locked.   |
|    | The device does not ring for incoming calls or text messages. |
|    | An alarm is set.  |
|    | The device is registered to the GPRS or EGPRS network.        |
|   | A GPRS or EGPRS connection is open.                           |
|  | The GPRS or EGPRS connection is suspended (on hold).          |
|  | Bluetooth connectivity is activated.                          |
|  | A GPS signal is available.                                    |
|  | No GPS signal available.                                      |
|  | If you have two phone lines, the second line is in use.       |
|  | All incoming calls are diverted to another number.            |
|  | Calls are limited to a closed user group.                     |
|  | The currently active profile is timed.                        |
|  | A headset is connected to the device.                         |
|  | The device is connected to another device, using a USB cable. |

## Navigate the menus

The device offers a range of functions that are grouped into menus.

- 1 To access the menu, select **Menu**.
- 2 Scroll through the menu, and select an option (for example, **Settings**).
- 3 If the selected menu contains further submenus, select one (for example, **Call**).
- 4 Select the setting of your choice.
- 5 To return to the previous menu level, select **Back**.  
To exit the menu, select **Exit**.

## Change the menu view

Select **Options** > **Main menu view**. Scroll right, and select from the available options.

## Rearrange the menu

Select **Options** > **Organise**. Scroll to the menu item to be moved, and select **Move**. Scroll to where you want to move the menu item, and select **OK**. To save the change, select **Done** > **Yes**.

## Lock the keys

Lock the keypad to prevent accidental keypresses.

### Lock the keypad

Select **Menu**, and press \* within 3.5 seconds.

### Unlock the keypad

Select **Unlock**, and press \* within 1.5 seconds. If requested, enter the lock code.

### Answer a call when the keypad is locked

Press the call key. When you end or reject a call, the keypad locks automatically.

Further features are Automatic keyguard and Security keyguard. [See "Phone settings", p. 18.](#)

When the device or keypad is locked, calls may be possible to the official emergency number programmed into your device.

## Functions without a SIM card

Some functions of your device may be used without inserting a SIM card, such as Organiser functions and games. Some functions appear dimmed in the menus and cannot be used.

## Flight profile

In radio sensitive environments, where you are asked not to use your device, you can still access your calendar, contacts list, and offline games by activating the flight profile.

✈ indicates that the flight profile is active.

### Activate the flight profile

Select **Menu > Settings > Profiles and Flight > Activate or Personalise**.

### Deactivate the flight profile

Select any other profile.



#### Warning:

With the Flight profile you cannot make or receive any calls, including emergency calls, or use other features that require network coverage. To make calls, you must first activate the phone function by changing profiles. If the device has been locked, enter the lock code.

If you need to make an emergency call while the device is locked and in the Flight profile, you may be also able to enter an official emergency number programmed in your device in the lock code field and select 'Call'. The device will confirm that you are about to exit Flight profile to start an emergency call.

## Support and updates

Nokia helps you in many ways to gain the most benefit from your device.

### Support

When you want to learn more about how to use your product or you are unsure how your device should function, see the user guide or see the support pages at [www.nokia.com/support](http://www.nokia.com/support) or your local Nokia website, or with a mobile device, [www.nokia.mobi/support](http://www.nokia.mobi/support).

If this does not resolve your issue, do one of the following:

- Restart the device: switch off the device, and remove the battery. After about a minute, replace the battery, and switch on the device.
- Restore the original factory settings as explained in the user guide.
- Update your device software regularly for optimum performance and possible new features, as explained in the user guide.

If your issue remains unsolved, contact Nokia for repair options. See [www.nokia.com/repair](http://www.nokia.com/repair). Before sending your device for repair, always back up the data in your device.

### My Nokia

Select **Menu > Applications > Extras > Collection > My Nokia**.

My Nokia is a free service that regularly sends you text messages containing tips, tricks, and support for your Nokia device. It also allows you to browse the My Nokia site where

you can find details about Nokia devices and download tones, graphics, games, and applications.

To use the My Nokia service, it must be available in your country and supported by your service provider. You must sign up to use the service. Call charges apply when you send messages to sign up or unsubscribe. For terms and conditions, see the documentation supplied with your device, or [www.nokia.com/mynokia](http://www.nokia.com/mynokia).

### Download content

You may be able to download new content (for example, themes) to your device (network service).



**Important:** Use only services that you trust and that offer adequate security and protection against harmful software.

For the availability of different services and pricing, contact your service provider.

### Update device software using your PC

You can use the Nokia Software Updater PC application to update your device software. To update your device software, you need a compatible PC, a high-speed internet connection, and a compatible USB data cable to connect your device to the PC.

To get more information and to download the Nokia Software Updater application, go to [www.nokia.com/softwareupdate](http://www.nokia.com/softwareupdate).

### Software updates over the air

Your service provider may send device software updates over the air directly to your device (network service). This option may not be available, depending on your device.

Downloading software updates may involve the transmission of large amounts of data (network service).

Make sure that the device battery has enough power, or connect the charger before starting the update.



### Warning:

If you install a software update, you cannot use the device, even to make emergency calls, until the installation is completed and the device is restarted. Be sure to back up data before accepting installation of an update.

### Request a software update

- 1 Select **Menu** > **Settings and Phone** > **Phone updates** to request available software updates from your service provider.
- 2 Select **Current sw details** to display the current software version and check whether an update is needed.

## 18 Make it your device

---

- 3 Select **Downl. phone sw** to download and install a software update. Follow the instructions.
- 4 If the installation was cancelled after the download, select **Install sw update** to start the installation.

The software update may take several minutes. If there are problems with the installation, contact your service provider.

### Restore factory settings

To restore the device back to the factory settings, select **Menu > Settings > Rest. fact. sett.** and from the following:

**Settings only** — Reset all preference settings without deleting any personal data.

**All** — Reset all preference settings, and delete all personal data, such as contacts, messages, media files, and activation keys.

## Make it your device

Set up your device, personalise it, and connect it in several ways.

### Basic settings

#### Phone settings

Select **Menu > Settings and Phone**.

Select from the following:

**Language settings** — To set the language of your device, select **Phone language** and a language. To set the language of your device according to the information on the SIM card, select **Phone language > Automatic**.

**Memory status** — View the memory consumption.

**Automatic keyguard** — Set the keypad to lock automatically after a preset time delay when the device is in the home screen and no function has been used.

**Security keyguard** — Set the device to prompt for the security code to unlock the keypad.

**Voice recognition** — Set up voice commands, or start voice recognition training.

**Flight query** — Set the device to prompt for the flight profile when you switch the device on. In the flight profile, all radio connections are closed.

**Phone updates** — Allow software updates from your service provider (network service). The available options may vary.

**Network mode** — To use GSM and (when available) 3G networks, select **Dual mode**. This option is not available during an active call.

**Operator selection** — Manually select which network to use.

**Help text activation** — Set the device to display help text.

**Start-up tone** — Play a tone when you switch the device on.

**Fold close handling** — Select the behaviour of the device when the fold is closed.

**Confirm SIM actions** — Access additional network services from your SIM card. This option may not be available, depending on your SIM card.

## Security settings

Select **Menu > Settings and Security**.

When security features that restrict calls are in use (such as call barring, closed user group, and fixed dialling), calls may be possible to the official emergency number programmed into your device. Call barring and call diverting cannot be active at the same time.

Select from the following:

**PIN code request** or **UPIN code request** — Set the device to request for the PIN or UPIN code every time the device is switched on. Some SIM cards do not allow the code request to be deactivated.

**Call barring service** — Restrict incoming calls to and outgoing calls from your device (network service). A barring password is required.

**Fixed dialling** — Restrict your outgoing calls to selected phone numbers if supported by your SIM card. When fixed dialling is activated, GPRS connections are not possible except while sending text messages over a GPRS connection. In this case, the recipient's phone number and the message centre number must be included in the fixed dialling list.

**Closed user group** — Define a group of people whom you can call and who can call you (network service).

**Security level** — To request the security code whenever a new SIM card is inserted into the device, select **Phone**.

**Access codes** — Change the security code, PIN code, UPIN code, PIN2 code, or barring password.

**PIN2 code request** — Set the device to request the PIN2 code when using a specific device feature protected by the PIN2 code. Some SIM cards do not allow the code request to be deactivated. This option may not be available depending on your SIM card. For details, contact your service provider.

**Code in use** — Display and select the type of PIN code to be used.

**Auth. certificates** or **User certificates** — View the list of the authority or user certificates available on your device.

**Security module** — View Sec. module details, activate **Module PIN request**, or change the module PIN and signing PIN.

## Personalise your device

Give your device a personal touch with ringing tones, display backgrounds, and themes. Add shortcuts for your preferred features, and attach enhancements.

### Profiles

Your device has several profiles, which you can customise.

Select **Menu > Settings and Profiles**.

Select the desired profile and from the following:

**Activate** — Activate the profile.

**Personalise** — Modify profile settings.

**Timed** — Set the profile to be active for a certain period of time. When the time set for the profile expires, the previous profile that was not timed becomes active.

### Themes

With themes, you can personalise your device.

Select **Menu > Settings and Themes**.

#### Select a theme

Select **Select theme > Themes** and a theme.

#### Download more themes

Select **Theme downld..**

### Tones

You can modify the tone settings of the currently active profile.

Select **Menu > Settings and Tones**. You can find the same settings in the Profiles menu.

### Lights

You can activate or deactivate light effects associated with different device functions.

Select **Menu > Settings and Lights**.

### Display

Select **Menu > Settings and Display**.

Select from the following:

**Wallpaper** — Add a background image to the home screen.

**Home screen** — Activate, organise, and personalise the home screen.

**Home scr. font col.** — Select the font colour for the home screen.

**Navigat. key icons** — Display the scroll key icons in the home screen.

**Notification details** — Display details in missed call and message notifications.

**Fold animation** — Display an animation when you open or close the fold.

**Main menu view** — Select the layout of the main menu.

**Font size** — Set the font size for messaging, contacts, and web pages.

**Operator logo** — Display the logo of the currently selected operator.

**Cell info display** — Display the cell identity, if available from the network.

### My shortcuts

With personal shortcuts, you get quick access to frequently used functions of your device. Select **Menu > Settings and My shortcuts**.

### Left and right selection keys

To change the function assigned to the left or right selection key, select **Left selection key** or **Right selection key**, and the desired function.

In the home screen, if the left selection key is **Go to**, to add, remove, or reorganise functions, select **Go to > Options > Select options** or **Organise**.

### Other shortcuts

Select from the following:

**Navigation key** — Assign other functions from a predefined list to the scroll key.

**Home screen key** — Select the movement of the scroll key to activate the home screen.

### Assign dialling shortcuts

Create shortcuts by assigning phone numbers to the number keys 3-9.

- 1 Select **Menu > Contacts > Speed dials**, and scroll to a number key.
- 2 Select **Assign**, or, if a number has already been assigned to the key, select **Options > Change**.
- 3 Enter a number or search for a contact.

### Voice commands

You can use voice commands to make phone calls, launch applications, and activate profiles. Voice commands are language-dependent.

Select **Menu > Settings and Phone**.

### Set the language

Select **Language settings > Phone language** and the language.

### Train voice recognition to your voice

Select **Voice recognition > Voice training**.

### Activate a voice command for a function

Select **Menu > Settings > Phone > Voice recognition > Voice commands**, a feature, and the function.  indicates that the voice command is activated. If  is not displayed, select **Add**.

### Play an activated voice command

Select **Play**.

### Use voice commands

See "[Voice dialling](#)", p. 27.

### Rename or deactivate a voice command

Scroll to a function, and select **Options** > **Edit** or **Remove**.

### Activate or deactivate all voice commands

Select **Options** > **Add all** or **Remove all**.

## Connect

Your device provides several features to connect to other devices to transmit and receive data.

### Bluetooth wireless technology

With Bluetooth wireless technology, you can connect your device, using radio waves, to a compatible Bluetooth device within 10 metres (32 feet).

Select **Menu** > **Settings** > **Connectivity** > **Bluetooth**.

This device is compliant with Bluetooth Specification 2.1 + EDR supporting the following profiles: SIM access, object push, file transfer, headset, handsfree, generic access, serial port, generic object exchange, dial-up networking, device ID, phonebook access, service discovery application, advanced audio distribution, audio video remote control, and generic audio/video distribution. To ensure interoperability between other devices supporting Bluetooth technology, use Nokia approved accessories for this model. Check with the manufacturers of other devices to determine their compatibility with this device.

Features using Bluetooth technology increase the demand on battery power and reduce the battery life.

### Set up a Bluetooth connection

- 1 Select **My phone's name**, and enter a name for your device.
- 2 To activate Bluetooth connectivity, select **Bluetooth** > **On**.  indicates that Bluetooth connectivity is active.
- 3 To connect your device to an audio accessory, select **Conn. to audio acc.** and the accessory.
- 4 To pair your device with any Bluetooth device in range, select **Paired devices** > **Add new device**.
- 5 Scroll to a found device, and select **Add**.

- 6 Agree on a passcode (up to 16 characters) with the user of the other device and enter the passcode on your device. To establish the connection, enter the passcode on the other device, when requested.

Operating the device in hidden mode is a safer way to avoid malicious software. Do not accept Bluetooth connectivity from sources you do not trust. Alternatively, switch off the Bluetooth function. This does not affect other functions of the device.

### Connect your PC to the internet

You can use Bluetooth technology to connect your compatible PC to the internet without the PC Suite software. Your device must be able to connect to the internet (network service), and your PC must support Bluetooth technology.

- 1 Make sure that your device can connect to the internet.
- 2 Pair your device with your PC using Bluetooth connectivity. Your device automatically opens a packet data connection to the internet.

### USB data cable

You can use the USB data cable to transfer data between your device and a compatible PC or a printer supporting PictBridge.

### Select USB mode

To activate the device for data transfer or image printing, connect the USB data cable, and select from the following:

**PC Suite** — Use Nokia PC Suite on your PC.

**Printing & media** — Use your device with a PictBridge compatible printer or with a compatible PC.

**Data storage** — Connect to a PC that does not have Nokia software, and use your device as data storage

### Change USB mode

Select **Menu** > **Settings** > **Connectivity** > **USB data cable** and the desired USB mode.

### Connect a USB device

You can connect a USB storage device (for example, a memory stick) to your device and browse the file system and transfer files.

- 1 Connect a compatible adapter cable to the USB port of your device.
- 2 Connect the USB storage to the adapter cable.
- 3 Select **Menu** > **Gallery** and the USB device.

Not all USB storage devices are supported, depending on their power consumption.

### Synchronisation and backup

Select **Menu** > **Settings** > **Sync & backup** > **Synchronisation** and from the following:

**Phone switch** — Synchronise or copy selected data between your device and another device using Bluetooth technology.

**Create backup** — Create a backup of selected data.

**Restore backup** — Select a stored backup file, and restore data to the device. Select **Options > Details** for information about the selected backup file.

**Data transfer** — Synchronise or copy selected data between your device and another device, PC, or network server (network service).

### Packet data

General packet radio service (GPRS) is a network service that allows mobile devices to send and receive data over an internet protocol (IP) based network.

Select **Menu > Settings and Connectivity > Packet data > Packet data conn..**

Select from following:

**When needed** — Establish the packet data connection only when an application needs it. The connection is closed when the application is closed.

**Always online** — Automatically connect to a packet data network when you switch the device on.

You can use your device as a modem by connecting it to a compatible PC. For details, see the Nokia PC Suite documentation.

### Network provider services

Your network provider provides several additional services you may want to use. For some of these services, charges may apply.

### Operator menu

Access a portal to services provided by your network operator. The operator can update this menu with a service message. For more information, contact your network operator.

### SIM services

Your SIM card may provide additional services. You can access this menu only if it is supported by your SIM card. The name and contents of the menu depend on the available services.

Accessing these services may involve sending messages or making a phone call for which you may be charged.

### Position log

The network may send you a position request (network service). To subscribe and agree upon the delivery of positioning information, contact your service provider.

### Accept or reject an incoming position request

Select **Accept** or **Reject**.

### View the latest position requests

Select **Menu** > **Log** > **Positioning** and **Position log**.

If you miss the request, the device automatically accepts or rejects it according to what you have agreed with your service provider.

### Info messages and SIM messages

Select **Menu** > **Messaging**.

#### View info messages

Select **More** > **Info messages**. You can receive messages on various topics from your service provider (network service). For more information, contact your service provider.

#### View SIM messages

Select **Options** > **SIM messages**. SIM messages are specific text messages that are saved to your SIM card. You can copy or move those messages from the SIM to the device memory, but not vice versa.

### Configuration settings

You can configure your device with settings that are required for certain services. You may receive these settings as a configuration message from your service provider.

Select **Menu** > **Settings**.

Select **Configuration** and from the following:

**Default config. sett.** — View the service providers saved in the device, and set a default service provider.

**Act. def. in all apps.** — Activate the default configuration settings for supported applications.

**Preferred access pt.** — View the saved access points.

**Device mgr. settings** — Allow or prevent the device from receiving software updates. This option may not be available, depending on your device.

**Personal settings** — Add manually new personal accounts for various services, and activate or delete them. To add a new personal account, select **Add** or **Options** > **Add new**. Select the service type, and enter the required parameters. To activate a personal account, scroll to the account, and select **Options** > **Activate**.

## Stay in touch

Learn how to make calls, write text, send messages, and use the mail functionality of your device.

### Make calls

#### Make a voice call

##### Dial a number manually

Enter the phone number, including the area code, and press the call key.

For international calls, press \* twice for the international prefix (the + character replaces the international access code), enter the country code, the area code without the leading 0, if necessary, and the phone number.

##### Redial a number

To access the list of dialled numbers, in the home screen , press the call key. Select a number or name, and press the call key.

##### Call a contact

Select **Menu** > **Contacts and Names**. Select a contact, and press the call key.

### Handle voice calls

To handle calls with the fold, select **Menu** > **Settings and Call** > **Answ. on fold open**.

##### Answer an incoming call

Press the call key, or open the fold.

##### End a call

Press the end key, or close the fold.

##### Mute the ringing tone

Select **Silence**.

When the fold is closed, press a volume key.

##### Reject an incoming call

Press the end key.

When the fold is closed, press and hold a volume key.

##### Adjust the volume in a call

Use the volume keys.

## Make a video call

In a video call, the video recorded with the front camera on your device is shown to the video call recipient. To make a video call, you must have a USIM card and be connected to a WCDMA network. For availability and subscription to video call services, contact your service provider. The video call can be made to a compatible device or an ISDN client between two parties. Video calls cannot be made while another voice, video, or data call is active.

- 1 To start a video call, enter the phone number, including the area code.
- 2 Press and hold the call key, or select **Options** > **Video call**.  
Starting a video call may take a while. If the call is not successful, you are asked to try making a voice call or to send a message instead.
- 3 To end the call, press the end key.

## Dialling shortcuts

You can assign phone numbers to the number keys 3-9.

- 1 Select **Menu** > **Contacts** > **Speed dials**, and scroll to a number key.
- 2 Select **Assign**, or, if a number has already been assigned to the key, select **Options** > **Change**.
- 3 Enter a number or search for a contact.
- 4 To activate one key dialling, select **Menu** > **Settings and Call** > **Speed dialling** > **On**

## Use a dialling shortcut

Press a number key, then the call key.

## Use one key dialling

Press and hold a number key.

## Voice dialling

Make a phone call by saying the name that is saved in Contacts.

As voice commands are language-dependent, before voice dialling, select **Menu** > **Settings and Phone** > **Language settings** > **Phone language**, and your language.



**Note:** Using voice tags may be difficult in a noisy environment or during an emergency, so you should not rely solely upon voice dialling in all circumstances.

- 1 In the home screen, press and hold the right selection key. A short tone sounds, and **Speak after the tone** is displayed.
- 2 Say the name of the contact you want to dial. If the voice recognition is successful, a list of proposed matches is displayed. The device plays the voice command of the first match on the list. If it is not the correct command, scroll to another entry.

### Options during a call

Many of the options that you can use during a call are network services. For availability, contact your service provider.

### Activate options during a call

Select **Options**.

Some of the network options are **Hold**, **New call**, **Add to conference**, **End all calls**, and the following:

**Send DTMF** — Send tone strings.

**Swap** — Switch between the active call and the call on hold.

**Transfer** — Connect a call on hold to an active call and disconnect yourself.

**Conference** — Make a conference call.

**Private call** — Start a private discussion in a conference call.

### Voice messages

The voice mailbox is a network service to which you may need to subscribe. For more information, contact your service provider.

### Call your voice mailbox

Press and hold **1**.

### Edit your voice mailbox number

Select **Menu > Messaging > More > Voice messages and Voice mailbox no..**

### Video messages

The video mailbox is a network service to which you may need to subscribe. For more information, contact your service provider.

### Call your video mailbox

Press and hold **2**.

### Edit your video mailbox number

Select **Menu > Messaging and More > Video messages > Video mailbox no..**

### Call log

To view details of your calls, messages, data, and synchronisation, select **Menu > Log** and the desired item.



**Note:** The actual invoice for calls and services from your service provider may vary, depending on network features, rounding off for billing, taxes, and so forth.

### Call settings

Select **Menu > Settings and Call** and from the following:

**Call divert** — Divert your incoming calls (network service). You may not be able to divert your calls if some call barring functions are active.

**Anykey answer** — Answer an incoming call by briefly pressing any key, except the power key, the left and right selection keys, or the end key.

**Automatic redial** — The device redials the number automatically if a call fails. The device tries to call the number 10 times.

**Video-voice redial** — The device automatically makes a voice call to the same number to which a video call has failed.

**Voice clarity** — Improve speech intelligibility, especially in noisy environments.

**Speed dialling** — Dial the names and phone numbers assigned to the number keys (2-9) by pressing and holding the corresponding number key.

**Call waiting** — The network notifies you of an incoming call while you have a call in progress (network service).

**Call dur. display** — Display the duration of the call in progress.

**Summary after call** — Briefly display the approximate duration after each call.

**Send my caller ID** — Show your phone number to the person you are calling (network service). To use the setting agreed upon with your service provider, select **Set by network**.

**Outgoing call line** — Select the phone line for making calls, if your SIM card supports multiple phone lines (network service).

**Answ. on fold open** — Answer or end a call by opening or closing the fold.

### Text and messages

Write text, and create messages and notes.

#### Write text

##### Text input modes

To enter text, for example, when writing messages, you can use traditional  or predictive  text input.

AbC abC and ABC indicate the character cases. 123 indicates number mode.

#### Switch between text input modes

Select and hold **Options**. Not all languages are supported by predictive text input.

**Switch between character cases**

Press #.

**Switch between letter and number modes**

Press and hold #.

**Set the writing language**

Select **Options** > **More** > **Writing language**.

---

**Traditional text input**

**Write a word**

Press a number key, 2-9, repeatedly until the desired character is displayed. The available characters depend on the selected writing language. If the next letter you want to enter is located on the same key as the present one, wait until the cursor is displayed, and enter the letter.

**Insert common punctuation marks**

Press **1** repeatedly.

**Insert special characters**

Press \*, and select a character from the list.

**Insert a space**

Press **0**.

---

**Predictive text input**

Predictive text input is based on a built-in dictionary to which you can also add new words.

**Write a word**

Press number keys, 2-9. Press each key only once for one letter.

**Confirm a word**

Scroll right, or press **0** to add a space.

**Select the correct word**

If the proposed word is not correct, press \* repeatedly, and select the desired word from the list.

**Add a word to the dictionary**

If the ? character is displayed after the word, the word you intended to write is not in the dictionary. To add the word to the dictionary, select **Spell**. Enter the word using traditional text input, and select **Save**.

## Write a compound word

Write the first part of the word, and scroll right to confirm it. Write the next part of the word, and confirm again.

## Text and multimedia messages

You can create a message and optionally attach, for example, a picture. Your device automatically changes a text message to a multimedia message when a file is attached.

### Text messages

Your device supports text messages beyond the limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly. Characters with accents, other marks, or some language options take more space, and limit the number of characters that can be sent in a single message.

The total number of characters left and the number of messages needed for sending are displayed.

To send messages, the correct message centre number must be stored in your device. Normally, this number is set by default through your SIM card.

### Set the message centre number manually

- 1 Select **Menu > Messaging and More > Msg. settings > Text messages > Message centre.**
- 2 Enter the name and the number supplied by the service provider.

### Multimedia messages

A multimedia message can contain text, pictures, and sound or video clips.

Only devices that have compatible features can receive and display multimedia messages. The appearance of a message may vary depending on the receiving device.

The wireless network may limit the size of MMS messages. If the inserted picture exceeds this limit, the device may make it smaller so that it can be sent by MMS.



**Important:** Exercise caution when opening messages. Messages may contain malicious software or otherwise be harmful to your device or PC.

For availability and subscription to the multimedia messaging service (MMS), contact your service provider.

### Create a message

- 1 Select **Menu > Messaging and Create message.**
- 2 Write your message.  
To insert a special character or a smiley, select **Options > Insert symbol.**

To attach an object to the message, select **Options** > **Insert object**. The message type changes automatically to multimedia message.

3 To add recipients, select **Send to** and a recipient.

To enter a phone number or mail address manually, select **Number or e-mail**. Enter a phone number, or select **E-mail** and enter a mail address.

4 Select **Send**.

Multimedia messages are indicated with an icon at the top of the display.

Service providers may charge differently depending on the message type. For details, contact your service provider.

### Read a message and reply

---



**Important:** Exercise caution when opening messages. Messages may contain malicious software or otherwise be harmful to your device or PC.

#### Read a received message

Select **View**.

#### Reply to a message

Select **Reply**.

#### Read several received messages

Select **Menu** > **Messaging** and **Inbox**, and the desired message.

### Send and organise messages

---

To send a message, select **Send**.



**Note:** The message sent icon or text on your device screen does not indicate that the message is received at the intended destination.

If message sending is interrupted, the device tries to resend the message a few times. If these attempts fail, the message is marked as failed in the Sent items folder.

The device saves received messages in the Inbox folder.

#### Flash messages

Flash messages are text messages that are instantly displayed upon reception.

Select **Menu** > **Messaging**.

- 1 Select **More** > **Other messages** > **Flash message**.
- 2 Write your message.

- 3 Select **Send to** and a contact.

### Nokia Xpress audio messages

Create and send audio messages using MMS in a convenient way.

Select **Menu** > **Messaging**.

- 1 Select **More** > **Other messages** > **Audio message**. The voice recorder opens.
- 2 To record your message, select .
- 3 To stop recording, select .
- 4 Select **Send to** and a contact.

### Message settings

Select **Menu** > **Messaging and More** > **Msg. settings**.

Select from the following:

**General settings** — Set the font size for messages, and activate graphical smileys and delivery reports.

**Text messages** — Set up message centres for text messages and SMS mail.

**Multimedia msg.** — Allow delivery reports and the reception of multimedia messages and advertisements, and set up other preferences related to multimedia messages.

**E-mail messages** — Allow mail reception, and set up other preferences related to mail.

**Service messages** — Activate service messages, and set up preferences related to service messages.

### Mail and Instant Messaging

Set up your device to send and receive mails from your mail account or to chat in your instant messaging (IM) community.

Your device may support the Nokia Messaging Service (NMS) or the classic Nokia Mail and Nokia IM, depending on your country. To see which messaging system is in use select **Menu** > **Messaging** > **More** > **E-mail**.

#### NOKIA

If \_\_\_\_\_ appears on top of the display, the Nokia Messaging Service is in use. See "[Nokia Messaging IM](#)", p. [35](#) and "[Nokia Messaging Mail](#)", p. [33](#).

Otherwise, see "[Nokia IM](#)", p. [38](#) and "[Nokia Mail](#)", p. [37](#).

### Nokia Messaging Mail

Access your mail accounts from different providers with your mobile device to read, write, and send mail.

Before you can use mail, you must have an mail account. If you do not have already an mail account, create it in Ovi. The menus may vary depending on the mail provider.

### Set up mail

---

You can sign in to an existing mail account or set up a new Ovi Mail account.

Select **Menu** > **Messaging** > **More** > **E-mail**.

#### Sign in to your mail account

- 1 Select your mail service provider.
- 2 Enter your account ID and password.
- 3 Select **Remember password** to disable the password query when you access your mail account.
- 4 Select **Sign In**.

To sign in to an additional mail account, select **Add account**.

#### Set up Ovi Mail

If you do not already have a mail account, you can create a Nokia account, which includes the Ovi Mail service.

- 1 Select **Get Ovi Mail**.
- 2 Follow the instructions on the display.

Once you have created your new Nokia account, you can sign in to the Ovi Mail service and start sending and receiving mail. You can also use the account to sign into other Ovi services, such as IM. For more information, see [www.ovi.com](http://www.ovi.com).

### Read, create, and send mail

---

Select **Menu** > **Messaging** > **More** > **E-mail** and a mail account.

#### Read mail and reply

- 1 Select a mail and **Open**.
- 2 Use the scroll key to see the entire mail.
- 3 To reply to or forward a mail, select **Options**.

#### View and save attachments

Mails with attachments, for example, pictures, are marked with a paperclip icon. Some attachments may not be compatible with your device, and cannot be displayed on your device.

- 1 Expand the attachment list.
- 2 Select an attachment and **View**.
- 3 To save the attachment to your device, select **Save**.

### Create and send a mail

- 1 Select **Options** > **Compose**.
- 2 Enter the recipient's mail address, the subject, and your message.
- 3 To attach a file to the mail, select **Options** > **Attach file**.
- 4 To capture an image to attach to the mail, select **Options** > **Attach new image**.
- 5 To send the mail, select **Send**.

### Close the mail application

Select **Sign Out**.

### Access IM from your mail account

Some mail service providers allow you to access your instant messaging account directly from your mail account.

To sign in to your provider's instant messaging service when writing a mail, select **Options** and your IM service.

### Nokia Messaging IM

With instant messaging (IM) you can chat with other online users using your device.

You can use your already existing account with an IM community that is supported by your device.

If you are not registered to a IM service, you can create an IM account with a supported IM service, using your computer or your device. The menus may vary depending on the IM service.

### IM services

#### Sign in to an existing IM account

- 1 Select **Menu** > **Messaging** > **More** > **IMs**.
- 2 Select an IM service.
- 3 Enter your account ID and password.
- 4 Follow the instructions on the display.

#### Create a new Nokia account

To create a Nokia account, which includes mail and IM services, using your PC, visit [www.ovi.com](http://www.ovi.com). To create an account using your device, do the following:

- 1 Select **Menu** > **Messaging** > **More** > **E-mail**.
- 2 Follow the instructions on the display.

#### Use IM services simultaneously

- 1 To return to the IM main view, select **Home** from within any IM service.

- 2 Select an IM service, and sign in.
- 3 To switch between IM services, in the contacts list view, scroll left or right.

### Exchange messages

---

Select **Menu** > **Messaging** > **More** > **IMs**.

#### Send an IM

- 1 Select an IM service.
- 2 Select a contact from the contacts list.  
Each conversation is on a tab in the conversation view.
- 3 Enter your message in the text box at the bottom of the display.
- 4 Select **Send**.

#### Receiving messages

When a new message arrives in your current conversation, the message appears at the end of the chat history. When a new message arrives for another conversation, the corresponding conversation tab flashes. To switch between conversations, do the following:

- 1 Scroll up to the conversation tabs.
- 2 Scroll left or right to open a conversation.

When a new message arrives from another community, it is indicated at the top or bottom corner.

Scroll up, and select **Switch** or **Select**.

#### Notification settings

Even when you are not using the application, you are notified of new messages. To modify notification settings, do the following:

- 1 In the IM main view, select **Options** > **IM settings**.
- 2 Select a notification type and **Save**.

#### Leave the IM application

---

When you exit the Instant messaging (IM) application, you remain signed in to IM services. Your sessions remain active for a period of time, according to your service subscription. When the IM application is running in the background, you can open other applications, and return to using IM without signing in again.

#### Close the IM window

Go to the IM main view, and select **Exit**.

#### Sign out from IM

Select **Options** > **Sign Out**.

All conversations are closed.

## Nokia Mail

Access your mail account with your device to read, write, and send mail. This mail application is different from the SMS mail function.

Before you can use mail, you must have an mail account from an mail service provider. For availability and the correct settings, contact your mail service provider. You may receive the mail configuration settings as a configuration message.

### Mail setup wizard

The mail setup wizard opens automatically if no mail settings are defined in the device. To open the setup wizard, to add an additional mail account, select **Menu > Messaging** and the existing mail account. Select **Options > Add mailbox**. You can also create a new mail account on Ovi for free. Follow the instructions.

### Write and send a mail

You may write your mail before connecting to the mail service.

- 1 Select **Menu > Messaging** and **Create message > E-mail message**.
- 2 Enter the recipient's mail address, the subject, and the mail message. To attach a file, select **Options > Insert**.
- 3 If more than one mail account is defined, select the account from which you want to send the mail.
- 4 Select **Send**.

### Read a mail and reply



**Important:** Exercise caution when opening messages. Messages may contain malicious software or otherwise be harmful to your device or PC.

Select **Menu > Messaging**.

### Download mail headers

Select your mail account.

### Download a mail and its attachments

Select a mail and **Open** or **Retrieve**.

### Reply to or forward a mail

Select **Options > Reply** or **Forward**.

### Disconnect from your mail account

Select **Options** > **Disconnect**. The connection to the mail account automatically ends after some time without activity.

### New mail notifications

Your device can automatically check your mail account at set intervals, and issue a notification when new mail is received.

Select **Menu** > **Messaging and More**.

- 1 Select **Msg. settings** > **E-mail settings** > **Edit mailboxes**.
- 2 Select your mail account, **Downloading sett.**, and the following options:

**Update interval** — Set how often your device checks your mail account for new mail.

**Automatic retrieval** — Retrieve new mail automatically from your mail account.

- 3 To enable new mail notification, select **Msg. settings** > **E-mail settings** > **New e-mail notif.**.

### Nokia IM

With the instant messaging (IM) network service, you can send short text messages to online users. You must subscribe to a service and register with the IM service you want to use. For availability, pricing, and instructions, contact your service provider. The menus may vary depending on your IM service provider.

To connect to the service, select **Menu** > **Messaging** > **IMs**, and follow the instructions.

## Image and video

### Capture images

#### Activate the camera

Select **Menu** > **Applications** > **Camera**; or, if in video mode, scroll left or right.

#### Zoom in or out

In image mode, scroll up and down, or use the volume keys.

#### Capture an image

Select **Capture**.

Images are saved in Gallery.

### Activate the camera flash

To set the device to use the flash automatically if the lighting conditions require it, select **Options** > **Flash** > **Automatic**. To set the device to always use the flash, select **Flash on**.

Keep a safe distance when using the flash. Do not use the flash on people or animals at close range. Do not cover the flash while taking a picture.

### Display images after capture

Select **Options** > **Settings** > **Photo preview time** and the preview time.

### End the image preview manually

Select **Back**.

Your device supports an image capture resolution of up to 1536x2048 pixels.

## Record video clips

### Activate video mode

Select **Menu** > **Applications** and **Video camera**, or, if in image mode, scroll left or right.

### Start recording

Select **Record**.

### Pause or resume recording

Select **Pause** or **Continue**.

### Stop recording

Select **Stop**.

Video clips are saved in Gallery.

## Camera and video settings

Select **Menu** > **Applications** > **Camera**.

In image or video mode, select **Options** and from the following:

**Self-timer** — Use the self-timer.

**Effects** — Apply different effects (for example, greyscale and false colour) to the captured image.

**White balance** — Adapt the camera to the current light conditions.

**Landscape format** or **Portrait format** — Select the orientation of the camera.

**Settings** — Modify other camera and video settings, and select where to save images and video clips.

### Gallery

Manage images, video clips, music files, themes, graphics, tones, recordings, and received files. These files are stored in the device memory or on a memory card and may be arranged in folders.

### Photos

View images and play video clips with the Photos application.

Select **Menu** > **Gallery** > **Photos**.

Select from the following:

**My photos** — View images in a thumbnail grid. You can sort images by date, name, or size.

**Timeline** — View images in the order they were captured.

**My albums** — Sort images into albums. You can create, rename and remove albums. If you remove an album, the images inside the album are not deleted from the memory.

### Rotate an image

Select **Options** > **Landscape mode** or **Portrait mode**.

### View a slide show

A slide show uses the images of the currently selected folder or album.

- 1 Select **My photos**, **Timeline**, or **My albums**.
- 2 Select **Options** > **Slide show**.
- 3 Select **Start slide show**.

### Edit images

You can, for example, rotate, flip, crop, and adjust the brightness, contrast, and colours of images.

- 1 Select an image in **My photos**, **Timeline**, or **My albums**.
- 2 Select **Options** > **Edit photo**.
- 3 Select an editing option, and use the scroll key to change the settings or values.

### Music and videos

Your device includes a media player for playing songs and video clips. Music and video files stored in the music folder in the device memory or on the memory card are automatically detected and added to the video or music library.

Select **Menu** > **Gallery** and **Music & videos**.

Select from the following:

**Videos** — List all available video clips.

**All songs** — List all available songs. You can sort songs by artist, album, or genre, for example.

### Manage folders and files

To manage folders and files in Gallery, select **Menu > Gallery**.

#### View a list of folders

Select **All content**.

#### View a list of files in a folder

Select a folder and **Open**.

#### View the folders of the memory card when moving a file

Scroll to the memory card, and scroll right.

### Print images

Your device supports Nokia XpressPrint, allowing you to print images in the JPEG file format.

- 1 Connect your device to a compatible printer, using a USB data cable, or, if supported by the printer, Bluetooth connectivity.
- 2 Select an image from Gallery and **Options > Print**.

### Share images and video clips online

Share images and video clips in compatible online sharing services on the web.

To use online sharing, you must subscribe to an online sharing service (network service).

- 1 Select **Menu > Gallery > Photos** and a file.
- 2 Select **Options > Send > Upload to web**.
- 3 Select an online sharing service, and follow the instructions on the display.

You may also mark several images or video clips and upload them together to the online sharing service.

You can view uploads on the internet pages of the online sharing service on your device.

For more information on online sharing and compatible service providers, see the Nokia product support pages or your local Nokia website.

### Memory card

Use a memory card to store your multimedia files, such as video clips, songs, sound files, images, and messaging data.

Select **Menu > Gallery > All content > Memory card**.

Some of the folders in Gallery that contain content used by your device (for example, Themes) can be stored on the memory card.

If your memory card has not been pre-formatted, you need to format it. When you format a memory card, all data on the card is permanently deleted.

### Format the memory card

Select **Options** > **Mem. card options** > **Format memory card** > **Yes**. When formatting is complete, enter a name for the memory card.

### Protect the memory card with a password

Select **Options** > **Mem. card options** > **Set password**. The password is stored in your device, so you only have to enter the password when attempting to use the memory card in another device.

### Remove the memory card password

Select **Options** > **Mem. card options** > **Delete password**.

### Check the memory consumption

Select **Options** > **Details**. The memory consumption of different data groups, and the amount of available memory to install new software, is displayed.

## Entertainment

### Listen to music

Listen to music with the music player or radio, and record sounds or voice with the voice recorder. Download music from the internet, or transfer music from your PC.



#### Warning:

Continuous exposure to high volume may damage your hearing. Listen to music at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.

### Media player

To open the media player, select **Menu** > **Applications** > **Media player**.

### Music menu

Access your music and video files stored in the device memory or on the memory card, download music or video clips from the web, or view compatible video streams from a network server (network service).

Select **Menu** > **Applications** > **Media player**.

**Play a media file**

Select a file from the available folders and **Play**.

**Download files from the web**

Select **Options** > **Downloads** and a download site.

**Update the music library after adding files**

Select **Options** > **Update library**.

**Create a playlist**

- 1 Select **Playlists** > **Create playlist**, and enter the name of the playlist.
- 2 Add music or video clips from the displayed lists.
- 3 To store the playlist, select **Done**.

**Configure a streaming service**

You may receive the streaming settings as a configuration message from the service provider. You can also enter the settings manually.

- 1 Select **Options** > **Downloads** > **Streaming settings** > **Configuration**.
- 2 Select a service provider, **Default**, or **Personal config**. for streaming.
- 3 Select **Account** and a streaming service account from the active configuration settings.

**Play songs****Operate the media player**

Use the scroll key according to the virtual keys on the display.

**Adjust the volume**

Use the volume keys.

**Start playing**

Select .

**Pause playing**

Select .

**Skip to the next song**

Select .

**Skip to the previous song**

Select  twice.

### Fast-forward the current song

Select and hold .

### Rewind the current song

Select and hold .

### Switch to the music menu

Select .

### Switch to the current playlist

Select .

### Leave the media player playing in the background

Press the end key.

### Stop the media player

Press and hold the end key.

### Change the media player look

Your device provides several themes to change the look of the media player.

Select **Menu > Applications > Media player and Go to Media pl. > Options > Settings > Media player theme** and the desired theme.

The virtual keys may change depending on the theme.

### Transfer music from a computer

You can transfer music to your device in the following ways:

- Use Nokia Music to transfer, rip, burn, and play new music on your PC and mobile device. Download the PC software from [www.music.nokia.com/download](http://www.music.nokia.com/download).
- Use PC Suite to connect your device to your PC using Bluetooth connectivity or a compatible USB data cable, and use the Nokia Music Manager. To use a USB data cable, select **PC Suite** as the connection mode.
- Connect your device to your PC using Bluetooth connectivity or a compatible USB data cable, and copy music files to the device memory. To use a USB data cable, select **Data storage** as the connection mode.
- Use Windows Media Player. Connect a compatible USB data cable, and select **Printing & media** as the connection mode.

### Radio

The FM radio depends on an antenna other than the wireless device antenna. A compatible headset or accessory needs to be attached to the device for the FM radio to function properly.

Select **Menu** > **Applications** > **Radio**.

### Tune in to radio stations

- 1 To start the search, press and hold the scroll key left or right. To change the radio frequency in 0.05 MHz steps, briefly press the scroll key left or right.
- 2 To save a station to a memory location, select **Options** > **Save station**.
- 3 To enter the name of the radio station, select **Options** > **Stations** > **Options** > **Rename**.

Select **Options** and from the following:

**Search all stations** — Search automatically for the available stations at your location.

**Set frequency** — Enter the frequency of a radio station.

**Station directory** — Access a website with a list of radio stations.

**Stations** — List, rename, or delete saved stations.

### Use the virtual keys on the display

Use the scroll key.

### Change stations

Scroll up or down, or press the number key that corresponds to the number of the station in the station list.

### Adjust the volume

Use the volume keys.

### Set the radio to play in the background

Briefly press the end key.

### Close the radio

Press and hold the end key.

### Radio settings

Select **Menu** > **Applications** > **Radio**.

Select **Options** > **Settings** and from the following:

**RDS** — Display information from the radio data system, such as the name of the station.

**Auto-frequency** — Allow the device to automatically switch to a frequency with better reception (available when RDS is activated).

**Play via** — Listen using the headset or the loudspeaker.

**Output** — Switch between stereo and mono output.

**Radio theme** — Select the look of the radio.

### Voice recorder

Record speech, sound, or an active call, and save the recordings in Gallery.

Select **Menu > Applications > Voice recorder**.

The recorder cannot be used when a data call or GPRS connection is active.

To use the graphical keys , , or , scroll left or right.

### Start recording

Select , or, during a call, select **Options > Record**. While recording a call, all parties to the call hear a faint beeping.

### Pause recording

Select .

### Stop recording

Select . The recording is saved in the Recordings folder in Gallery.

To play or send the last recording, to access the list of recordings, or to select the memory and the folder to store the recordings, select **Options** and the appropriate option.

### Equaliser

Adjust the sound when using the media player.

Select **Menu > Applications > Equaliser**.

### Activate a predefined equaliser set

Scroll to a set, and select **Activate**.

### Create a new equaliser set

- 1 Select one of the last two sets in the list and **Options > Edit**.
- 2 Use the scroll key to adjust the sound controls.
- 3 To save the settings and enter a name for the set, select **Save and Options > Rename**.

### Web

You can access various internet services with your device browser (network service). The appearance of the internet pages may vary due to screen size. You may not be able to see all the details on the internet pages.



**Important:** Use only services that you trust and that offer adequate security and protection against harmful software.

For the availability of these services, pricing, and instructions, contact your service provider.

You may receive the configuration settings required for browsing as a configuration message from your service provider.

Select **Menu** > **Internet**.

To set up the service, select **Web settings** > **Configuration sett.**, a configuration, and an account.

### **Browse the web**

Select **Menu** > **Internet**.

### **Open the home page**

Select **Home**; or in the home screen, press and hold **0**.

### **Select a bookmark**

Select **Bookmarks**.

### **Enter a web address**

Select **Go to address**, enter the address, and select **OK**.

### **Select the last visited web address**

Select **Last web addr.**

### **Search the web**

If you search for the first time, select a search provider. Then select **Search**, enter the search terms, and select **Search**.

### **Change the search provider**

Select **Options** > **Change provider**.

After you connect to the service, you can start browsing its pages. The function of the device keys may vary in different services. Follow the instructions. For more information, contact your service provider.

### **Web uploads**

On the web page of your online sharing service, you can view uploaded images and video clips and modify settings (network service).

Select **Menu** > **Internet** and **Web uploads**.

### **Open an online sharing service**

Select an online sharing service and a link offered by the service.

### Modify settings

When an online sharing service is open, select **Options** > **Settings**.

### Browser settings

While browsing the web, select **Options** > **Settings** and from the following:

**Display** — Select the font size, whether images are displayed, and how the text is displayed.

**General** — Select the encoding type for the contents, whether web addresses are sent as Unicode (UTF-8), and whether JavaScript™ is enabled.

The available options may vary.

### Cache memory

A cache is a memory location that is used to store data temporarily. If you have tried to access or have accessed confidential information requiring passwords, empty the cache after each use. The information or services you have accessed are stored in the cache.

A cookie is data that a site saves in the cache memory of your device. Cookies are saved until you clear the cache memory.

### Clear the cache

While browsing, select **Options** > **Tools** > **Clear the cache**.

### Allow or prevent cookies

Select **Menu** > **Internet and Web settings** > **Security** > **Cookies**.

### Browser security

Security features may be required for some services, such as banking services or online shopping. For such connections you need security certificates and possibly a security module, which may be available on your SIM card. For more information, contact your service provider.

To view or modify the security module settings, or to view a list of authority or user certificates downloaded to your device, select **Menu** > **Settings** and **Security** > **Security module**, **Auth. certificates**, or **User certificates**.



**Important:** Even if the use of certificates makes the risks involved in remote connections and software installation considerably smaller, they must be used correctly in order to benefit from increased security. The existence of a certificate does not offer any protection by itself; the certificate manager must contain correct, authentic, or trusted certificates for increased security to be available. Certificates have a restricted lifetime. If "Expired certificate" or "Certificate not valid yet" is shown, even if the certificate should be valid, check that the current date and time in your device are correct.

Before changing any certificate settings, you must make sure that you really trust the owner of the certificate and that the certificate really belongs to the listed owner.

### Games and applications

You can manage applications and games. Your device may have some games or applications installed. These files are stored in the device memory or an attached memory card and may be arranged in folders.

#### Open an application

Select **Menu** > **Applications** > **Extras**.

#### Open a game or application

Select **Games**, **Collection**, or **Memory card**.

Scroll to a game or application, and select **Open**.

#### Set sounds, lights, and shakes for a game

Select **Options** > **Application settings**.

#### Download an application

Your device supports J2ME™ Java applications. Ensure that the application is compatible with your device before downloading it.



**Important:** Only install and use applications and other software from trusted sources, such as applications that are Symbian Signed or have passed the Java Verified™ testing.

You can download new applications and games directly or using your PC.

#### Download directly

Select **Menu** > **Applications** > **Extras** and **Options** > **Downloads** > **App. downloads** or **Game downloads**; the list of available bookmarks is shown.

#### Download using your PC

Download applications and games to your PC and use PC Suite to install them on your device.

For the availability of different services and pricing, contact your service provider.

## Maps

With Maps, you can browse maps for different cities and countries, search for addresses and different points of interest, plan routes from one location to another, see your current location on the map if you have a GPS connection, and save locations and send

them to compatible devices. You can also purchase a licence for a navigation service with voice guidance. This service is not available for all countries or regions.

### About Maps

If there are maps available in your device or on an inserted memory card, you can browse them without an internet connection. When you browse to an area which is not covered by the maps already downloaded in your device, a map for the area is automatically downloaded through the internet. You may be prompted to select an access point to use with the internet connection.

Downloading maps may involve the transmission of large amounts of data through your service provider's network. Contact your service provider for information about data transmission charges.

You can also use the Nokia Map Loader PC software to download maps to your device. To install Nokia Map Loader on a compatible PC, see [www.nokia.com/maps](http://www.nokia.com/maps).

Select **Menu > Applications > Maps** and from the following:

**Last map** — Open the map that was displayed last.

**Find address** — Search for a specific address.

**Saved locations** — Find a location you have saved on your device.

**Rec. locations** — View the locations you have browsed.

**Current position** — View your current location, if a GPS connection is available.

**Plan route** — Plan a route.

**Extra services** — Purchase a license for navigation.

**Settings** — Define the settings.

Almost all digital cartography is inaccurate and incomplete to some extent. Never rely solely on the cartography that you download for use in this device.

### Nokia Map Loader

With the Nokia Map Loader application for PC, you can download maps and voice guidance files from the internet. A memory card with sufficient space must be inserted in your device. You must use the Maps application and browse maps at least once before using Nokia Map Loader, as Nokia Map Loader uses the Maps history information to check which version of the maps to download.

To install Nokia Map loader, visit [www.nokia.com/maps](http://www.nokia.com/maps), and follow the instructions.

#### Download maps with Nokia Map Loader

- 1 Connect your device to the computer with a compatible USB data cable or Bluetooth connection. If you use a data cable, select PC Suite as the USB connection method.
- 2 Open Nokia Map Loader on the computer.
- 3 Select a continent and a country or region.
- 4 Select the maps or services, and download and install them to your device.

On the Service tab of Nokia Map Loader, you can purchase navigation and traffic information licences, travel guides, and download maps.

### About GPS

The Global Positioning System (GPS) is operated by the government of the United States, which is solely responsible for its accuracy and maintenance. The accuracy of location data can be affected by adjustments to GPS satellites made by the United States government and is subject to change with the United States Department of Defense civil GPS policy and the Federal Radionavigation Plan. Accuracy can also be affected by poor satellite geometry. Availability and quality of GPS signals may be affected by your location, buildings, natural obstacles, and weather conditions. GPS signals may not be available inside buildings or underground and may be impaired by materials such as concrete and metal.

GPS should not be used for precise location measurement, and you should never rely solely on location data from the GPS receiver and cellular radio networks for positioning or navigation.

The trip meter has limited accuracy, and rounding errors may occur. Accuracy can also be affected by availability and quality of GPS signals.

### GPS receiver

Your device has an internal GPS receiver. For the best signal from the satellites, place your device in a position with an unobstructed view to the sky.

You can use GPS to support the Maps application. Find out your location, or measure distances and plot coordinates.

### Navigate to your destination



You can upgrade Maps to a full navigation system to be used by car and by foot. You need a regional licence for the full navigation system. The car navigation is fully voice-guided with two and three-dimensional map views. Pedestrian navigation is limited to a speed of 30 km/h (18.6 miles/h) and provides no voice guidance. The navigation

service is not available for all countries and regions. For details, see your local Nokia website.

### **Purchase a licence for navigation**

Select **Extra services**. The licence is region-specific and can be used only in the selected area.

### **Navigate to the destination**

- 1 Select **Plan route**, and create a route.
- 2 Select **Options** > **Show route** > **Options** > **Start navigation**.
- 3 Accept the displayed disclaimer.
- 4 Select the language for voice guidance, if prompted.

If you deviate from the set route, the device automatically plans a new route.

### **Repeat the voice guidance**

Select **Repeat**.

### **Silence the voice guidance**

Select **Options** > **Mute audio**.

### **Stop navigating**

Select **Stop**.

### **Navigate on foot**

Select **Settings** > **Routing settings** > **Route selection** > **On foot**. This optimises the routes you create for navigation on foot.

## **Organise**

Let your phone help you to organise your life.

### **Manage contacts**

Save names, phone numbers, and addresses as contacts in the device and on the SIM card.

Select **Menu** > **Contacts**.

### **Select the memory to use for contacts**

The device memory can save contacts with additional details, such as alternative phone numbers. You can also save an image, a tone, or a video clip for a limited number of contacts.

The SIM card memory can save names with one phone number attached to them. The contacts saved in the SIM card memory are indicated with .

- 1 Select **More** > **Settings** > **Memory in use** to select the SIM card, the device memory, or both for your contacts.
- 2 Select **Phone and SIM** to recall contacts from both memories. When you save contacts, they are saved in the device memory.

## Handle contacts

### Search for a contact

Select **Names**.

Scroll through the list of contacts, or enter the first characters of the contact's name.

### Save a name and phone number

Select **Menu** > **Contacts** and **Add new**.

### Add and edit details

Select **Names**, a contact, and **Details** > **Options** > **Add detail**.

### Delete a detail

Select **Names**, a contact, and **Details**. Select a detail and **Options** > **Delete**.

### Delete a contact

Select **Names**, a contact, and **Options** > **Delete contact**.

### Delete all contacts

Select **More** > **Del. all contacts** > **From phone mem.** or **From SIM card**.

## Copy or move contacts between the device and SIM card memories

### Copy single contacts

Select **Names** > **Options** > **More** > **Marking options** > **Mark**. Mark the contacts you want to copy or move, and select **Options** > **Copy marked** or **Move marked**.

### Copy all contacts

Select **More** > **Copy contacts** or **Move contacts**.

## Create a contact group

Arrange contacts into caller groups with different ringing tones and group images.

- 1 Select **More** > **Groups**.
- 2 Select **Add** or **Options** > **Add new group** to create a new group.
- 3 Enter the group name, optionally select an image and a ringing tone, and select **Save**.
- 4 Select the group and **View** > **Add** to add contacts to the group.

### Business cards

You can send and receive a person's contact information from a compatible device that supports the vCard standard.

Select **Menu** > **Contacts and Names**.

#### Send a business card

Select a contact, **Options** > **More** > **Send business card**, and the sending type.

#### Save a received business card

Select **Show** > **Save**.

### Date and time

#### Modify date and time settings

Select **Menu** > **Settings and Date and time**.

#### Change the time zone when travelling

Select **Menu** > **Settings and Date and time** > **Date & time settings** > **Time zone**; and scroll left or right to select the time zone of your location.

The time and date are set according to the time zone and enable your device to display the correct sending time of received text or multimedia messages.

For example, GMT -5 denotes the time zone for New York (USA), 5 hours west of Greenwich, London (UK).

### Alarm clock

You can set an alarm to sound at a desired time.

#### Set the alarm

- 1 Select **Menu** > **Applications** > **Alarm clock**.
- 2 Set the alarm, and enter the alarm time.
- 3 To issue an alarm on selected days of the week, select **Repeat:** > **On** and the days.
- 4 Select the alarm tone. If you select the radio as the alarm tone, connect the headset to the device.
- 5 Set the length of the snooze time-out period, and select **Save**.

#### Stop the alarm

Select **Stop**. If you let the alarm sound for a minute or select **Snooze**, the alarm stops for the length of the snooze time-out period, then resumes.

### Calendar

Select **Menu** > **Calendar**.

The current day is framed. If there are any notes set for the day, the day is in bold type.

### **Make a calendar note**

Scroll to the date, and select **Options** > **Make a note**. Select the note type, and fill in the fields.

### **View the day notes**

Select **View**.

### **View a week**

Select **Options** > **Week view**.

### **Delete all notes in the calendar**

Select **Options** > **Delete notes** > **All notes**.

### **Delete old notes automatically after a specified time**

Select **Options** > **Settings** > **Auto-delete notes**.

### **Edit settings related to the date and time**

Select **Options** > **Settings**.

## **To-do list**

You can save a note for a task you must do.

Select **Menu** > **Applications** > **To-do list**.

### **Add a note**

If no note is added, select **Add**; otherwise, select **Options** > **Add**. Fill in the fields, and select **Save**.

### **View a note**

Select a note and **View**.

## **Notes**

Select **Menu** > **Applications** > **Notes**.

### **Add a note**

If no note is added, select **Add**; otherwise, select **Options** > **Make a note**. Write the note, and select **Save**.

### **Send a note**

Select **Options** > **Send note** and the sending type.

### Nokia PC Suite

With Nokia PC Suite, you can manage your music and synchronise contacts, calendar entries, notes, and to-do notes between your device and a compatible PC or a remote internet server (network service). For more information, and to download PC Suite, visit [www.nokia.com/support](http://www.nokia.com/support).

### Calculator

Your device provides a standard, a scientific, and a loan calculator.

Select **Menu** > **Applications** > **Calculator**.

Select **Options** to select the calculator type or to view the operating instructions.

This calculator has limited accuracy and is designed for simple calculations.

### Countdown timer

Select **Menu** > **Applications** > **Countd. timer**.

#### Normal timer

- 1 Select **Normal timer**, enter a time, and write a note that is displayed when the time expires.
- 2 Select **Start**.

#### Interval timer

To have an interval timer with up to 10 intervals started, do the following:

- 1 Select **Interval timer**.
- 2 Select **Start timer** > **Start**.

To select how the interval timer should start the next period, select **Settings** > **Cont. to next period**.

### Stopwatch

You can measure time, take intermediate times, or take lap times using the stopwatch.

Select **Menu** > **Applications** > **Stopwatch** and from the following:

**Split timing** — Take intermediate times. To reset the time without saving it, select **Options** > **Reset**.

**Lap timing** — Take lap times.

**Continue** — View the timing that you have set to the background.

**Show last** — View the most recently measured time if the stopwatch is not reset

**View times** or **Delete times** — View or delete the saved times

To set the stopwatch timing to the background, press the end key.

## Green tips



Here are tips on how you can contribute to protecting the environment.

### Save energy

When you have fully charged the battery and disconnected the charger from the device, unplug the charger from the wall outlet.

You do not need to charge your battery so often if you do the following:

- Close and disable applications, services, and connections when not in use.
- Decrease the brightness of the screen.
- Set the device to enter the power saver mode after the minimum period of inactivity, if available in your device.
- Disable unnecessary sounds, such as keypad and ringing tones.

### Recycle

Most of the materials in a Nokia phone are recyclable. Check how to recycle your Nokia products at [www.nokia.com/werecycle](http://www.nokia.com/werecycle), or with a mobile device, [www.nokia.mobi/werecycle](http://www.nokia.mobi/werecycle).

Recycle packaging and user guides at your local recycling scheme.

### Learn more

For more information on the environmental attributes of your device, see [www.nokia.com/ecodeclaration](http://www.nokia.com/ecodeclaration).

## Product and safety information

### Digital rights management

Content owners may use different types of digital rights management (DRM) technologies to protect their intellectual property, including copyrights. This device uses various types of DRM software to access DRM-protected content. With this device you can access content protected with WMDRM 1.0, OMA DRM 1.0, OMA DRM 1.0 forward lock, and OMA DRM 2.0. If certain DRM software fails to protect the content, content owners may ask that such DRM software's ability to access new DRM-protected content be revoked. Revocation may also prevent renewal of such DRM-protected content already in your device. Revocation of such DRM software does not affect the use of content protected with other types of DRM or the use of non-DRM-protected content.

Digital rights management (DRM) protected content comes with an associated licence that defines your rights to use the content.

If your device has OMA DRM-protected content, to back up both the licence and the content, use the backup feature of Nokia PC Suite.

## 58 Product and safety information

Other transfer methods may not transfer the licence which need to be restored with the content for you to be able to continue the use of OMA DRM-protected content after the device memory is formatted. You may also need to restore the licence in case the files on your device get corrupted.

If your device has WMDRM-protected content, both the licence and the content will be lost if the device memory is formatted. You may also lose the licence and the content if the files on your device get corrupted. Losing the licence or the content may limit your ability to use the same content on your device again. For more information, contact your service provider.

Some licence may be connected to a specific SIM card, and the protected content can be accessed only if the SIM card is inserted in the device.

### Accessories



#### Warning:

Use only batteries, chargers, and accessories approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous. In particular, use of unapproved chargers or batteries may present a risk of fire, explosion, leakage, or other hazard.

For availability of approved accessories, please check with your dealer. When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.

### Battery

#### Battery and charger information

Your device is powered by a rechargeable battery. The battery intended for use with this device is BL-4S. Nokia may make additional battery models available for this device. This device is intended for use when supplied with power from the following chargers: AC-8/AC-15. The exact charger model number may vary depending on the type of plug. The plug variant is identified by one of the following: E, EB, X, AR, U, A, C, K, or UB.

The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device.

If a battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger, then disconnect and reconnect it to begin charging the battery. If the battery is completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made.

**Safe removal.** Always switch the device off and disconnect the charger before removing the battery.

**Proper charging.** Unplug the charger from the electrical plug and the device when not in use. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

**Avoid extreme temperatures.** Always try to keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Battery performance is particularly limited in temperatures well below freezing.

**Do not short-circuit.** Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

**Disposal.** Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

**Leak.** Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries. In the event of a battery leak, prevent battery liquid contact with skin or eyes. If this happens, flush the affected areas immediately with water, or seek medical help.

**Damage.** Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

**Correct use.** Use the battery only for its intended purpose. Improper battery use may result in a fire, explosion, or other hazard. If the device or battery is dropped, especially on a hard surface, and you believe the battery has been damaged, take it to a service centre for inspection before continuing to use it. Never use any charger or battery that is damaged. Keep your battery out of the reach of small children.

#### Nokia battery authentication guidelines

Always use original Nokia batteries for your safety. To check that you are getting an original Nokia battery, purchase it from a Nokia authorised service centre or dealer, and inspect the hologram label using the following steps:

#### Authenticate hologram

- 1 When you look at the hologram on the label, you should see the Nokia connecting hands symbol from one angle and the Nokia Original Enhancements logo when looking from another angle.



- 2 When you angle the hologram left, right, down and up, you should see 1, 2, 3 and 4 dots on each side respectively.



Successful completion of the steps is not a total assurance of the authenticity of the battery. If you cannot confirm authenticity or if you have any reason to believe that your Nokia battery with the hologram on the label is not an authentic Nokia battery, you should refrain from using it, and take it to the nearest Nokia authorised service centre or dealer for assistance.

To find out more about original Nokia batteries, see [www.nokia.com/battery](http://www.nokia.com/battery).

#### Taking care of your device

Your device is a product of superior design and craftsmanship and should be treated with care. The following suggestions will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics. When the device warms to its normal temperature from a cold temperature, moisture can form inside the device and damage electronic circuit boards.

## 60 Product and safety information

---

- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.
- Use chargers indoors.
- Backup all data you want to keep, such as contacts and calendar notes.
- To reset the device from time to time for optimum performance, power off the device and remove the battery.

These suggestions apply equally to your device, battery, charger, or any accessory.

### Recycle

Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Check product environmental information and how to recycle your Nokia products at [www.nokia.com/werecycle](http://www.nokia.com/werecycle), or [nokia.mobi/werecycle](http://nokia.mobi/werecycle).



The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies in the European Union. Do not dispose of these products as unsorted municipal waste. For more environmental information, see the product Eco-Declarations at [www.nokia.com/environment](http://www.nokia.com/environment).

### Additional safety information

The surface of this device is nickel-free.

### Small children

Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

### Operating environment

This device meets RF exposure guidelines in the normal use position at the ear or at least 1.5 centimetres (5/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body.

To send data files or messages requires a quality connection to the network. Data files or messages may be delayed until such a connection is available. Follow the separation distance instructions until the transmission is completed.

### Medical devices

Operation of radio transmitting equipment, including wireless phones, may interfere with the function of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external RF energy. Switch off your device when regulations posted instruct you to do so. Hospitals or health care facilities may use equipment sensitive to external RF energy.

### Implanted medical devices

Manufacturers of medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device.
- Not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device.

- Turn the wireless device off if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

### **Hearing aids**

Some digital wireless devices may interfere with some hearing aids.

### **Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection, electronic antilock braking, electronic speed control, and air bag systems. For more information, check with the manufacturer of your vehicle or its equipment.

Only qualified personnel should service the device or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. Remember that air bags inflate with great force. Do not place your device or accessories in the air bag deployment area.

Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft and may be illegal.

### **Potentially explosive environments**

Switch off your device in any area with a potentially explosive atmosphere. Obey all posted instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or death. Switch off the device at refuelling points such as near gas pumps at service stations. Observe restrictions in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include areas where you would be advised to turn off your vehicle engine, below deck on boats, chemical transfer or storage facilities and where the air contains chemicals or particles such as grain, dust, or metal powders. You should check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity.

### **Emergency calls**



**Important:** This device operates using radio signals, wireless networks, landline networks, and user-programmed functions. If your device supports voice calls over the internet (internet calls), activate both the internet calls and the cellular phone. The device may attempt to make emergency calls over both the cellular networks and through your internet call provider if both are activated. Connections in all conditions cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies.

To make an emergency call:

- 1 If the device is not on, switch it on. Check for adequate signal strength. Depending on your device, you may also need to complete the following:
  - Insert a SIM card if your device uses one.
  - Remove certain call restrictions you have activated in your device.
  - Change your profile from Offline or Flight profile to an active profile.
- 2 Press the end key as many times as needed to clear the display and ready the device for calls.
- 3 Enter the official emergency number for your present location. Emergency numbers vary by location.
- 4 Press the call key.

When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

### Certification information (SAR)

#### This mobile device meets guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station.

The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.95 W/kg.

Use of device accessories may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at [www.nokia.com](http://www.nokia.com).

## Copyright and other notices

### DECLARATION OF CONFORMITY

# CE 0434

Hereby, NOKIA CORPORATION declares that this RM-509 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at [http://www.nokia.com/phones/declaration\\_of\\_conformity/](http://www.nokia.com/phones/declaration_of_conformity/).

© 2009 Nokia. All rights reserved.

Nokia, Nokia Connecting People, Ovi, Nokia Xpress print, Nokia Xpress audio messaging, and Navi are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Portions of the Nokia Maps software are ©1996-2010 The FreeType Project. All rights reserved.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java and all Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc.

This product is licensed under the MPEG-4 Visual Patent Portfolio License (j) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal

and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL NOKIA OR ANY OF ITS LICENSORS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

The availability of particular products and applications and services for these products may vary by region. Please check with your Nokia dealer for details and availability of language options. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

#### FCC/INDUSTRY CANADA NOTICE

Your device may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment.

Model number: 3710a-1

/Issue 1.2 EN

**Index****Symbols/Numbers**

3G 18

**A**

access codes 11  
 answering calls 26  
 anykey answer 29  
 applications 49  
 audio messages 33

**B**

backing up data 23  
 barring password 11  
 battery 5, 8  
 battery charge level indicator 13  
 Bluetooth 22  
 browser 46, 47  
 browser security 48  
 browser settings 48  
 business cards 54

**C**

cable connection 23  
 cache memory 48  
 calculator 56  
 calendar 54  
 call 26  
 call divert 29  
 call log 28  
 call waiting 29  
 caller id 29  
 camera 38  
 camera settings 39  
 chat services (IM) 38  
 configuration 25  
 contacts 52  
 cookies 48

**D**

date and time 54  
 dial 26

dialling 27  
 dialling shortcuts 21, 27  
 digital rights 57  
 display settings 20, 48  
 downloads 17

**E**

e-mail 33, 37  
 e-mail, attachments 34  
 e-mail, creating 34  
 e-mail, reading and replying to 34  
 equaliser 46

**F**

factory settings, restoring 18  
 file management 41  
 flash messages 32  
 flight profile 15, 18

**G**

games 49  
 GPRS (general packet radio service) 24  
 GPS (global positioning system) 51

**H**

handsfree 28  
 headset 9  
 help application 18  
 home screen 13, 20

**I**

IM 35  
 IM (instant messaging) 35, 36, 38  
 images 38, 40  
 in-call timer 29  
 indicators 14  
 info messages 25  
 instant messaging 35  
 internet 46

**K**

keyguard 15, 18  
 keypad lock 15  
 keys 4, 21

<b>L</b>		PUK	11
language settings	18		
lights	20	<b>R</b>	
location information	24	radio	44, 45
loudspeaker	28	redial	26, 29
<b>M</b>		rejecting calls	26
mail	33, 37, 38	restoring data	23
mail setup	34	restoring settings	18
Maps	49	<b>S</b>	
maps	50, 51	screen settings	20
media player	40, 42, 43, 44	scrolling	15
memory	41	security code	11
memory card	7	security module	11
message centre number	31	security settings	19
message sending	32	sharing, online	41, 47
message settings	33	shortcuts	14, 21
messages	31, 32	signal strength indicator	13
modem	24	SIM card	5, 15, 24
music	44	SIM messages	25
music player	42, 43, 44	software updates	17, 18
My Nokia	16	speed dialling	21, 27, 29
<b>N</b>		status indicators	13
navigation	15	stopwatch	56
Nokia Map Loader	50	strap	10
Nokia support information	16	support resources	16
notes	55	switching device on/off	12
<b>O</b>		synchronisation	23
offline profile	15	<b>T</b>	
online sharing service	47	text input	29, 30
operator menu	24	text messages	31
<b>P</b>		themes	20
packet data connection	24	time and date	54
PC Suite	56	to-do list	55
phonebook	52	tones	18, 20
photographs	38	transferring, files	44
PictBridge	23	<b>U</b>	
PIN	11	updates	
position log	24	— device software	17
printing	41	USB cable connection	9, 23
profiles	20	USB connection	23

**V**

video	39, 40
video call	27
video messages	28
voice clarity	29
voice commands	21
voice dialling	27
voice messages	28
voice recorder	46

**W**

wallpaper	20
web	46
write text	29