

MUSE

CONTENU DE LA BOÎTE
Lorsque vous déballez votre nouveau radio-réveil avec station d'accueil pour iPod/iPhone, veuillez à ce que tous les éléments cités ci-dessous soient présents:

- Tour d'écoute
- Manuel d'utilisation
- Télécommande
- Câble auxiliaire x1 (3.5mm)
- Vis et Rondelle x2

INSTALLATION
1. Capteur infrarouge
2. Tweeters
3. Haut-parleurs
4. Caisson de grave

5. Toile du haut-parleur (M-1200BT seulement)
6. Base
7. Vis

Assemblez la base en bas sur le corps principal avec les vis fournies et les rondelles comme sur l'illustration 1 ci-dessus. Le fillet du haut parleur peut se démonter et se remonter comme sur l'illustration 2 ci-dessus.

DESCRIPTION DE L'APPAREIL
Unité principale
1. Port USB
2. Logement pour carte SD
3. AUX Entrée Auxiliaire
4. Chargeur USB
5. Indicateurs des modes
6. Touche M / C
7. Touche VOL+ / (augmentation du volume)
8. Touche VOL- / (diminution du volume)
9. Touche TUNE+ / (recherche avant)
10. Touche TUNE- / (recherche arrière)
11. Touche VOL+ / TUNE+ (recherche avant)
12. Touche VOL- / TUNE- (recherche arrière)
13. Antenne filaire FM

 
Télécommande
R1. Touche STANDBY (Mise Sous Tension/Veille)
R2. Touche TUNE+ (recherche arrière)
R3. Touche VOL+ (ARRÊT) (ajustement du volume)
R4. Touche MODE (recherche FM)
R5. Touche [X] (SOURDISSEUR)
R6. Touche VOL+ / TUNE+ (recherche avant)
R7. Touche M / C (lecture/pause)
R8. Touche TUNE+ (recherche avant)
R9. Touche FM SCAN (recherche FM)
R10. Touche EQ (EGALISEUR)
R11. Touches numériques

FR Manuel d'utilisation
GB User Manual
PT Manual do Utilizador
DE Bedienungsanleitung
ES Manual de instrucciones
NL Manuale di istruzioni
NL Gebruiksaanwijzingen

La télécommande fonctionne avec une pile au lithium de type CR2025 (fournie). Pour alimenter la télécommande, retirez l'onglet d'isolation situé à l'arrière de l'appareil.

Lorsque vous appuyez sur les touches numériques (0 - 9), l'appareil prend quelques secondes pour réagir.

INSTALLATION



REPLACEMENT DE LA PILE DE LA TÉLÉCOMMANDE
1. Poussez le verrou vers la droite. Sortez le bouton à pile.
2. Installez une pile « CR2025 » en dirigeant la borne positive de la pile (+) vers le haut.
3. Remettez la couvercle du compartiment à pile.

Remarques concernant les piles
- N'essayez jamais de recharger les piles, ne les chauffez pas et ne les démontez pas.
- Les piles ne doivent pas être exposées à une chaleur excessive (soleil, le feu, etc.).
- Ne jetez pas les piles au feu!

ATTENTION
Danger d'explosion si les piles ne sont pas remplacées correctement. Remplacez-les uniquement par des piles identiques ou de type équivalent.

ALIMENTATION
Cetle micro-chaîne fonctionne sur une alimentation secteur AC 230 V - 50 Hz. Insérez la prise du cordon d'alimentation dans une prise murale standard.

AVERTISSEMENT: Cette unité dispose d'un cordon CA long sur lequel il est facile de trébucher, ou qu'il est facile de tirer, provoquant des blessures. Assurez-vous qu'il est arrangé de manière à ne pas draper un dessus de table, etc. lorsqu'il peut être tiré par un enfant ou renversé accidentellement.

FONCTIONS DE BASE

1. Appuyez sur la touche M pour mettre l'appareil en marche. Pour arrêter l'appareil, utilisez cette même touche.
2. Appuyez sur la touche MODE à plusieurs reprises pour choisir la source de lecture désirée. L'indicateur de MODE s'allumera en vert en conséquence.
Remarque: - Si aucun appareil USB ou carte n'a été inséré, le mode USB ou CARTE ne peut pas être sélectionné par la touche MODE.

ÉCOUTE DE LA RADIO

Appuyez sur la touche M pour mettre l'appareil en marche.
1. Appuyez sur la touche MODE plusieurs fois jusqu'à ce que l'indicateur FM passe au vert.
2. Appuyez de manière répétée sur les touches TUNE+ / TUNE- pour rechercher la station de votre choix. Ou bien, appuyez sur la touche FM SCAN sur la télécommande. L'unité commencera à chercher automatiquement toutes les stations FM disponibles déjà stockées en mémoire.
3. Après avoir terminé le FM SCAN, appuyez sur les touches numériques puis attendez environ 3 secondes, vous pouvez sélectionner les stations en présélection 1-20, par ex. Appuyez sur "1" signifie la station présélectionnée 1, appuyez sur "2" + "0" signifie la station 20. Ou appuyez sur C pour circuler entre les stations pré-sélectionnées et les écouter.

Pour améliorer la réception radio:
FM: Pour une réception FM optimale, étendez l'antenne filaire.

LECTURE D'UNE CLE USB OU D'UNE CARTE SD/SDHC/MMC
Vous pouvez connecter un périphérique USB (non fourni) au port USB ou une carte mémoire SD/MMC (non fournie) au logement pour carte de l'appareil pour lire des fichiers MP3.

1. Appuyez sur la touche M pour mettre l'appareil en marche. Appuyez sur la touche MODE plusieurs fois jusqu'à ce que l'indicateur USB ou SD passe au vert. Après quelques secondes, la lecture du disque démarre automatiquement.
Remarques: - Les sources USB ou carte SD seront sélectionnées automatiquement lorsque vous les insérez.
- En mode USB ou SD, l'appareil se mettra en veille si l'unité est en pause et que vous ne touchez aucune commande pendant 5 minutes.
2. Appuyez sur la touche M pour mettre la lecture en pause. Appuyez une nouvelle fois sur la touche M pour la reprendre.
3. Appuyez sur la touche M / C pour passer à la plage suivante ou précédente. Maintenez la touche M ou M enfoncée pour rechercher rapidement un passage à l'intérieur d'une plage.
4. Utilisez les touches numériques pour atteindre la piste de votre choix. Ex: appuyez sur "1" signifie la station présélectionnée 1, appuyez sur "2" + "0" + "9" signifie la station 209.

Remarques:
- L'unité est compatible avec les appareils de mémoire suivants (source): Clé USB, carte SD, SDHC, MMC.
- Formats pris en charge: MP3 (32kpbs-320kpbs)
- Le nombre total de fichiers MP3 sur le dispositif de stockage ne peut pas dépasser 999.

FR Veuillez lire attentivement ce manuel avant toute utilisation.
GB Please read the instruction carefully before operating the unit.
PT Leia este manual com atenção antes de qualquer utilização.
DE Bitte lesen Sie dieses Handbuch vor der Benutzung sorgfältig durch.
ES Lea atentamente este manual antes de usar el aparato.
NL Leggete attentamente questo manuale prima di utilizzare l'apparecchio.
NL Geleefte voor gebruik deze handleiding aandachtig te lezen.

UTILISATION DE L'ENTRÉE AUXILIAIRE (AUX IN)
1. Branchez votre source auxiliaire (par exemple un lecteur iPod, iPad, MP3) à la prise AUX (3.5mm).
2. Appuyez sur la touche M pour mettre l'appareil en marche. Appuyez sur la touche MODE plusieurs fois jusqu'à ce que l'indicateur AUX passe au vert.
3. Appuyez sur la touche M pour mettre l'appareil en marche.
4. Ajustez le volume sonore au niveau désiré.
5. Pour arrêter la lecture, déconnectez votre source auxiliaire de la prise AUX.

Remarque: Si aucune source n'est jouée en mode AUX, l'unité passera en mode veille automatiquement après 5 minutes.

Chargeur USB
1. Connectez votre câble USB (non fourni) et branchez la prise USB standard dans le port de chargement USB sur le dessus de l'unité.
2. Appuyez sur la touche M pour mettre l'appareil en marche.
3. Une fois terminé, déconnectez le câble USB de l'unité.

Remarque:
- La tension maximum du port de chargement USB est de 5V, 2.1A CC. Vous pouvez charger tous les appareils à rechargeable par USB avec une intensité de chargement inférieure, comme les iPod, iPad, lecteur MP3, etc.
- La fonction de chargement n'est pas disponible en mode veille.
- Certains appareils peuvent être incompatibles.

FR Veuillez lire attentivement ce manuel avant toute utilisation.
GB Please read the instruction carefully before operating the unit.
PT Leia este manual com atenção antes de qualquer utilização.
DE Bitte lesen Sie dieses Handbuch vor der Benutzung sorgfältig durch.
ES Lea atentamente este manual antes de usar el aparato.
NL Leggete attentamente questo manuale prima di utilizzare l'apparecchio.
NL Geleefte voor gebruik deze handleiding aandachtig te lezen.

UNPACK YOUR UNIT

When you unpack your new unit, make sure that you have removed all the accessories and information papers:
-Speaker tower
-User manual
-Remote Control
-1 piece of Stereo audio connection cable with 3.5 stereo plug
-2 pieces of Assembly screws / washers

INSTALLATION
1. Remote Sensor
2. Tweeters
3. Loud Speakers
4. Woofer

5. Speaker Net (M-1200BT only)
6. Base
7. Screws

Assembled the wooden base to the main body by the supplied screws and washers as the Fig 1 above. The speaker net can take out and reassemble as Fig 2 above.

LOCATION AND DESCRIPTION OF CONTROLS
MAIN UNIT:
1. USB
2. SD card slot
3. AUX input jack
4. USB CHARGE
5. MODE indicator
6. M / C Play/Pause/FM Scan Button
7. VOL+ Button
8. VOL- Button
9. MODE button
10. TUNE+ Button
11. TUNE- Button
12. Standby Button
13. Antenna

REMOTE CONTROL:
R1. STANDBY Button
R2. TUNE- Button
R3. VOL (Volume)+-Buttons
R4. VOL Button
R5. TUNE+ Button
R6. TUNE+ Button
R7. M (Play/Pause) Button
R8. STOP Button
R9. FM SCAN Button
R10. EQ Button
R11. Numeric Buttons
R12. M (Play/Pause) Button
R13. STOP Button
R14. FM SCAN Button
R15. EQ Button
R16. Numeric Buttons

The remote control operates on 1pc "CR2025" lithium battery (included) to power up the remote control, remove the installation tab from the back of unit.

When you press the number keys(0-9), the unit takes some seconds to react.

Replacing battery for the remote control
1. Push and slide out the battery trap.
2. Replace the cover.

Notes on batteries
- Never recharge the batteries, apply heat to them or take them apart.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Do not throw the batteries in fire!
- Always dispose of batteries to the environmental aspects of battery disposal.
- If the remote control is not going to be used for a long time, remove the battery to avoid damage caused by battery leakage corrosion.
- Please respect the environment. Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.

POWER SOURCE
Insert the AC plug into a conveniently located AC outlet having AC 230V~50Hz.

WARNING: This make has a long AC cord that can easily be tripped on or pulled on, causing injury. Please make sure it is arranged so it will not drape over a tabletop, etc. where it can be pulled on by children or tripped over accidentally.

GENERAL OPERATION

1. Press M to turn on or turn off the unit.
2. Press the MODE button repeatedly to select the playback source as desired. The MODE indicators will light green accordingly.

Note:
- If no USB device or CARD was inserted, USB or CARD mode cannot be selected by MODE button.
Insert the AC plug into a conveniently located AC outlet having AC 230V~50Hz.

SAFETY INSTRUCTION
CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.

PLAY RADIO
Press the M button to turn on the unit.
1. Press MODE button repeatedly until the FM indicator turns on.
2. Select the radio station using buttons TUNE+ / TUNE- or the FM SCAN Button on the remote control. The unit will start to search all available FM stations then stored into the memory automatically.
3. After finished FM SCAN, press numeric buttons then wait for approx 3 seconds, you can select 1-20 preset stations, eg pressing "1", means preset station 1, "2" + "0" means preset station 20. Or press C to cycle through and listen to the preset stations.

To enhance radio reception ability:
FM: Fully unwind the antenna wire. Extend the antenna wire and place it in the position that sounds best.

USB OR SD/SDHC/MMC PLAYBACK
You can connect a USB flash drive (not included) to the USB port or a SD/SDHC/MMC card (not included) to the memory expansion card slot on the unit to play MP3 files.

1. Press M button to turn on the unit. Press the MODE button repeatedly until the USB indicator or SD indicator turns on. Wait for a few seconds, the unit will play the music files automatically.
Note:
- If USB or SD card sources will be automatically selected when inserted in.
- In USB or SD mode, I will go to standby after "PAUSE" the unit and without key press after 5 MIN.

2. Press M to suspend momentarily the playing track. Press M again to resume playing.
3. Press M to skip forward to next track and M to skip backward to previous track. Press and hold M or M to search quickly within a track.
4. To stop playback, disconnect your auxiliary source from the AUX jack.
5. To stop playback, disconnect your auxiliary source from the AUX jack.

Note:
- The unit is compatible with the following Memory Device (Source): USB flash drive, SD, SDHC, MMC.
- Supporting format: MP3 (32kpbs-320kpbs)
- The total number of MP3 files on the Memory Device should not exceed 999.
- If you can not easily insert the memory card, you may have inserted it incorrectly. Try to turn over the card and then insert again.
- For playing files on USB flash drive or SD/SDHC/MMC card, you should plug in the USB flash drive or SD/SDHC/MMC card when the unit is in standby mode. Turn ON the unit and use SOURCE button to select USB or SD/SDHC/MMC card mode.
- There are many USB devices in the market. We cannot guarantee to support all different models. Please try another USB device if your device is not supported.
- Some SD/SDHC/MMC card may be incompatible.

LISTENING TO AUXILIARY SOURCE
1. Connect your auxiliary source (e.g. iPod / iPad / MP3 player) to the AUX jack (3.5mm)
2. Press the M button to turn on the unit. Press the MODE Button repeatedly until the AUX indicator turns on.
3. Start playback from your auxiliary source.
4. Adjust the volume to desired level.
5. To stop playback, disconnect your auxiliary source from the AUX jack.

Note:
- If no source is played in AUX mode, the unit will go to standby mode automatically after 5 minutes.

USB CHARGER-A Power USB Port
1. Connect your device to USB cable (not included) and plug the standard USB plug into the USB charging port on the top of the unit.
2. Power on the unit as previous procedures.
3. When finished, disconnect the USB cable from the unit.

NOTES:
- Maximum output from the USB charging port is DC 5V, 2.1A. You can charge any rechargeable USB devices charging current less than it, such as iPod, iPhone, iPad, MP3 Player, etc.
- Charging function is not available in Standby mode.
- Some devices may be incompatible.

BLUETOOTH PAIRING & LISTENING OPERATION
The Bluetooth® mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by New One S.A.S is under license. Other trademarks and product names are those of their respective owners.
1. Turn off the Bluetooth functionality of other devices that were paired with your unit.
2. Press the M button to turn on the unit.
3. The Bluetooth indicator will turn on. Your unit will be in pairing mode with two beep tone.
4. Turn on Bluetooth functionality on your Bluetooth device. Typically, Bluetooth controls are found on the device's tools or settings menu (see your user manual). Turn on Bluetooth connectivity and make your device "discoverable".
5. Clean out the pairing list on your Bluetooth device.

ATTENTION
RISQUE DE CHOC ELECTRIQUE
NE PAS OUVRIER
Le symbole de l'éclair terminé par une flèche à l'intérieur d'un triangle avertit l'utilisateur de la présence d'une « tension dangereuse » dans l'appareil.

ATTENTION
Le point d'exclamation situé à l'intérieur d'un triangle avertit l'utilisateur d'un danger. Lire attentivement les instructions importantes dans la documentation accompagnant l'appareil.

AVERTISSEMENT - Afin de réduire le risque d'incendie ou de choc électrique, n'exposez pas cet appareil à la pluie ou à l'humidité.

Si à l'avenir vous désirez vous débarrasser de cet appareil, veuillez noter que les appareils électriques ne doivent pas être jetés avec les ordures ménagères. Consultez-vous pour connaître le centre de recyclage le plus proche. Recherchez les autorités locales ou votre revendeur pour plus de détails (Directive sur les déchets des équipements électriques et électroniques).

NEW ONE S.A.S
10, Rue de la Mission, 25480 Ecole Valentin, France

UNPACK YOUR UNIT

When you unpack your new unit, make sure that you have removed all the accessories and information papers:
-Speaker tower
-User manual
-Remote Control
-1 piece of Stereo audio connection cable with 3.5 stereo plug
-2 pieces of Assembly screws / washers

INSTALLATION
1. Remote Sensor
2. Tweeters
3. Loud Speakers
4. Woofer

5. Speaker Net (M-1200BT only)
6. Base
7. Screws

Assembled the wooden base to the main body by the supplied screws and washers as the Fig 1 above. The speaker net can take out and reassemble as Fig 2 above.

LOCATION AND DESCRIPTION OF CONTROLS
MAIN UNIT:
1. USB
2. SD card slot
3. AUX input jack
4. USB CHARGE
5. MODE indicator
6. M / C Play/Pause/FM Scan Button
7. VOL+ Button
8. VOL- Button
9. MODE button
10. TUNE+ Button
11. TUNE- Button
12. Standby Button
13. Antenna

REMOTE CONTROL:
R1. STANDBY Button
R2. TUNE- Button
R3. VOL (Volume)+-Buttons
R4. VOL Button
R5. TUNE+ Button
R6. TUNE+ Button
R7. M (Play/Pause) Button
R8. STOP Button
R9. FM SCAN Button
R10. EQ Button
R11. Numeric Buttons
R12. M (Play/Pause) Button
R13. STOP Button
R14. FM SCAN Button
R15. EQ Button
R16. Numeric Buttons

The remote control operates on 1pc "CR2025" lithium battery (included) to power up the remote control, remove the installation tab from the back of unit.

When you press the number keys(0-9), the unit takes some seconds to react.

Replacing battery for the remote control
1. Push and slide out the battery trap.
2. Replace the cover.

Notes on batteries
- Never recharge the batteries, apply heat to them or take them apart.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Do not throw the batteries in fire!
- Always dispose of batteries to the environmental aspects of battery disposal.
- If the remote control is not going to be used for a long time, remove the battery to avoid damage caused by battery leakage corrosion.
- Please respect the environment. Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.

POWER SOURCE
Insert the AC plug into a conveniently located AC outlet having AC 230V~50Hz.

WARNING: This make has a long AC cord that can easily be tripped on or pulled on, causing injury. Please make sure it is arranged so it will not drape over a tabletop, etc. where it can be pulled on by children or tripped over accidentally.

GENERAL OPERATION

1. Press M to turn on or turn off the unit.
2. Press the MODE button repeatedly to select the playback source as desired. The MODE indicators will light green accordingly.

Note:
- If no USB device or CARD was inserted, USB or CARD mode cannot be selected by MODE button.
Insert the AC plug into a conveniently located AC outlet having AC 230V~50Hz.

SAFETY INSTRUCTION
CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.

PLAY RADIO
Press the M button to turn on the unit.
1. Press MODE button repeatedly until the FM indicator turns on.
2. Select the radio station using buttons TUNE+ / TUNE- or the FM SCAN Button on the remote control. The unit will start to search all available FM stations then stored into the memory automatically.
3. After finished FM SCAN, press numeric buttons then wait for approx 3 seconds, you can select 1-20 preset stations, eg pressing "1", means preset station 1, "2" + "0" means preset station 20. Or press C to cycle through and listen to the preset stations.

To enhance radio reception ability:
FM: Fully unwind the antenna wire. Extend the antenna wire and place it in the position that sounds best.

USB OR SD/SDHC/MMC PLAYBACK
You can connect a USB flash drive (not included) to the USB port or a SD/SDHC/MMC card (not included) to the memory expansion card slot on the unit to play MP3 files.

1. Press M button to turn on the unit. Press the MODE button repeatedly until the USB indicator or SD indicator turns on. Wait for a few seconds, the unit will play the music files automatically.
Note:
- If USB or SD card sources will be automatically selected when inserted in.
- In USB or SD mode, I will go to standby after "PAUSE" the unit and without key press after 5 MIN.

2. Press M to suspend momentarily the playing track. Press M again to resume playing.
3. Press M to skip forward to next track and M to skip backward to previous track. Press and hold M or M to search quickly within a track.
4. To stop playback, disconnect your auxiliary source from the AUX jack.
5. To stop playback, disconnect your auxiliary source from the AUX jack.

Note:
- The unit is compatible with the following Memory Device (Source): USB flash drive, SD, SDHC, MMC.
- Supporting format: MP3 (32kpbs-320kpbs)
- The total number of MP3 files on the Memory Device should not exceed 999.
- If you can not easily insert the memory card, you may have inserted it incorrectly. Try to turn over the card and then insert again.
- For playing files on USB flash drive or SD/SDHC/MMC card, you should plug in the USB flash drive or SD/SDHC/MMC card when the unit is in standby mode. Turn ON the unit and use SOURCE button to select USB or SD/SDHC/MMC card mode.
- There are many USB devices in the market. We cannot guarantee to support all different models. Please try another USB device if your device is not supported.
- Some SD/SDHC/MMC card may be incompatible.

LISTENING TO AUXILIARY SOURCE
1. Connect your auxiliary source (e.g. iPod / iPad / MP3 player) to the AUX jack (3.5mm)
2. Press the M button to turn on the unit. Press the MODE Button repeatedly until the AUX indicator turns on.
3. Start playback from your auxiliary source.
4. Adjust the volume to desired level.
5. To stop playback, disconnect your auxiliary source from the AUX jack.

Note:
- If no source is played in AUX mode, the unit will go to standby mode automatically after 5 minutes.

USB CHARGER-A Power USB Port
1. Connect your device to USB cable (not included) and plug the standard USB plug into the USB charging port on the top of the unit.
2. Power on the unit as previous procedures.
3. When finished, disconnect the USB cable from the unit.

NOTES:
- Maximum output from the USB charging port is DC 5V, 2.1A. You can charge any rechargeable USB devices charging current less than it, such as iPod, iPhone, iPad, MP3 Player, etc.
- Charging function is not available in Standby mode.
- Some devices may be incompatible.

BLUETOOTH PAIRING & LISTENING OPERATION
The Bluetooth® mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by New One S.A.S is under license. Other trademarks and product names are those of their respective owners.
1. Turn off the Bluetooth functionality of other devices that were paired with your unit.
2. Press the M button to turn on the unit.
3. The Bluetooth indicator will turn on. Your unit will be in pairing mode with two beep tone.
4. Turn on Bluetooth functionality on your Bluetooth device. Typically, Bluetooth controls are found on the device's tools or settings menu (see your user manual). Turn on Bluetooth connectivity and make your device "discoverable".
5. Clean out the pairing list on your Bluetooth device.

ATTENTION
RISQUE DE CHOC ELECTRIQUE
NE PAS OUVRIER
Le symbole de l'éclair terminé par une flèche à l'intérieur d'un triangle avertit l'utilisateur de la présence d'une « tension dangereuse » dans l'appareil.

ATTENTION
Le point d'exclamation situé à l'intérieur d'un triangle avertit l'utilisateur d'un danger. Lire attentivement les instructions importantes dans la documentation accompagnant l'appareil.

AVERTISSEMENT - Afin de réduire le risque d'incendie ou de choc électrique, n'exposez pas cet appareil à la pluie ou à l'humidité.

Si à l'avenir vous désirez vous débarrasser de cet appareil, veuillez noter que les appareils électriques ne doivent pas être jetés avec les ordures ménagères. Consultez-vous pour connaître le centre de recyclage le plus proche. Recherchez les autorités locales ou votre revendeur pour plus de détails (Directive sur les déchets des équipements électriques et électroniques).

NEW ONE S.A.S
10, Rue de la Mission, 25480 Ecole Valentin, France

UNPACK YOUR UNIT

When you unpack your new unit, make sure that you have removed all the accessories and information papers:
-Speaker tower
-User manual
-Remote Control
-1 piece of Stereo audio connection cable with 3.5 stereo plug
-2 pieces of Assembly screws / washers

INSTALLATION
1. Remote Sensor
2. Tweeters
3. Loud Speakers
4. Woofer

5. Speaker Net (M-1200BT only)
6. Base
7. Screws

Assembled the wooden base to the main body by the supplied screws and washers as the Fig 1 above. The speaker net can take out and reassemble as Fig 2 above.

LOCATION AND DESCRIPTION OF CONTROLS
MAIN UNIT:
1. USB
2. SD card slot
3. AUX input jack
4. USB CHARGE
5. MODE indicator
6. M / C Play/Pause/FM Scan Button
7. VOL+ Button
8. VOL- Button
9. MODE button
10. TUNE+ Button
11. TUNE- Button
12. Standby Button
13. Antenna

REMOTE CONTROL:
R1. STANDBY Button
R2. TUNE- Button
R3. VOL (Volume)+-Buttons
R4. VOL Button
R5. TUNE+ Button
R6. TUNE+ Button
R7. M (Play/Pause) Button
R8. STOP Button
R9. FM SCAN Button
R10. EQ Button
R11. Numeric Buttons
R12. M (Play/Pause) Button
R13. STOP Button
R14. FM SCAN Button
R15. EQ Button
R16. Numeric Buttons

The remote control operates on 1pc "CR2025" lithium battery (included) to power up the remote control, remove the installation tab from the back of unit.

When you press the number keys(0-9), the unit takes some seconds to react.

Replacing battery for the remote control
1. Push and slide out the battery trap.
2. Replace the cover.

Notes on batteries
- Never recharge the batteries, apply heat to them or take them apart.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Do not throw the batteries in fire!
- Always dispose of batteries to the environmental aspects of battery disposal.
- If the remote control is not going to be used for a long time, remove the battery to avoid damage caused by battery leakage corrosion.
- Please respect the environment. Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.

POWER SOURCE
Insert the AC plug into a conveniently located AC outlet having AC 230V~50Hz.

WARNING: This make has a long AC cord that can easily be tripped on or pulled on, causing injury. Please make sure it is arranged so it will not drape over a tabletop, etc. where it can be pulled on by children or tripped over accidentally.

GENERAL OPERATION

1. Press M to turn on or turn off the unit.
2. Press the MODE button repeatedly to select the playback source as desired. The MODE indicators will light green accordingly.

Note:
- If no USB device or CARD was inserted, USB or CARD mode cannot be selected by MODE button.
Insert the AC plug into a conveniently located AC outlet having AC 230V~50Hz.

SAFETY INSTRUCTION
CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.

PLAY RADIO
Press the M button to turn on the unit.
1. Press MODE button repeatedly until the FM indicator turns on.
2. Select the radio station using buttons TUNE+ / TUNE- or the FM SCAN Button on the remote control. The unit will start to search all available FM stations then stored into the memory automatically.
3. After finished FM SCAN, press numeric buttons then wait for approx 3 seconds, you can select 1-20 preset stations, eg pressing "1", means preset station 1, "2" + "0" means preset station 20. Or press C to cycle through and listen to the preset stations.

To enhance radio reception ability:
FM: Fully unwind the antenna wire. Extend the antenna wire and place it in the position that sounds best.

USB OR SD/SDHC/MMC PLAYBACK
You can connect a USB flash drive (not included) to the USB port or a SD/SDHC/MMC card (not included) to the memory expansion card slot on the unit to play MP3 files.

1. Press M button to turn on the unit. Press the MODE button repeatedly until the USB indicator or SD indicator turns on. Wait for a few seconds, the unit will play the music files automatically.
Note:
- If USB or SD card sources will be automatically selected when inserted in.
- In USB or SD mode, I will go to standby after "PAUSE" the unit and without key press after 5 MIN.

2. Press M to suspend momentarily the playing track. Press M again to resume playing.
3. Press M to skip forward to next track and M to skip backward to previous track. Press and hold M or M to search quickly within a track.
4. To stop playback, disconnect your auxiliary source from the AUX jack.
5. To stop playback, disconnect your auxiliary source from the AUX jack.

Note:
- The unit is compatible with the following Memory Device (Source): USB flash drive, SD, SDHC, MMC.
- Supporting format: MP3 (32kpbs-320kpbs)
- The total number of MP3 files on the Memory Device should not exceed 999.
- If you can not easily insert the memory card, you may have inserted it incorrectly. Try to turn over the card and then insert again.
- For playing files on USB flash drive or SD/SDHC/MMC card, you should plug in the USB flash drive or SD/SDHC/MMC card when the unit is in standby mode. Turn ON the unit and use SOURCE button to select USB or SD/SDHC/MMC card mode.
- There are many USB devices in the market. We cannot guarantee to support all different models. Please try another USB device if your device is not supported.
- Some SD/SDHC/MMC card may be incompatible.

LISTENING TO AUXILIARY SOURCE
1. Connect your auxiliary source (e.g. iPod / iPad / MP3 player) to the AUX jack (3.5mm)
2. Press the M button to turn on the unit. Press the MODE Button repeatedly until the AUX indicator turns on.
3. Start playback from your auxiliary source.
4. Adjust the volume to desired level.
5. To stop playback, disconnect your auxiliary source from the AUX jack.

Note:
- If no source is played in AUX mode, the unit will go to standby mode automatically after 5 minutes.

USB CHARGER-A Power USB Port
1. Connect your device to USB cable (not included) and plug the standard USB plug into the USB charging port on the top of the unit.
2. Power on the unit as previous procedures.
3. When finished, disconnect the USB cable from the unit.

NOTES:
- Maximum output from the USB charging port is DC 5V, 2.1A. You can charge any rechargeable USB devices charging current less than it, such as iPod, iPhone, iPad, MP3 Player, etc.
- Charging function is not available in Standby mode.
- Some devices may be incompatible.

BLUETOOTH PAIRING & LISTENING OPERATION
The Bluetooth® mark

