# HONDA EG5000X

## **OWNER'S MANUAL**



	, 
A WARNING The generator is a potential source of e not expose the generator to moisture, rain or snow wet, and do not operate it with wet hands.	electrical shock if misused. Dow. Do not let the generator get
wet, and do not operate it with wet hands.	
	·

Thank you for purchasing a Honda generator.

This manual covers operation and maintenance of the EG5000X generator All information in this publication is based on the latest product information available at the time of approval for printing.

Honda Motor Co., Ltd. reserves the right to make changes at any time without notice and without incurring any obligation.

No part of this publication may be reproduced without written permission.

This manual should be considered a permanent part of the generator and remain with the generator when sold.

Pay special attention to statements preceded by the following words:

⚠ DANGER: Indicates severe personal injury or death will result if instructions are not followed.


AWARNING Indicates a strong possibility of severe personal injury or death if instructions are not followed.

CAUTION: Indicates a possibility of personal injury or equipment damage if instructions are not followed.

NOTE: Gives helpful information.

If a problem should arise, or if you have any questions about the generator, consult an authorized Honda dealer.

A WARNING The Honda generator is designed to give safe and dependable service if operated according to instructions. Read and understand this Owner's Manual before operating the generator. Failure to do so could result in personal injury or equipment damage.

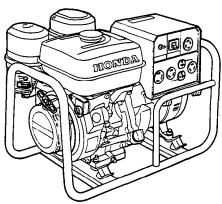

## CONTENTS

### **CONTENTS**

1.	GENERATOR SAFETY	3
2.	COMPONENT IDENTIFICATION	6
3.	PRE-OPERATION CHECK	8
	STARTING THE ENGINE	
	GENERATOR USE	
6.	STOPPING THE ENGINE	18
	High altitude operation	19
	MAINTENANCE	
8.	TRANSPORTING/STORAGE	29
9.	TROUBLESHOOTING	31
10. `	WIRING DIAGRAM	33
11.	SPECIFICATIONS	34
	WARRANTY SERVICE	


#### A WARNING

- Place the generator on a firm, level snrface: avoid loose sand or snow. If the
  generator is tilted or overturned, fuel spillage may result. Also, if the generator is
  overturned or sinks into a soft surface, sand, dirt, or water may enter the
  generator.
- To prevent fire hazards and to provide adequate ventilation, keep the generator at least 1 meter (3 feet) away from buildings and other equipment during operation. Do not place flammable objects close to the generator.
- Know how to stop the generator quickly, and understand the operation of all the controls, Never permit anyone to operate the generator without proper instructions.
- The generator is a potential source of electrical shock if misused. Do not expose the generator to moisture, rain or snow. Do not let the generator get wet, and do not operate it with wet hands.
- Do not allow children to operate the generator. Keep children and pets away from the area of operation.
- Gasoline is extremely flammable and is explosive under certain conditions. Do not smoke or allow flames or sparks where the generator is refueled or where gasoline is stored. Refuel in a well-ventilated area with the engine stopped.
- Exhaust gas contains poisonous carbon monoxide. Avoid inhalation of exhaust gasses. Never run the engine in a closed garage or confined area.
- The muffler becomes very hot during operation and remains hot for a while after stopping the engine, Be careful not to touch the muffler while it is hot. Let the engine cool before storing the generator indoors.
- Onnections for standby power to a building's electrical system must be made by a qualified electrician and must comply with all applicable laws and electrical codes. Improper connections can allow electrical current from the generator to backfeed into the utility lines. Such backfeed may electrocute utility company workers or others who contact the lines during a power outage, and when utility power is restored, the generator may explode, burn, or cause fires in the building's electrical system.

Read these labels before you operate the generator.

#### **MARNING**

ELECTROCUTION OR PROPERTY DAMAGE CAN OCCUR. DO NOT CONNECT THIS GENERATOR TO ANY BUILDINGS ELECTRICAL SYSTEM UNLESS AN ISOLATION SWITCH HAS BEEN INSTALLED BY A LICENSED ELECTRICIAN. READ OWNERS MANUAL CAREFULLY.

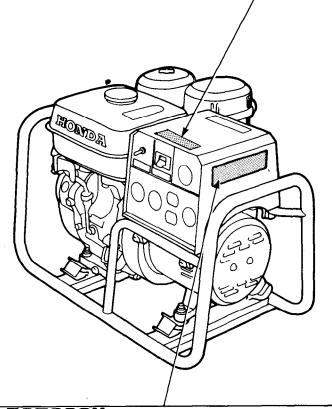


## EG5000X HONDA MOTOR CO., LTD. MADE IN JAPAN (8)

CAUTION

BE SURE TO FILL CRANKCASE
WITH RECOMMENDED OIL
BEFORE USING.
FOR DETAILED EXPLANATION,
SEE THE OWNER'S MANUAL.

VOLTAGE 120/240V
FREQUENCY 60Hz
RATED OUTPUT 4.5kVA
MAX. OUTPUT 5.0kVA
PHASE 1
FUEL GASOLINE (PETROL)

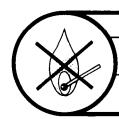

■ CHECK FOR SPILLED FUEL OR FUEL LEAKS.


STOP ENGINE BEFORE REFUELING.

■ CONTROLER QU'IL N'Y A NI FUITE NI ESSENCE REPANDUE SUR L'APPAREIL.

ARRETER LE MOTEUR AVANT DE REFAIRE LE PLEIN.

■ INSPECCIONAR PARA COMBUSTIBLE DERRAMADO
O ESCAPE.

PARAR MOTOR ANTES DE ECHAR.

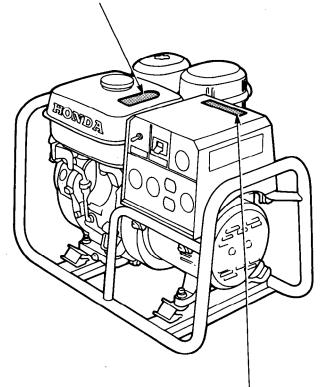



WARNING DO NOT USE INDOORS. EXHAUST GAS CONTAINS POISONOUS CARBON MONOXIDE.

ATTENTION NE PAS UTILISER DANS UN ENDROIT FERME A CAUSE DU RISQUE D'EMPOISONNEMENT DU GAZ.

ATENCION NO LO USE EN LUGARES CERRADOS PORQUE EL MONOXIDE DE CARBONO ES VENENOSO.

## 2. COMPONENT IDENTIFICATION

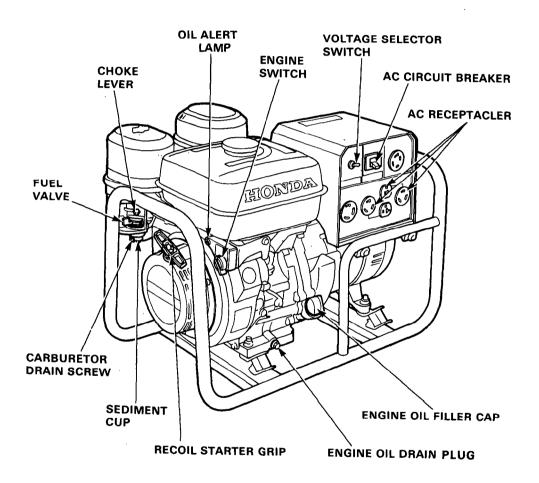

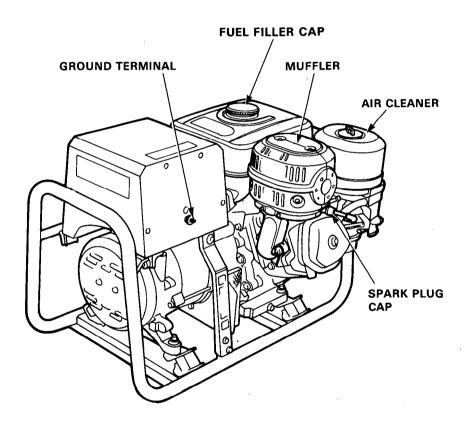

### 3. PRE-OPERATION CHECK

CAUTION: Check the generator on a level surface with the engine stopped.

#### 1. Engine Oil

CAUTION: Engine oil is a major factor affecting performance and service life. Non-detergent and 2-stroke engine oils are not reconended.

Use Honda 4-stroke oil an equivalent high-detergent, premium quality motor oil certified to meet or exceed U.S. automobil manufacture's requirements for Service Classification SG-SF / CC-CD. Motor oils classified SG-SF / CC-CD will show this designation on the container.

SAE 10W/30 is recommende for general, all-temperature use. Other viscosities shown in the chatr may be used when the average temperature in your area is within the induindicated range.

- 1. Remove the oil filler cap and wipe the dipstick clean.
- 2. Check the oil level by inserting the dipstik in the filler neck without screwing it in.
- 3. If the level is low, add the recommended oil to upper mark on the dipstik.

NOTE: The Oil Alert System will automatically stop the engine befor the oil 20W-40,20W-50 level fails below the safe limit. However, to avoid the inconvenience of an 10W-40 unexpected shutdown, it is advisable to visually inspect the oil level reguraly. 10W-30 40 60 80 **FILLER** -20 -10 10 20 40°C HOLE Ambient temperature HPPFR **LEVEL** OIL FILLER

CAP

#### 2. Fuel

Remove the filler cap and check the fuel level. Refill the tank if the fuel level is low. Do not fill above the shoulder of the fuel filter.

Your engine is designed to use any gasoline that has a pump octane number  $(\frac{R+M}{2})$  of 86 or higher, or that has a research octane number of 91 or higher. Gasoline pumps at service station normally display the pump octane number.


We recommend that you use unleaded fuel because it produces fewer engine and spark plug deposits and extends the life of exhaust system components.

Never use stale or contaminated gasoline or an oil/gasoline mixture. Avoid getting dirt, dust or water in the fuel tank. Use of a lower octane gasoline can cause persistent "pinging" or heavy "spark knock" (a metallic rapping noise) which, if severe, can lead to engine damage.

CAUTION: If "spark knock" or "pinging" occurs at a steady engine speed under normal load, change brands of gasoline. If spark knock or pinging persists, consult your authorized Honda dealer. Failure to do so is considered misuse, and damage caused by misuse is not covered by Honda's Limited Warranty.

Occasionally you may experience light spark knock while operating under heavy loads. This is no cause for cnocern, it simply means your engine is operating efficiently.

Fuel tank capacity: 7.0 ℓ . (1.85 Us gal)

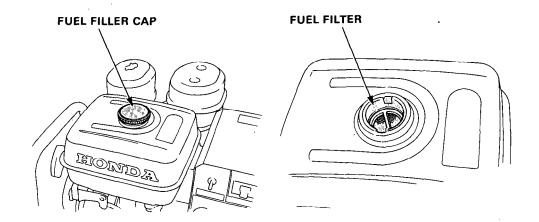

#### A WARNING

- Gasoline is extremely flammable and is explosive under certain conditions.
- Refuel in a well-ventilated area with the engine stopped. Do not smoke or allow flames or sparks in the area where the engine is refueled or where gasoline is stored.
- Do not overfill the fuel tank (there should be no fuel in the filler neck). After refueling, make sure the tank cap is closed properly and securely.
- Be careful not to spill fuel when refueling. Spilled fuel or fuel vapor may ignite. If any fuel is spilled, make sure the area is dry before starting the engine.
- Avoid repeated or prolonged contact with skin or breathing of vapor.
   KEEP OUT OF REACH OF CHILDREN.

#### **GASOLINES CONTAINING ALCOHOL**

If you decide to use a gasoline containing alcohol (gasohol), be sure it's octane rating is at least as high as that recommended by Honda. There are two types of "gasohol": one containing ethanol, and the other containing methanol. Do not use gasohol that contains more than 10% ethanol. Do not use gasoline containing methanol (methyl or wood alcohol) that does not also contain cosolvents and corrosion inhibitors for methanol. Never use gasoline containing more than 5% methanol, even if it has cosolvents and corrosion inhibitors.


#### NOTE:

- Fuel system damage or engine performance problems resulting from the use of fuels that contain alcohol is not covered under the warranty. Honda cannot endorse the use of fuels containing methanol since evidence of their suitability is as yet incomplete.
- Before buying fuel from an unfamiliar station, try to find out if the fuel contains alcohol, if it does, confirm the type and percentage of alcohol used. If you notice any undesirable operating symptoms while using a gasoline that contains alcohol, or one that you think contains alcohol, switch to a gasoline that you know does not contain alcohol.

#### 3. Air Cleaner


Check the air cleaner elements to be sure they are clean and in good coudition. Clean or replace the elements if necessary (page 23).

CAUTION: Never run the engine without the air cleaner. Rapid engine wear will result.

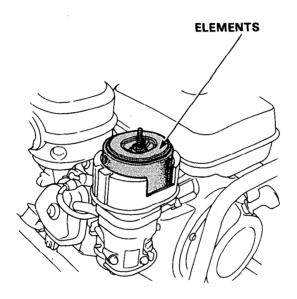


## 4. STARTING THE ENGINE


Turn the AC circuit breaker to the OFF position.
 The generator maybe hard to start if a lood is connected.

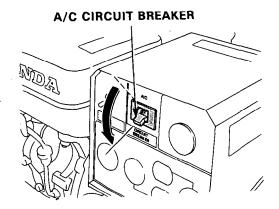

2. Move the fuel valve to the ON position

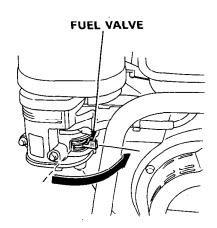


## 3. Turn the engine switch to the ON position.

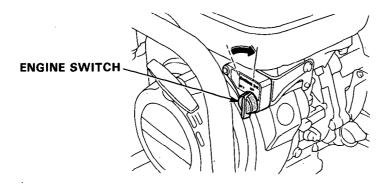


### 4. Move the choke lever to the CLOSE position

NOTE: Do not use the choke if the engine is warm or the air temperature is high.

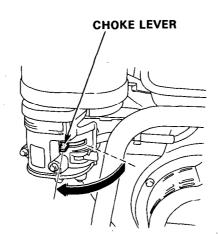


5. Pull the starter grip lightly until resistance is felt, then pull briskly.

CAUTION: Do not allow the starter grip to snap back against the engine. Return it gently to prevent damage to the starter.

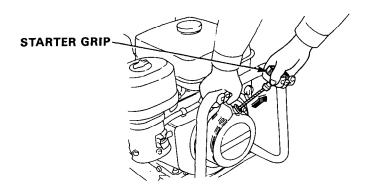


6. Turn the choke lever to the OPEN position as the engine warms up.

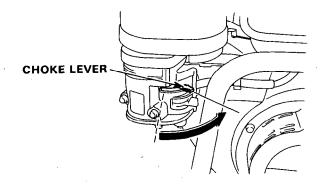

#### A WARNING

To prevent electrical shock from faulty appliances, the generator should be grounded. Connect a length of heavy wire between the ground terminal and the ground source.

• Connections for standby power to a building's electrical system must be made by a qualified electrician and must comply with all applicable laws and electrical codes. Improper connections can allow electrical current from the generator to backfeed into the utility lines. Such backfeed may electrocute utility company workers or others who contact the lines during a power outage, and when utility power is restored, the generator may explode, burn, or cause fires in the building's electrical system.

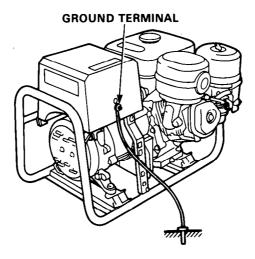

#### **CAUTION:**


- Limit operation requiring maximum power (5000 VA) to 30 minutes.
   For continuous operation, do not exceed the rated power of 4500 VA.
   In either case, the total wattage of all appliances connected must be considered.
- Most appliance motors require more than their rated wattage for startup.
- Do not exceed the current limit specified for any output.

NOTE: You can determine an appliance's VA (volt amp) rating by multiplying its requied voltage by the amount of current (amps) it draws.

#### Oil Alert System

The oil Alert system is designed to prevent engine damage caused by an insufficient amount of oil in the crankcase. Before the oil level in the crankcase falls below a safe limit, the Oil Alert system will automatically shut down the engine (the engine switch will remain in the ON position).

If the Oil Alert system shuts down the engine, the Oil Alert lamp will flash when you operate the starter, and the engine will not run. If this occurs, add engine oil (P. 8)

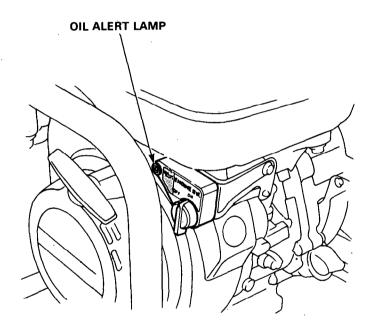

#### **AC Operation**


- 1. Start the engine.
- 2. Turn the voltage selector switch to either position as reguired.

NOTE: With the voltage sector swich in the "120V/240V" position, you can use the 120V and 240V receptacles simultaneously. If you are not using the 240V receptacle, but you require more power from the 120V twist-lock receptacle, then turn the switch to the "120V" position.

- 3. Switch on the AC circuit breaker.
- 4. Plug in the appliance.

#### **CAUTION:**

- Be sure that appliances do not exceed the generafor's rated load capacity for more than 30 minutes and that they never exceed the maximum load capacity.
   Substantial overloading will switch off the circuit breaker. Marginal overloading may not switch off the circuit breaker, but it will shorten the service life of the generator.
- If an overloaded circuit causes the AC circuit breaker to switch off, reduce the electrical load on the circuit, and wait a few minutes before resetting the circuit breaker.
- Be sure that all appliances are in good working order before connecting them to the generator. If an appliance begins to operate abnormally, becomes sluggish, or stops suddenly, turn off the circuit breaker and the generator engine switch immediately. Then disconnect the appliance and examine it for signs of malfunction.

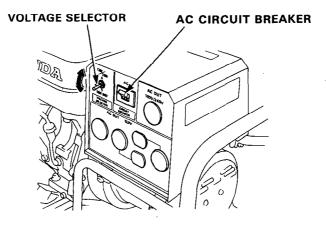


### 6. STOPPING THE ENGINE


NOTE: To stop the engine in an emergency, turn the engine switch to the OFF position.

#### In normal use:


1. Move the AC circuit breaker to the OFF position.

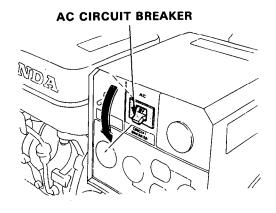

2. Turn the engine switch to the OFF position.

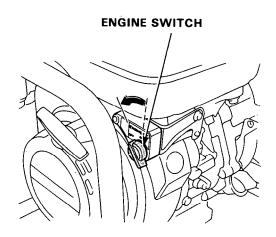

#### 3. Move the fuel volve to the OFF position.

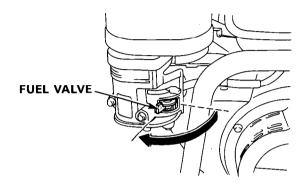

#### · High altitude operation

At high altitude, the standard carburetor air-fuel mixture will be excessively rich. Performance will decrease, and fuel consumption will increase.

High altitude performance can be improved by installing a smaller diameter main fuel jet in the carburetor and readjusting the pilot screw. If you always operate the generator at altitudes higher than 6,000 feet above sea level, have your authorized Honda Generator dealer perform these carburetor modifications.

Even with suitable carburetor jetting, engine horsepower will decrease approximatery 3.5% for each 1,000 foot increase in altitude. The affect of altitude on horsepower will be greater than this if no carburetor modification is made.

CAUTION: Operation of the generator at an altitude lower than the carburetor is jetted for may result in reduced performance, overheating, and serious engine damage caused by an excessively lean air/fuel mixture.

### 7. MAINTENANCE

Periodic maintenance and adjustment is necessary to keep the generator in good operating condition. Perform the service and inspection scheduled in the table on the following page.


A WARNING Shut off the engine before performing any maintenance. If the engine must be rum, make sure the area is well ventilated. Exhaust gas contains poisonous carbon monoxide.

CAUTION: Use only genuine Honda parts or their equivalent for maintenance or repair. Replacement parts which are not of equivalent quality may damage the generator.

;

#### **Tool Kit**

The tools supplied with the generator will help you to perform the owner-maintenance procedures listed on the following page. Always keep this tool kit with the generator.

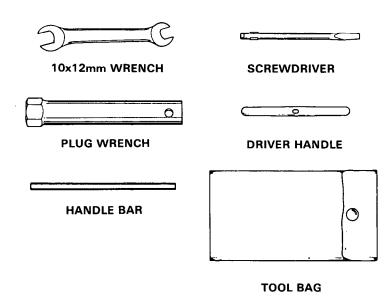

#### Maintenance Schedule

REGULAR SEF  ITEM Perform at every ir operating hour in comes first.	ndicated month or	Each use	first month or 20 Hrs.	Every 3 month or 50 Hrs.	Every 6 month or 100 Hrs.	Every year or 300 Hrs.
Factorial	Check level	•				
Engine oil	Change		•		•	
	Check	•				
Air cleaner	Clean			<b>(1)</b>		
Sediment cup	Clean				•	
Spark plug	Clean-Readjust				•	
Spark arrester	Clean				. •	
Valve clearance	Check-Readjust					<b>(2)</b>
Fuel tank and strainer	Clean					• (2)
Fuel line	Check (Replace if necessary)	Every 3 years (2)				

NOTE (1): Service more frequently when used in dusty areas.


(2): These items should be serviced by an authorized Honda dealer, unless the owner has the proper tools and is mechanically proficient. See the Honda Shop Manual.

#### **Changing Oil**

Drain the oil while the engine is still warm to assure rapid and complete draining.

- 1. Remove the oil filler cap and drain plug to drain the oil.
- 2. Install the drain plug, and tighten it securely.
- 3. Refill with the recommended oil (see page 8), and check the oil level.

#### OIL CAPACITY: 1.1 & (1.16 USqt)

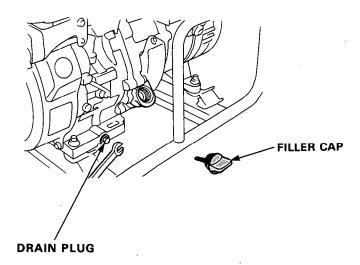

CAUTION: Used motor oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to throughly wash your hands with soap and water as soon as possible after handing used oil.

NOTE: Please dispose of used motor oil in a manner that is compatible with the environment. We suggest you take it in a sealed container to your local service station. Do not throw it in the trash or pour it on the ground.


#### Air Cleaner Service

A dirty air cleaner will restrict air flow to the carburetor. To prevent carburetor malfunction, service the air cleaner regularly (page 21). Service more frequently when operating the generator in extremely dusty areas.


A WARNING Never use gasoline or low flash point solvents for cleaning the air cleaner element. A fire or explosiok could result.

CAUTION: Never run the generator without the air cleaner. Rapid engine wear may result.


1. Remove the wing nut and the air cleaner cover.

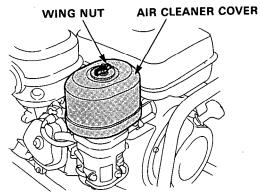

Remove the elements and separate them. Carefully check both elements for holes or tears and replace if damaged.

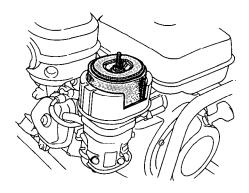

- 3. Foam element: Wash the element in a solution of household detergent and warm water, then rinse thoroughly, or wash in nonflammable or high flash point solvent. Allow the element to dry thoroughly.
  Soak the element in clean engine oil, and squeeze out the excess oil. The engine will smoke during initial start-up if too much oil is left in the foam.
- 4. Paper element: Tap the element lightly several times on a hard surface to remove excess dirt, or blow compressed air through the filter from the inside out. Never try to brush the dirt off; brushing will force dirt into the fibers. Replace the paper element if it is excessively dirty.

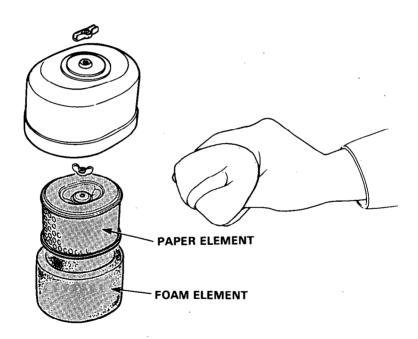



#### **Sediment Cup Cleaning**

The sediment cup prevents dirt or water whitch may be in the fuel tank from entering the carburetor. If the engine has not been run for a long time, the sediment cup should be cleaned.

- 1. Move the fuel valve to the OFF position. Remove the sediment cup.
- 2. Clean the cup and fuel filter thoroughly.
- 3. Check to be sure the O-ring is in place, and reinstall the sediment cup and fuel filter.

A WARNING After installing the sediment cup, check for fuel leaks, and make sure the area is dry before starting the engine.

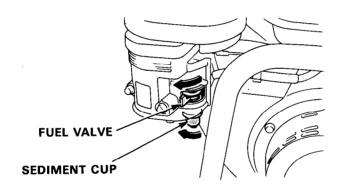

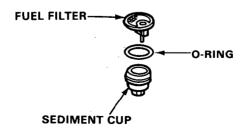


#### Spark plug service

Recommended spark plug : BPR5ES (NGK) W16EPR-U (ND)

To ensure proper engine operation, the spark plug must be properly gapped and free of deposits.

A WARNING If the engine has been running, the muffler will be very hot. Be careful not to touch the muffler.


- 1. Remove the spark plug cap.
- 2. Clean any dirt from around the spark plug base.
- 3. Use the wrench supplied in the tool kit to remove the spark plug.

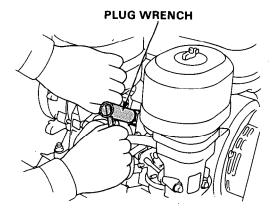

- 4. Visually inspect the spark plug. Discard it if the insulator is cracked or chipped. Clean the spark plug with a wire brush if it is to be reused.
- Measure the plug gap with a feeler gauge. The gap should be 0.7-0.8 mm (0.028 -0.031 in)



0.7 - 0.8 mm (0.028 - 0.031 in) 6. Check that the spark plug washer is in good condition, and thread the spark plug in by hand to prevent cross-threading.

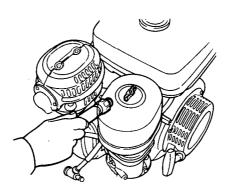

After the spark plug is seated, tighten with a spark plug wrench to compress the washer.

NOTE: If installing a new spark plug, tighten 1/2 turn after the spark plug seats to compress the washer. If reinstalling a used spark plug, tighten 1/8-1/4 turn after the spark plug seats to compress the washer.

#### **CAUTION:**


- The spark plug must be securely tightened. An improperly tightened spark plug can become very hot and may damage the engine.
- Never use spark plugs which have an improper hert range. Use only the recommended spark plugs or equivalent.

#### **Spark Arrester Maintenance**

**A WARNING** If the engine has been running, the muffler will be very hot. Allow it to cool before proceeding.

## CAUTION: The spark arrester must be serviced every 100 hours to maintain its efficiency.

- 1. Remove the eight 5mm pan screws, and remove the muffler protectors.
- 2. Remove the 4mm pan screw, and remove the spark arrester from the muffler.

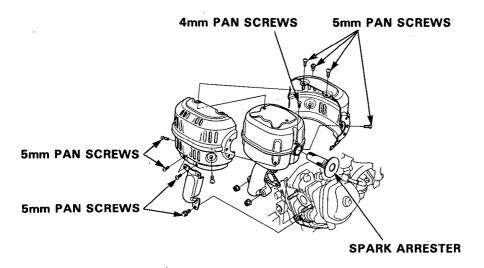

3. Use a brush to remove carbon deposits from the spark arrester screen. Inspect the screen for breaks or tears, and replace it If necessary.




4. Reinstall the spark arrester and muffer protectors in the reverse order of disassembly.

## 8. TRANSPORTING/STORAGE

WARNING When transporting the engine, turn the engine switch and the fuel valve to the OFF position and keep the engine level to prevent fuel spillage. Fuel vapor or spilled fuel may ignite.


Before storing the unit for an extended period:

- 1. Be sure the storage area is free of excessive hunmidity and dust.
- 2. Drain the fuel.
  - a. With the fuel valve OFF, remove and empty the sediment cup.

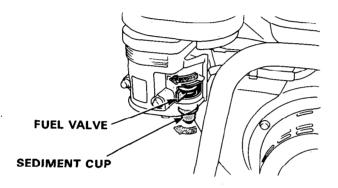


- b. Turn the fuel valve ON and drain the gasoline in the fuel tank into a suitable container.
- c. Replace the sediment cup and tighten securely.
- d. Loosen the carburetor drain screw and drain the gasoline trom the carburetor into a suitable container.

A WARNING Gasoline is extremely flammable and is explosive under certain conditions. Do not smoke or allow flames or sparks in the area.

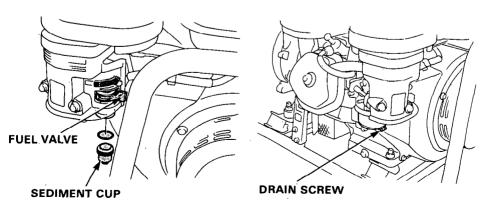

- 3. Change the engine oil.
- 4. Remove the spark plug and pour about a tablespoon of clean engine oil into the cylinder. Crank the engine several revolutions to distribute the oil, then reinstall the spark plug.

Slowly pull the starter grip until resistance is felt. At this point, the piston is coming up on its compression stroke and both the intake and exhaust valves are colsed. Storing the engine in this position will help to protect it from internal corrosion.

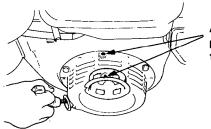

Align the notch on the starter pulley with the hole at the top of the recoil starter.


6. Cover the engine to keep out dust.

### 9. TROUBLESHOOTING

- A. When the engine will not start:
  - 1. Is the engine switch on?

Û

2. Does the oil alert lamp flash when the starter is pulled?

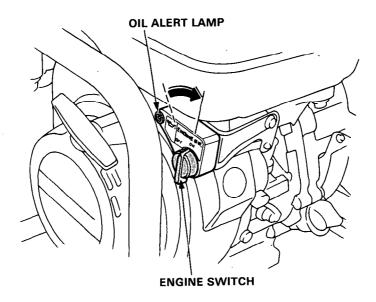

- 3. Is there enough fuel?
- 4. Are all loads disconnected from the AC receptacles?
- 5. Is there a spark at the spark plug?
  - a.Remove the spark plug cap. Clean any dust from around the spark plug base, then remove the spark plug.
  - b.Install the spark plug in the plug cap.
  - c. Turn the engine switch on.
  - d.Grounding the side electrode to any engine ground, pull the recoil starter to see if sparks jump across the gap.


A WARNING Be sure there is no spilled fuel near the spark plug. Spilled fuel may ignite. Perform this test in a well ventilated area.

- e.If there are no sparks, replace the plug.
- f .lf the new spark plug does not spark, take the generator to an authorized Honda dealer.

6. Is gasoline reaching the carburetor? To check, place a suitable container under the carburetor, turn the fuel valve on and loosen the drain screw. Fuel should flow out freely. If OK, try to start the engine according to the instructions.


A WARNING If any fuel is spilled, make sure the area around the spark plug and the generator is dry before starting the engine.

Fuel vapor or spilled fuel may ignite.

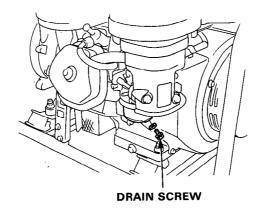

- 7. If the engine still does not start, take the generator to an authorized Honda dealer.
- B. When the engine starts but stops immediately;
  - Check the oil alert lamp.
     If the oil alert lamp flashes when the starter is pulled, check the engine oil level and fill with the recommended oil.
  - 2. Re-start the engine.
- C. No electricity at the AC receptacles:
  - 1. Is the AC circuit breaker on?
  - 2. Check the electrical appliance or equipment for any defects.

## 10. WIRING DIAGRAM

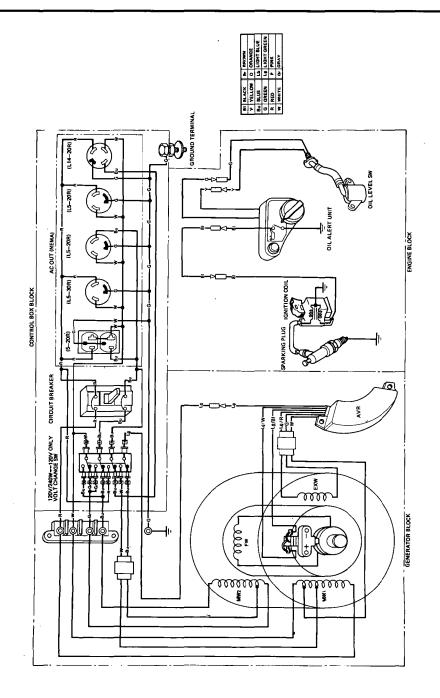

è

33

## 11. SPECIFICATIONS

#### **Dimensions**

Power equipment description code	EA7	
Length x Width x Height	690 x 480 x 485 mm (27.2 x 18.9 x 19.1 in)	
Dry weight	66.5 kg (146.6 lb)	`

## Engine

Engine type	GX340
Displacement (Bore x Storke)	337 cc (20.6 cu in) 182 x 64 mm (3.2 x 2.5 in)
Compression Ratio	8.0 :1
Engine Speed	3600 rpm
Cooling System	Forced air
Ignition System	Transistorized magneto
Oil Capacity	1.1 ℓ (1.16 US qt)
Fuel Tank Capacity	7.0 ℓ (1.85 US gal)
Spark Plug	BPR5ES (NGK), W16EPR-U (ND)

#### Generator

	Rated voltage Rated frequency	120/240V 60Hz
AC output	Rated ampere	37.5/18.8A
AC Sulpui	Rated output	4500 VA
	Maximum output	5000 VA

#### **Owner Satisfaction**

Your satisfaction and goodwill are important to your dealer and to us. All Honda warranty details are explained in the Distributor's Limited Warranty. Normally, any problems concerning the product will be handled by your dealer's service department. If you have a warranty problem that has not been handled to your satisfaction, we suggest you take the following action:

- Discuss your problem with a member of dealership management. Often complaints can be quickly resolved at that level. If the problem has already been reviewed with the Service Manager, contact the owner of the dealership or the General Manager.
- If your problem still has not been resolved to your satisfaction, contact the Power Equipment Customer Relations Department of American Honda Motor Co., Inc.

American Honda Motor Co., Inc.
Power Equipment Customer Relations Department
P.O. Box 50
Gardena, California 90247-0805
Telephone: (213) 604-2400

We will need the following information in order to assist you:

- Your name, address, and telephone number
- Product model and serial number
- Date of purchase
- Dealer name and address
- Nature of the problem

After reviewing all the facts involved, you will be advised of what action can be taken. Please bear in mind that your problem will likely be resolved at the dealership, using the dealer's facilities, equipment, and personnel, so it is very important that your initial contact be with the dealer.

Your purchase of a Honda product is greatly appreciated by both your dealer and American Honda Motor Co., Inc. We want to assist you in every way possible to assure your complete satisfaction with your purchase.

## МЕМО



