

NOKIA 6340

User Guide



NOKIA
CONNECTING PEOPLE

Nokia 6340

User Guide

Phone notes

| My Nokia 6340 information | | Information source |
|--|--|--|
| My number | | Wireless provider |
| Phone serial number (ESN) | | On back of your phone, beneath the battery |
| International Mobile Equipment Identifier (IMEI) | | |
| Voicemail number | | Wireless provider |
| Wireless provider customer care | | Wireless provider |
| Message center number | | Wireless provider |
| Default recipient number (e-mail gateway number) | | Wireless provider |

The wireless phone described in this guide is approved for use in GSM 1900, TDMA, and AMPS networks.

LEGAL INFORMATION

Part No.9353634, Issue No. 1

©2002 Nokia Mobile Phones. All rights reserved.

Nokia is a registered trademark of Nokia Corporation.

Printed in Canada 02/2002

Nokia, Nokia Connecting People and the Original Accessories logos are trademarks of Nokia Corporation and/or its affiliates.

US Patent No 5818437 and other pending patents.

T9 text input software Copyright ©1999-2002. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.

The information contained in this user guide was written for the Nokia model 6340 phone. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

UNDER NO CIRCUMSTANCES SHALL NOKIA BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, AND CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS." EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY AND RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

EXPORT CONTROLS

This product contains commodities, technology or software exported from the United States in accordance with the Export Administration regulations. Diversion contrary to U.S. law is prohibited.

FCC/INDUSTRY CANADA NOTICE

Your phone may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.

TOPICS

Chapter

| | |
|--|----|
| Safety first | 1 |
| Quick guide | 2 |
| Welcome to Nokia | 3 |
| Review the basics | 4 |
| Your phone's keypad | 5 |
| The phone book | 6 |
| Call log | 7 |
| Use voicemail | 8 |
| Advanced features | 9 |
| Customize your phone | 10 |
| Manage phone security | 11 |
| Messages | 12 |
| Your personal organizer | 13 |
| Your phone and other devices | 14 |
| The wireless Internet | 15 |
| Fun and games | 16 |
| Accessories | 17 |
| Reference information | 18 |
| Care and maintenance | 19 |
| Frequently Asked Questions (FAQ) | 20 |
| Glossary | 21 |
| Technical information | 22 |

NOTES

Contents

| | | |
|----------|-----------------------------------|-----------|
| 1 | Safety first | 1 |
| | Safety guidelines | 1 |
| 2 | Quick guide | 3 |
| | Menu shortcuts | 4 |
| 3 | Welcome to Nokia | 5 |
| | Get the most out of this guide | 5 |
| | Sign up with a wireless provider | 6 |
| | Before you contact Nokia | 6 |
| | About the antenna | 7 |
| 4 | Review the basics | 8 |
| | The Nokia 6340 at a glance | 8 |
| | Remove the back cover | 9 |
| | Install the SIM card | 9 |
| | Install the battery | 10 |
| | Charge the battery | 10 |
| | Remove the battery | 12 |
| | Remove the SIM card | 12 |
| | Important battery information | 13 |
| | Switch on the phone | 13 |
| | The Start screen | 14 |
| | Use the selection and scroll keys | 16 |
| | The volume key | 17 |
| | Make and answer calls | 17 |
| | Help text | 18 |
| | Navigate your phone's menus | 18 |
| | Accessibility solutions | 19 |
| | Full menu shortcuts | 21 |
| 5 | Your phone's keypad | 25 |
| | Enter characters and numbers | 25 |

| | | |
|-----------|-----------------------------------|-----------|
| 6 | The phone book | 27 |
| | Open the Phone book | 27 |
| | Customize the Phone book | 33 |
| | Your phone's memory | 34 |
| | Copy Phone book entries | 36 |
| | View service numbers | 37 |
| 7 | Call log | 38 |
| | Call log options | 38 |
| 8 | Use voicemail | 42 |
| | Save your voice mailbox number | 42 |
| | Call and setup your voicemail | 42 |
| | Automate voicemail | 43 |
| 9 | Advanced features | 45 |
| | In-call options | 45 |
| | Call waiting | 47 |
| | Send own caller ID with next call | 48 |
| | Call forwarding | 48 |
| | Voice dial | 50 |
| | Voice commands | 52 |
| | Voice recorder | 54 |
| | 1-touch dialing | 56 |
| | International dialing | 57 |
| 10 | Customize your phone | 58 |
| | Set the display language | 58 |
| | Profiles | 58 |
| | Accessibility options | 61 |
| | Optional headsets | 64 |
| | Audio settings | 65 |
| | Download a ringing tone | 66 |
| 11 | Manage phone security | 67 |
| | Lock and unlock the keypad | 67 |
| | Security levels | 67 |

| | |
|--|------------|
| Fixed dialing..... | 68 |
| Access codes | 70 |
| 12 Messages..... | 73 |
| Tips for composing a message | 74 |
| Write and send a message | 77 |
| Read messages..... | 77 |
| E-mail..... | 78 |
| Compose and send e-mail..... | 80 |
| Picture messages..... | 81 |
| Templates..... | 83 |
| Organize messages with folders..... | 85 |
| Erase messages | 87 |
| 13 Your personal organizer..... | 88 |
| Calendar..... | 88 |
| Make a to-do list..... | 93 |
| Wallet..... | 94 |
| Create a wallet card | 96 |
| Set the time and date..... | 99 |
| Alarm clock | 101 |
| Use the Calculator..... | 102 |
| 14 Your phone and other devices | 105 |
| Infrared basics | 105 |
| Send and receive information..... | 106 |
| Business cards | 106 |
| PC Connectivity | 108 |
| 15 The wireless Internet | 109 |
| The Services menu..... | 109 |
| WAP settings | 110 |
| Launch the browser..... | 110 |
| On-line purchases | 115 |

| | | |
|-----------|---|------------|
| 16 | Fun and games | 117 |
| | Games main menu | 117 |
| | Start a game | 118 |
| 17 | Accessories | 119 |
| 18 | Reference information | 122 |
| | Batteries and chargers | 122 |
| | Important safety information | 124 |
| 19 | Care and maintenance | 130 |
| | Troubleshooting | 131 |
| 20 | Frequently Asked Questions (FAQ) | 132 |
| 21 | Glossary | 134 |
| 22 | Technical information | 138 |
| | Nokia One-Year Limited Warranty | 139 |
| | Index | 144 |

1 Safety first



Read these simple guidelines before you use your phone. Failure to comply with these guidelines may be dangerous or illegal.

• SAFETY GUIDELINES

The following are important safety precautions for phone use.



Road safety comes first

Do not use a hand-held phone while driving. Park the vehicle first.



Switch off in hospitals

Follow any regulations or rules. Switch your phone off near medical equipment.



Switch off while aboard aircraft

Mobile phones can cause interference. Using them on aircraft is illegal.



Switch off when refueling

Do not use your phone at a refueling point. Do not use it near fuel or chemicals.



Switch off near blasting

Do not use your phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.





Observe infrared precautions

Do not point the IR beam at anyone's eyes or allow it to interfere with other IR devices.



Emergency calls

Make sure the phone is switched on and in service. Press and hold  to return to the Start screen where an emergency call can be made. Enter the emergency number and press . Give your location. *Do not* end the call until told to do so.



Be aware of interference

All wireless phones may receive interference that could affect performance.



Use your phone sensibly

Use your phone only in the normal position (next to the ear). Do not touch the antenna unnecessarily.



Use only qualified service personnel

Equipment must be installed or repaired only by qualified service personnel.



Use approved accessories and batteries

Use only approved accessories and batteries. Do not connect incompatible products.



Read instructions before you connect to other devices

When you connect your phone to any other device, read the device's user guide for detailed safety instructions. Do not connect incompatible products. Remember to make backup copies of all important data.



Make sure the phone is on

Before you make a call, be sure your phone is switched on. To make and receive calls, you must sign up with a wireless service provider.

2 Quick guide

Make a call

Answer a call

Answer a call with
call waiting

End a call

Ignore a call

Redial

Adjust call volume

Use the in-call menu

Use 1-touch dialing

Save a name and number

Recall a name/number

Recall a name/number
during a call

Check voice mail

Send a text message


Send an E-mail message

Read new message


Reply to a message

Reply to an E-mail
message

Send a business card

Enter phone number, press 

Press 

Press  or **Options** and select **Answer call**

Press 

Press **Silence** when your phone rings

Press  twice


Press up or down on the side volume key

While in a call, press **Options**

Press and hold any key 2 through 9

Enter a number, press **Options** and select **Save**, then enter a name and press **OK**

Press **Names**, select **Find**. Enter name and press **Find** or **List**
Press **Options**, scroll to **New call**, press **Select**, press **Find**,
enter the first letter of the name to find

Press and hold  OR dial your voice mailbox number

Press **Menu 01-1**. After a pause, write the message.
Press **Options**, scroll to **Send**, press **Select**, enter the
recipient's number, press **OK**

Press **Menu 01-1**, and write your message. Press **Options**,
scroll to **Sending options**, press **Select**. Scroll to **Sending
profile** and press **Select**. Highlight your e-mail profile,
press **Select**. Press **Options**, **Accept**, enter the e-mail
address, press **OK**.

Press **Show**, then press **Select**

Press **Options**, select **Reply**, write the reply, press **Options**,
select **Send**, and press **OK**

Press **Options**, scroll to **Reply**, and press **Select**. Compose
your message and press **Options**. Scroll to **Sending options**
and press **Select**. Scroll to **Sending profile** and press **Select**.
Highlight your email profile and press **Select**. Press **Options**,
Accept, enter the e-mail address, press **OK**.

Recall a name from the phone book. Press **Details**, then
press **Options**, select **Send bus. card**, select **Via text msg.**
Enter the recipient's number or press **Find** to retrieve a
number from the Phone book. Press **OK**.

• MENU SHORTCUTS

2 1 MESSAGES



Note: The **Messages** menu is the only menu that requires pressing "0"

| | |
|---------------------------|-------|
| Write message..... | 01-1 |
| Inbox | 01-2 |
| Outbox..... | 01-3 |
| Archive..... | 01-4 |
| Templates..... | 01-5 |
| My folders..... | 01-6 |
| Erase messages..... | 01-7 |
| Message settings..... | 01-8 |
| Voice messages..... | 01-9 |
| Service command editor... | 01-10 |

2 CALL LOG

| | |
|------------------------|-----|
| Missed calls..... | 2-1 |
| Received calls | 2-2 |
| Dialed numbers..... | 2-3 |
| Clear call lists | 2-4 |
| Call timers..... | 2-5 |

3 PROFILES

| | |
|--------------|-----|
| Normal..... | 3-1 |
| Silent | 3-2 |
| Meeting..... | 3-3 |
| Outdoor..... | 3-4 |
| Pager | 3-5 |

4 SETTINGS

| | |
|---------------------|-----|
| Alarm clock..... | 4-1 |
| Time settings..... | 4-2 |
| Call settings..... | 4-3 |
| Phone settings..... | 4-4 |
| Tone settings..... | 4-5 |

| | |
|--------------------------------|-----|
| Accessory settings..... | 4-6 |
| Security settings | 4-7 |
| Restore factory settings | 4-8 |

5 VOICE

| | |
|-----------------------|-------|
| Voice recorder | 5-1 |
| Record | 5-1-1 |
| Recordings list | 5-1-2 |
| Voice commands | 5-2 |
| Profiles | 5-2-1 |
| Voice mailbox..... | 5-2-2 |
| Infrared..... | 5-2-3 |
| Recorder..... | 5-2-4 |

6 ORGANIZER

| | |
|------------------|-----|
| Calendar..... | 6-1 |
| To-do list | 6-2 |
| Wallet..... | 6-3 |

7 CALCULATOR

8 GAMES

| | |
|--------------------|-------|
| Select game | 8-1 |
| Snake II..... | 8-1-1 |
| Pass 'n Rush | 8-1-2 |
| Bumper..... | 8-1-3 |
| Pairs II..... | 8-1-4 |
| Settings..... | 8-2 |

9 INFRARED

| | |
|---------------|---|
| Infrared..... | 9 |
|---------------|---|

10 SERVICES



3 Welcome to Nokia

Congratulations on your purchase of the Nokia 6340 mobile phone. The Nokia 6340 can be connected to a PC, laptop, or other device using the data cable or built-in IR port. For more information, please refer to the PC Connectivity Guide.

The PC Connectivity Guide, Nokia PC Suite, and all related software can be downloaded from the U.S. Mobile Phone products section of www.nokia.com.

3

• GET THE MOST OUT OF THIS GUIDE

Follow graphic clues

Icons appear throughout this guide to alert you of important information or to provide useful tips.



Tip: Indicates a shortcut or alternate method of doing something.



Note: Explains a feature or points out an important concept.



Important: Indicates critical information on using a feature.



Caution: Warns you when you may lose information.



Warning: Helps to avoid injury, and phone or property damage.

Look for updates

From time to time, this guide is updated to reflect changes. The latest version may be available at the U.S. Mobile Phone products section of www.nokia.com.

Also, an interactive version of this guide may be available at www.nokiahowto.com.

• SIGN UP WITH A WIRELESS PROVIDER

To use the network services available in your phone, you'll need to sign up with a wireless provider. In many cases, the wireless provider will make available descriptions of their services and instructions for using features such as:

- Voice mail and voice privacy
- Call waiting, call forwarding, and caller ID
- Messaging
- News and information services
- Selected Internet services

Wireless providers may differ in their support of features. Before you sign up, make sure a wireless provider supports the features you need.


• BEFORE YOU CONTACT NOKIA

If you need help, Nokia Customer Care is available for assistance. Before calling, however, please read "Frequently Asked Questions (FAQ)" on page 132.

We also recommend that you write down the following information on the inside cover of this guide and have it available if you call. The information can be found on your phone's label, which is on back of the phone, beneath the battery.

- The International Mobile Equipment Identifier (IMEI)
- The Electronic Serial Number (ESN)

We also ask that you write down your zip code.

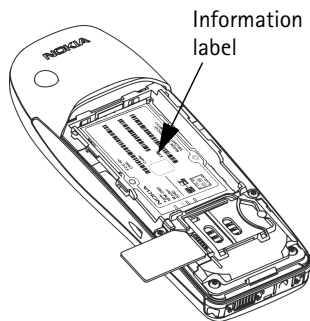

Have your phone or accessory handy


Please have your phone or accessory with you when contacting either of the numbers below.

| Nokia Customer Care Center, USA | Customer Interaction Center, Canada |
|--|--|
| <p>Nokia, Inc. 7725 Woodland Center Boulevard Suite #150 Tampa, Florida 33614 Tel: 1-888-NOKIA-2U (1-888-665-4228) Fax: 1-813-249-9619 TTY/TDD Users Only: 1-800-24-NOKIA (1-800-246-6542)</p> | <p>Nokia Products Ltd. 601 Westney Road South Ajax, Ontario L1S 4N7 Tel: 1-888-22-NOKIA (1-888-226-6542) Fax: 1-905-427-1070</p> |

• ABOUT THE ANTENNA

Your phone has a built-in antenna. As with any other radio transmitting device, avoid touching the antenna while the phone is powered up.

Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than necessary.

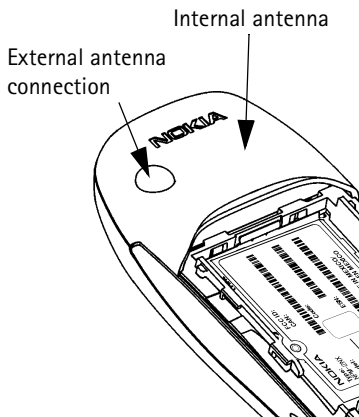


4 Review the basics


- THE NOKIA 6340 AT A GLANCE

4

LEFT SIDE

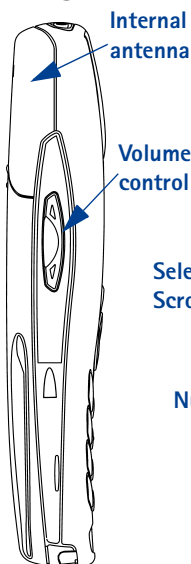


FRONT

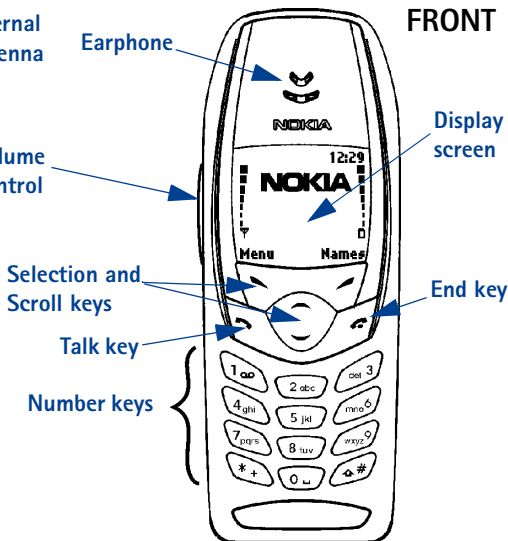


Headset/TTY/Data cable/HDA-8 connector

TOP

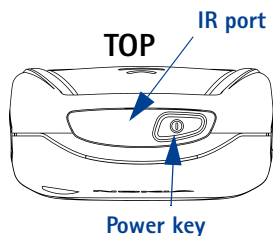

Microphone


Charger jack

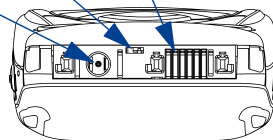

BOTTOM/END

• REMOVE THE BACK COVER

- 1 With the phone facing away from you, grip the bottom end with one thumb while pressing the cover release with the other.
- 2 Slide the cover toward the bottom end of the phone (about 1/4 inch) until it stops. Lift the cover to remove.

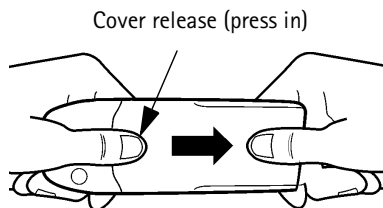


4

• INSTALL THE SIM CARD

The SIM slot is between the battery compartment and the bottom end of the phone.

- If the battery is in the phone, remove the battery before attempting to install the SIM card. See "Remove the battery" on page 12 for instructions.
- Slide the SIM card into the empty SIM slot, beveled corner first and gold contacts facing down.


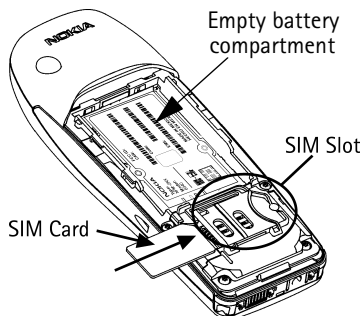


• INSTALL THE BATTERY




Note: The SIM card must be installed *before* installing the battery.

- 1 Position the battery so the gold contacts match up with those on the phone. The battery label should be facing *away* from the phone.
- 2 Insert the battery, contact end first into the battery slot.
- 3 Snap the other end of the battery into place.

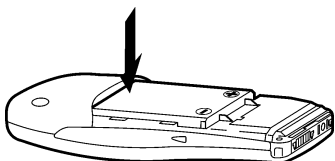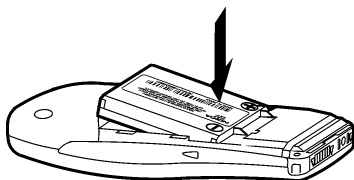

- 4 Replace the cover and slide it toward the top of the phone until it locks into place.

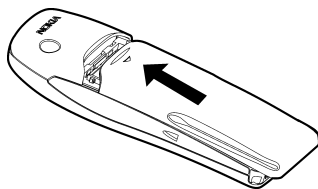


• CHARGE THE BATTERY

- 1 With your phone on or off, connect the plug from the charger to the bottom of the phone.



- 2 Plug the charger into a standard AC outlet.
- After a few seconds, the battery indicator in the display starts to scroll from bottom to top.
- When the battery is 80% full, the bar on in the display stops scrolling and **Battery full** appears (if the phone is on).
- Unplug the phone and charger once charging is complete.

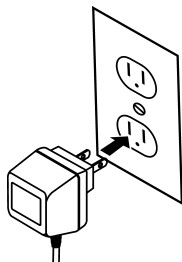

4

Battery notes

Use the following guidelines to obtain the best performance from your battery:

- With your phone turned off, charge your new battery for three hours before its first use. Use the battery until it is fully discharged. Repeat this procedure twice for a total of three charging cycles.
- Note that a new battery's full performance is achieved only after two or three complete charge and discharge cycles. Battery operation time may be less than the estimated times during the first charges. This condition is normal.
- You can use your phone while the battery is charging. However, if the battery is completely empty, it may need to recharge a few minutes before you can make or receive calls or the battery indicator appears.
- After the first charge, you can make and receive calls during the charging cycle, but the calls interrupt the charge. When the phone call ends, the charge will resume.
- The bars on the screen stop scrolling and remain constant when the phone is fully charged. If you leave the phone connected to the charger, the battery receives an additional charge. If you switch the phone on when charging is complete, the message **Battery full** momentarily appears in the display.




Note: The battery will accept a "trickle charge" for an additional two hours.

Charging time depends on the charger and battery. For example, charging time for the BLB-3 battery with the ACP-7U charger is about 4 hours.

• REMOVE THE BATTERY

4


- 1 Remove the back cover as described on page 9.
- 2 Pull the battery out with your fingers from the top end, as shown in the illustration.

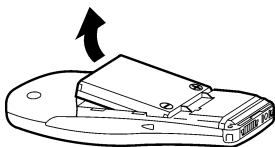


Warning: Only use your hands to remove the battery. Don't use an object such as a coin or knife, as either can damage both the phone and the battery.

• REMOVE THE SIM CARD

- 1 Remove the back cover and battery as described on page 9 and page 12.

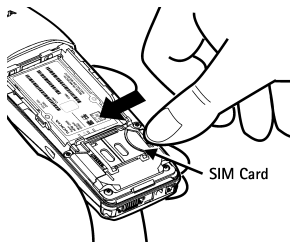

- 2 Push the SIM card out of the slot as far as you can (about 1/4 of an inch) with your thumb. Keep your thumb in place to prevent the SIM card from sliding back into the slot.
- 3 Pull the SIM card from the open end of the slot with your fingers.

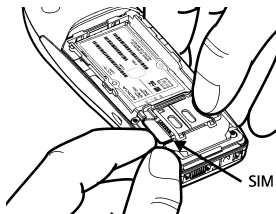

Warning: Keep all SIM cards out of reach of small children.

• IMPORTANT BATTERY INFORMATION



Important: Your phone is powered by a rechargeable battery.

Use only batteries approved by Nokia and recharge your battery only with the chargers approved by Nokia. Never use any charger or battery which is damaged.

The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery.


The BLB-3 battery doesn't need a full discharge before recharging.

• SWITCH ON THE PHONE

- Press and hold the power key on top of the phone for 2 seconds.



Warning: Don't power-up the phone where wireless phone use is prohibited or where the use of the phone could cause interference or danger.

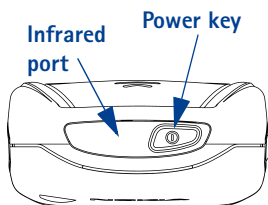

Set the time and date

When you power-up your phone for the first time, or when you remove and replace the battery, you'll be prompted to set the time and date.




Note: If "PIN code request" is set to "On," you'll need to enter the 4-digit PIN code and press OK. See "PIN code request" on page 71 for more information.






- 1 Enter the correct time and press OK.
- 2 Enter the correct date and press OK. After a brief pause, the Start screen appears in your display.

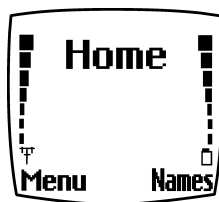• THE START SCREEN

The Start screen is the "home base" for your phone and indicates it is in idle mode.



























What's on the Start screen

| | |
|--|--|
| HOME | Your wireless provider's name may appear here. |
|  | Signal strength. A higher bar indicates a stronger signal. |
|  | Battery charge level. A higher bar indicates more power in the battery. |
| Menu | Press the left selection key () under Menu to enter the menu list. |
| Names | Press the right selection key () under Names to enter the Phone book. |
|  | Press one of the scroll keys at the Start screen to display any entries in your Phone book. |

Indicator icons

Your phone uses icons to indicate status, alert you of a message or meeting, and more.





| Icon | Indicates... | Icon | Indicates... |
|---|--|---|--|
|  | You are in an active call |  | The Silent profile has been selected |
|  | You are in lowercase text entry mode (predictive text off) |  | Keyguard is active |
|  | You have voice messages waiting |  | You have a text or picture message |
|  | You have a call waiting (when blinking) |  | You are in uppercase text entry mode (predictive text off) |
|  | You are in sentence case text entry mode (predictive text off) |  | You are in number entry mode |
|  | Encryption is on |  | An alarm is set |
|  | A Memo note is in your Calendar |  | A birthday note is in your Calendar |
|  | A note is in your calendar to call someone |  | You have a meeting scheduled in your Calendar |
|  | Predictive text is on |  | The highlighted entry (in Phone book) exists on the SIM card |
|  | A message that you've composed has <i>not</i> been sent |  | A picture is attached to your message |
|  | You are in a secure connection on-line |  | When steady, IR is connected to a device |
|  | When blinking, IR is searching for a device |  | Encryption is off |




Return to the Start screen from any activity


- Press 


4

• USE THE SELECTION AND SCROLL KEYS



The left and right selection keys ( ) are beneath each corner of the display. Between and beneath the selection keys are two scroll keys ( ) positioned one above the other. Selection keys are used to enter, select, and exit menus, submenus, and lists, while scroll keys are used to navigate from within those items. A selection key's function is always defined by the text that appears above it in the display.

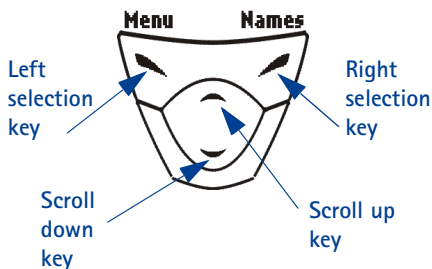For example, press the left selection key () when **Menu** appears above it to show the first of numerous menus. Page through the rest of the menus using the scroll keys ( )



Press the right selection key () when **Names** appears above it to enter the Phone book.



Tip: Press either scroll key ( ) from the Start screen to view any entries in your Phone book.


• THE VOLUME KEY

With the phone facing you, the volume key is located on the left side of the phone.

Adjust earpiece volume

When you press the volume key, a bar chart appears in the display indicating the present volume level.



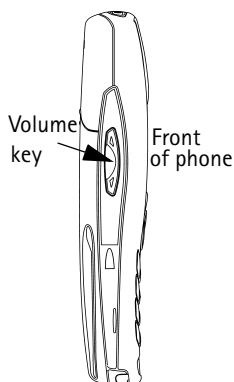

- Press the top portion of the volume key to increase your call volume.
- Press the bottom portion of the volume key to decrease your call volume.





4

• MAKE AND ANSWER CALLS

Use the following table as a quick guide for basic functions.

| | |
|---------------------|--|
| Switch the phone on | <p>Press and hold the power key on top of the phone for 2 seconds.</p> <p> Warning: Do not power-up the phone when wireless use is prohibited or when the phone may cause interference or danger.</p> |
| Make a call | <ol style="list-style-type: none"> 1 Enter the area code and phone number. 2 Press . 3 Hold the phone with the earpiece over your ear and microphone near your mouth, or connect and use the headset before entering the number. |
| Answer a call | When your phone rings or vibrates, press  . |
| End a call | Press  . |

| | |
|--|--|
| Turn Keyguard on | Press Menu  . Keyguard prevents accidental calls. |
| Turn Keyguard off | Press Unlock  . |
| Silence a call OR Decline a call | You can mute the ringing tone of an incoming call without terminating the call. Press Silence and the ringing tone is muted. After pressing Silence , you then have the option to Decline the call. |



• HELP TEXT

The Nokia 6340 displays brief descriptions for most menu items. When you arrive at a feature or menu, pause for about 10 seconds. Use the scroll keys if necessary to page through the full text.

• NAVIGATE YOUR PHONE'S MENUS


Navigate the menus and submenus in your phone using the *scroll method* or a *shortcut*.

Use the scroll method





- At the Start screen, press **Menu**, then page through the menus using the scroll keys ( .

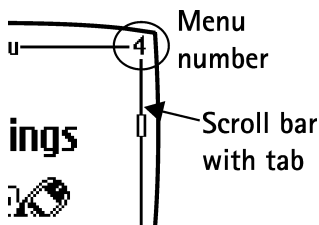THE MENU NUMBER AND SCROLL BAR

As you page through menus, the **menu number** is indicated in the upper right corner of the display. A **scroll bar** with a tab also appears on the right side of the display. The tab moves up or down as you page through the menus.



- When the menu you want appears in the display, press **Select**.

- 2 Once inside the menu, use the scroll keys ( ) to highlight an item or page through submenus. Press  to open a highlighted item or to enter a submenu. Press  to exit or return to the previous menu.

Use a shortcut

You can also go to almost any feature, option, or submenu directly from the Start screen using a "shortcut."

Press **Menu**, and within 3 seconds, enter the first number of the menu function you'd like to access. Keep going until you've entered all the numbers.

For example: To turn on the **Alarm clock**, press **Menu 4-1-1**
(Menu - ⁴Settings - ¹Alarm clock - ¹On).

A complete list of shortcuts begins on page 21. Some features may not appear depending on service availability, or may require subscription to the feature in question. In such cases, the phone displays an error message. If you wish to subscribe to a feature that is currently disabled, contact your wireless provider.

• ACCESSIBILITY SOLUTIONS

Nokia is committed to pursuing accessibility solutions for all people, including individuals with disabilities. We maintain a site on the Internet that is dedicated to accessibility solutions. For more information about features, accessories, and other Nokia products designed with accessibility in mind, visit the Nokia Internet site at

www.nokiaaccessibility.com

Or, contact Nokia Customer Care at 1-800 24-NOKIA

Alternate format user guides

This user guide is also available in Braille, large print, audiocassette, and on disk in a format that can be read by a screen reader.

To request a User Guide in any of these formats, call Nokia Customer Care at (888) 665-4228. TTY/TDD users can contact Nokia at (800) 246-6542.

LPS-1 Mobile Inductive Loopset


The LPS-1 loopset gives hearing-impaired users access to digital telephony. People using a T-coil equipped hearing aid can make and receive calls without noise interference.

HOW THE LOOPSET WORKS

The LPS-1 transmits sound to any hearing aid equipped with a T-coil. The sound from the phone is amplified and background noise is eliminated.

Wear it around your neck, connect it to your phone, and speak directly toward the microphone on the loopset.

For more details, refer to the booklet that comes with the LPS-1.

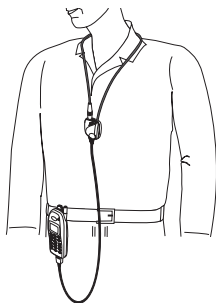

Note: The Loopset can be purchased separately as an accessory.

Other accessibility features

Besides an intuitive interface and TTY/TDD capabilities, other accessibility features of the Nokia 6340 include:


- A nib, or raised dot on *top* of the five key for keypad reference
- Tactile feedback whenever you press a key
- The ability to send and receive short messages
- 1-touch dialing
- The ability to amplify higher frequencies using the equalizer function
- Caller groups to aid in caller identification



Note: For instructions on setting up accessory profiles, and connecting and using a TTY/TDD device, see "Accessibility options" on page 61.

• FULL MENU SHORTCUTS

1 MESSAGES

 **Note:** Messages is the only menu that requires pressing "0"

| | |
|--------------------------------|--------|
| Write message | 01-1 |
| Inbox | 01-2 |
| Outbox | 01-3 |
| Archive | 01-4 |
| Templates | 01-5 |
| My folders | 01-6 |
| Erase messages | 01-7 |
| All read | 01-7-1 |
| Inbox | 01-7-2 |
| Outbox | 01-7-3 |
| Archive | 01-7-4 |
| Own folders | 01-7-5 |
| Message settings | 01-8 |
| Default profile | 01-8-1 |
| Voice messages | 01-9 |
| Listen to voice messages | 01-9-1 |
| Voice mailbox number .. | 01-9-2 |

2 CALL LOG

| | |
|----------------------------------|-------|
| Missed calls | 2-1 |
| Received calls | 2-2 |
| Dialed numbers | 2-3 |
| Clear call lists | 2-4 |
| All | 2-4-1 |
| Missed | 2-4-2 |
| Received | 2-4-3 |
| Dialed | 2-4-4 |
| Call timers | 2-5 |
| Duration of last call | 2-5-1 |
| Duration of dialed calls .. | 2-5-2 |
| Duration of received calls | 2-5-3 |

| | |
|-----------------------------|-------|
| Duration of all calls | 2-5-4 |
| Clear timers | 2-5-5 |

3 PROFILES

| | |
|-----------------------|-----------|
| Normal | 3-1 |
| Select | 3-1-1 |
| Customize | 3-1-2 |
| Ringing options | 3-1-2-1 |
| Ring | 3-1-2-1-1 |
| Ascending | 3-1-2-1-2 |
| Ring once | 3-1-2-1-3 |
| Beep once | 3-1-2-1-4 |
| Silent | 3-1-2-1-5 |
| Ringing tone | 3-1-2-2 |
| Ringing volume | 3-1-2-3 |
| Level 1 | 3-1-2-3-1 |
| Level 2 | 3-1-2-3-2 |
| Level 3 | 3-1-2-3-3 |
| Level 4 | 3-1-2-3-4 |
| Level 5 | 3-1-2-3-5 |
| Vibrating alert | 3-1-2-4 |
| On | 3-1-2-4-1 |
| Off | 3-1-2-4-2 |
| Message alert tone .. | 3-1-2-5 |
| No tone | 3-1-2-5-1 |
| Standard | 3-1-2-5-2 |
| Special | 3-1-2-5-3 |
| Beep once | 3-1-2-5-4 |
| Ascending | 3-1-2-5-5 |
| Personal | 3-1-2-5-6 |
| Keypad tones | 3-1-2-6 |
| Off | 3-1-2-6-1 |
| Level 1 | 3-1-2-6-2 |
| Level 2 | 3-1-2-6-3 |
| Level 3 | 3-1-2-6-4 |

| | |
|--------------------|-----------|
| Warning tones..... | 3-1-2-7 |
| On..... | 3-1-2-7-1 |
| Off..... | 3-1-2-7-2 |
| Alert for..... | 3-1-2-8 |
| All calls..... | 3-1-2-8-1 |
| Family..... | 3-1-2-8-2 |
| VIP..... | 3-1-2-8-3 |
| Friends..... | 3-1-2-8-4 |
| Business..... | 3-1-2-8-5 |
| Other..... | 3-1-2-8-6 |
| Timed..... | 3-1-3 |
| Silent..... | 3-2 |
| Meeting..... | 3-3 |
| Outdoor..... | 3-4 |
| Pager..... | 3-5 |

4 SETTINGS



| | |
|-------------------------|-----------|
| Alarm clock..... | 4-1 |
| On..... | 4-1-1 |
| Off..... | 4-1-2 |
| Time settings..... | 4-2 |
| Clock..... | 4-2-1 |
| Show/Hide clock... | 4-2-1-1 |
| Set the time..... | 4-2-1-2 |
| Time format..... | 4-2-1-3 |
| 24 hour..... | 4-2-1-3-1 |
| am/pm..... | 4-2-1-3-2 |
| Auto update date/time.. | 4-2-2 |
| On..... | 4-2-2-1 |
| Confirm first..... | 4-2-2-2 |
| Off..... | 4-2-2-3 |
| Call settings..... | 4-3 |
| Call forwarding..... | 4-3-1 |
| Fwd all voice calls.. | 4-3-1-1 |
| Activate..... | 4-3-1-1-1 |
| Cancel..... | 4-3-1-1-2 |
| Check status .. | 4-3-1-1-3 |

| | |
|-----------------------|-------------|
| Fwd if busy..... | 4-3-1-2 |
| Activate..... | 4-3-1-2-1 |
| Cancel..... | 4-3-1-2-2 |
| Check status .. | 4-3-1-2-3 |
| Fwd if not answered | 4-3-1-3 |
| Activate..... | 4-3-1-3-1 |
| Cancel..... | 4-3-1-3-2 |
| Check status .. | 4-3-1-3-3 |
| Fwd if out of reach. | 4-3-1-4 |
| Activate..... | 4-3-1-4-1 |
| Cancel..... | 4-3-1-4-2 |
| Check status .. | 4-3-1-4-3 |
| Fwd when not | |
| able to take calls .. | 4-3-1-5 |
| Activate..... | 4-3-1-5-1 |
| Cancel..... | 4-3-1-5-2 |
| Set delay..... | 4-3-1-5-3 |
| 10 sec..... | 4-3-1-5-3-1 |
| 15 sec..... | 4-3-1-5-3-2 |
| 20 sec..... | 4-3-1-5-3-3 |
| 25 sec..... | 4-3-1-5-3-4 |
| 30 sec..... | 4-3-1-5-3-5 |
| Fwd all fax calls .. | 4-3-1-6 |
| Activate..... | 4-3-1-6-1 |
| Cancel..... | 4-3-1-6-2 |
| Check status .. | 4-3-1-6-3 |
| Fwd all data calls .. | 4-3-1-7 |
| Activate..... | 4-3-1-7-1 |
| Cancel..... | 4-3-1-7-2 |
| Check status .. | 4-3-1-7-3 |
| Cancel all call | |
| forwarding..... | 4-3-1-8 |
| Equalizer..... | 4-3-2 |
| Normal..... | 4-3-2-1 |
| Bright..... | 4-3-2-2 |
| Dark..... | 4-3-2-3 |
| Loudness..... | 4-3-2-4 |

| | | | |
|----------------------------|---------|--------------------------|-----------|
| Set 1 | 4-3-2-5 | Vibrating alert | 4-5-4 |
| Set 2 | 4-3-2-6 | On | 4-5-4-1 |
| International prefix | 4-3-3 | Off | 4-5-4-2 |
| Automatic redial | 4-3-4 | Message alert tone | 4-5-5 |
| On | 4-3-4-1 | No tone | 4-5-5-1 |
| Off | 4-3-4-2 | Standard | 4-5-5-2 |
| Summary after call | 4-3-5 | Special | 4-5-5-3 |
| On | 4-3-5-1 | Beep once | 4-5-5-4 |
| Off | 4-3-5-2 | Ascending | 4-5-5-5 |
| Phone settings | 4-4 | Personal | 4-5-5-6 |
| Language | 4-4-1 | Keypad tones | 4-5-6 |
| Automatic | 4-4-1-1 | Off | 4-5-6-1 |
| English | 4-4-1-2 | Level 1 | 4-5-6-2 |
| Français | 4-4-1-3 | Level 2 | 4-5-6-3 |
| Español | 4-4-1-4 | Level 3 | 4-5-6-4 |
| Português | 4-4-1-5 | Warning tones | 4-5-7 |
| System selection | 4-4-2 | On | 4-5-7-1 |
| Automatic | 4-4-3-1 | Off | 4-5-7-2 |
| Manual | 4-4-3-2 | Alert for | 4-5-8 |
| New search | 4-4-3-3 | Accessory settings | 4-6 |
| Touch tone length | 4-4-3 | Headset | 4-6-1 |
| Short | 4-4-3-1 | Default profile | 4-6-1-1 |
| Long | 4-4-3-2 | Current profile | 4-6-1-1-1 |
| Tone settings | 4-5 | Normal | 4-6-1-1-2 |
| Ring options | 4-5-1 | Silent | 4-6-1-1-3 |
| Ring | 4-5-1-1 | Meeting | 4-6-1-1-4 |
| Ascending | 4-5-1-2 | Outdoor | 4-6-1-1-5 |
| Ring once | 4-5-1-3 | Pager | 4-6-1-1-6 |
| Beep once | 4-5-1-4 | Automatic answer | 4-6-1-2 |
| Silent | 4-5-1-5 | On | 4-6-1-2-1 |
| Ring tone | 4-5-2 | Off | 4-6-1-2-2 |
| Ring volume | 4-5-3 | Handsfree | 4-6-2 |
| Level 1 | 4-5-3-1 | Default profile | 4-6-2-1 |
| Level 2 | 4-5-3-2 | Automatic answer | 4-6-2-2 |
| Level 3 | 4-5-3-3 | On | 4-6-2-2-1 |
| Level 4 | 4-5-3-4 | Off | 4-6-2-2-2 |
| Level 5 | 4-5-3-5 | Lights | 4-6-2-3 |

| | |
|--------------------------------|-----------|
| On | 4-6-2-3-1 |
| Off | 4-6-2-3-2 |
| Automatic | 4-6-2-3-3 |
| Loopset | 4-6-3 |
| Use loopset | 4-6-3-1 |
| Yes | 4-6-3-1-1 |
| No | 4-6-3-1-2 |
| Default profile | 4-6-3-2 |
| Automatic answer | 4-6-3-3 |
| On | 4-6-3-3-1 |
| Off | 4-6-3-3-2 |
| TTY/TDD | 4-6-4 |
| Use TTY | 4-6-4-1 |
| Yes | 4-6-4-1-1 |
| No | 4-6-4-1-2 |
| Security settings | 4-7 |
| PIN code request | 4-7-1 |
| Fixed dialing | 4-7-2 |
| On | 4-7-2-1 |
| Off | 4-7-2-2 |
| Number list | 4-7-2-3 |
| Security level | 4-7-3 |
| Off | 4-7-3-1 |
| Memory | 4-7-3-2 |
| Phone | 4-7-3-3 |
| Access codes | 4-7-4 |
| Change security code | 4-7-4-1 |
| Change PIN code | 4-7-4-2 |
| Change PIN2 code | 4-7-4-3 |
| Restore factory settings | 4-8 |

5 VOICE

| | |
|-----------------------|-------|
| Voice recorder | 5-1 |
| Record | 5-1-1 |
| Recordings list | 5-1-2 |

| | |
|---------------------|-------|
| Voice command | 5-2 |
| Profiles | 5-2-1 |
| Voice mailbox | 5-2-2 |
| Infrared | 5-2-3 |
| Recorder | 5-2-4 |

6 ORGANIZER

| | |
|------------------|-----|
| Calendar | 6-1 |
| To-do list | 6-2 |
| Wallet | 6-3 |

7 CALCULATOR

8 GAMES

| | |
|--------------------|---------|
| Select game | 8-1 |
| Snake II | 8-1-1 |
| Pass 'n Rush | 8-1-2 |
| Bumper | 8-1-3 |
| Pairs II | 8-1-4 |
| Settings | 8-2 |
| Game sounds | 8-2-1 |
| On | 8-2-1-1 |
| Off | 8-2-1-2 |
| Game lights | 8-2-2 |
| On | 8-2-2-1 |
| Off | 8-2-2-2 |
| Shakes | 8-2-3 |
| On | 8-2-3-1 |
| Off | 8-2-3-2 |

9 INFRARED

| | |
|----------------|---|
| Infrared | 9 |
|----------------|---|


10 SERVICES


5 Your phone's keypad

• ENTER CHARACTERS AND NUMBERS



Note: The following focuses on entering text into messages, but applies to any screen that accepts keypad entry, such as web addresses or names in the Phone book.




- 1 At the Start screen, press **Menu 01-1** (Messages - Write message). The message entry screen opens in text entry mode.
- 2 To enter numbers, press and hold  until the **Abc** icon in the upper left corner of the display changes from **Abc** to **123**.

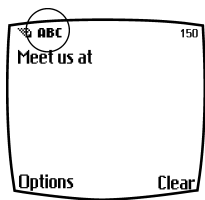



Note: There are three types of text entry modes:

   
- **ABC** - Any text you enter is capital letters
- **Abc** - The first letter of each sentence is capitalized
- **abc** - Any text you enter is lower case

Enter text

- Press any key once to insert the first letter on the key, twice for the second letter, and so on. When you pause, the letter appearing in the display is accepted and your phone awaits the next entry.
- Press  to accept a word and enter a space
- Press  to enter a period (.)
- Press  to display special characters. More about special characters on the following pages
- Press **Clear** to backspace and erase a character
- Press and hold **Clear** to backspace continuously, and erase
- Use predictive text to write messages faster. See "Use predictive text" on page 75 for more information

Use special characters

While entering text, press (or *press and hold*, if predictive text is on)  to display special characters. Press  again to cycle through all available characters.

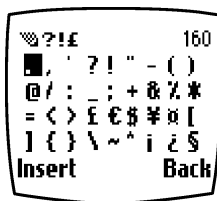


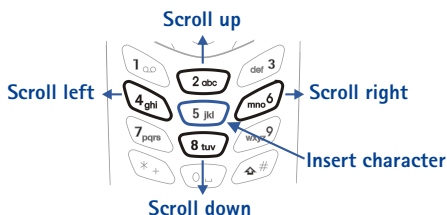
5

Available special characters


| | | | | | | | | | | |
|---|----|---|---|---|---|---|---|---|---|---|
| . | , | ' | ? | ! | " | - | (|) | @ | / |
| : | _ | ; | + | & | % | * | = | < | > | £ |
| € | \$ | ¥ | ¤ | [|] | { | } | \ | ~ | ^ |
| ¡ | ¿ | § | # | ¡ | ¡ | ◀ | | | | |

Use four-way scrolling


Navigate special characters using the 2, 4, 6, and 8 keys much as you would a joystick. Once a character is highlighted press  to insert the character into your message.



SWITCH BETWEEN ABC AND 123 MODES

Press and hold  until the icon in the upper left corner of the display switches from **Abc** to **123** (or from **123** to **Abc**).

SWITCH BETWEEN UPPERCASE AND LOWERCASE TEXT




Press  to alternate between upper case (ABC), lower case (abc), and sentence case (Abc) while in text mode.

6 The phone book

One of the most useful features in the Nokia 6340 is its powerful Phone book. You can store up to 500 names and their associated web, e-mail, and street addresses within the Phone book. Each name, or entry as it is called, has room for up to 5 numbers of various types and 4 text entries.

• OPEN THE PHONE BOOK

6

- 1 At the Start screen, press **Names**. The submenus in the following table appear in the display.
- 2 Use the scroll keys ( ) to highlight an option. Press **Select** () to activate an option or enter its submenu.

Phone book menu

| | |
|-----------------|--|
| Find | Search for a name in your Phone book or list the names and select from the list |
| Add entry | Add a new entry (name and number) to your Phone book |
| Edit name | Edit an existing name in your Phone book |
| Add number | Add a number to an existing entry in your Phone book |
| Erase | Erase names and numbers in your Phone book one by one or all at once |
| Copy | Copy entries from SIM card to Phone or vice versa. You have the option to copy entries one by one or all at once |
| Settings | Change how you view the Phone book, check your memory status, and select which memory to use |
| 1-touch dialing | Show a list of 1-touch dialing numbers, if you've assigned any to keys 2-9 |

| | |
|----------------------|--|
| Voice tags | Show a list of voice dialing numbers, if you've assigned voice tags to any Phone book entries |
| Service nos. | List the fax, data, and voice numbers saved to your SIM card by your wireless provider |
| Own numbers | Display the phone number assigned to your phone, if the number is saved to the SIM card by your wireless provider |
| Caller groups | Setup a caller group. You can define ringing tones and graphics for up to five groups in your Phone book. See "Caller groups" on page 33 to setup a caller group |

Add an entry to the Phone book

- 1 At the Start screen press **Names**, scroll to **Add entry**, and press **Select**.

- 2 Enter a name for the entry and press **OK**.

- 3 Enter the area code and number for the entry and press **OK**.
The name and number are saved to the memory in use.

OR

- 1 At the Start screen, enter the area code and number you wish to save and press **Options**.



Tip: Always save numbers with a + in front to simplify international dialing. See "International dialing" on page 57 for more information.

- 2 Ensure **Save** is highlighted and press **Select**.

- 3 Enter a name for the number and press **OK**. The name and number are saved to the memory in use.

Number types

Phone numbers are sub-entries of an entry, or a name. Each entry can hold up to 5 numbers, and you can assign a different “type” to each. Once assigned, a number type is easily identified by the icon to the left of the number. The following number types are available:



 **General**  **Mobile**  **Home**  **Work**  **Fax**



Important: If you plan on using Nokia PC Sync to synchronize your phone book and your PC's PIM (Personal Information Manager) application, make sure all phone numbers are assigned the correct number type. PC Sync uses this information to synchronize contacts correctly between phone and PC.




6

ASSIGN OR CHANGE A NUMBER TYPE

- 1 At the Start screen, press one of the scroll keys ( ) to display your Phone book entries.
- 2 Scroll to the entry containing the numbers you wish to change and press **Details**.
- 3 Use the scroll keys to highlight the number you wish to change and press **Options**.
- 4 Scroll to **Change type** and press **Select**.
- 5 Scroll to the number type of your preference and press **Select**.
A confirmation message appears in the display.

Add an address or note to a Phone book entry



- 1 With an entry in your Phone book highlighted, press **Details**.
- 2 Press **Options**, scroll to **Add info**, and press **Select**.
- 3 Scroll to **E-mail**, **Web address**, **Street addr.**, or **Note** and press **Select**.
- 4 Enter text with the keypad and press **OK**.
 - Press **Clear** to backspace and delete text

- Press and hold **Clear** to backspace continuously and delete text
- Press  to switch between letter case (ABC, Abc, or abc)
- Press and hold  to switch between text and numbers
- Press  to display special characters (such as @, #, and more)


Save a number (only)


- 1 At the Start screen, enter the area code and number you'd like to save.
- 2 Press and hold **Options**. The number is saved to your Phone book as a stand-alone entry.

Display Phone book entries quickly

Display any entries in your Phone book with the press of a key. Just press one of the scroll keys ( ) at the Start screen.





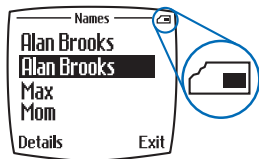


Tip: Any entries which display the SIM card icon () in the upper right corner of the display indicate that entry is saved to the SIM card.



Note: Any entries which appear twice in the display (as in this illustration), indicate the entry is saved to both phone memory and SIM memory.

Search the Phone book quickly

- 1 At the Start screen, press one of the scroll keys ( ) to display any entries in your Phone book.
- 2 Press the key which contains the first letter of the entry you're searching (example; press  twice to search for "Evelyn").
Any entries that begin with "E" appear in the display, as well as a search box with the magnifying glass icon ()
- 3 Continue entering letters to locate the entry, or move through and highlight other entries using the scroll keys.

- 4 Once you've highlighted the desired entry, press  to dial the number. Or, press **Details**, then press **Options** to display the options listed in the following table.
- 5 Scroll to an option. Press **Select** to activate an option or to enter its submenu.

Options while displaying a Phone book entry

| | |
|-----------------|---|
| Add voice tag | Add a voice tag to the highlighted entry |
| Edit number | Edit the highlighted number |
| Erase number | Erase the highlighted number |
| View | View the highlighted number |
| Change type | Change the number to one of the 5 available types: General , Mobile , Home , Work , or Fax |
| As primary no. | Assign the number as your primary number. See "Assign a primary number" on page 33 for more information. |
| Add number | Add another number to the selected entry |
| Add info | Add an e-mail address, web address, street address, or note to the selected entry |
| Caller groups | Add the selected entry to one of the 5 available caller groups, or select No group . |
| Send bus. card | Send a business card containing the selected entry's information to a compatible phone via IR or SMS |
| Send message | Send a message to the entry via SMS or e-mail |
| 1-touch dialing | Assign the number to a 1-touch dialing location |
| Edit name | Edit the name of the entry |
| View name | View the name of the entry |
| Copy | Copy the entry to another memory location |
| Erase | Erase the entry and all information it contains |

Edit names

- 1 At the Start screen, press **Names** and scroll to **Edit name**.
- 2 Press **Select** and scroll to the name you wish to change.
- 3 Press **Edit**, modify the name as desired, and press **OK** once you've finished.
 - Press **Clear** to backspace and delete text
 - Press and hold **Clear** to backspace continuously (and delete)

Erase names and numbers

You can erase single entries in your Phone book or all entries at once.

ERASE A SINGLE ENTRY

- 1 At the Start screen, press **Names**, scroll to **Erase**, and press **Select**.
- 2 Ensure **One by one** is highlighted and press **Select**.
- 3 Scroll to the entry you wish to erase and press **Erase**.
- 4 Press **OK** again to confirm the erasure, or **Back** to select another.

ERASE ALL NAMES AND NUMBERS

- 1 At the Start screen, press **Names**, scroll to **Erase** and press **Select**.
- 2 Ensure **Erase all** is highlighted and press **Select**.
- 3 Scroll to **Phone** or **SIM card** and press **Erase**.
- 4 Press **OK** to confirm or **Back** to select from **Phone** or **SIM card** again.

If you pressed **OK**, you're prompted to enter the security code (default is 12345).



- 5 Enter the security code and press **OK** to erase or **Back** to select from **Phone** or **SIM card** again.



Important: If you enter the wrong security code 3 times in a row, the phone is blocked and won't accept a code for 5 minutes.

Assign a primary number

For names containing more than one number, assign the most-dialed number as the *primary number*. The primary number is the number dialed when you select a name for dialing that contains multiple numbers.

- 1 At the Start screen, press  or  to display a list of Phone book entries.
- 2 Scroll to a name containing multiple numbers and press **Details**.
- 3 Scroll to the number you'd like to assign as the primary number (or change to the primary number) and press **Options**.
- 4 Scroll to **As primary no.** and press **Select**. The primary number is set.

6

• CUSTOMIZE THE PHONE BOOK

Change the Phone book view

You can view the contents of your Phone book as a list or view each entry as a full display (larger text).



- 1 At the Start screen, press **Names**, scroll to **Settings**, and press **Select**.
- 2 Scroll until **Phone book view** appears in the display and press **Select**.
- 3 Scroll to **Name list** or **Name+number** and press **Select**.

Caller groups

You can add Phone book entries to one of 5 caller groups, and then assign a unique ringing tone or graphic to that group. This enables you to identify callers from that caller group by their unique ringing tone or graphic. A caller group can be as small as one person or as large as your entire Phone book. Caller groups can be renamed to suit your preference.



CALLER GROUP OPTIONS

- 1 At the Start screen, press **Names**, scroll to **Caller groups**, and press **Select**. The following Caller groups are available.
 - Family • VIP • Friends • Business • Other


- 2 Use the scroll keys ( ) to highlight a group. Press **Select** to display the following caller group options:

| | |
|--------------------|---|
| Rename group | Rename the group to your preference |
| Group ringing tone | Set the ringing tone for the group |
| Group logo | Turn the logo (graphic) for the caller group on or off. You can also view the logo or send it to a compatible phone via SMS |
| Group members | Add or remove members from the caller group |

Setup a caller group

- 1 At the Start screen, press  or  to display a list of entries in your Phone book.



Tip: Perform a "quick find" when Phone book entries are displayed by entering the first letter of a name.  appears in the bottom of the display to indicate you're performing a search.

- 2 Scroll to a name you'd like to add to a caller group and press **Details**.
- 3 Press **Options**, scroll to **Caller groups**, and press **Select**.
- 4 Scroll to the caller group to which you'd like to add the name and press **Select**. A confirmation message appears in the display.

• YOUR PHONE'S MEMORY

Your phone has three options for the use of its memory; **Phone**, **SIM**, and **Phone and SIM** combined. Only names and numbers saved to the memory in use will appear in the display.



Note: With **Phone and SIM** memory selected, entries saved to both memories appear in the display. Therefore, you may see the same entry twice when you view the contents of your Phone book.

Memory specific information

| Feature | Phone | SIM | Phone and SIM |
|--|-------------------------------|--|--|
| Name capacity | Up to 500 names | Up to 250 names (varies with SIM card) | Up to 750 names (both SIM and phone entries are displayed) |
| Number capacity | Up to 5 numbers per name | One per name | Up to 5 numbers per name (stored in phone memory) |
| Can use Voice dialing? | Yes | No | Yes |
| Can transfer names/numbers to another phone? | Via IR or PC Suite | Via IR, PC Suite, and SIM | Via IR, PC Suite, and SIM |
| Can store text information such as street address, e-mail address, note? | Up to 4 text entries per name | No | Up to 4 text entries per name (stored in phone memory) |

6

Select a memory

- 1 At the Start screen, press **Names**, scroll to **Settings**, and press **Select**.
- 2 Scroll until **Memory in use** appears in the display and press **Select**.
The following options are available:

| | |
|----------------------|--|
| Phone and SIM | Data is saved to Phone memory, but SIM <i>and</i> Phone entries appear in the display. |
| Phone | Data is saved to Phone memory. Only entries saved to Phone memory appear in the display. |
| SIM card | Data is saved to the SIM card. Only entries saved to the SIM card appear in the display. |

- 3 Scroll to the memory option of your choice and press **Select**.




Tip: If you wish to save multiple numbers to a name, or information such as an e-mail or street address, choose **Phone** or **Phone and SIM**.

• COPY PHONE BOOK ENTRIES

- 1 At the Start screen, press **Names**, scroll to **Copy**, and press **Select**.
- 2 Scroll to **From phone to SIM card** or **From SIM card to phone** and press **Select**. The following options appear in the display:

| | |
|---------------|--|
| One by one | Select and copy entries one by one |
| All | Copies all entries from the SIM card or Phone |
| *Primary nos. | Copies only primary numbers. This appears only if you select From phone to SIM . For more information about primary numbers see "Assign a primary number" on page 33. |

- 3 Scroll to the copy method of your choice and press **Select**.
- a) If you selected **One by one**, go to step 4.
- b) If you selected **All** or **Primary nos.**, go to step 6.
- 4 Scroll to the entry you wish to copy and press **Copy**.
- 5 Scroll to **Keep original** or **Move original** and press **Select**. The entry is copied and you're returned to the list of Phone book entries.
- 6 If you selected **All** or **Primary nos.** in step 3, scroll to **Keep original** or **Move original** and press **Select**.
- 7 Press **OK** to confirm your choice. All entries are copied to the selected destination. Press **Back** to return to the list of Phone book entries, or press  to exit and return to the Start screen.



Caution: Select **Keep original** if you're unsure of which copy method to use. This method ensures the original entries are left intact and copied to the new location. **Move original** deletes the original entries after copying.

- **VIEW SERVICE NUMBERS**

Your wireless provider may have saved service numbers to your SIM card. To view these numbers:

- 1 At the Start screen, press **Names**, Scroll to **Service nos.** and press **Select**.

A list of numbers, if any are available, appear in the display.

- 2 To view details of a number, scroll to the number and press **Details**.



Note: This feature may not be supported by your SIM card. If so, contact your wireless provider if you wish to have it enabled.

7 Call log

Call log stores information about the last 20 missed, received, or dialed calls. It also adds the total duration of all calls. When the number of calls exceed 20, the most recent call replaces the oldest. For Call log to work properly:

- Your wireless provider must support caller ID, and it must be enabled
- Your calls can't be blocked
- Your phone must be on and within the service area

7

• CALL LOG OPTIONS

Whether you are viewing missed, received, or dialed calls, each of the menu options will be the same. Please refer to the following table regarding menu options for these features.

Missed, received, and dialed call options

| | |
|--------------|---|
| Call time | Display the date and time of the call |
| Send message | Send a message to the number |
| View number | Display the number |
| Edit number | Edit the number and associate a name with the number |
| Save | Enter a name for the number and save it to your Phone book |
| Add to name | Add the number to an existing entry in your Phone book, if the number is not associated with a name |
| Erase | Clear the number from memory |
| Call | Call the number |

View missed calls

Missed calls are calls that were never answered. You can check for missed calls two ways:

- 1 If **# missed call** appears in the display, press **List**. The phone number appears in the display.
- 2 Press **Options** to display the options listed in the table on page 38.
- 3 Scroll to an option, press **Select** to activate the option or to enter its submenu.

OR

- 1 At the Start screen, press **Menu 2-1** (Call log - Missed calls).
After a brief pause, a list of missed calls appear in the display (if any exist).
- 2 Scroll to a number and press **Options** to display the options listed in the table on page 38.
- 3 Scroll to an option, press **Select** to activate the option or to enter its submenu.


View received calls

Received calls are calls that have been answered.

- 1 At the Start screen, press **Menu 2-2** (Call log - Received calls).
After a brief pause, a list of received calls appears in the display (if any exist).
- 2 Scroll to a number and press **Options** to display the options listed in the table on page 38.
- 3 Scroll to an option, press **Select** to activate the option or enter its submenu.


View dialed numbers

You can view dialed numbers one of two ways:

- 1 At the Start screen, press . Your most recently dialed numbers appear in the display.
OR
- 2 At the Start screen, press **Menu 2-3** (Call log - Dialed numbers).
After a brief pause, your most recently dialed numbers appear in the display.
- 3 Scroll to a number and press **Options** to display the options listed in the table on page 38.
- 4 Scroll to an option, press **Select** to activate the option or enter its submenu.

Call times

You can receive up to five calls from the same number, and view the time each call occurred. Your clock must be set for this feature to work accurately. See "Set the time and date" on page 99 for instructions on setting your clock.

- 1 While viewing a missed or received call, press **Options**, scroll to **Call time**, and press **Select**.
- 2 The time that the last call occurred appears in the display.
- 3 Press  to view other call times from this number. Press **Back** to return to the options list.

Clear call lists

To clear any missed, dialed, or received calls from your phone's memory:

- 1 At the Start screen, press **Menu 2-4** (Call log - Clear call lists).
After a brief pause, **All**, **Missed**, **Received** and **Dialed** appear in the display.
- 2 Scroll to the call type you'd like to clear and press **Select**.

View call duration

- 1 **Duration of last call.** At the Start screen, press **Menu 2-5-1** (Call log - Call timers - Duration of last call). The duration of your last call appears in the display.
- 2 **Duration of dialed calls.** At the Start screen, press **Menu 2-5-2** (Call log - Call timers - Duration of dialed calls). The duration of all dialed calls appears in the display.
- 3 **Duration of received calls.** At the Start screen, press **Menu 2-5-3** (Call log - Call timers - Duration of received calls). The duration of all received calls appears in the display.
- 4 **Duration of all calls.** At the Start screen, press **Menu 2-5-4** (Call log - Call timers - Duration of all calls). The duration of all calls (missed, dialed, and received) appears in the display.

Activate/deactivate summary after call

To show (or not show) the duration of each call after you hang up:

- 1 At the Start screen, press **Menu 4-3-5** (Settings - Call settings - Summary after call).

After a brief pause, **On** and **Off** appear in the display.

- 2 Scroll to **On** or **Off** and press **Select**.

Clear call timers

- 1 At the Start screen, press **Menu 2-5-5** (Call log - Call timers - Clear timers).

After a brief pause, you're prompted to enter the security code. The default is 12345.

- 2 Enter the security code and press **OK**. A note confirming the timers have been cleared appears in the display.



Important: Clear timers resets the duration timers for all call types and is irreversible.

8 Use voicemail

If you subscribe to voicemail, your wireless provider will furnish you with a voice mailbox number. You need to save this number to your phone to use voicemail.

When you receive a voice message, your phone lets you know by beeping, displaying a message, or both.

If you receive more than one message, your phone shows the number of messages received.

8 • SAVE YOUR VOICE MAILBOX NUMBER

 
Your wireless provider may have already saved your voice mailbox number to your phone. If so, the number will appear in the display in step 2. Press **OK** to leave the number unchanged.

- 1 At the Start screen, press **Menu 01-9-2** (Messages - Voice messages - Voice mailbox number).
- 2 After a brief pause, the mailbox number screen appears in the display.
- 3 If the box is empty, enter the voice mailbox area code and number.
- 4 Press **OK**. Your phone confirms the number has been saved.




Tip: Save yourself the trouble of entering the mailbox codes each time you dial voicemail. See "Automate voicemail" later in this section for more information.

• CALL AND SETUP YOUR VOICEMAIL

- 1 Once you've saved the voice mailbox number, press and hold .
- 2 Once you connect and the pre-recorded greeting begins, follow the automated instructions to setup your voicemail.

Listen to your voice messages

Once you've setup voicemail, you can dial the number one of 4 ways:

- Dial the number using the keypad
- Press and hold 
- Press **Listen** if there's a notification message in the display
- Press **Menu 01-9-1** (Messages - Voice messages - Listen to voice messages). After a brief pause, your phone dials the voicemail number.

Once you connect and the pre-recorded greeting begins, follow the automated instructions to listen to your voice messages.

8

• AUTOMATE VOICEMAIL



You can insert special characters called "dialing codes" into phone numbers such as voicemail and then save the number to a 1-touch dialing location. Dialing codes instruct the receiving system to pause, wait, bypass, or accept the numbers that follow them in the dialing string.



Note: Each voicemail service can vary. The examples and steps that follow are for clarification. Check with your wireless provider if you have specific questions about your voicemail service.

Write down some information


- 1 Write down your voice mailbox number.
- 2 Call and check your voicemail as you normally would.
- 3 Write down your interaction with the recorded prompts step-by-step. Keep in mind that each voicemail service may vary. However, it should look something like this:


Dial 2145551212, pause 5 seconds, press , pause 2 seconds, enter 1234, press .




Important: Be precise, you'll need this information in "Setup voicemail with dialing codes" on page 44.

LEARN HOW TO INSERT DIALING CODES

Press  repeatedly to cycle through dialing codes. Once the desired code appears, pause briefly to insert the code into your dialing string.

For example, press  four times to display "w" (wait character). Pause briefly to insert the wait character into your dialing string. Available dialing codes are as follows:

Dialing codes

| | |
|---|---|
| * | Bypasses a set of instructions |
| + | Precedes an international telephone number |
| p | Pauses for 2.5 seconds before sending any numbers that follow |
| w | Wait. Your phone waits for you to press  before it sends any numbers or codes that follow. |

Setup voicemail with dialing codes

- 1 At the Start screen, press **Names**, scroll to **1-touch dialing**, and press **Select**.
- 2 Scroll to an empty 1-touch dialing slot and press **Assign**.
- 3 Enter your voice mailbox number, including the area code.
- 4 Refer to the table entitled "dialing codes," and enter any codes as necessary using the information that you wrote down earlier.
For example, if you pause for 5 seconds after connecting to voicemail, enter **p** twice *after* the voice mailbox number, such as 2145551212**pp**.
- 5 Enter any remaining pauses, PIN codes, and other information that allows you to listen to your messages, then press **OK**.
- 6 Enter a name (such as Voicemail) and press **OK**. A message appears in the display confirming your 1-touch dialing location has been saved.
Now, to dial and listen to your voicemail, just press and hold the assigned 1-touch dialing key at the Start screen. No other keypresses should be necessary.

9 Advanced features

• IN-CALL OPTIONS

You have numerous options while in a call. The options listed on the following pages are those available in the most common situations, such as when you are in a call or when a call is on hold.



Note: Some options are network dependent. Check with your wireless provider if you have questions regarding availability.

- 1 Press **Options** while performing any of the following in-call activities.
- 2 Use your scroll keys to highlight an option.
- 3 Press **Select** to activate an option or enter the option's submenu.

9

With one call active

| | |
|-------------|--|
| Record | Record the current phone conversation |
| Equalizer | Select an equalizer set or create a custom set of your own |
| End call | Terminate the call |
| New call | Place a new call |
| Touch tones | Enter touch tones manually or recall a string from your Phone book |
| Phone book | Display the Phone book menu |
| Menu | Return to the main menus |
| Mute | Mute the current call. You can hear the other person but they can't hear you |
| Hold | Place the current call on hold |

With a call on hold **(See Note regarding in-call options)*

| | |
|------------|--|
| Record | Record the current phone conversation |
| Equalizer | Select an equalizer set or create a custom set of your own |
| End call | Terminate the call |
| New call | Place a new call |
| Phone book | Display the Phone book menu |
| Menu | Return to the main menus |
| Mute | Mute the current call. You can hear the other person but they can't hear you |
| Unhold | Activates the held call |

With one call active and another on hold **(See Note regarding in-call options)*

| | |
|---------------|--|
| Record | Record the active phone conversation |
| Equalizer | Select an equalizer set or create a custom set of your own |
| End call | Terminate the active call |
| End all calls | End all calls |
| Conference | Connect all parties in a conversation |
| Touch tones | Enter touch tones manually or recall a string from your Phone book |
| Phone book | Display the Phone book menu |
| Menu | Return to the main menus |

With one call active and another on hold *(See Note regarding in-call options)




| | |
|----------------|--|
| Mute | Mute the current call. You can hear the other person but they can't hear you |
| Swap | Switch form the active call to the one on hold. |
| Transfer calls | Transfer your calls (on hold or otherwise) to another number |


• CALL WAITING

If supported by your wireless provider, call waiting notifies you of an incoming call while you're in a call. You can then accept, reject, or ignore the incoming call.

9

When you receive an incoming call

- 1 At first, the name or number appears in the display. After a few seconds,  Call 2 appears below  Call 1 in the display.
- 2 Press **Answer** or  to pick up the call. The first caller is put on hold and **Swapped** appears in the display.
- 3 If you don't pick up the call within 30 seconds, the call is dropped.

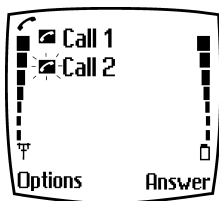

Switch between calls

- Press **Swap** or 

End the active call

- Press 




End both calls

- Press **Options**, scroll to **End all calls**, and press **OK**

Reject a waiting call

- Press **Options**, scroll to **Decline call** and press **Select**

Place a new call with one on hold

- While in a call, enter the number for the second call and press . The first caller is put on hold.
- Switch between the two calls by pressing **Swap** or .
- End the active call by pressing .
- To end both calls, press **Options**, scroll to **End all calls**, and press **Select**

9 • SEND OWN CALLER ID WITH NEXT CALL

You can prevent your number from being displayed on the receiving party's caller ID. This feature is network dependent and works on a call-by-call basis. Contact your wireless provider for more information.

• CALL FORWARDING

Call forwarding tells your network to redirect incoming calls to another number.



Important: Call forwarding is network-dependent and may not work the same in all networks. Contact your wireless provider for availability.

Activate call forwarding

- 1 At the Start screen, press **Menu 4-3-1** (Settings - Call settings - Call forwarding).

- 2 After a brief pause, the forwarding options listed in the following table appear in the display.

| | |
|-------------------------------------|---|
| Forward all voice calls | Forward all calls to the number you specify |
| Forward if busy | Forward incoming calls when you're in a call |
| Forward if not answered | Forward incoming calls to another number if you're unable to answer. You can also set a delay before forwarding takes place |
| Forward if out of reach | Forward incoming calls when your phone is off reach |
| Forward when not able to take calls | Forward calls that aren't picked up. You can also set a delay before forwarding takes place |
| Forward all fax calls | Forward all fax calls to a fax mailbox |
| Forward all data calls | Forward all data calls to a data mailbox |
| Cancel all call forwarding | Cancel any call forwarding options you may have set |

- 3 Scroll to the option of your choice and press **Select**.
- 4 Scroll to **Activate** and press **Select**.
- 5 Scroll to the destination to which your calls will be forwarded (such as **To other no.**) and press **Select**.
- 6 Enter the number to which your calls, data, or other information will be forwarded and press **OK**.

Your phone calls the network to activate the feature you've requested. The network sends a confirmation note when the feature has been activated successfully.

Cancel call forwarding

- At the Start screen, press **Menu 4-3-1-8** (Settings - Call settings - Call forwarding - Cancel all call forwarding).



Note: Cancel all call forwarding may affect your ability to receive voice mail messages. Contact your wireless provider for specific details.

Automatic redial

Occasionally, your network may experience heavy traffic, resulting in a "fast" busy signal when you dial. With automatic redial activated, your phone redials the number up to 10 times, and notifies you once the network becomes available.

ACTIVATE OR DEACTIVATE AUTOMATIC REDIAL

- At the Start screen, press **Menu 4-3-4** (Settings - Call settings - Automatic redial).
- After a brief pause, **On** and **Off** appear in the display. Scroll to your choice and press **Select**.

• VOICE DIAL

You can select up to 10 entries in your Phone book to dial by voice. Before you can do this, you'll need to assign each entry a "voice tag."


Notes about voice tags

- Voice tags can be no longer than 1.5 seconds
- You cannot use voice dial while in a call
- Press **Quit** to abort recording the voice tag
- Choose a quiet location for recording voice tags
- Unique tags are best. For example, "John Smith, work"
- Avoid pauses or silence as you record the voice tag
- If memory is full, **Erase an existing voice tag?** appears in the display. Press **OK**, scroll to locate a tag to erase, and then press **Erase**



Important: *Do not* use voice tags to dial in emergencies. Stress can cause changes in your voice and prevent the phone from recognizing your commands!

Assign a voice tag

- 1 At the Start screen, press either scroll key () to display the entries in your Phone book.
- 2 Scroll to the entry you'd like to assign a voice tag, and press **Details**.
- 3 If the entry has multiple numbers, scroll to the number you wish to tag and press **Options**.
- 4 Scroll to **Add voice tag**, press **Select**, and then press **Start**.
- 5 After the phone beeps, pronounce the voice tag clearly into the microphone.
 - If the recording is successful, the voice tag is replayed through the earpiece and a confirmation note appears in the display.
 - If the recording fails, the phone asks if you want to try again. Press **OK** to try again or **Back** to exit.

9

Voice dial a number

- 1 At the Start screen, press and hold **Names**. The phone beeps and **Please speak now** appears in the display.
- 2 Within 3 seconds, pronounce the tag into the microphone.

Once the voice tag is recognized, the tagged entry appears in the display, replays through the earpiece, and the number is dialed.



VOICE DIAL WITH THE HEADSET

After you've assigned voice tags to those entries you wish to dial, you can also voice dial a number using the optional HDC-9P headset.

- 1 At the Start screen, press and hold the remote button on the headset. Your phone beeps and **Please speak now** appears in the display.
- 2 Pronounce the voice tag into the microphone.

Once the voice tag is recognized, the tagged entry appears in the display, replays through the earpiece, and the number is dialed.

Display voice tagged entries

- 1 At the Start screen, press **Names**.
- 2 Scroll to **Voice tags** and press **Select**. In alphabetical order, the first voice tagged name and number appear in the display.
- 3 Press the scroll keys ( ) to view other voice tagged entries.

Change or erase a voice tag

- 1 At the Start screen, press **Names**, scroll to **Voice tags**, and press **Select**.
The first voice tagged entry in your Phone book appears in the display. Entries appear in alphabetical order.
- 2 Scroll until the voice tag you wish to change or erase appears in the display, then press **Options**.
- 3 Scroll to **Change** or **Erase** and press **Select**.

• VOICE COMMANDS

You can command your phone to perform up to 5 different functions with your voice. Voice commands work similar to voice dialing, so you'll need to associate a voice tag with each command.



Note: Voice commands cannot be used during a call, or when the data cable is attached.

Add a voice tag for a command

- 1 At the Start screen, press **Menu 5-2** (Voice - Voice commands). After a brief pause, the options listed in the following table appear in the display.



Note: You can select more than 1 profile to command by voice.

| | |
|---------------|---------------------------|
| Profiles | Activate up to 5 profiles |
| Voice mailbox | Dial your voice mailbox |
| Infrared | Activate infrared |
| Recorder | Record a voice memo |

- 2 Scroll to the command you wish to tag and press **Select**.
- 3 Press **Options**. **Add command** is highlighted, press **Select**.
- 4 Press **Start**, and when the phone beeps, pronounce the voice tag into the microphone. The phone replays and saves the tag.



Note: Don't press **Quit** unless you want to cancel the recording.

Execute a voice command

After you've associated a voice tag with a command, execute the command as follows:

- 1 Press and hold **Names**. **Please speak now** appears in the display.
- 2 Pronounce the tag for one of the 5 available commands. **Found: <command>** appears in the display and the command is executed.

EXECUTE VOICE COMMANDS WITH THE HEADSET

After you've associated a voice tag with a command, you can also execute voice commands using the optional HDC-9P headset.

- 1 At the **Start** screen, press and hold the remote button on the headset. The phone beeps and **Please speak now** appears in the display.
- 2 Pronounce the tag for one of the 5 available commands. **Found: <command>** appears in the display and the command is performed.



Tip: You can also execute voice commands by pressing and holding the *down* volume key on the side of the phone.

Change or erase an existing voice commands tag

- 1 At the **Start** screen, press **Menu 5-2** (Voice - Voice commands).
- 2 After a brief pause, the list of voice commands appear in the display.
- 3 Scroll to the voice command you wish to modify and press **Select**.
- 4 When the command you wish to modify appears in the display, press **Options**.

- 5 Scroll to **Change** or **Erase** and press **Select**.
 - If you selected **Change**, press **Start**, then record the new tag.
 - If you selected **Erase**, press **OK** and the tag for the selected command is erased.

• VOICE RECORDER

The Nokia 6340 can record both voice memos and phone conversations. The total of all recordings stored in your phone can't exceed 3 minutes. If you're running out of memory and try to record, you're asked to erase a recording before proceeding.

Record a memo

- 1 At the Start screen, press **Menu 5-1-1** (Voice - Voice recorder - record).
- 2 After a brief pause, your phone begins recording and a progress bar appears in the display to indicate recorded time versus time left.
- 3 After you're finished recording, press **Stop**, enter a title for the recording, and press **OK**.

View recorded memos

- At the Start screen, press **Menu 5-1-2** (Voice - Voice recorder - Recordings list).

After a brief pause, your oldest recorded memo appears in the display.

Playback a memo

- 1 At the Start screen, press **Menu 5-1-2** (Voice - Voice recorder - Recordings list).
- 2 After a brief pause, your oldest recorded memo appears in the display.
- 3 Scroll until the memo you wish to play appears in the display and press **Options**.
- 4 Scroll to **Playback** and press **Select**.

The memo begins playing, and a progress bar appears in the display indicating the amount of play time left. If necessary, adjust the volume using the side volume key.

PLAYBACK A MEMO WHILE IN A CALL

You can playback a memo while in a call. All participants in the call can then hear the memo as it's played back.

- 1 While in a call, press **Options**, scroll to **Menu**, and press **Select**.
- 2 Scroll until **Voice** (menu) appears in the display and press **Select**.
Voice recorder appears in the display.
- 3 Press **Select**, scroll to **Recordings** list and press **Select** again.
- 4 Scroll until the memo you wish to playback appears in the display and press **Options**.
- 5 Scroll to **Playback** and press **Select** to play the memo.

9

Erase a memo

- 1 At the Start screen, press **Menu 5-1-2** (Voice - Voice recorder - Recordings list).
- 2 After a brief pause, your oldest recorded memo appears in the display.
- 3 Scroll until the memo you'd like to erase appears in the display and press **Options**.
- 4 Scroll to **Erase** and press **Select**. You're asked to confirm the erasure.
- 5 Press **OK** and the memo is erased.

Record a phone conversation

- 1 While in a call, press **Options**, scroll to **Record**, and press **Select**.
- 2 Your phone begins recording the conversation. A progress bar and timer appear in the display, indicating the amount of time left.
- 3 Press **Stop** to abort the recording. The recording is saved as the time and date.



Note: It may be illegal in some jurisdictions to record a phone conversation without the permission of all participants.

• 1-TOUCH DIALING


You can associate any entry in your Phone book with keys 2 through 9, and then dial those entries by pressing and holding the assigned key.

Assign a key to 1-touch dialing

- 1 At the Start screen, press **Names**, scroll to **1-touch dialing** and press **Select**.
- 2 Scroll to any empty slot and press **Assign**.
- 3 Enter the number (including the area code) and press **OK**, or press **Find** to retrieve a number from your Phone book.
- 4 Enter a name for the number and press **OK**.

9

Make a call with 1-touch dialing

- Press and hold the key to which an entry has been assigned, *or* press the key to which an entry is assigned and press .

Your phone dials the entry assigned to the key.

CHANGE 1-TOUCH DIALING NUMBERS

- 1 At the Start screen, press **Names**, scroll to **1-touch dialing** and press **Select**.
- 2 Scroll to the 1-touch dialing location you wish to change and press **Options**.
- 3 Scroll to **Change** and press **Select**.
- 4 Enter the new number, or press **Find** to retrieve a number from your Phone book, and press **OK**.
- 5 Enter a name for the entry and press **OK**.

ERASE 1-TOUCH DIALING NUMBERS

- 1 At the Start screen, press **Names**, scroll to **1-touch dialing** and press **Select**.
- 2 Scroll to the 1-touch dialing location you wish to erase and press **Options**.

- 3 Scroll to **Erase** and press **Select**. You're asked to confirm the erasure.
- 4 Press **OK** to erase the key assignment.

• INTERNATIONAL DIALING

International numbers require a prefix specific to the country *from which you're calling*. Ensure your phone always has the correct home prefix by doing *both* of the following.

Save international numbers with a + in front

Save all international numbers with a + in front. For example, a number to Finland from the U.S. would look as follows: (+358 123456789).

Set the international prefix

- 1 Press **Menu 4-3-3** (Settings - Call settings - International prefix). After a brief pause, an entry box appears in the display.
- 2 Enter the prefix specific to the country from which you are calling and press **OK**. For example, in the United States, enter 011.

10 Customize your phone

The Nokia 6340 can be easily customized to fit your life-style. The display language, ringing tones, audio, and accessory settings (among others) can all be modified to suit your needs. Now, it's even possible to use a TTY or TDD device with your phone in all modes of operation (analog or digital).

• SET THE DISPLAY LANGUAGE

- 1 At the Start screen, press **Menu 4-4-1** (Settings - Phone settings - Language).

After a brief pause, **Automatic, English, Français, Español, and Português** appear in the display.

- 2 Scroll to the language of your choice and press **Select**.



Note: The Language setting affects the time and date formats of the Clock, Alarm clock, and Calendar.

• PROFILES

Profiles define how your phone reacts when you receive a call or a message, the sounds your keypad makes whenever you press a key, and more. Ringing options, keypad tones, and other settings for each of the 5 available profiles can be left at their default setting, or customized to suit your needs. Select and customize the most suitable profile for your situation, such as when you are in a meeting or outdoors. The following profiles are available:

- Normal • Silent • Meeting • Outdoor • Pager



Note: Profiles are also available for accessories such as a headset, TTY device, and car kit. See "Select and customize an accessory profile" on page 61 for more information about accessory profiles.

Select a profile

- 1 At the Start screen, press **Menu 3** (Profiles).
After a brief pause, the list of profiles appear in the display.
- 2 Scroll through the available profiles and press **Select** once the profile of your choice is highlighted.
- 3 Scroll to **Select** and press **Select**.



Tip: You can briefly press the power key to display the list of profiles. Each press of the power key thereafter scrolls through the list. Once a profile is highlighted, press and hold the power key to select the profile.

Customize a profile

You can customize any of the profiles a variety of ways.

- 1 At the Start screen, press **Menu 3** (Profiles).
After a brief pause, the list of profiles appears in the display.
- 2 Scroll to the profile you wish to customize and press **Select**.
- 3 Scroll to **Customize** and press **Select**.
- 4 Use the scroll keys to display each of the options in the following table. Once you arrive at the option you'd like to customize, press **Select**.



Note: You cannot rename the **Normal** profile.

Custom profile options

| | |
|--------------------|--|
| Ringing options | Select the ringing tone style |
| Ringing tone | Select the ringing tone for incoming calls |
| Ringing volume | Set the volume of your ringing tone |
| Vibrating alert | Turn the vibrating alert on or off |
| Message alert tone | Select the tone for received messages |

Custom profile options

| | |
|---------------|--|
| Keypad tones | Set the volume of your keypad tones (or turn them off) |
| Warning tones | Turn warning and confirmation tones on or off |
| Alert for | Define which caller groups the selected profile will accept or decline. See "Caller groups" on page 33 for more information. |
| Profile name | Rename the profile (up to 16 characters) |

Set a timed profile

Timed profiles can be very useful in preventing missed calls. For example, suppose you attend an event that requires you set your phone to the **Silent** profile before the event starts, but forget to return it to **Normal** until hours after the event is over. During this time, you've missed several calls because your phone's ringing tone was silent. A timed profile can prevent this from happening by automatically returning your phone to the default profile at a time you specify.



Note: Timed profiles can be set up to 24 hours in advance.

- 1 At the Start screen, press **Menu 3** (Profiles).
After a brief pause, the list of profiles appears in the display.
- 2 Scroll to the profile you wish to activate and set for timed expiration, then press **Select**.
- 3 Scroll to **Timed** and press **Select**.
- 4 Enter the time for the profile to expire and press **OK**.

The profile you've set for expiration is now active and appears in the Start screen along with a small "clock" icon.

• ACCESSIBILITY OPTIONS

For TTY users

Until now, most mobile phones were incompatible with TTY devices in digital mode. Your Nokia 6340 is compliant with TTY devices *in all modes*.



Note: TTY/TDD is a network dependent feature. Check with your wireless provider for availability and description of services.

WHAT YOU'LL NEED

In addition to your phone, you'll need the following for TTY communication:

- A TTY device that is "cellular ready" or "cellular compatible"
- A cable for connecting the TTY to your phone; usually supplied by the manufacturer of the TTY device
- The Nokia TTY adapter HDA-8, which can be purchased as an accessory



Important: The Nokia TTY adapter HDA-8 is for use with compatible TTY devices and headsets only. Please check your TTY device or headset to ensure that the connection is compatible. Nokia original headsets attach directly to the phone and do not require this adapter. Nokia does not endorse, warrant, or authorize use of any accessories not manufactured or licensed by Nokia.

10

Select and customize an accessory profile



Note: You must have an accessory (such as a loopset) attached to your phone prior to selecting the **Accessory settings** menu.

To select and customize profiles for use with the headset, handsfree device (car kit), loopset, and TTY/TDD:

- 1 Press **Menu 4-6** (Settings – Accessory settings).

After a brief pause, the list of accessory profiles appear in the display.

- 2 Scroll to one of the following Accessory profiles and press **Select**.

- Headset
- Loopset
- TTY/TDD
- Handsfree

IF YOU SELECTED HEADSET

The following options are available. Scroll to the option of your choice and press **Select** to enter the option's submenu and modify its settings.

- **Default profile** - Choose the profile you wish to be automatically activated when a headset is connected
- **Automatic answer** - Calls are answered automatically after 1 ring when a headset is connected. Scroll to **On** or **Off** and press **Select**

IF YOU SELECTED HANDSFREE

The following options are available. Scroll to the option of your choice and press **Select** to enter the option's submenu and modify its settings.

- **Default profile** - Choose the profile you wish to be automatically activated when your phone is connected to a car kit.
- **Automatic answer** - Calls are answered automatically after 1 ring when a car kit is connected. Scroll to **On** or **Off** and press **Select**.
- **Lights** - Choose to keep the phone lights always on, or to shut off automatically after several seconds. Scroll to **On** or **Automatic** and press **Select**.

IF YOU SELECTED LOOPSET

The following options are available. Scroll to the option of your choice and press **Select** to enter the option's submenu and modify its settings.

- **Use loopset** - Enable use of the LPS-1 mobile inductive loopset. Scroll to **Yes** or **No** and press **Select**.
- **Default profile** - Choose the profile you wish to be automatically activated when a loopset is connected.
- **Automatic answer** - Calls are answered automatically after 1 ring when a loopset is connected. Scroll to **On** or **Off** and press **Select**.

IF YOU SELECTED TTY/TDD

The following options are available. Scroll to the option of your choice and press **Select** to enter the option's submenu and modify its settings.


- **Use TTY** - Enable the use of a TTY/TDD device. Scroll to **Yes** or **No** and press **Select**.



Note: If the loopset is enabled, you'll be asked to disable the loopset before enabling TTY/TDD. Press **Yes** to disable the loopset (thus enabling TTY/TDD). Press **No** to leave the loopset enabled.

Connect TTY hardware

- 1 The TTY device comes with a cable. Plug the larger end of this cable into the input jack on the TTY.
- 2 Plug the other end of the cable into the TTY adapter HDA-8.
- 3 Plug the HDA-8 into the connector on the bottom of your phone.

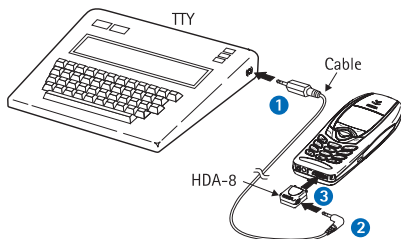

10

Make a call with TTY





Note: You must have an accessory attached to your phone prior to selecting the accessory settings menu.

- 1 At the Start screen, press **Menu 4-6-4-1-1** (Settings - Accessory settings - TTY/TDD - Use TTY - Yes). After a brief pause, a confirmation message appears in the display.





Note: After selecting **Yes**, this becomes the default and you won't have to do it again unless you turn TTY/TDD off.

- 2 Press  to return to the Start screen.
- 3 Enter the number you wish to call (on the phone) and press .
- 4 When the receiving party answers, begin typing your conversation on the TTY.

End a TTY call

- Press  on the phone

Receive a TTY call

- 1 Make sure the TTY and phone are connected.
- 2 When the phone vibrates (if vibrate is on), press  to answer the call, and then type your response on the TTY.
- 3 To hang up, press  on the phone.



• OPTIONAL HEADSETS

The HDC-9P and HDE-1 headsets can be purchased separately as accessories.


Connect the headset

- 1 Plug the headset jack into the accessory connection on the bottom end of your phone.
- 2 Place the round headset ear plug in your ear.

With the headset connected, you can make, answer, and end calls as usual.

- Use the keypad to enter numbers
- Press  to place a call
- Press  to end a call

When in use, the headset microphone hangs at the side of your head. Although it may seem far from your mouth, you can speak at normal volume.

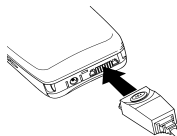

VOICE DIAL A NUMBER WITH THE HDC-9P HEADSET

Once you've voice tagged entries in your Phone book, you can make a call with the HDC-9P headset by simply pressing and holding the remote button on the microphone. See "Assign a voice tag" on page 51 for information on setting up voice tags if you haven't already.

- 1 At the Start screen, press and hold the remote button on the headset. Your phone beeps and **Please speak now** appears in the display.
- 2 Within 3 seconds, pronounce the voice tag into the microphone.

Once the voice tag is recognized, the tagged entry appears in the display, replays through the earpiece, and the number is dialed.

• AUDIO SETTINGS

Much like a stereo, your phone's audio can be customized to your preference. You can choose from a list of 4 equalizer presets or create up to 2 custom sets of your own.

Choose an equalizer set


- 1 At the Start screen, press **Menu 4-3-2** (Settings - Call settings - Equalizer). After a brief pause, the following equalizer sets appear in the display.


| | |
|----------|---|
| Normal | Switches the Equalizer off |
| Bright | Amplifies higher frequencies |
| Dark | Amplifies lower frequencies |
| Loudness | Amplifies both higher and lower frequencies |
| Set 1 | Customizable equalizer setting |
| Set 2 | Customizable equalizer setting |


10

- 2 Scroll to the equalizer set of your choice and press **Select**. A graphic of the equalizer set you have chosen appears in the display.
- 3 Press **OK** to activate the set or **Back** to return to the list of sets.

Create a Custom equalizer set

- 1 At the Start screen, press **Menu 4-3-2** (Settings - Call settings - Equalizer). After a brief pause, a list of equalizer sets appears in the display.
- 2 Scroll to **Set 1** (or **Set 2**) and press **Select**.
- 3 Scroll to **Edit** and press **Select**. **Set 1** appears in the display with the first bar highlighted.
- 4 Press **Adjust**, then use the scroll keys to adjust the setting. When you're finished, press **OK**.
- 5 Press  to select the next bar. Press **Adjust**, and use the scroll keys to adjust the setting. When you're finished, press **OK**.

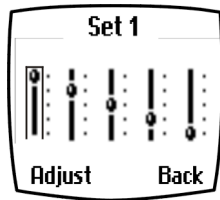

- 6 Press  to select additional bars. Press **Adjust** and use the scroll keys to modify each bar's setting. Press **OK** to accept any settings before continuing to the next bar.
- 7 Once you're finished, press **Back**, where you can **Activate** the setting, return to **Edit**, or **Rename** the setting.

CHOOSE AN EQUALIZER SET WHILE IN CALL

- 1 While in a call, press **Options**, scroll to **Equalizer**, and press **Select**.
- 2 Scroll to one of the 6 equalizer settings and press **Activate**.

• DOWNLOAD A RINGING TONE

In addition to 30 ringing tones that come with your phone, you can download up to 10 more over the Internet, or have them sent to your phone via SMS. You can also create ringing tones of your own and send them to your phone or other compatible phones using Nokia PC Suite. For more information on PC Suite, see the PC Connectivity Guide.




Note: This function can be used only if it is supported by your network operator or wireless provider. Only phones that offer download features can receive ringing tones. Contact your wireless provider for details.

When you receive a ringing tone

Ringing tone received appears in the display.

LISTEN TO THE TONE

- 1 Press **Options**, scroll to **Playback**, and press **Select**.
- 2 To stop playing the tone, press **Quit** or .

DISCARD THE TONE

- Press **Options**, scroll to **Discard**, and press **Select**.


SAVE THE TONE

- 1 Press **Options**, scroll to **Save**, and press **Select**.
- 2 Scroll to an available slot and press **Replace**.

11 Manage phone security

You can lock your keypad, restrict selective calls, and use security codes to secure your phone against accidental or unauthorized use.




Important: It is possible to place an emergency call with the keypad locked. Enter the local emergency number. Once you enter the last digit of the emergency number, the keypad unlocks. Press  and the call is initiated.


• LOCK AND UNLOCK THE KEYPAD

Remember to lock your phone's keypad to prevent accidental calls. If the keypad is locked, it unlocks when you receive a call. After the call the lock automatically reactivates.

LOCK THE KEYPAD

- At the Start screen, press Menu . Keys locked appears in the display.

UNLOCK THE KEYPAD

- At the Start screen, press Unlock . Keys unlocked appears in the display.

• SECURITY LEVELS

The security level determines your access to features when a "non-owner" SIM card is used. A "non-owner" SIM card is one (other than the original) that is inserted after you power off the phone. There are 3 security levels:

Security levels

| | |
|--------|---|
| Off | Owner and Non-owner cards are treated the same |
| Memory | Non-owner cards can access SIM memory. Any changes to the memory setting requires the security code. |
| | The owner card has access to all features, but the security code is required to change a memory setting |
| Phone | The security code is required upon power-up |

Set your security level

- 1 At the Start screen, press **Menu 4-7-3** (Settings - Security settings - Security level).
- 2 After a brief pause, you're prompted to enter the security code. The default code is 12345. Enter the security code and press **OK**.
- 3 Scroll to **Off**, **Memory**, or **Phone** and press **Select**.

• FIXED DIALING

Once you setup and activate a fixed dialing list, your phone can make calls *only* to those numbers that you've defined in the fixed dialing list. Fixed dialing is a network feature and must be supported by your wireless provider.

Set up and activate a fixed dialing list

- 1 At the Start screen, press **Menu 4-7-2** (Settings - Security Settings - Fixed dialing).

The options in the following table appear in the display:



Note: If you activate fixed dialing and the number list is empty, all outgoing calls, except for emergency numbers such as 911, require entry of the PIN2 code.

Fixed dialing options

| | |
|-------------|---|
| On | Activate fixed dialing (see note above) |
| Off | Deactivate fixed dialing |
| Number list | View the numbers in your fixed dialing list |

- 2 Scroll to **Number list** and press **Select**. **Fixed dialing not active** and then **Fixed dialing list empty** appear in the display.
- 3 You're prompted to enter the PIN2 code. Enter the PIN2 code and press **OK**.

- 4 Enter any number that you wish to restrict access, or press **Find** to retrieve a number from your Phone book, and press **OK**.
- 5 Enter a name for the number and press **OK**. A confirmation note appears in the display and you're returned to the fixed dialing number list.
- 6 Press **Back**, scroll to **On** and press **Select** to activate fixed dialing.

View or edit the fixed dialing list

- 1 At the Start screen, press **Menu 4-7-2** (Settings - Security Settings - Fixed dialing).
- 2 Scroll to **Number list** and press **Select**.
- 3 You're prompted to enter the PIN2 code. Enter the PIN2 code and press **OK**.
- 4 Any numbers which you've assigned to fixed dialing appear in the display.
- 5 Scroll to a number and press **Options**.
- 6 The options in the following table appear in the display.

11

Fixed dialing number options

| | |
|--------------------|--|
| View number | View the number for an entry |
| Add | Add a number to your fixed dialing list |
| Edit | Edit the highlighted entry |
| Erase | Erase the highlighted entry |
| Erase all | Erase all entries in your fixed dialing list |

- Use the scroll keys to highlight an option
- Press **Select** to activate or enter an option's submenu

Notes about fixed dialing

- If a SIM card with fixed dialing that is activated is inserted into a phone that doesn't support fixed dialing, the SIM card is rejected
- If you try to add a name (without a number) to the fixed dialing list, you'll receive an error message
- If you try to browse the fixed dialing list, but haven't stored any numbers, **Fixed dialing list empty** appears in the display
- You cannot access SIM memory manually (view or copy numbers on the SIM card) while fixed dialing is active

• ACCESS CODES

Use access codes to change your security code, PIN code, and PIN2 code.



Note: Avoid using codes similar to emergency numbers such as 911 to prevent accidental dialing of the emergency number.

11

The security code

The security code controls access to features such as the security level and is supplied with the phone. The preset code is 12345.



Note: If you enter the wrong security code five times in succession, you won't be able to enter a code for five minutes, even if you power off the phone between incorrect entries.

CHANGE YOUR SECURITY CODE

Once you change the security code from its preset of 12345, keep the new code secret, and in a safe place separate from your phone.

- 1 Press **Menu 4-7-4-1** (Settings - Security settings - Access codes - Change security code).

After a brief pause, you're prompted to enter the current security code (default is 12345).

- 2 Enter the current security code and press **OK**. You're prompted to enter the new security code.
- 3 Enter the new security code (up to 10 characters) and press **OK**. You're asked to re-enter the new security code for verification.

- 4 Enter the new security code again and press **OK**. A message appears in the display confirming your security code has been changed.

The PIN code

The PIN code protects the SIM card from unauthorized access. The PIN code can be 4– 8 digits in length. After three successive incorrect entries the PIN code is blocked and you'll be asked to enter the personal unblocking key (PUK) code.



Note: The PIN code must be obtained from your wireless provider.

PIN CODE REQUEST

Enable your phone to request the PIN code upon power-up. This provides extra security in case your phone is lost or stolen.

- 1 Press **Menu 4-7-1** (Settings – Security settings – PIN code request).
- 2 After a brief pause, you're prompted to enter the current PIN code. Enter the PIN code and press **OK**.
- 3 Scroll to **On** and press **OK**. A message appears in the display confirming your selection.

CHANGE YOUR PIN CODE

Before you can change your PIN code, you'll need to enable **PIN code request**. See "PIN code request" immediately preceding this section.

- 1 Press **Menu 4-7-4-2** (Settings – Security settings – Access codes – Change PIN code).
- 2 After a brief pause, you're prompted to enter the current PIN code. Enter the PIN code and press **OK**.
- 3 You're prompted to enter the new PIN code. Enter the new PIN code and press **OK**.
- 4 You're prompted to re-enter the new PIN code for verification. Enter the new PIN code again and press **OK**.

A message appears in the display confirming your PIN code has been changed.

The PIN2 Code

The PIN2 code is required for features such as Fixed dialing. If you enter an incorrect PIN2 code three times in succession, the PIN2 code is blocked and you'll have to enter the PUK2 code.



Note: The original PIN2 code must be obtained from your wireless provider.

CHANGE YOUR PIN2 CODE

- 1 Press **Menu 4-7-4-3** (Settings - Security settings - Access codes - Change PIN2 code). You're prompted to enter the current PIN2 code.
- 2 Enter the current PIN2 code and press **OK**. You're prompted to enter the new PIN2 code.
- 3 Enter the new PIN2 code and press **OK**. You're asked to verify the new PIN2 code by entering it again.
- 4 Enter the new PIN2 code again and press **OK**. A message appears in the display confirming you've changed the PIN2 code.

Personal unblocking key (PUK) codes


PUK and PUK2 codes are used to restore blocked PIN and PIN2 codes. Both PUK and PUK2 codes are eight characters in length and cannot be changed. PUK and PUK2 codes must be obtained from your wireless provider.



Important: If you enter an incorrect PUK or PUK2 code 10 times in succession, the message **SIM rejected** appears in the display and the SIM card can no longer be used. You must contact your wireless provider for a new SIM card.



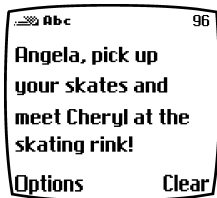

12 Messages

If you're subscribed to a message service, you can send and receive messages to compatible phones that also have a message service. You can also send and receive picture messages and e-mail if supported by your network. Composed messages can be up to 160 characters in length.



Message icons

Icons that precede the title of a message indicate the following:

| | |
|---|---|
|  | The message has not been read |
|  | The message has been read |
|  | A message (which you've composed) has not been sent |
|  | The message is a delivery report |

12

Before you can send and receive messages

You'll need the following to send and receive messages:

- A messaging service through your wireless provider
- A message center number, which must be saved to your phone (if your wireless provider hasn't done so already)

Save your message center number

Messages sent by your phone are routed through your wireless provider's message center. Normally, this number is saved to your phone by your wireless provider. To save the number manually, do the following:

- 1 At the Start screen, press **Menu – Select**, and scroll until **Message settings** appears in the display.
- 2 Press **Select**, scroll to **Default profile**, and press **Select** again.
- 3 Scroll to **Message center number** and press **Select**.
- 4 *If the box in the display is empty*, enter the number given by your wireless provider and press **OK**.
- 5 *If the box is full*, leave the number as it is and press **OK**.

• TIPS FOR COMPOSING A MESSAGE

Predictive text input

Predictive text allows you to write messages using a built-in dictionary. It's much faster than using the traditional "multi-tap" method. For each letter of the word that you're spelling, you only need to press the corresponding key on your keypad *once*. You can use predictive text to write a message, create a calendar note, make a to-do list, and more.

12

Activate/deactivate predictive text

- At a text entry screen, press and hold **Options**. Predictive text is turned on (or off), depending on its previous mode.

OR

- 1 At a text entry screen, press **Options**, scroll to **Predictive text**, and press **Select**.
- 2 Scroll to the language of your choice and press **Select**.


Predictive text is turned on. The predictive text icon (⌨) appears in the upper left corner of the display.



Note: The Language setting affects the time and date formats of the Clock, Alarm clock, and Calendar.

Use predictive text

For example, to write *Nokia*, with the English dictionary selected, press each of the following keys *once*: (with predictive text on):

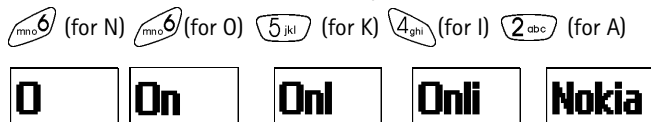

The illustration above simulates your display each time a key is pressed.

- Press to enter a space and begin writing the next word.
- If a displayed word is not correct, press to see other matches. To return to the previous word in the list of matches, press **Previous**.
- If ? appears after a word, press **Spell** to add the word to the dictionary.
- Press to insert a period into your message.
- Press and hold to display special characters. Press again to cycle through all available characters. See "Use special characters" in the following section for more information on special characters.

Note: Press to switch predictive text on or off and to use predictive text in various modes. As you press , the following icons (not the descriptions) appear in the upper left of the display:

| | |
|---|--|
| ABC Uppercase text Predictive text is Off | Abc Sentence case text Predictive text is On |
| abc Lowercase text Predictive text is Off | abc Lowercase text Predictive text is On |

Add new words to the dictionary

If you encounter a word that predictive text doesn't recognize, a question mark (?) follows the word and **Spell** appears in the lower left of the display.

- Press **Spell**, enter your new word using the keypad, and press **Save**.

The word is added to the dictionary as well as the message you're writing.

NOTES ABOUT ADDING WORDS

- New words that you accept by pressing **Select**, **OK**, or deleting the space between two words are saved to the dictionary.
- Depending on the language and the length of the words, you may be able to add hundreds of words to the dictionary.
- When the dictionary is full, the most recent addition replaces the first.

Use special characters


While entering text, press and hold ***+** to display the following special characters. Press ***+** again to cycle through all available characters:

| | | | | | | | | | | |
|---|----|---|---|---|---|---|---|---|---|---|
| . | , | ' | ? | ! | " | - | (|) | @ | / |
| : | _ | ; | + | & | % | * | = | < | > | £ |
| € | \$ | ¥ | ¤ | [|] | { | } | \ | ~ | ^ |
| ¡ | ¿ | § | # | | ⎵ | ⬅ | | | | |

12

Use four-way scrolling

Navigate special characters using the 2, 4, 6, and 8 keys much as you would a joystick. Once a character is highlighted press **5 jkl** to insert the character into your message.

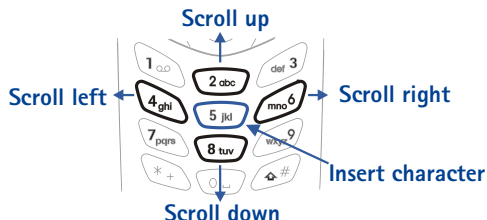

• WRITE AND SEND A MESSAGE

- 1 At the Start screen, press **Menu 01-1** (Messages - Write message).
- 2 After a brief pause, the message entry screen appears in the display.
- 3 Compose a message using the keypad and press **Options**.
- 4 Scroll to **Send** and press **Select**.
- 5 Enter the recipient's phone number, or press **Find** to retrieve a number from your Phone book, and press **OK**. Your message is sent.

• READ MESSAGES

When you receive a message, your phone beeps and **Message received** appears in the display as well as the unopened letter icon (✉).

- 1 Press **Show** to read the message, or press **Exit** to move the message to your inbox.
- 2 If you have more than one message, scroll to the message of your choice and press **Select** to view the message.



Note: When you have unopened messages in your inbox, ✉ is shown in the upper left corner of the Start screen as a reminder.

- 3 Use the scroll keys to view the whole message if necessary.



Tip: Keep scrolling to view other information, such as the sender number and time the message was sent.

- 4 Once you're finished, press **Back** to move the message to the Inbox, or press **Options** for other choices, such as **Reply** or **Forward**.

Reply to a message

- 1 While viewing a message, press **Options**, scroll to **Reply**, and press **Select**.
- 2 Scroll to one of the following reply options and press **Select**.

Reply options

| | |
|---------------|-------------------|
| Empty screen | "Congrats" |
| Original text | "Happy birthday" |
| Template | "I love you too" |
| "Yes" | "Hugs and kisses" |
| "No" | "Sorry" |
| "OK" | "Sorry I'm late" |
| "Thank you" | |

- 3 When you're satisfied with your reply, press **Options**, scroll to **Send**, and press **Select**.

The number of the original sender appears in the display.

- 4 Press **OK** and your reply is sent.

Forward a message

- 1 While viewing a message, press **Options**.
- 2 Scroll to **Forward** and press **Select**.
- 3 Enter the recipient's phone number, or press **Find** to retrieve a number from your Phone book.
- 4 Press **OK**. The message is forwarded.

• E-MAIL

You can send e-mail up to 160 characters in length to anyone with an e-mail address. First, you'll need to setup an e-mail profile and modify a few other settings. It takes just a few minutes, and you only need to do this once.



Important: The e-mail address is included in the total character count for an e-mail message, which is 160 characters. Leave enough space for the e-mail address while composing your message or you'll be taken back to the editor, where you'll have to delete some text before sending.



Note: You cannot send picture messages with e-mail.



Note: Service providers may customize the SMS message settings interface. For more details about SMS services, please contact your service provider.

First, write down a couple of numbers

Write down your **Message center number** and **Default recipient number** (also known as the "e-mail gateway" number) in the following table. You may need these numbers when setting up your phone for e-mail.

| Number | Where to find it | Write the number below |
|--|--|------------------------|
| Message center number | The same number used for SMS. See "Save your message center number" on page 73 | |
| Default recipient number (also known as "e-mail gateway") | Contact your wireless provider for this number | |

12

Next, setup an e-mail profile

- 1 At the Start screen, press **Menu** – Select and scroll until **Message Settings** appears in the display.
- 2 Press **Select**, scroll to **Profile 2** and press **Select** again.
- 3 Scroll until **Message center number** appears in the display and press **Select**.


- 4 Enter the message center number obtained from your wireless provider and press **OK**.
- 5 Scroll until **Messages sent as** appears in the display and press **Select**.
- 6 Scroll to **E-mail** and press **OK**.
- 7 Scroll until **E-mail gateway number** appears in the display and press **Select**.
- 8 Enter the number given by your wireless provider and press **Options**.
- 9 Scroll to **Accept** and press **Select**.
Next, we recommend you rename your sending profile to "e-mail," which will simplify things later when you're ready to send e-mail.
- 10 Scroll until **Rename sending profile** appears in the display and press **Select**.
- 11 Enter a name for the profile (such as "e-mail") and press **OK**.

• COMPOSE AND SEND E-MAIL

12



Note: See "Tips for composing a message" on page 74 for ways to write messages faster.

- 1 At the Start screen, press **Menu 01-1** (Messages - Write message).
After a brief pause, the message entry screen appears in the display.
- 2 Compose your message using the keypad and press **Options**.
 **Note:** Be sure and leave enough space in the total character count (160) for the e-mail address.
- 3 Scroll to **Sending options** and press **Select**.
- 4 Scroll to **Sending profile** and press **Select**.
- 5 Scroll to the profile for sending e-mail, and press **Select**.
- 6 The gateway, or default recipient number appears in the display. Press **Options**, scroll to **Accept**, and press **Select**.
- 7 Enter the recipient's e-mail address (or press **Find** and retrieve it from your Phone book) and press **OK**. Your e-mail is sent.

• PICTURE MESSAGES

The Nokia 6340 comes with 10 pre-loaded pictures and 5 empty storage slots (15 total). You can, however, over-write any of the 10 pictures that come with your phone. Pictures can be attached to a message and sent via SMS to compatible phones. Picture messages behave the same as text messages, but pictures take up more space than text. Pictures are stored in the "Templates" folder (Messages – Templates).



Note: You cannot send a picture message via e-mail.

Download pictures

The Nokia 6340 can download pictures, or receive them from compatible phones via SMS to use in messages. You can also create pictures and send them to your phone or other compatible phones using Nokia PC Suite.



Note: This function can be used only if it is supported by your network operator or wireless provider. Only phones that offer picture message features can receive and display picture messages. Contact your wireless provider for details.

When you receive a picture message

When you receive a picture message, your phone beeps and **Message received** appears in the display as well as the unopened letter icon (✉).

- 1 Press **Show** to read the message, or press **Exit** to move the message to your inbox.
- 2 If you have more than one message, scroll to the message of your choice and press **Select** to view the message.



Note: When you have unopened messages in your inbox, ✉ is shown in the upper left corner of the Start screen as a reminder.

- 3 Use the scroll keys to view the whole message if necessary.



Tip: Keep scrolling to view other information, such as the sender number and time the message was sent.

- 4 Once you're finished, press **Back** to move the message to the Inbox, or press **Options** for other choices, such as **Reply** or **Forward**.

TO SAVE THE PICTURE

If you'd like to save the picture to your Templates folder for later use:

- 1 Press **Options**, scroll to **Save**, and press **OK**.



Note: If your templates folder is full of pictures, just scroll to the picture you'd like to replace and press **Select**.

Compose and send a picture message

One picture message is equivalent in size (and cost) to 3 text messages. When you attach a picture to a message, you'll have enough remaining space for about 121 characters in the message. If you try and attach a picture to a message which is almost full of text, a beep sounds and you're prompted to erase some text before proceeding.

- 1 At the Start screen, press **Menu 01-1** (Messages - Write message). After a brief pause, the message edit screen appears in the display.
- 2 Write a message using the keypad (or enter nothing if you choose), and press **Options**.

12



Tip: Attach pictures before adding text. You can then check remaining space for text in the upper right corner of the display.

- 3 Scroll to **Attach picture** and press **Select**.
A list of pictures appear in the display.
- 4 Scroll to a picture and press **View**.
- 5 Press **Attach** to insert the picture into your message, otherwise:
 - a) Press **Back**, scroll to another picture, and press **View** again.
 - b) Press **Attach** to insert the picture into your message.
- 6 To send the picture message, press **Options**, scroll to **Send**, and press **Select**.
- 7 Enter the phone number for your recipient (or press **Find** to retrieve a number from your Phone book) and press **OK**. The message is sent.

PREVIEW, CHANGE, OR ERASE A PICTURE MESSAGE

- 1 After a picture has been attached to your message, press **Options** at the message edit screen.
- 2 Scroll to one of the following options and press **Select**.
 - a) **Preview** - Previews the attached message before sending. Press **Back** to return to the list of options.
 - b) **Change picture** - Takes you back to the picture list. Scroll to highlight a new picture, press **View** and then press **Attach** to replace the previous picture in your message.
 - c) **Erase picture** - Press **OK** to erase the picture from your message, or press **Back** to return to the list of options.

• TEMPLATES

Templates are short, pre-written messages which can be recalled and sent as original messages, or used as a quick reply when you're short on time. You can also customize and save an existing template or create a new one of your own. Templates are stored in the **Templates** folder.

12

Send a template message

- 1 At the Start screen, press **Menu 01-5** (Messages - Templates). After a brief pause, the templates folder opens to display a list of templates.
- 2 Scroll to the template of your choice and press **Select**. Available templates are as follows:

Message Templates

| | |
|--------------------------------------|------------------------------------|
| "Please call" | "I am late. I will be there at" |
| "I'm at home. Please call" | "See you in" |
| "I'm at work. Please call" | "See you at" |
| "I'm in a meeting, call me later at" | "Sorry, I can't help you on this." |
| "Meeting is canceled." | "I will be arriving at" |



Note: Pictures are also stored in the Templates folder.

- 3 If you'd like to send the template as it is, press **Options**, scroll to **Send**, and press **Select**. Then skip to step 4.

If you'd like to modify the template before sending:

- a) Scroll to **Edit** instead of **Send** and press **Select**. You're taken to the message edit display, where you're free to edit the template as you choose.
 - b) Once you're finished editing, press **Options**, scroll to **Send**, and press **Select** if you'd like to send the message without saving.
To save the template before sending:
 - c) Press **Options**, scroll to **Save message** (instead of **Send**), and press **Select**. **Replace original?** appears in the display.
 - d) Press **OK** to save over the template, or press **No** to save it as a new template to a folder of your choice.
- 4 Enter the recipient's number, (or press **Find** to retrieve a number from your Phone book) and press **OK**. The template is sent.

12

Insert a template into a message

You can also insert a template into a message that you're composing.

- While composing a message, press **Options**, scroll to **Use template**, and press **Select**.

Create a custom template

- 1 Press **Menu 01-1** (Messages - Write message). After a brief pause, the message entry screen appears in the display.
- 2 Compose your custom template and press **Options**.
- 3 Scroll to **Save message**, and press **Select**.
- 4 Scroll to the **Templates** folder and press **OK**. Your message is saved as a template.

• ORGANIZE MESSAGES WITH FOLDERS

Save messages to folders

You can save messages to an existing folder or to a folder you've created.


- 1 Press **Menu 01-1** (Messages - Write message). After a brief pause, the message entry screen appears in the display.
- 2 Write your message and press **Options**.
- 3 Scroll to **Save message** and press **Select**.
- 4 Scroll to the folder where you'd like to save the message and press **OK**. The message is saved.

View saved messages

- 1 At the Start screen, press **Menu 01** (Messages). After a brief pause, **Write message** appears in the display.
- 2 Scroll until the folder containing the message you wish to view appears in the display and press **Select**.
- 3 Once the folder opens, scroll to the message you wish to view and press **Select**.

12

Inbox folder

Messages are automatically stored in the inbox after they've been read or if you press  when **Message received** appears on the Start screen.

Outbox folder

Store messages that you'd like to send at a later date in the **Outbox** folder.

Archive folder

Store messages that have been read in the **Archive** folder.

Templates folder

Pictures and pre-written templates are stored in the **Templates** folder.

My folders

Keep your messages organized by creating custom folders and saving some of your messages there.

ADD A FOLDER OF YOUR OWN

- 1 At the Start screen, press **Menu 01** (Messages). After a brief pause, **Write message** appears in the display.
- 2 Scroll until **My folders** appears in the display and press **Select**.
- 3 Press **Options**. **Add folder** is highlighted. Press **OK**.
- 4 Enter a name for the new folder and press **OK**. The folder is added.

REMOVE A FOLDER


Only folders created in **My folders** can be deleted. The **Inbox**, **Outbox**, **Archive**, and **Template** folders are protected. When you delete a folder, all messages in the folder are also deleted.

- 1 At the Start screen, press **Menu 01** (Messages). After a brief pause, **Write message** appears in the display.
- 2 Scroll until **My folders** appears in the display and press **Select**.
- 3 Any folders that you've created appear in the display. Scroll to the folder you wish to remove and press **Options**.
- 4 Scroll to **Delete folder** and press **OK**. You're asked to confirm the deletion.
- 5 Press **OK** to delete or **Back** to exit.

Move a message to a folder

- 1 While viewing the message, press **Options**.
- 2 Scroll to **Move** and press **Select**.
- 3 Scroll to the destination folder and press **OK**. The message is moved.

• ERASE MESSAGES

If your message memory is full and you have more messages waiting at the network,  blinks in the Start screen. You can do the following to create more space:

- Read some of the unread messages and then erase them
- Erase some of these messages from your folders

Erase a single message

To erase a single message, you need to open it first.

- 1 Press **Menu 01** (Messages). After a brief pause, **Write message** appears in the display.
- 2 Scroll to the folder containing the message you wish to erase and press **Select**. A list of messages appears in the display.
- 3 Scroll to the message you wish to erase and press **Select**. The message opens.
- 4 Press **Options**, scroll to **Erase**, and press **Select**.
- 5 You're asked to confirm the erasure. Press **OK** to erase the message.

12

Erase all messages in a folder

- 1 At the Start screen, press **Menu 01** (Messages).
- 2 After a brief pause, **Write message** appears in the display.
- 3 Scroll until **Erase messages** appears in the display and press **Select**.
- 4 Scroll to the desired folder that you wish to erase and press **OK**. You're asked to confirm your erasure.



Important: If you select **All read**, it erases any messages which have been read in *all* of the folders.

- 5 Press **OK** to empty the folder.

13 Your personal organizer

The Nokia 6340 has many useful features for organizing your everyday life, including a calendar, to-do list, and alarm clock. It also has a calculator that can easily convert domestic and foreign currency, plus a new feature called Wallet for making purchases on-line. In this chapter you'll learn how to use your phone as a personal digital assistant.

• CALENDAR

The calendar keeps track of reminders, calls you need to make, meetings, and birthdays. It can even sound an alarm for any of these events.

Open the Calendar

At the Start screen, press **Menu 6-1** (Organizer - Calendar). After a brief pause, the **Monthly** view appears in the display with the current date highlighted by a black box.


| | | | | | | | |
|-----------|----|----|----|------|----|----|------|
| Jan. 2002 | | | | | | | wk 4 |
| M | T | W | T | F | S | S | |
| 14 | 15 | 16 | 17 | 18 | 19 | 20 | |
| 21 | 22 | 23 | 24 | 25 | 26 | 27 | |
| 28 | 29 | 30 | 31 | 1 | 2 | 3 | |
| 4 | 5 | 6 | 7 | 8 | 9 | 10 | |
| Options | | | | Back | | | |

Monthly view

13

Use four-way scrolling

You can move the cursor in some calendar views using the 2, 4, 6, and 8 keys much the same as a joystick.

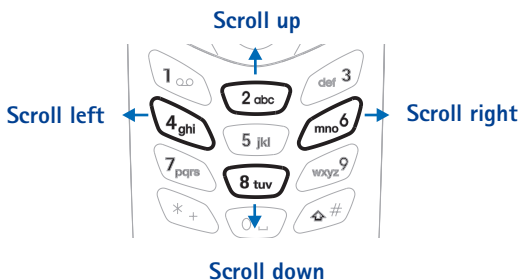

The Monthly view

The monthly view provides an overview of the selected month and weeks. It also allows you to jump to a specific date. Any days that appear highlighted in bold font contain calendar notes such as a meeting or reminder.



Jump to a date

- 1 Press **Menu 6-1** (Organizer - Calendar). After a brief pause, the monthly view appears in the display.
- 2 Press **Options**, scroll to **Go to date**, and press **Select**.
- 3 Enter the date (for example 12/15/2002) and press **OK**. The monthly view appears in the display with the "jump date" highlighted.



Make a note for a specific date

You can choose from four types of notes; **Meeting**, **Call**, **Birthday**, and **Memo**. Your phone asks for further information depending on which note you choose. You also have the option to set an alarm for any note that you select.

- 1 Jump to a date as outlined in the previous section.
- 2 From the monthly view (with the jump date highlighted), press **Options**.
- 3 Scroll to **Make a note**, and press **Select**.
- 4 Scroll to one of the following note types and press **Select**.



Meeting



Call



Birthday



Memo

- 5 Enter your note, press **Options**, scroll to **Save**, and press **Select**.

- For a **Meeting** note, you're prompted to enter a start and end time. You're then given the option to set an alarm.
- For a **Call** note, you're prompted to enter a phone number, a name, and the time. You're then given the option to set an alarm.
- For a **Birthday** note, you're prompted to enter the person's name, and year of birth. You're then given the option to set an alarm.
- For a **Memo** note, you're prompted to enter a subject for the memo. You're then given the option to set an alarm.


View calendar notes – the Day view

After you've created some calendar notes, you can view them as follows:

- 1 At the Start screen, press **Menu 6-1** (Organizer – Calendar).
After a brief pause, the monthly view appears in the display with the current date highlighted. Any dates that contain calendar notes will be in bold font.
- 2 Jump, or scroll to the date containing the notes you wish to view.
- 3 Press **Options**, scroll to **View day**, and press **Select**. Any notes you have for the day will appear in a list format.

Options while viewing the notes list

- 1 Press **Options** while viewing the day's notes to display the options listed in the following table.
- 2 Scroll to an option. Press **Select** to activate the option or enter its submenu.

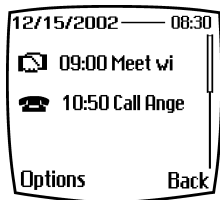

Calendar note options

| | |
|-------------|---|
| View | View the full note |
| Make a note | Make another note for the selected date |

Calendar note options

| | |
|------------|---|
| *Erase | Erase the note |
| *Edit | Edit the note |
| *Move | Move the note to another date on your calendar |
| *Repeat | Enable the note to recur on a regular basis (daily, weekly, bi-weekly, monthly, and yearly) |
| Go to date | Jump to another date on your calendar |
| *Send note | Send the note to another device via Infrared or SMS as text or in vCal format |
| *Copy | Copy the note. You can then "paste" the note to another date |
| *Settings | Set the date and time, date and time format, the day each week starts, and whether you want your notes to auto-erase after a specified time |

* Indicates an option that is available only while viewing the body of a note.

13

Options while viewing a note

- 1 Press **Options** while viewing a note to display (only) those options which are marked by an asterisk in the *previous* table.
- 2 Scroll to an option. Press **Select** to activate the option or enter its submenu.

Send a Calendar note to another device

SEND A NOTE VIA INFRARED OR SMS



Note: If sending via IR (infrared), ensure the other device is set to receive data via IR. For more information on enabling the receiving device's IR, refer to the user guide for the receiving device.

- 1 At the Start screen, press **Menu 6-1** (Organizer – Calendar). After a brief pause, the monthly view appears in the display.
- 2 Jump, or scroll to the date containing the note you wish to send.



Tip: Any days containing notes will be in bold font.

- 3 Press **Options**, scroll to **View day**, and press **Select**.
- 4 Scroll to the note you wish to send and press **Options**.
- 5 Scroll to **Send note** and press **Select**.
- 6 Scroll to **Send via IR**, **Send as note**, or **Send as text**, and press **Select**.
- 7 If you selected **Send via IR**, align the infrared ports of both devices and press **Select**. The note is sent.
- 8 If you selected **Send as note**, enter the number for the recipient (or press **Find** to retrieve a number from your Phone book), and press **OK**. The note is sent.

If you selected **Send as text**, the note appears in the display.

- 9 Press **Options**, scroll to **Send**, and press **Select**.
- 10 Enter the number for the recipient (or press **Find** to retrieve a number from your Phone book), and press **OK**. The note is sent.

RECEIVE CALENDAR NOTES FROM ANOTHER DEVICE

When you receive a Calendar note, your phone displays **Calendar note received**. You can then save the note in your Calendar and set an alarm for any date and time.

VIEW RECEIVED CALENDAR NOTES

- 1 When your phone displays **Calendar note received**, press **Show**.
- 2 The text of your note appears in the display. Use the scroll keys to view the entire message, if necessary.

SAVE RECEIVED CALENDAR NOTES

- 1 After viewing the **Calendar note**, press **Options**.
- 2 Scroll to **Save** and press **Select**.

DISCARD VIEWED CALENDAR NOTES

- 1 After viewing the Calendar note, press **Options**.
- 2 Scroll to **Discard** and press **Select**.

- **MAKE A TO-DO LIST**

You can keep track of your tasks with the to-do list feature. You may be able to save up to 30 notes, depending on their length.



Note: To-do notes are not related to specific dates.

Add a to-do note

- 1 At the Start screen, press **Menu 6-2** (Organizer - To-do list).
- 2 After a brief pause, press **Options**. If this is your first time to use the to-do list, **Add** is highlighted.
- 3 Press **Select**, enter your to-do note and press **Options**.
- 4 Scroll to **Save** and press **Select**.
- 5 Scroll to **High**, **Medium**, or **Low** priority and press **Select**. The to-do note is saved.

Choose other to-do options

When you view a to-do note, you have the following options:

To-do note options


| | |
|-----------------------|---|
| View | View the selected note |
| Add | Create a note |
| Erase | Delete a note |
| Edit | Modify the contents of a note |
| Edit priority | Change the priority of a note. Your choices are high, medium, and low |
| Go to priority | View notes for a certain priority level, such as all of your High priority notes |

To-do note options

| | |
|--------------|--|
| Save to cal. | Save the to-do note as a calendar note |
| Send as text | Send the note as a text message to another phone |

• WALLET

The new wallet feature allows you to store debit and credit card information in Electronic Commerce Modeling Language (ECML) format to an encrypted area of your phone's memory. This information can then be used to make fast, secure purchases on-line. Wallet also uses digital signature for signing and verifying transactions. On-line purchases and digital signature capabilities are dependent upon your wireless provider.

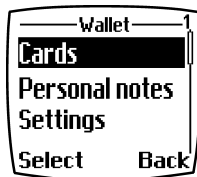

Note: This section focuses mainly on Wallet setup. After you've entered the necessary credit, debit, and other information into Wallet, see "On-line purchases" on page 115 for instructions on using Wallet for transactions with your WAP browser.

13

Other Wallet features

You can also store important information in a Wallet personal note. Security features such as a password and data encryption make it ideal for storing personal information such as PIN codes and other sensitive data. See "Compose a personal note" on page 97 for more information about composing a personal note in Wallet.

Notes about wallet security

- To protect yourself against unauthorized purchases, you can require a code to be entered each time you use Wallet. See "Activate code request" on page 96 for instructions.
- Your phone has other security features, including a PIN code that can protect your phone against unauthorized use. If you activate PIN code request, your phone asks for the code each time it is turned on. Without the proper code, your phone cannot be used (except for emergency calls). See "PIN code request" on page 71 for more info.

Wallet time-out

If Wallet is open for longer than 5 minutes without any user interaction (keypresses), a query appears in the display asking if you'd like to keep Wallet open, or exit. If you don't respond within 5 seconds, the wallet application closes and your phone returns to the Start screen.

Create a wallet code

The first time you access Wallet, you'll be asked to create a personalized wallet code. The wallet code can be 4 - 10 digits in length.

- 1 At the Start screen, press **Menu 6-3** (Organizer - Wallet). After a brief pause, you're prompted to enter a wallet code.
- 2 Enter the 4 - 10 digit code of your choice and press **OK**.



Note: Create a code that is unique, yet easy to remember. This will be your key to using Wallet's features in the future. Also, keep your wallet code in a secret place, separate from your phone.

- 3 Wallet prompts you to verify the code. Enter the code again for verification and press **OK**. A message appears in the display confirming you've created a wallet code.

Change your wallet code

- 1 At the Start screen, press **Menu 6-3** (Organizer - Wallet). After a brief pause, you're prompted to enter your wallet code.
- 2 Enter your wallet code and press **OK**.
- 3 Scroll to **Settings** and press **Select**.
- 4 Scroll to **Change code** and press **Select**.
- 5 Enter the original wallet code and press **OK**.
- 6 Enter the new wallet code and press **OK**.
- 7 Enter the new wallet code again for verification and press **OK**. A message appears in the display confirming your change.

Activate code request

To protect yourself against unauthorized purchases, you can require the wallet code to be entered each time you use Wallet.

- 1 At the Start screen, press **Menu 6-3** (Organizer - Wallet). After a brief pause, you're prompted to enter your wallet code.
- 2 Enter your wallet code and press **OK**.
- 3 Scroll to **Settings** and press **Select**.
- 4 Scroll to **Code request** and press **Select**. You're prompted to enter the wallet code.
- 5 Enter the wallet code and press **OK**.
- 6 Scroll to **On** (or **Off** to deactivate) and press **Select**. A message appears in the display confirming you've activated code request.

Reset the wallet code

If you forget the wallet code and wish to erase all the information stored in Wallet, follow these steps.



Caution: Once you reset the wallet code and clear the contents of Wallet, you cannot restore this information.

- 1 At the Start screen, enter ***#3925538#**.
A message appears in the display asking if you want to clear your wallet's content and code.
- 2 If you want to permanently delete your wallet code and its contents, press **OK**.
- 3 Enter the security code and press **OK**. Your wallet's code and content are erased.

• CREATE A WALLET CARD

Wallet cards contain data entry fields for shipping, billing, receipt, and credit card information. Wallet can hold up to 5 credit card sets.

- 1 At the Start screen, press **Menu 6-3** (Organizer - Wallet). After a brief pause, you're prompted to enter the wallet code.

- 2 Enter the wallet code and press **OK**. Scroll to **Cards** and press **Select**.
- 3 Scroll to a card, press **Select**, then choose from the following options.

Card entry fields

| | |
|----------------------|--|
| Card info | Enter the card holder, type, number, verification value, expiration day, expiration month, and expiration year |
| User info | Enter your user name and password |
| Shipping info | Enter your first, middle, and last name, company name and street address 1, street address 2, city, state, zip code, and country, phone number, and e-mail address |
| Billing info | Enter your first, middle, last name, company name and street address 1, street address 2, city, state, zip code, country, phone number, e-mail address |
| Receipt info | Enter the receipt to phone number and receipt to e-mail address |
| Clear card | Clear the contents of a card |
| Rename card | Rename the card |

Compose a personal note

Wallet can store up to 30 personal notes, such as passcodes or other sensitive data. Your notes are protected by wallet's security feature.

- 1 At the Start screen, press **Menu 6-3** (Organizer - Wallet). After a brief pause, you're prompted to enter your wallet code.
- 2 Enter your wallet code and press **OK**.
- 3 Scroll to **Personal notes** and press **Select**.
- 4 Press **Add new**, compose your note, and press **Options**.
- 5 Scroll to **Save** and press **Select**.

- 6 Enter a title for the note and press **Options**.
- 7 Scroll to **Save** and press **Select**. Your note is saved.

OPTIONS WHILE COMPOSING A NOTE

Press **Options** while composing a note to display those options listed in the following table:

- Use the scroll keys to highlight an option.
- Use the selection keys to activate an option or to exit the list.

Options while composing a note (if predictive text is on)

| | |
|------------------------------|--|
| ^a Save | Save the note |
| Insert word | Return to composing the note. You can then edit the last word entered (highlighted by underscore _) |
| Insert symbol | Display a list of special characters to insert into your note |
| ^a Predictive text | Turn on predictive text for the available languages. See "Use predictive text" on page 75 for more information |

- a. If predictive text is off, only the options "**Save**" and "**Predictive text**" appear in the display

VIEW A WALLET NOTE

- 1 Select **Personal** notes from Wallet's main menu. You're presented with headers of the notes you've composed thus far.
- 2 Press **Options** with any note header highlighted to display the options in the following table.
- 3 Use the scroll keys to highlight an option. Use the selection keys to select an option or exit the list.

Options while viewing the notes list

| | |
|------|--|
| View | View the contents of the selected note |
|------|--|

Options while viewing the notes list

| | |
|-----------|--|
| Add new | Compose and save a new note |
| Sort | Sort the list of notes by name or date |
| Erase | Erase the selected note |
| Erase all | Erase all notes |

OPTIONS WHILE VIEWING A NOTE

- 1 While displaying personal notes from the list view, press **Options**, (**View** is highlighted), and press **Select**.
- 2 Press **Options** and the following list of options appear in the display.
- 3 Use the scroll keys to highlight an option. Use the selection keys to select an option or exit.

Options while viewing a note

| | |
|------------------|---|
| Edit | Edit the note |
| Send as text | Send the note to a compatible phone via SMS |
| Copy to calendar | Copy the note to any date on your calendar |
| Use number | Capture any numbers within the note. The number can then be saved to your Phone book, used to place a call, or you can send a message to the number |
| Erase | Erase the note |

13

- SET THE TIME AND DATE

Set the clock

- 1 Press Menu 4-2-1-2 (Settings - Time settings - Clock - Set the time).

- 2 After a brief pause, you're prompted to enter the time. Enter the time (in hh:mm format) and press **OK**. The time is set.

Show/hide the clock

You have the option of displaying the clock on the Start screen, or hiding it from view.

- 1 Press **Menu 4-2-1-1** (Settings - Time settings - Clock - Show/Hide the clock). After a brief pause, a confirmation message appears in the display:
 - If your clock was previously "hidden," (not shown on the display), it will now appear in the upper right corner of the Start screen.
 - If your clock was previously shown in the display, it will now be hidden from view.

Change the time format

You can set the time format for am/pm or 24 hour format (military time).

- 1 Press **Menu 4-2-1-3** (Settings - Time settings - Clock - Time format). After a brief pause, **24-hour** and **am/pm** appear in the display.
- 2 Scroll to **24-hour** or **am/pm** and press **Select**.

13

Set the date

- 1 Press **Menu 6-1** (Organizer - Calendar). After a brief pause, the monthly view appears in the display.
- 2 Press **Options**, scroll to **Settings**, and press **Select**.
- 3 Scroll to **Set the date** and press **Select**.
- 4 Enter the date and press **OK**. The date is set.

Set or change the date format

- 1 Press **Menu 6-1** (Organizer - Calendar). After a brief pause, the monthly view appears in the display.
- 2 Press **Options**, scroll to **Settings**, and press **Select**.

- 3 Scroll to **Date format** and press **Select**.
- 4 Scroll to the format of your choice and press **Select**.
- 5 Scroll to the date separator of your choice (period, slash, or hyphen) and press **Select**. A message appears in the display confirming your selection.

• ALARM CLOCK

The alarm clock is based on your phone's internal clock. It sounds an alert any time you specify and even works if the phone is off.

Set an alarm

- 1 At the Start screen, press **Menu 4-1** (Settings - Alarm clock).

IF AN ALARM HAS PREVIOUSLY BEEN SET

After a brief pause, **On** and **Off** appear in the display.

- 2 Scroll to **On** and press **Select**. You're prompted to set the alarm time.
- 3 Enter the time for the alarm in hh:mm format and press **OK**. **Alarm on** appears briefly in the display.



 **Note:**  also appears in the Start screen.

13

IF AN ALARM HAS NOT BEEN SET

You're prompted to enter a time for the alarm.

- Enter a time for the alarm in hh:mm format and press **OK**. **Alarm on** appears briefly in the display.

 **Note:**  also appears in the Start screen.

When the alarm sounds


Your phone beeps, vibrates, and the display lights up. **Stop** and **Snooze** appear in the bottom of the display.

WITH THE PHONE ON

Press **Stop** to shut the alarm off.

OR

Press **Snooze**. The alarm stops for 10 minutes and **Snoozing** appears in the display.

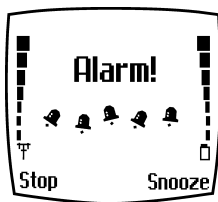

Note: If you don't press a key, the alarms stops (snoozes) for 5 minutes, and then sounds again.

WITH THE PHONE OFF

- 1 The alarm sounds. If you press **Stop** the following appears in the display:

Switch the phone on?



Note: The phone will only power up if you select **Yes** when **Switch the phone on?** appears in the display.

- 2 Press **Yes** to power up the phone. Press **No** to keep it switched off.




Warning: *Do not* switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

13

Turn off an alarm

- 1 At the Start screen, press **Menu 4-1** (Settings – Alarm clock).
- 2 After a brief pause, **On** and **Off** appear in the display.
- 3 Scroll to **Off** and press **Select**. **Alarm off** appears briefly in the display.

• USE THE CALCULATOR

- 1 At the Start screen, press **Menu 7** (Calculator). After a brief pause, the calculator screen appears in the display.
- 2 Enter the first number in your calculation.
 - Press  to enter a decimal point
 - Press **Clear** to erase any mistakes

- Press ***+/-** to cycle through and select the add (+), subtract (-), multiply (*), and divide (/) characters

- Enter the second number in your calculation.
- Press **Options**. The following list of options appear in the display. Use the scroll keys to highlight an option. Press **Select** to confirm.

Calculator options

| | |
|-------------|---|
| Equals | Displays the sum of your calculation |
| Add | Adds numbers in the calculation |
| Subtract | Subtracts numbers in the calculation |
| Multiply | Multiplies numbers in the calculation |
| Divide | Divides numbers in the calculation |
| Square | Squares numbers in the calculation |
| Square root | Square root of the numbers in the calculation |
| Change sign | Return to the previous display to select another sign for the calculation (plus sign, minus sign, etc.) |

13

- Press **Select** to complete the calculation as selected in the calculator options. The sum of your calculation appears in the display.

Currency conversion

You can convert foreign currency to domestic, or vice versa directly from the Start screen.


- At the Start screen, enter a currency amount to convert.
- Press **Options**, scroll to one of the following and press **Select**:

| | |
|------------|--|
| To home | Converts foreign currency to domestic currency |
| To foreign | Converts domestic currency to foreign currency |



Note: If you haven't done so already, you're prompted to enter the exchange rate.



Tip: To enter a decimal, press .

- 3 Enter the exchange rate and press **OK**. The converted amount appears in the display.

EDIT THE EXCHANGE RATE

- 1 At the Start screen, press **Menu 7** (Calculator). After a brief pause, the calculator screen appears in the display.
- 2 Press **Options** (**Exchange rate** is highlighted), then press **Select** and scroll to highlight or display one of the following options:

| | |
|---------------------------------------|---|
| Foreign units converted to home units | Enter the number of home units it takes to make one unit of foreign currency |
| Home units converted to foreign units | Enter the number of foreign units it takes to make one unit of your home currency |

13

- 3 Press **Select** to edit your choice.
- 4 Enter the exchange rate and press **OK**. The exchange rate is saved.

14 Your phone and other devices

The Nokia 6340 is capable of interacting with, or connecting to a variety of devices using IR (infrared) or the DLR-3P serial cable.

The Nokia 6340 can exchange information with other compatible phones, desktop and laptop PCs, and handheld devices. It can also function as a wireless modem when connected to compatible PCs and handheld devices.

• INFRARED BASICS

Your phone can send and receive certain types of data by way of the phone's infrared (IR) port. Transmission and reception must be to or from an Infrared compatible phone or device.

The Nokia 6340 is a Class 1 Laser Product.




Important: The preferable distance between two devices in an infrared connection is from 3 inches to 3 feet. There must be no obstructions between the two devices and both IR ports must be pointed at each other.

Enable infrared communications

Before you can receive information (business cards, calendar or to-do list notes) or make an infrared connection to a PC or handheld device:


- 1 Make sure that the IR ports of the two devices are pointing at each other.
- 2 Press **Menu 9** (Infrared).




After a brief pause, **IR reception activated** appears in the display, and the IR icon  appears in the upper left corner of the Start screen.

- 3 Have the user of the sending device select the desired IR function to start data transfer.

If data transfer does not start within 2 minutes, the connection is canceled. You must activate IR communications on your phone again.

Check the status of an IR connection

The status of an IR connection is shown by the infrared icon .

- When  appears steady, there is an IR connection between your phone and the other device.
- When  doesn't appear, no IR connection exists.
- When  blinks, your phone is trying to connect to the other device or the connection has been lost.

• SEND AND RECEIVE INFORMATION

You can send and receive phone book entries as "business cards" (v.card 2.1 format) using IR between compatible phones, between your phone and a PC running the appropriate software, or between other compatible IR-equipped handheld devices.

• BUSINESS CARDS

Create a business card

Business cards aren't stand-alone entities stored in your phone, they are actually Phone book entries that have been sent to a compatible device via IR or SMS.

14

Send a business card to another device

First, make sure the other phone or device is set to receive data via its IR port. Refer to the user guide for the receiving device for more information on setting up IR communications and receiving data over IR.

- 1 Recall the phone book entry you would like to send by IR.
- 2 Press **Details**, then press **Options**.
- 3 Scroll to **Send bus. card** and press **Select**.
- 4 Point the two IR ports at each other.
- 5 Scroll to **Via infrared** and press **Select**.

The message **Sending business card** appears in the display.



Tip: Selecting **Via IR** automatically enables IR communications.



Note: If you have more than one number or text information to send, choose **Primary no.** or **All details**, then press **Select**.

Send calendar notes

You can send and receive calendar notes using the same basic procedures as those found in the section "Send a business card to another device" on page 106.

SEND A CALENDAR NOTE TO ANOTHER DEVICE

From the selected calendar day's day list:

- 1 Scroll to the note you wish to send and press **Options**.
- 2 Scroll to **Send note** and press **Select**.
- 3 Point the infrared ports at each other.
- 4 Scroll to **Send via IR** and press **Select** to start data transfer.

Receive business cards and calendar notes

You can receive business cards and calendar notes from another compatible phone or handheld device.

Before the user of the other phone or devices sends you a card:

- 1 Point the two IR ports at each other.
- 2 Press **Menu 9 (Infrared)**, after a brief pause IR reception activated appears in the display.
- 3 When you see the message **Business card received**, press **Show**.
- 4 Press **Options**, scroll to **Save** or **Discard**, and press **Select**.
 - If you press **Save**, you see the confirmation message **Card saved to phone**.
 - If you press **Discard**, you see the question **Discard business card?**. Press **OK** to discard.

14 • PC CONNECTIVITY

You can make a serial connection between the Nokia 6340 and a PC using the DLR-3P serial cable. This cable is available for purchase as an accessory, or may be included in your sales package. Once you establish this connection, you can access phone information from your PC, or use your phone as a wireless modem.

It may also be possible to make this same serial connection between your phone and an Infrared-equipped laptop or IR-equipped desktop PC using your phone's infrared port.

Nokia PC Suite™

Once your phone is connected to your PC, you can use PC Suite to:

- Make a backup copy of the data in your phone (Content Copier)
- Edit phone book names and numbers, profiles, and settings via your PC's keyboard (Phone Editor)
- Create ringing tones and transfer them to your phone (PC Composer)
- Create caller group icons or pictures for use with picture messaging (PC Graphics)
- Synchronize the Phone book and reminders with PIM applications such as Microsoft Outlook, Outlook Express, and Lotus Organizer (PC Sync)

Please refer to the *Nokia PC Suite User Guide and PC/PDA Connectivity Guide* for installation and setup instructions.

Modem Setup

You can use the Nokia 6340 as a wireless modem with your laptop computer or handheld device, giving you access to the Internet (for e-mail and Web browsing) or corporate networks wherever you have service.

For more information on modem setup for PCs and handheld devices, please refer to the *Nokia PC Suite User Guide and PC/PDA Connectivity Guide*.

Download software

Software and documentation for the Nokia 6340 can be downloaded from the U.S. Mobile Phone products section of www.nokia.com.

15 The wireless Internet

WAP is the mobile device's equivalent of the Internet. The mobile community began developing WAP in the late 1990s so that mobile device users could access the Internet. Today, most WAP sites are composed of text, hyperlinks, and low-resolution graphics. Because your wireless provider and others are free to design WAP sites as they choose, each WAP page can vary almost as much as a web page on the Internet.




Note: Check with your wireless provider for WAP service availability.



Note: WAP pages are designed using Wireless Markup Language (WML). Since web pages are designed using Hyper Text Mark-up Language (HTML), web pages cannot be viewed from your phone.

• THE SERVICES MENU

Use your WAP browser to get news, weather reports, access financial information, and more. WAP pages can be saved as bookmarks, the same as web pages on the Internet.

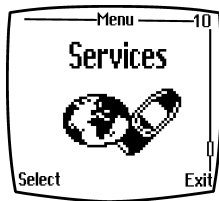

Note: You may need to subscribe to additional services before you can use the browser. Also, your wireless provider may have to configure your phone for browsing.



Important: Internet content received over a secure connection and stored in your browser's cache may be reused over non-secure connections and may create security issues. Please check with your wireless provider to determine if emptying your browser's cache after each browsing session or some other method should be used to avoid security issues.

• WAP SETTINGS

It shouldn't be necessary to manually configure the browser on your phone. Normally this is done by your wireless provider once you've subscribed to the feature. Contact your wireless provider if you have problems using the browser.

Your wireless provider and WAP


Because WAP content is designed to be viewed from your phone, your wireless provider now becomes your "wireless Internet provider" as well.

It's likely that your wireless provider has created their own home page and configured your browser to go there when you press **Home** on the browser's menu. Once you arrive at your wireless provider's home page, you should find links to a number of other WAP sites.

• LAUNCH THE BROWSER

- 1 At the Start screen, press **Menu 10** (Services). After a brief pause, a list of options appear in the display.
- 2 Scroll to **Home** and press **Select**.




Tip: To quickly launch the browser, press and hold  at the Start screen.

15


Your phone connects to the Internet and is directed to your wireless provider's home page.



Note: If your phone displays **Check service settings**, it may need to be configured for browsing by your wireless provider.

- Press  to terminate any active browser session and return to the Start screen.

EMERGENCY CALLS WHILE BROWSING

To exit the browser and place an emergency call, press  twice to return to the Start screen, then dial the emergency number.

Navigate a WAP page


ELEMENTS COMMON TO MOST PAGES



Header line - Shows the current location.

Active hyperlink - Highlighted. Press Options to open the link.


Hyperlink - Use this to navigate to other cards or sites. Scroll to select the link and press Options.

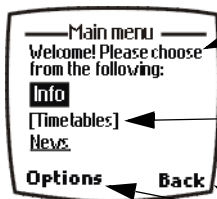

Text - Use the scroll keys to move through the text. The cursor will automatically jump to the next hyperlink to activate it.

Selection list - Text in brackets. Press Options when highlighted to display additional choices or links.

Options/Back - Options displays a card's options menu and/or the browser menu. Back takes you back to the previous page.

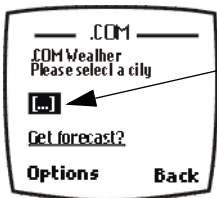

Data entry field - An ellipse in brackets [...]. Used when user input is required (example: city name, stock symbol, etc.). To enter data into this field, perform the following steps:

- 1 Highlight the data entry field and press **Options**, and scroll to **Edit**.
- 2 Enter the text requested by the data entry field and press **OK**. The text you entered is now displayed between the brackets.
- 3 Scroll to the link that requires an action (For example: **get forecast?**) and press **Options**.
- 4 Scroll to **Open link** and press **OK**.

The browser menu

- 1 At the Start screen, press **Menu 10** (Services). After a brief pause, the options listed in the following table appear in the display.
- 2 Scroll to an option. Press **Select** to activate the option or enter its submenu.

Browser options (off-line)

| | |
|-----------------|---|
| Home | Start the browser and go to your home page |
| Bookmarks | Display a list of saved bookmarks |
| Service inbox | View messages from your wireless provider regarding new services and options |
| Settings | Modify your connection settings, appearance settings, and security certificate |
| Go to address | Go to the address of your choice |
| Clear the cache | Empty the browser's temporary memory and free up space. You should empty the cache after each session |

15



Note: Some wireless providers may customize the options listed in the previous table. If any of the options are unavailable, contact your wireless provider for more information.

Options while browsing

Press **Options** while browsing. The following menus appear in the display:

Browser options on-line

| | |
|-----------|-----------------------------------|
| Home | Go to your home page |
| Bookmarks | Display a list of saved bookmarks |

Browser options on-line

| | |
|---------------------|---|
| Add bookmark | Add a bookmark |
| Go to address | Enter an address manually |
| Service inbox | View messages from your wireless provider regarding new services and options |
| Appearance settings | Choose text wrapping (on or off), and whether to load images or only text |
| Download settings | Choose whether you would like to allow (or not allow) cookies to be placed in your browser's cache |
| Use number | Captures numbers longer than 3 digits. You can save the number to your Phone book, Send a message to the number, or call the number directly. |
| Reload | Refresh the page you're currently viewing |
| Clear the cache | Empty the browser's temporary memory |
| Security info | View details about the security information for the current connection |
| Quit | Quit the current session and return to the Start screen |
| Use Wallet info | Use information previously saved to a wallet card to make an on-line purchase |
| Close wallet | Close the wallet application if it is open. This option only appears if Wallet is open. |



Note: Wireless providers may limit access to some menu options. Contact your wireless provider if you have difficulty accessing the options listed in the previous table.



Note: The browser options listed in the previous table can change. WAP page designers are capable of creating additional options to those already listed.

Bookmarks

You can save the addresses of up to 25 of your favorite sites as bookmarks. If a WAP site's developers have included a title for the card, the name of the card appears in the bookmark list. If the site has no title, then the site's address will appear as a bookmark.

SAVE AN ADDRESS AS A BOOKMARK

- 1 Navigate to the desired site and press **Options**.
- 2 Scroll to **Add bookmark** and press **Select**.

ENTER A BOOKMARK MANUALLY



Note: Wireless providers may limit access to this option. Contact your wireless provider if you have questions regarding its use.

- 1 At the Start screen, press **Menu 10** (Services). After a brief pause, a list of options appear in the display.
- 2 Scroll to **Add bookmark** and press **Select**.
- 3 Enter the site's Internet address using the keypad (example: my.yahoo.com) and press **OK**.

15



Note: It's unnecessary to enter http://. This is added automatically.

- 4 Enter a title for the new bookmark and press **OK**.

RETURN TO A BOOKMARKED SITE



Note: Wireless providers may limit access to this option. Contact your wireless provider if you have questions regarding its use.

- 1 At the Start screen, press **Menu 10** (Services). After a brief pause, a list of options appear in the display.
- 2 Scroll to **Bookmarks** and press **Select**.
- 3 Scroll to the desired bookmark and press **Options**.

- 4 Scroll to **Go to** and press **Select**. If you aren't browsing already, your phone will connect to the Internet.

DOWNLOAD A RINGING TONE

Your phone can store up to 10 new ringing tones (sent from the Web, via SMS, or created using Nokia PC Suite). For more information about downloading ringing tones, contact your wireless provider.

PLAY, SAVE, OR ERASE A RINGING TONE

Once your phone receives a new ringing tone, your phone displays the message **Ringling tone received**.

- 1 Press **Options**, then choose **Playback**, **Save tone**, or **Erase**.
- 2 Press **Select**.

If you choose to save the new ringing tone, it becomes part of the ringing tone list available to you when customizing a profile (see "Customize a profile" on page 59).

USE PC COMPOSER

You can use PC Composer to create new ringing tones and send them to your phone. For more information, please refer to the *Nokia PC Suite User Guide and PC/PDA Connectivity Guide* for your phone. These documents can be downloaded from the U.S. Mobile Phone product section of www.nokia.com.

• ON-LINE PURCHASES



Important: On-line purchases and digital signature capabilities are dependent upon your wireless provider. This feature exists in your phone to support and simplify wireless payment services expected to launch in selected markets in the near future.

Once you've entered all of the necessary credit and debit information into a wallet card, you can use your WAP browser to fetch this information and make fast, secure purchases on-line. See "Wallet" on page 94 for information on setting up Wallet.

- 1 At the Start screen, press **Menu 10** (Services). After a brief pause, a list of options appear in the display.
- 2 Scroll to **Home** and press **Select**.



Tip: To quickly launch the browser, press and hold **OK** at the Start screen.

Your phone connects to the Internet and is directed to your wireless provider's home page.

- 3 Direct your browser to an address which supports wireless transactions in ECML format.
- 4 When you are ready to make a purchase, press **Options**, scroll to **Use Wallet info** and press **Select**.
- 5 You're prompted to enter your wallet code. Enter your wallet code and press **OK**.
- 6 Scroll to **Cards** and press **Select**.
- 7 Scroll to the wallet card you wish to use in this purchase (if you have more than one) and press **Select**.

At this point, the on-line service may ask which information on your wallet card you'd like to provide (all details, only shipping details, etc.).

- 8 Scroll to your choice and press **Select**. Wallet automatically fills in the details as required by the on-line service.

Respond to any further queries as necessary to complete the transaction. To digitally sign the payment, select the proper signing certificate from the certificate list. This confirms your purchase.

16 Fun and games

The Nokia 6340 is programmed with four interesting and challenging games, some of which can be played via IR against another opponent.



Warning: Do not switch on the phone to use this function when wireless phone use is prohibited or when it may cause interference and danger.

• GAMES MAIN MENU

Press **Menu 8** (Games) at the Start screen. After a brief pause you're presented with the following menu.

- 1 **Select game** - Select from **Snake II**, **Pass 'n rush**, **Bumper**, and **Pairs II**.
- 2 **Settings** - Control game sounds, lights, and shakes.



Note: Game sounds only applies to games and doesn't affect other features in your phone.

Snake II

Feed the snake with as many goodies as possible and watch it grow. Use the **2** abc, **4** ghl, **6** mno, and **8** tuv keys to maneuver the snake toward food. The longer the snake's tail grows, the higher your score. You can choose from a clear field, or select from five different mazes. If the snake runs into its own tail or one of the walls, the game is over. You can visit Nokia game services on the Internet to download new mazes. Contact your wireless provider for details.

Pass 'n rush

Play the role of head coach. Select the plays for your team and watch the action unfold. Choose from a quick match, full game, or scenario.

Bumper

Get your highest score by keeping the ball on the table using the flippers. Press and hold **5 jkl** to launch the ball. Hold down **5 jkl** to get more launch power. Use keys **1 ao** and **3 def** to control the flippers. Use **4 ghi** and **6 mno** to nudge the table – but not too much or the game will tilt! You can visit games services on the Internet to download new tables. Contact your wireless provider for details.

Pairs II

Reveal pictures to find pairs with as few tries as possible. Use the **2 abc**, **4 ghi**, **6 mno**, and **8 tuv** keys to move the cursor. Press **5 jkl** to reveal a picture. In Time trial, pair up all of the tiles before the dynamite fuse runs out.

• START A GAME


- 1 At the Start screen, press **Menu 8** (Games).
- 2 After a brief pause, the games menu appears in the display.
- 3 Scroll to **Select game** and press **Select**.
- 4 Scroll to the game you wish to play and press **Select**. Press any key during the game animation to enter the selected game's menu, where you can choose from several game-dependent options.

17 Accessories

Extended 1000 mAh Li-Ion Battery (BLB-3)

Provides up to 2.5 - 4 hours of TDMA talk time and up to 3.5 - 6 hours of GSM talk time.


Provides up to 9 - 14 days of TDMA standby time and up to 10 - 25 days of GSM standby time.

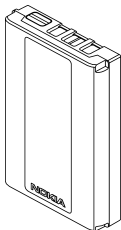

Note: Operation times are estimates and may vary depending on network conditions, charging and phone use.

Rapid Cigarette Lighter Charger (LCH-9)

Quickly charges the phone's battery from your vehicle.

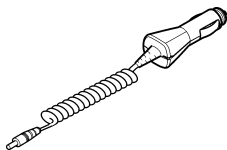


Compact Desktop Charging Stand DCH-8

Compact and stylish, this stand provides a convenient spot in which to charge the phone.

Compatible with:

Standard Travel Charger (ACP-7U)

Rapid Travel Charger (ACP-8U)

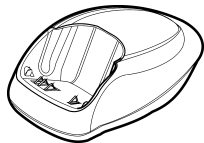

Also available:

Connectivity Deskstand (DCH-8D)

Handsfree Desktop Charging Stand (DCH-12K)


Spare Battery Charger (DDC-1)

Lightweight and stylish, this charger provides a convenient way to charge your spare battery.

Compatible with:

Standard Travel Charger (ACP-7U)

Rapid Travel Charger (ACP-8U)

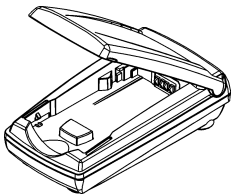


Rapid Travel Charger (ACP-8U)

This lightweight rapid travel charger is ideal for active travelers. It plugs directly into the phone and can also be used with the compact Compact Desktop Charging Stand (DCH-8).

Also available:

 Standard Travel Charger (ACP-7U)



Headset Kit (HDC-9P)

The headset provides handsfree operation and has an answer/end button located on the microphone. It connects directly to the phone, requiring no additional adapter.

Also available:

Headset (HDE-1)




Loopset (LPS-1)

With the Nokia Loopset, people who use a T-coil equipped hearing aid have the freedom to talk on a digital mobile phone. The loopset goes around your neck - so it can be worn comfortably and discreetly.


Also available:

Phone Adapter for TTY/TDD and Headsets (HDA-8)

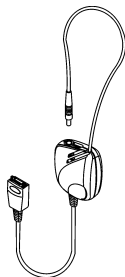

Leather Carry Case (CSL-17)

Luxurious leather case protects your phone and has a convenient, integrated belt clip.

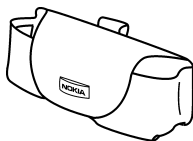


Leather Carry Case (CSL-27)

Includes Swivel Belt Clip

Data Cable (DLR-3P)

For e-mail, faxes, Internet and data transmissions. Easy and convenient connection with no modem or PC card needed.

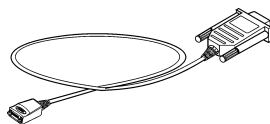

Compatible with:


Connectivity Deskstand (DCH-8D)

Complete Car Kit (CARK-91H)


Provides handsfree use and connection to an external antenna. Includes Privacy Handset (HSU-1) for private conversations.

Also available:

Complete Car Kit, without privacy handset (CARK-91)

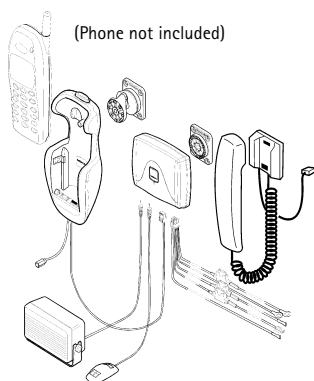**Mobile Holder (MBC-1)**

Holds phone securely in place while driving or during charging. Can be used with Rapid Cigarette Lighter Charger (LCH-9).

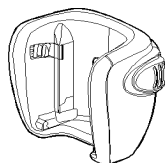

18 Reference information

This section provides information about your phone's batteries, accessories, chargers, safety guidelines and technical information. Be aware that the information in this section is subject to change as batteries, chargers, and accessories change.

• BATTERIES AND CHARGERS

This phone is intended for use when supplied with power from the ACP-7U, ACP-8U, and ACP-9U chargers. Other usage could invalidate any approval given to this apparatus and might be dangerous.



Warning: When you purchase batteries, chargers, and accessories for your phone, use only batteries, chargers, and accessories that have received approval from the phone's manufacturer. The use of any other type of phone-related hardware will invalidate any approval or warranty applying to the phone, and could also be dangerous. For availability of approved batteries, chargers, and accessories, check with your dealer.

- When the battery is fully charged, the indicator will tell you that the battery is fully charged.
- When you are not using a charger, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging could shorten its lifespan. If left unused, a fully charged battery will discharge itself over time.

Temperature extremes can affect the ability of your battery to charge. Therefore, allow it to cool down or warm up before trying to charge it.

When the battery is running out of power and your phone only has a few minutes of talk time remaining, a warning tone sounds and the **Battery low** message appears briefly. When no more talk time is left, a warning tone is sounded and the phone switches off.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object, like a coin, a clip, or a pen causes a direct connection of the + and - terminals of the battery, which are metal strips on the end of the battery.

An example of short-circuiting could occur if you carry a spare battery in your pocket or purse, where the battery could come into contact with such objects as a coin. Short-circuiting could damage either the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in either summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15° C and 25° C (59° F and 77° F).

A phone with a hot or cold battery might not work temporarily, even if the battery is fully charged. The performance of Li-Ion batteries is particularly limited in temperatures below 0° C (32° F).

The following list provides guidelines that you can follow:

- When the operating time (talk time and standby time) is noticeably shorter than normal, buy a new battery.
- Use the battery only for its intended purpose.
- Never use any charger or battery that is damaged and/or worn out.
- Batteries must be recycled or disposed of properly. Do not dispose of batteries by putting them in fire!
- When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.

• IMPORTANT SAFETY INFORMATION

Traffic safety

Do not use a wireless telephone while driving a vehicle. Always secure the phone in its holder; do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop.

Remember road safety always comes first!

Operating environment

Remember to follow any special regulations and always switch off your phone wherever forbidden, or when it may cause interference or danger.

When connecting the phone or accessory to another device, read its user's guide for safety instructions. Don't connect incompatible products.

As with other mobile radio transmitting equipment, users are advised to operate this equipment only in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Pacemakers

Pacemaker manufacturers recommend a distance of 20 cm (6 inches) be maintained between a hand-held wireless phone and a pacemaker to avoid interference with the pacemaker. These recommendations are consistent with independent research and recommendations of Wireless Technology Research.

PERSONS WITH A PACEMAKER:

- Should always keep the phone more than 20 cm (6 inches) from their pacemaker when the phone is switched on.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference.
- Should switch off the phone immediately if there is any reason to suspect that interference is taking place.

Hearing aids

Some digital wireless phones may interfere with hearing aids. In the event of such interference, consult your wireless provider.

Other medical devices

Operation of any radio transmitting equipment, including cellular phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if it is adequately shielded from external RF energy, or if you have any questions.

Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to RF energy.

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals emanating from your wireless phone.

Posted facilities

Switch your phone off in any facility where posted notices so require.

Potentially explosive atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone when at a refuelling point (service station). Users are reminded of the need to observe restrictions regarding the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer/storage facilities, vehicles using liquefied petroleum gas (such as propane

or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would be advised to turn off your vehicle engine.

Vehicles

Only qualified personnel should install or service the phone in a vehicle. Faulty installation or service may be dangerous and invalidate the warranty.

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (for example, electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems, air bag systems).

Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Ensure all wireless phone equipment in your vehicle is mounted and operating properly.

Don't carry or store flammable liquids, gases or explosive materials in the same compartment as the phone or its accessories.

For vehicles equipped with an air bag, remember that an air bag inflates with great force. Don't place any objects in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Aircraft

Switch off your phone before boarding an aircraft. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

Failure to observe these instructions may lead to suspension or denial of telephone services to the offender, legal action, or both.

Emergency calls



Important: This phone, like any wireless phone, operates using radio signals and cannot be guaranteed to connect in all conditions. Therefore, you should never rely solely upon any wireless phone for essential communications (such as medical emergencies).



Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local wireless providers for more information.

MAKING AN EMERGENCY CALL:

- 1 If the phone is not on, switch it on.



Important: Some networks may require that a valid SIM card be properly inserted in the phone.

- 2 Press and hold  to return to the Start screen.
- 3 Enter the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.
- 4 Press .

If certain features are in use (Keyguard, fixed dialing, and so on), you may first need to turn those features off before you can make an emergency call. Consult this guide and your local wireless provider for more information.

When making an emergency call, remember to provide all information as accurately and clearly as possible. Remember that your wireless phone may be the only means of communication at the scene of an accident - don't cut off the call until given permission to do so.

Certification Information

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.* Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (for example, at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone as reported to the FCC when tested for use at the ear is 1.17 W/kg, and when worn on the body, as described in this user guide, is 0.90 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID LJP NPM-2NX.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with the Nokia accessories supplied or designated for this product. When carrying the phone while it is on, place the phone in the specific carrying case that has been tested for compliance.

Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions please look under product information at <http://www.nokia.com>.

19 Care and maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfill any warranty obligations and to enjoy this product for many years. When using your phone, battery, charger, or any accessory:

- Keep all parts and accessories out of small children's reach.
- Keep all parts and accessories dry. Precipitation, humidity, and liquids contain minerals that will corrode electronic circuits.
- Don't use or store parts or accessories in dusty, dirty areas. Moving parts can be damaged.
- Don't store parts or accessories in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Don't store parts or accessories in cold areas. When the phone warms up (to its normal temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Don't attempt to open. Non-expert handling could cause damage.
- Don't drop, knock or shake. Rough handling can break internal circuit boards.
- Don't use harsh chemicals, cleaning solvents, or strong detergents to clean parts or accessories. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Don't paint. Paint can clog moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.
- If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

• TROUBLESHOOTING

The following table lists some common problems and their solutions.

| Problem | Possible cause | Possible solution |
|---|---|--|
| My phone isn't charging | The charger and phone aren't properly connected | Securely connect the charger to the phone |
| | The charger is not properly plugged into the wall | Ensure the charger is plugged in correctly |
| My phone isn't making/receiving calls | The battery isn't charged | Charge the battery |
| | The signal strength is poor | If you are indoors, move toward a window |
| I can't listen to my voice messages | You don't have voicemail service | Call your wireless provider |
| | You haven't setup your voicemail service with your wireless provider | Call your wireless provider |
| | You haven't saved your voicemail number to your phone | See "Call and setup your voicemail" on page 42 |
| | You've forgotten your password or are entering it incorrectly | Call your wireless provider |
| | The voicemail number you've saved to your phone is incorrect | Call your wireless provider |
| When I insert my SIM card into another phone, it's rejected | You have fixed dialing activated on your SIM card and the receiving phone doesn't support fixed dialing | Deactivate fixed dialing on the SIM |

20 Frequently Asked Questions (FAQ)

Q. What if my phone is lost or stolen?

A. Contact your wireless provider immediately.

Q. Does the phone have to be on in order for me to receive a call?

A. Yes.


Q. What is my security code?

A. Your default security code is 12345. If you've changed your security code and forgotten the new code, contact your wireless provider.

Q. How do I lock the keypad?

A. Press Menu .

Q. How do I unlock the keypad?

A. Press Unlock .

Q. How do I keep track of my calls?

A. Use the Call log feature (see page 38).

Q. How do I turn off the ringer when I'm in a meeting or don't want to be disturbed?

A. Briefly press the power key, scroll to Silent, and press Select. You can also set a timed profile (see "Set a timed profile" on page 60).

Q. How do I make the phone ring louder?

A. See "Customize a profile" on page 59.

Q. How do I change the ringing tone?

A. See "Customize a profile" on page 59.

Q. How do I download a custom ringing tone?

- A. You can send tones to your phone over the Internet, using SMS, or you can create custom tones and send them to your phone or another compatible phone using PC Suite. Call your wireless provider for more information.

Q. Where is my phone's model number and Serial number?

- A. On the information label, which is on back of the phone under the battery. The model number of this phone is 6340.

Q. What is the IMEI number?

- A. International Mobile Equipment Identifier (IMEI). The IMEI number is on the information label, which is on back of the phone under the battery.

Q. How do I change the contrast on the display?

- A. The Nokia 6340 contrast is set for optimal performance at the factory and cannot be changed.

Q. Can I replace the front cover?

- A. The front cover should only be removed or replaced by qualified service personnel.

Q. How do I make purchases on-line?

- A. Setup Wallet with the necessary credit and debit information. See "Create a wallet card" on page 96 and "On-line purchases" on page 115.

Q. I forgot my wallet code. Do I have to contact Nokia or my wireless provider to obtain another?

- A. No. You can reset your wallet code. However, all information previously entered will be lost and you'll need to setup a wallet card again. See "Create a wallet card" on page 96.

21 Glossary

| Term | Definition |
|-----------------|---|
| antenna | The portion of your phone designed to transmit and receive the wireless signal |
| antenna jack | The connector used to attach an external antenna to your mobile phone (typically used by the Handsfree kit) |
| battery | The source of power for your phone when its not connected to the charger |
| bookmark | An Internet site or address (URL) saved to your phone's memory |
| browser | An application used to access Internet sites or information on a network (such as the World Wide Web) |
| data call | A call that is placed or received where your phone functions as a data/fax modem, connected to your PC via the DLR-3P cable or Infrared (IR) port |
| delivery report | A message from your messaging service regarding the delivery status of a message that you have sent |
| earpiece | The portion of your phone that contains the audio speaker |
| earpiece volume | The audible level of the earpiece in an active call. |
| E-mail | Electronic mail - a message sent electronically |
| ECML | Electronic Commerce Modeling Language. A universal format for on-line checkout form data fields |

| Term | Definition |
|-----------------------|---|
| ESN | Electronic Serial Number. Used to identify your phone |
| fax call | A call placed or received where phone functions as a data/fax modem, connected to your PC via the DLR-3P cable or Infrared (IR) |
| home system | The wireless system on which you are a subscriber |
| IMEI | International Mobile Equipment Identifier. Identifies your phone on the wireless network |
| Internet | An network that connects computer networks and organizational computer facilities around the world |
| keypad tones | The sounds you hear when a key on your phone's keypad is pressed |
| message alert tone | The sounds you hear upon receipt of a text or system message |
| navigate | To move from one Internet site to another, or from one phone menu to another |
| number keys | The numbered keys on your phone's keypad |
| power key | The button on the top of the phone that allows you to turn the phone on or off. It can also be used to recall and switch between profiles |
| predictive text input | A system developed for the rapid entry of text |
| ringing option | The way your phone plays (or does not play) the selected ringing tone when you have an incoming call. For example; ascending, ring once |

| Term | Definition |
|-------------------|---|
| ringing tone | The tone that your phone plays (or doesn't play) when you have an incoming call. The Nokia 6340 has 40 available ringing tones |
| ringing volume | The audible level of your phone's ringing tones |
| screen or display | Your phone's display |
| scroll | To move through a list of names, menu items, and so on; by pressing the scroll (up/down) key. Each new selection or option is highlighted as it is selected |
| selection keys | The keys under the lower left and right corners of your phone's display. These keys are defined by the text above them, inside the display |
| SIM | Subscriber Identity Module |
| SMS | Short Message Service. A service whereby short messages (typically around 160 characters) can be sent and received via your phone |
| URL | Universal Resource Locator. A specific address or location on the Internet such as www.nokia.com |
| voice mail | A system maintained by your wireless provider to record voice messages when you're unable to answer a call |
| voice mailbox | The repository on your wireless provider's network for all voice mail messages |
| voice memo | A message recorded by your phone's internal recorder |

| Term | Definition |
|----------------------|---|
| warning tones | The collection of tones that are played when your phone alerts you to a variety of situations |
| WAP | Wireless Application Protocol. WAP is a new part of the Internet designed specifically for mobile device users |
| wireless network | Your wireless provider's operating environment, comprised of various types of hardware, software, and landline connections |
| World Wide Web (WWW) | A part of the Internet designed to allow easier navigation through the use of graphical user interfaces and hypertext links between different addresses - also called Web |

22 Technical information

| | |
|----------------------|---|
| Weight | 125 grams (4.4 ounces) with BLB-3 1000 mAh Li-Ion Battery |
| Wireless networks | AMPS 800/TDMA 800 and 1900/GSM 1900 |
| Size (volume) | 6.7 cubic inches (110 cc) |
| Frequency range (Tx) | AMPS: 824 - 849 Mhz TDMA 800: 824 - 849 Mhz TDMA 1900: 1850 - 1910 Mhz GSM 1900: 1850 - 1910 Mhz |
| Frequency range (Rx) | AMPS: 869 - 894 Mhz TDMA 800: 869 - 894 Mhz TDMA 1900: 1930 - 1990 Mhz GSM 1900: 1930 - 1990 Mhz |
| Tx output power | 1 W (Max) |
| Battery voltage | 3.6 vdc |
| Talk/Standby time | GSM: Up to 3.5 - 6 hours talk time Up to 10 - 25 days standby time |
| | TDMA: Up to 2.5 - 4 hours talk time Up to 9 - 14 days standby time |
| | AMPS: Up to 1 - 1.5 hours talk time Up to 1 - 2 days standby time |

Battery operation times

Operation times are estimates only. The operation time of the battery depends on conditions such as:

- Transmitting power level
- Signal (distance between the phone and the base station)
- Network parameters defined by the operator (operation mode - analog or digital, roaming)
- Phone use (WAP, games, SMS)
- Charging procedure use

Nokia One-Year Limited Warranty

Nokia Inc. ("Nokia") warrants that this cellular phone ("Product") is free from defects in material and workmanship that result in Product failure during normal usage, according to the following terms and conditions:

- 1 The limited warranty for the Product extends for ONE (1) year beginning on the date of the purchase of the Product. This one year period is extended by each whole day that the Product is out of your possession for repair under this warranty.
- 2 The limited warranty extends only to the original purchaser ("Consumer") of the Product and is not assignable or transferable to any subsequent purchaser/end- user.
- 3 The limited warranty extends only to Consumers who purchase the Product in the United States of America.
- 4 During the limited warranty period, Nokia will repair, or replace, at Nokia's sole option, any defective parts, or any parts that will not properly operate for their intended use with new or refurbished replacement items if such repair or replacement is needed because of product malfunction or failure during normal usage. No charge will be made to the Consumer for any such parts. Nokia will also pay for the labor charges incurred by Nokia in repairing or replacing the defective parts. The limited warranty does not cover defects in appearance, cosmetic, decorative or structural items, including framing, and any non-operative parts. Nokia's limit of liability under the limited warranty shall be the actual cash value of the Product at the time the Consumer returns the Product for repair, determined by the price paid by the Consumer for the Product less a reasonable amount for usage. Nokia shall not be liable for any other losses or damages. These remedies are the Consumer's exclusive remedies for breach of warranty.

- 5 Upon request from Nokia, the Consumer must prove the date of the original purchase of the Product by a dated bill of sale or dated itemized receipt.
- 6 The Consumer shall bear the cost of shipping the Product to Nokia in Melbourne, Florida. Nokia shall bear the cost of shipping the Product back to the Consumer after the completion of service under this limited warranty.
- 7 The Consumer shall have no coverage or benefits under this limited warranty if any of the following conditions are applicable:
 - a) The Product has been subjected to abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of Nokia, including damage caused by shipping.
 - b) The Product has been damaged from external causes such as collision with an object, or from fire, flooding, sand, dirt, windstorm, lightning, earthquake or damage from exposure to weather conditions, an Act of God, or battery leakage, theft, blown fuse, or improper use of any electrical source, damage caused by computer or internet viruses, bugs, worms, Trojan Horses, cancelbots or damage caused by the connection to other products not recommended for interconnection by Nokia.
 - c) Nokia was not advised in writing by the Consumer of the alleged defect or malfunction of the Product within fourteen (14) days after the expiration of the applicable limited warranty period.
 - d) The Product serial number plate or the accessory data code has been removed, defaced or altered.
 - e) The defect or damage was caused by the defective function of the cellular system or by inadequate signal reception by the external antenna, or viruses or other software problems introduced into the Product.

- 8** Nokia does not warrant uninterrupted or error-free operation of the Product. If a problem develops during the limited warranty period, the Consumer shall take the following step-by-step procedure:
- a)** The Consumer shall return the Product to the place of purchase for repair or replacement processing.
 - b)** If "a" is not convenient because of distance (more than 50 miles) or for other good cause, the Consumer shall ship the Product prepaid and insured to:
Nokia Inc., Attn: Repair Department
795 West Nasa Blvd.
Melbourne, FL 32901
 - c)** The Consumer shall include a return address, daytime phone number and/or fax number, complete description of the problem, proof of purchase and service agreement (if applicable). Expenses related to removing the Product from an installation are not covered under this limited warranty.
 - d)** The Consumer will be billed for any parts or labor charges not covered by this limited warranty. The Consumer will be responsible for any expenses related to reinstallation of the Product.
 - e)** Nokia will repair the Product under the limited warranty within 30 days after receipt of the Product. If Nokia cannot perform repairs covered under this limited warranty within 30 days, or after a reasonable number of attempts to repair the same defect, Nokia at its option, will provide a replacement Product or refund the purchase price of the Product less a reasonable amount for usage. In some states the Consumer may have the right to a loaner if the repair of the Product takes more than ten (10) days. Please contact the Customer Service Center at Nokia at the telephone number listed at the end of this warranty if you need a loaner and the repair of the Product has taken or is estimated to take more than ten (10) days.

- f) If the Product is returned during the limited warranty period, but the problem with the Product is not covered under the terms and conditions of this limited warranty, the Consumer will be notified and given an estimate of the charges the Consumer must pay to have the Product repaired, with all shipping charges billed to the Consumer. If the estimate is refused, the Product will be returned freight collect. If the Product is returned after the expiration of the limited warranty period, Nokia's normal service policies shall apply and the Consumer will be responsible for all shipping charges.
- 9 YOU (THE CONSUMER) UNDERSTAND THAT THE PRODUCT MAY CONSIST OF REFURBISHED EQUIPMENT THAT CONTAINS USED COMPONENTS, SOME OF WHICH HAVE BEEN REPROCESSED. The used components comply with Product performance and reliability specifications.
- 10 ANY IMPLIED WARRANTY OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE OR USE, SHALL BE LIMITED TO THE DURATION OF THE FOREGOING LIMITED WRITTEN WARRANTY. OTHERWISE, THE FOREGOING LIMITED WARRANTY IS THE CONSUMER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. NOKIA SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF ANTICIPATED BENEFITS OR PROFITS, LOSS OF SAVINGS OR REVENUE, LOSS OF DATA, PUNITIVE DAMAGES, LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, COST OF CAPITAL, COST OF ANY SUBSTITUTE EQUIPMENT OR FACILITIES, DOWNTIME, THE CLAIMS OF ANY THIRD PARTIES, INCLUDING CUSTOMERS, AND INJURY TO PROPERTY, RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM BREACH OF THE WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT TORT, OR ANY OTHER LEGAL OR EQUITABLE THEORY, EVEN IF NOKIA KNEW OF THE LIKELIHOOD OF SUCH DAMAGES. NOKIA SHALL NOT BE LIABLE FOR DELAY IN RENDERING SERVICE UNDER THE LIMITED WARRANTY, OR LOSS OF USE DURING THE PERIOD THAT THE PRODUCT IS BEING REPAIRED.

- 11 Some states do not allow limitation of how long an implied warranty lasts, so the one year warranty limitation may not apply to you (the Consumer). Some states do not allow the exclusion or limitation of incidental and consequential damages, so certain of the above limitations or exclusions may not apply to you (the Consumer). This limited warranty gives the Consumer specific legal rights and the Consumer may also have other rights which vary from state to state.
- 12 Nokia neither assumes nor authorizes any authorized service center or any other person or entity to assume for it any other obligation or liability beyond that which is expressly provided for in this limited warranty including the provider or seller of any extended warranty or service agreement.
- 13 This is the entire warranty between the Nokia and the Consumer, and supersedes all prior and contemporaneous agreements or understandings, oral or written, relating to the Product, and no representation, promise or condition not contained herein shall modify these terms.
- 14 This limited warranty allocates the risk of failure of the Product between the Consumer and Nokia. The allocation is recognized by the Consumer and is reflected in the purchase price.
- 15 Any action or lawsuit for breach of warranty must be commenced within eighteen (18) months following purchase of the Product.
- 16 Questions concerning this limited warranty may be directed to:
Nokia Inc.
Attn: Customer Service
7725 Woodland Center Blvd., Ste. 150
Tampa, FL 33614
Telephone: 1-888-NOKIA-2U (1-888-665-4228)
Facsimile: (813) 287-6612
TTY/TDD Users Only: 1-800-24-NOKIA (1-800-246-6452)
- 17 The limited warranty period for Nokia supplied attachments and accessories is specifically defined within their own warranty cards and packaging.

*Nokia is a registered trademark of Nokia Corporation.

Index

Numerics

1-touch dialing

| | |
|----------------|----|
| assign a key | 56 |
| change numbers | 56 |
| erase numbers | 56 |
| make a call | 56 |

6340, illustrated 8

A

abc and 123 modes

| | |
|-------------------|----|
| switching between | 26 |
|-------------------|----|

access codes 70

accessibility

| | |
|--------------------------|----|
| accessibility solutions | 19 |
| alternate formats | 19 |
| contact | 19 |
| customize audio settings | 65 |
| features | 20 |
| mobile inductive loopset | 20 |
| other features | 20 |
| TTY | 20 |
| website | 19 |

accessories

| | |
|-----------------------|----------|
| battery (BLB-3) | 119 |
| cigarette lighter | |
| charger (LCH-9) | 119 |
| complete car | |
| kit (CARK-91H) | 121 |
| data cable (DLR-3P) | 121 |
| desktop charging | |
| stand (DCH-8) | 119 |
| headset kit (HDC-9P) | 120 |
| leather carrying case | |
| (CSL-17/CSL-27) | 120, 121 |

| | |
|-----------------------|-----|
| loopset (LPS-1) | 120 |
| mobile holder (MBC-1) | 121 |
| rapid travel | |
| charger (ACP-8U) | 120 |
| spare battery | |
| charger (DDC-1) | 119 |

accessory profiles 61

activate

| | |
|------------------|----|
| automatic redial | 50 |
| call forwarding | 48 |
| loopset | 62 |
| TTY/TDD | 61 |
| voice command | 52 |
| voice recorder | 54 |

adding folders 86

advanced features 45

alarm

| | |
|-------------|-----|
| setting | 101 |
| snooze | 102 |
| turning off | 102 |

alarm clock 101

antenna 124

| | |
|-----------------------|-----|
| about | 7 |
| contact with | 7 |
| definition | 134 |
| jack for external use | 134 |
| location | 7 |
| proper position | 124 |
| unauthorized use | 130 |

assign a number type 29

assigning voice tags 51

audio settings 65

automate voicemail 43

automatic redial 50

B

back cover, removing 9

battery

| | |
|-----------------------|-----|
| charging | 10 |
| important information | 13 |
| information | 122 |
| installing | 10 |
| operating range | 123 |
| prolonging life | 13 |
| removal | 12 |
| temperature range | 123 |
| voltage | 138 |

battery charger, spare 119

birthday note 89

business cards

| | |
|-----------|-----|
| creating | 106 |
| receiving | 107 |
| sending | 106 |

C

calculator

| | |
|---------------------|-----|
| currency conversion | 103 |
| options | 103 |
| using | 102 |

calendar

| | |
|-----------------|----|
| 4-way scrolling | 88 |
| birthday note | 89 |
| call note | 89 |
| date notes | 89 |
| jump to date | 89 |
| meeting note | 89 |
| memo note | 89 |
| monthly view | 89 |
| note options | 90 |
| note types | 89 |

| | |
|---------------------|-----|
| opening | 88 |
| saving notes | 89 |
| send note | 107 |
| view notes | 90 |
| view received notes | 92 |

call duration 41

| | |
|---------|----|
| viewing | 41 |
|---------|----|

call forwarding 48

| | |
|------------|----|
| activate | 48 |
| cancelling | 50 |
| definition | 48 |

call log

| | |
|---------------------|----|
| about | 38 |
| call duration | 41 |
| clear call lists | 40 |
| clear call timers | 41 |
| view call duration | 41 |
| view dialed calls | 40 |
| view missed calls | 39 |
| view received calls | 39 |

call note 89

call timers, clearing 41

call waiting 47

| | |
|--------------------------|----|
| end both calls | 47 |
| end the active call | 47 |
| end the active call only | 47 |
| incoming calls | 47 |
| reject a call | 48 |
| reject a waiting call | 48 |
| switch between calls | 47 |
| with call on hold | 48 |

caller groups

| | |
|------------|----|
| definition | 33 |
| options | 33 |
| setup | 34 |

| | |
|------------------------------------|----------|
| calls | |
| ending | 47 |
| forwarding | 48 |
| ignoring | 3 |
| making | 17 |
| redial last | 3 |
| rejecting | 48 |
| cancel call forwarding | 50 |
| car charger | 119 |
| car kit | 121 |
| carrying case | 120, 121 |
| change | |
| 1-touch dialing numbers | 56 |
| audio settings | 65 |
| date format | 100 |
| keypad tones | 60 |
| memory in use | 35 |
| message alert tone | 59 |
| number types | 29 |
| phone book view | 33 |
| PIN code | 71 |
| PIN2 code | 72 |
| primary numbers | 33 |
| profile names | 60 |
| ringing options | 59 |
| ringing tone | 59 |
| ringing volume | 59 |
| security codes | 70 |
| security levels | 68 |
| time format | 100 |
| voice tags | 52 |
| charge the battery | 10 |
| charger | |
| connecting | 10 |
| information | 122 |
| clear call lists | 40 |
| clock | |
| alarm | 101 |
| set the date | 100 |
| show/hide | 100 |
| time format | 100 |
| compose a picture message | 82 |
| compose e-mail | 80 |
| connect TTY hardware | 63 |
| connecting to a PC | 108 |
| connectors, illustrated | 8 |
| contacting Nokia | 6 |
| content copier (PC suite) | 108 |
| cover, removing | 9 |
| currency | |
| converting | 103 |
| exchange rate | 104 |
| to foreign | 103 |
| to home | 103 |
| currency conversion | 103 |
| customer care | |
| Canada | 7 |
| USA | 7 |
| D | |
| data cable | 121 |
| data synchronization | 108 |
| date, setting | 100 |
| deactivate automatic redial | 50 |
| definition of terms | 134 |
| desktop charging stand | 119 |
| dialed calls, viewing | 40 |
| digital data | 108 |
| display language | 58 |
| DLR-3P | 121 |

download

- pictures 81
- ringing tones 66
- software 108, 109
- user guide 5

E

ECML

- definition 134
- use in Wallet 94

e-mail 78

- compose and send 80
- important numbers 79
- setup an e-mail profile 79

emergency calls

- placing 2, 127
- things to remember 127
- while browsing 110
- with keypad locked 67

end both calls 47

end the active call 47

entering

- addresses 29
- names and numbers 28
- notes, to phonebook 29
- number types 29
- text 25

equalizer 65

- choose a set 65
- customize 65
- settings 65
- while in a call 66

erase

- 1-touch dialing numbers .. 56
- messages 87
- voice memos 55
- voice tags 52

ESN

- definition of 135
- location on the phone 6

F

FAQ 132

fixed dialing

- definition of 68
- edit number list 69
- emergency numbers 68
- notes about 70
- setup and activate 68

folders 85

- adding 86
- list of 85
- removing 86

four-way scrolling

- calendar 88

frequency range 138

G

glossary of terms 134

H

headset

- connect 64
- connecting 64

headset kit 120

hearing impaired solutions ... 20

hearing impaired

- audio settings 65

I

icons 5

illustrated view 8

IMEI

- definition of 135
- location on the phone 6

| | |
|------------------------------|-----|
| in-call options | 45 |
| Infrared connections | 105 |
| interference | 2 |
| international dialing | 57 |
| IR | |
| activating | 105 |
| connecting to a PC | 108 |
| IR status | 106 |
| receiving a business card | 107 |
| sending a business card | 106 |
| sending a reminder note | 107 |

| | |
|-----------------------|----|
| J | |
| jump to a date | 89 |

| | |
|------------------------|----|
| K | |
| keypad | |
| illustrated view | 8 |
| keypad lock | 67 |
| keys, selection | 16 |

| | |
|-------------------------------|-----|
| L | |
| languages | |
| available | 58 |
| setting | 58 |
| shortcut | 23 |
| lithium ion battery | 119 |
| lock/unlock the keypad | 67 |
| loopset | |
| description | 120 |
| how it works | 20 |

| | |
|---------------------|----|
| LPS-1 | 20 |
| M | |
| meeting note | 89 |
| memo note | 89 |

| | |
|---------------|----|
| memory | |
| phone | 35 |
| phone and sim | 35 |
| select | 35 |
| SIM card | 35 |

| | |
|-----------------------|----|
| menu shortcuts | 21 |
| menus, phone | 18 |

| | |
|-----------------------|----|
| messages | |
| erasing | 87 |
| folders | 85 |
| forwarding | 78 |
| message center number | 73 |
| message icons | 73 |
| moving | 86 |
| reading | 77 |
| replying to | 77 |
| save to folders | 85 |
| view saved | 85 |
| write and send | 77 |

| | |
|---------------------------------|-----|
| missed calls | 39 |
| mobile holder | 121 |
| mobile inductive loopset | 20 |
| modem setup | 108 |
| moving messages | 86 |

| | |
|--------------------------|----|
| N | |
| name and no. view | 33 |
| name list view | 33 |
| navigation | |

| | |
|---------------------|----|
| of phone menus | 18 |
| using scroll method | 18 |
| using shortcuts | 19 |

| | |
|-------------------------|-----|
| network services | |
| about | 6 |
| Nokia PC suite | 108 |
| number types | 29 |

O

one-touch dialing 56

open phone book 27

options

calls active and on hold ... 46

while in a call 45

with a call on hold 46

with one call active 45

P

PC composer 108

PC connectivity 108

PC suite 108

instructions 108

PC composer 108

PC sync 108

PC sync 108

personal organizer 88

phone book

add entries 28

caller groups 33

customize view 33

display entries 30

menu 27

options 31

primary numbers 33

search 30

phone book view 33

name + number 33

name list 33

phone security

access codes 70

fixed dialing 68

lock the keypad 67

security code 70

security levels 67

phone size 138

phone weight 138

picture messages

compose and send 82

modifying 83

when received 81

PIN 2 code 72

PIN code

changing 71

PIN code request 71

playback a voice memo 54

power on your phone 13

power, transmit 138

predictive text

add new words 75

primary number

assigning 33

copying 36

definition 33

profiles

accessory 64

customizing 59

headset 61

list of 58

loopset 61

selecting 59

timed 60

TTY/TDD 61

PUK codes 72

R

rapid travel charger 120

read messages 77

receive a TTY call 64

received calls 39

record a voice memo 54

| | |
|-----------------------------------|-----|
| record phone conversations | 55 |
| recorded memos, viewing | 54 |
| reference information | |
| batteries and chargers | 122 |
| reject a call | 48 |
| reminders | 107 |
| remove the battery | 12 |
| removing folders | 86 |
| ringing tones | |
| discarding | 66 |
| download | 66 |
| receiving | 66 |

S

| | |
|--------------------------|----|
| safety guidelines | 1 |
| save | |
| addresses | 29 |
| calendar notes | 89 |
| notes, to phonebook | 29 |
| numbers only | 30 |
| phonebook entries | 28 |
| ringing tones | 66 |
| scroll keys | |
| how to use | 16 |
| scroll method | 18 |
| search phone book | 30 |
| security | |
| fixed dialing | 68 |
| lock the keypad | 67 |
| security code | 70 |
| security levels | 67 |
| selection keys | |
| how to use | 16 |
| sending | |
| calendar notes | 91 |
| e-mail | 78 |

| | |
|---------------------------------|--------|
| messages | 77 |
| picture messages | 81 |
| template messages | 83 |
| set the display language | 58 |
| setup | |
| voicemail | 42 |
| your headset | 64 |
| shortcuts | 19, 21 |
| call log menu | 21 |
| games menu | 24 |
| messages menu | 21 |
| organizer menu | 24 |
| profiles menu | 21 |
| settings menu | 22 |
| voice menu | 24 |
| show/hide clock | 100 |
| SIM card | |
| capacity | 35 |
| copying entries | 36 |
| emergency calls | 127 |
| if rejected | 72 |
| installing | 9 |
| non-owner | 67 |
| PIN code | 71 |
| removing | 12 |
| security levels | 67 |
| selecting memory | 35 |
| service numbers | 37 |
| size, phone | 138 |
| software download | 108 |
| spare battery charger | 119 |
| special characters | |
| four-way scrolling | 76 |
| speed dialing | 56 |
| assign a key | 56 |
| make a call | 56 |

| | |
|------------------------------|-----|
| standby time | 138 |
| start screen | |
| description | 14 |
| returning to | 16 |
| switch between calls | 47 |
| switch on your phone | 13 |
| switching letter case | 26 |

T

| | |
|------------------|-----|
| talk time | 138 |
| templates | |

| | |
|-----------------|----|
| creating custom | 84 |
| sending | 83 |

| | |
|--------------|-----|
| terms | 134 |
|--------------|-----|

| | |
|--------------------|-----|
| time format | 100 |
|--------------------|-----|

| | |
|-----------------------|----|
| timed profiles | 60 |
|-----------------------|----|

transmit

| | |
|-----------|-----|
| frequency | 138 |
| power | 138 |

| | |
|------------------------|-----|
| troubleshooting | 131 |
|------------------------|-----|

TTY

| | |
|------------------|----|
| connect hardware | 63 |
| end a call | 63 |
| illustration | 63 |
| make a call | 63 |
| receive a call | 64 |

| | |
|---------------------------|----|
| turn on your phone | 13 |
|---------------------------|----|

U

| | |
|--------------------------|----|
| unlock the keypad | 67 |
|--------------------------|----|

| | |
|-------------------------------|---|
| updates, to user guide | 5 |
|-------------------------------|---|

user guides

| | |
|-------------------|----|
| alternate formats | 19 |
| updates to | 5 |

V

vibrating alert

| | |
|----------------|----|
| turn on or off | 59 |
|----------------|----|

view

| | |
|---------------------------|-----|
| calendar notes | 90 |
| call duration | 41 |
| clock on the Start screen | 100 |
| diald numbers | 40 |
| fixed dialing numbers | 69 |
| missed calls | 39 |
| monthly view, calendar | 89 |
| phone book | 27 |
| picture messages | 81 |
| received calendar notes | 92 |
| received calls | 39 |
| received messages | 77 |
| recorded memos | 54 |
| saved messages | 85 |
| special characters | 76 |
| wallet notes | 98 |

voice command

| | |
|--------------------|----|
| adding tags | 52 |
| and the volume key | 53 |
| erase | 53 |
| replace command | 53 |
| shortcut | 4 |
| use with headset | 53 |

voice dial

| | |
|------------------------|----|
| change or erase a tag | 52 |
| notes about voice tags | 50 |
| using | 51 |

| | |
|--------------------------------|----|
| voice recorder | 54 |
| erase memos | 55 |
| phone conversations | 55 |
| playback a memo | 54 |
| playback memos | 54 |
| record a memo | 54 |
| view memos | 54 |
| view recorded memos | 54 |
| voice tags | 50 |
| assign | 51 |
| assigning | 51 |
| change or erase | 52 |
| changing | 52 |
| displaying | 52 |
| erasing | 52 |
| for voice commands | 52 |
| notes | 50 |
| voicemail | |
| automating | 43 |
| save mailbox number | 42 |
| setup | 42 |
| using | 42 |
| volume, adjusting | 17 |

W

wallet

| | |
|-----------------------------|-----|
| code request | 96 |
| create a card | 96 |
| on-line purchases | 115 |
| personal note options | 98 |
| personal notes | 97 |
| time-out | 95 |
| wallet code | 95 |

warning tones

| | |
|----------------------|----|
| turn on or off | 60 |
|----------------------|----|

weight, phone

wireless modem setup

wireless network services

wireless networks

write and send a message

Para obtener un manual del usuario en español favor de
 llamar o enviar un fax al teléfono 1-888-NOKIA-2U,
 fax 813-249-9619.
