




Illustrated Parts List

Portable Generator
Model 01919

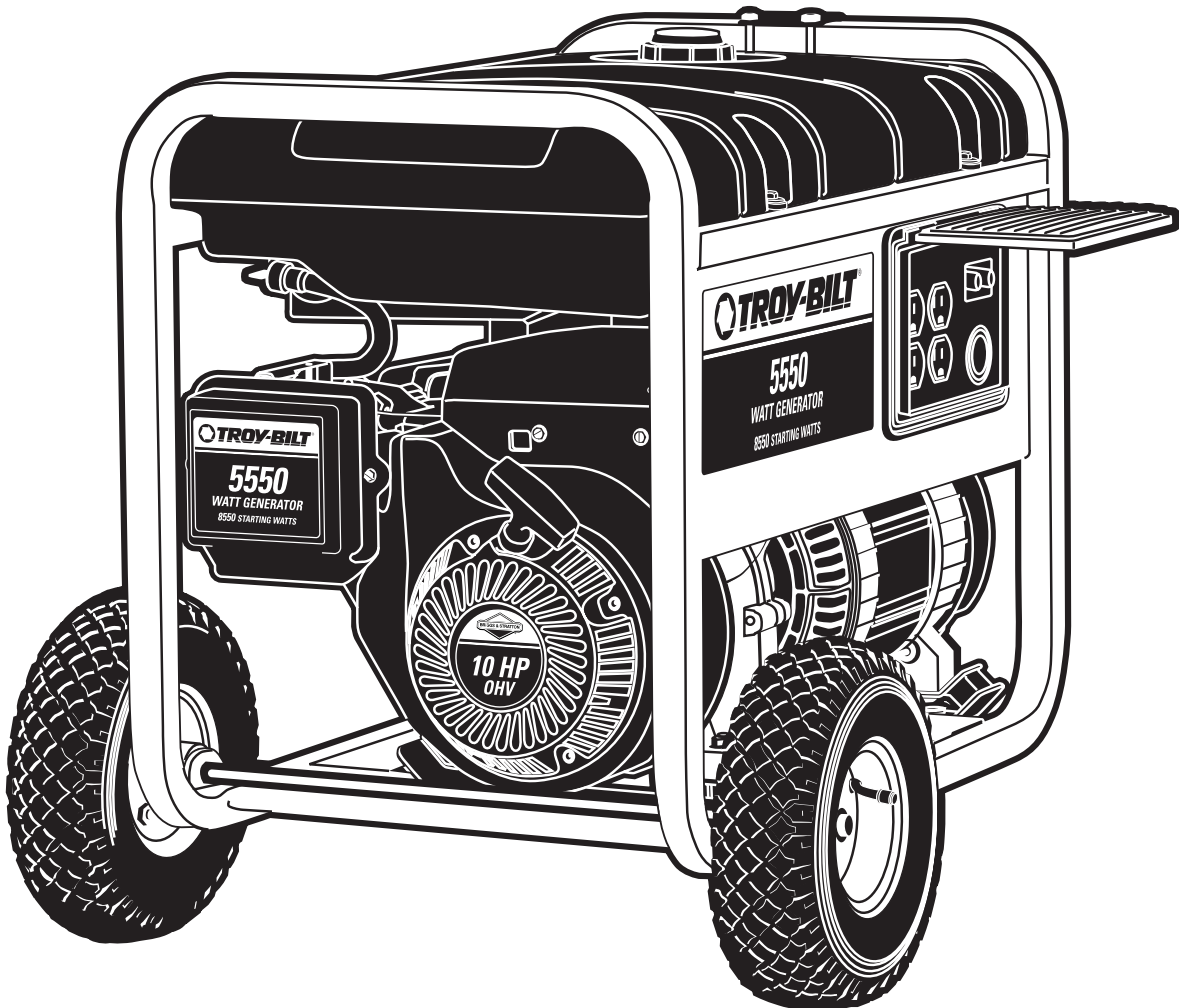


Troy-Bilt® is a registered trademark of Troy-Bilt, LLC and is used under license to Briggs & Stratton Power Products.

Troy-Bilt® es una marca registrada de Troy-Bilt, LLC y se usa abajo licencia a Briggs & Stratton Power Products.

BRIGGS & STRATTON POWER PRODUCTS GROUP, LLC
JEFFERSON, WISCONSIN, U.S.A.

Exploded Views and Parts Lists

EXPLODED VIEW - MAIN UNIT

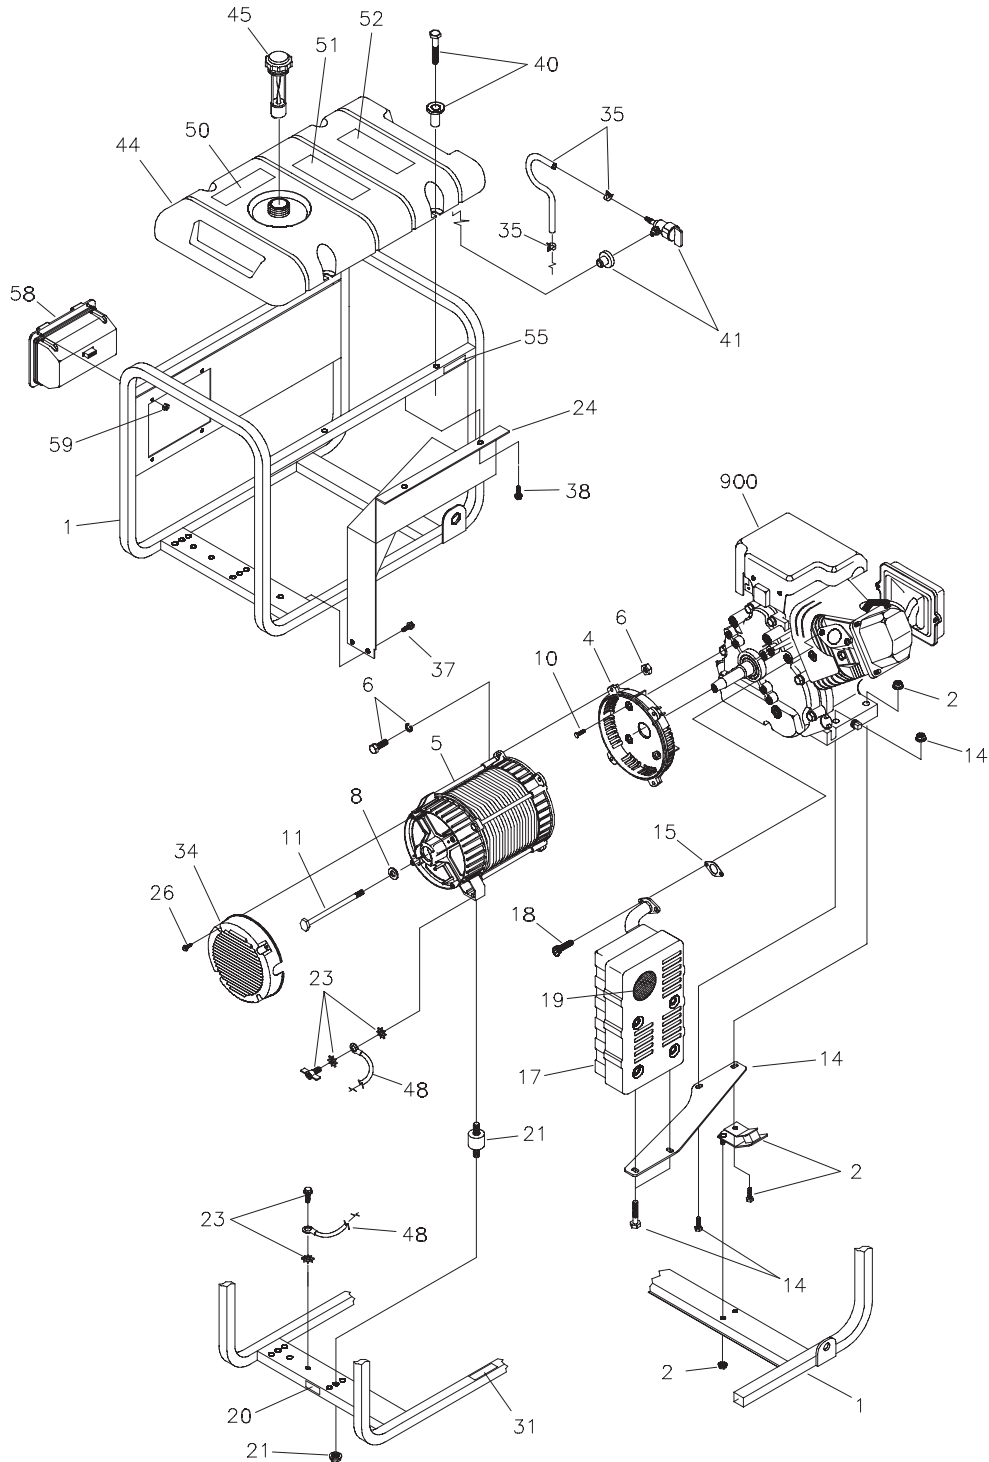

Section 1: Exploded Views and Parts Lists

PARTS LIST - MAIN UNIT

Item	Part #	Description
1	P194766GS	CRADLE
2	194150GS	KIT,Vibration, Mount, 45°
4	190220GS	HOUSING, Engine Adapter
5	NSP	ASSY,Alternator (see page 5)
6	194151GS	KIT, Hrdwr Mounting Adapter
8	96796GS	WASHER, M8 Flat
10	*	SBHCS, 3/8-16 x 1.0 Lg.
11	187365FGS	HHCS, 5/16-24 x 7.44
14	194729GS	KIT, Muffler Bracket w/ Hardware
15	695398	GASKET, Exhaust
17	189008GS	MUFFLER
18	*	SCREW, 5/16 - 18 x 3/4"
19	83083GS	SCREEN, Spark Arrest
20	B4986GS	DECAL, Ground, Green
21	194153GS	KIT,Vibration Mount
23	193646GS	KIT, Grounding Hardware
24	192794GS	SHIELD, Heat
26	74908GS	SCREW, M5-0.8 x 10, Taptite
31	191436GS	DECAL, Hot Muffler
34	186347GS	COVER, Bearing Carrier
35	194397GS	KIT, Fuel Hose, Formed w/ Clamps
37	192376GS	SCREW, 12-24 x 1/2 Thrd forming
38	56893GS	CRIMPTITE, 10 - 24 x 1/2
40	194398GS	KIT, Fuel Tank Hardware
41	192980GS	KIT,Valve, Fuel Tank
44	193668GS	ASSY, Tank, Fuel (Includes Items 41, 50, 51 & 52)
45	B4363GS	CAP, Fuel Gauge
48	14353621GS	WIRE, Ground
50	188333GS	DECAL, Gas Fill
51	194799GS	DECAL, Danger
52	189235GS	DECAL, Start Instructions
55	191435GS	DECAL, Shut-Off, Fuel
58	190355GS	ASSY, Control Panel (see page 4)
59	*	NUT, Palnut, 3/16"
900	NSP	ENGINE


Parts Not Illustrated

MS5242	MANUAL, Engine
192258GS	MANUAL, Owners
BB3061GS	BOTTLE, Oil
188971GS	CORD, Extension, 120/240V, 30A
193667GS	KIT, Decals

* - Items shown without part numbers are common fasteners found at your local hardware store.

Section 1: Exploded Views and Parts Lists

CONTROL PANEL EXPLODED VIEW & PARTS LIST

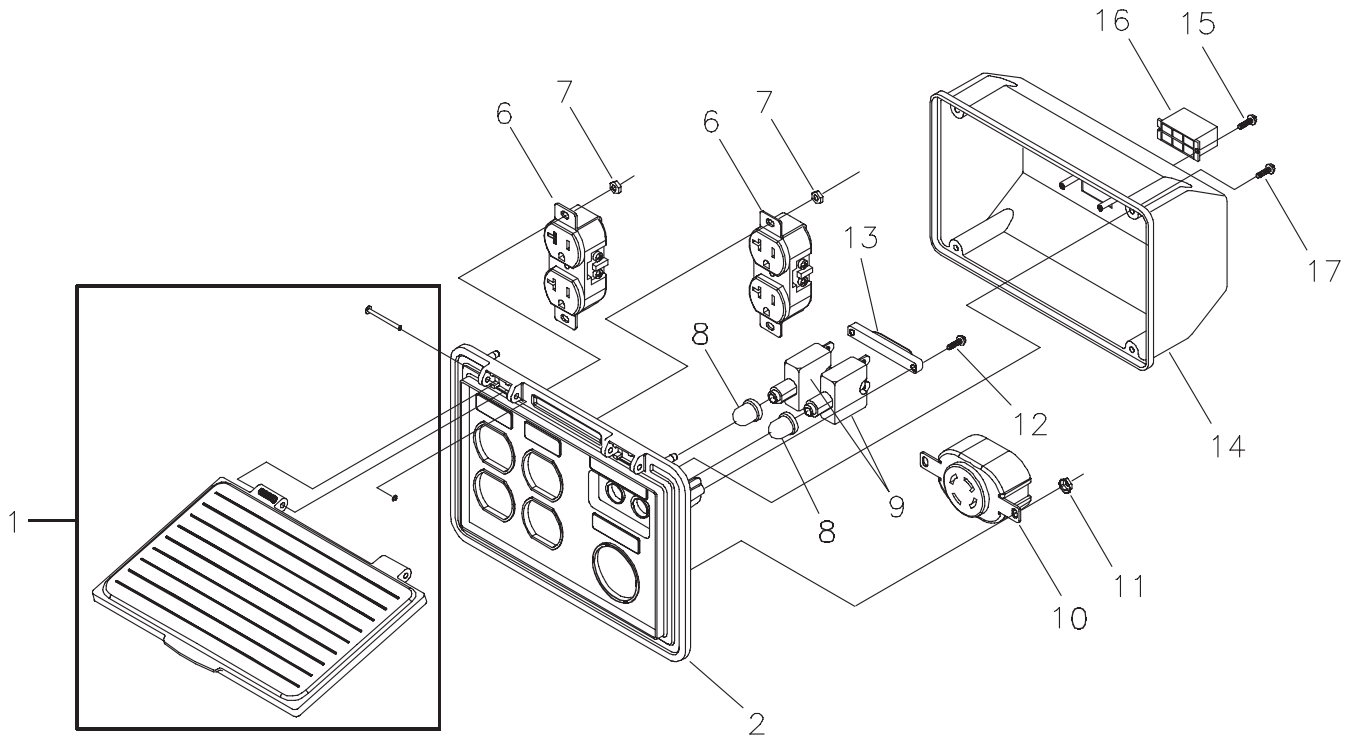


Item	Part #	Description
1	195112GS	KIT, Control Panel Lid
2	188889GS	CONTROL PANEL, Compact
6	68759GS	OUTLET, 120V, 20Amp, Duplex
7	*	NUT, Palnut, Pushnut, 5/32
8	84198GS	CAP, Circuit Breaker
9	75207GS	BREAKER, Circuit
10	43437GS	OUTLET, 120/240V Locking, 30A
11	*	NUT, Palnut, Pushnut, 3/16
12	*	SCREW, Phillips, Head 3.5 x 18
13	93857GS	BAR, Retaining
14	188890GS	COVER, Back, Control Panel
15	82308GS	SCREW, Self Tapping, STC 3 x 18
16	22694GS	HOUSING, Receptacle
17	*	SCREW, Phillips, 3.5 x 14

* - Items shown without part numbers are common fasteners found at your local hardware store.

Section 1: Exploded Views and Parts Lists


ALTERNATOR EXPLODED VIEW AND PARTS LIST

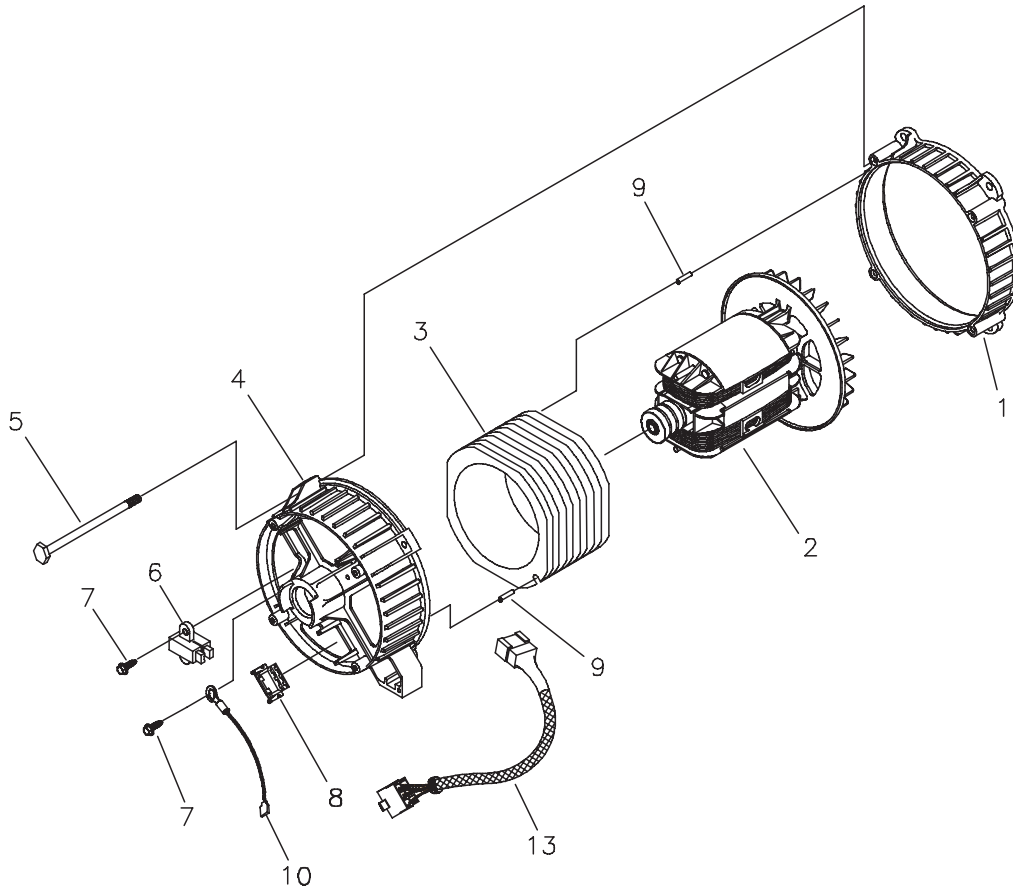

Item	Part #	Description
1	186059GS	ADAPTER, Mounting, Alternator
2	190032GS	ROTOR
3	190079AGS	STATOR
4	186060GS	RBC, with O-Ring (p/n 189197GS)
5	86308HGS	SCREW
6	91825GS	ASSY, Holder, Rectifier/Brush
7	66849GS	SCREW
8	22694GS	RECEPTACLE, 6 pin
9	81917GS	PIN, Roll
10	193428AGS	ASSY, Wire, Ground
13	190356GS	HARNESS, Wire, Power

Section 1: Exploded Views and Parts Lists

WHEEL KIT EXPLODED VIEW AND PARTS LIST

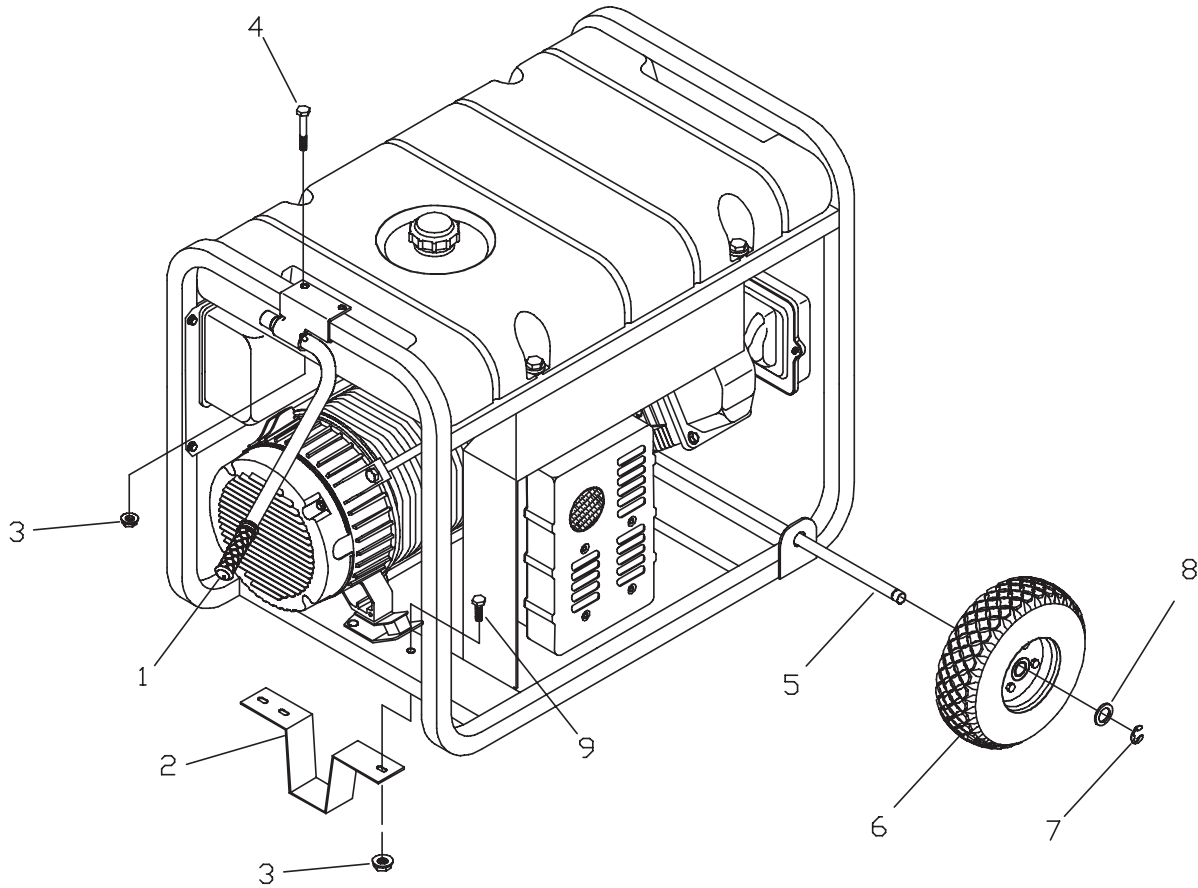

Item	Part #	Description
1	189715GS	ASSY, Handle
2	B1764GS	LEG, Mounting
3	52858GS	NUT, Lock
4	39287GS	SCREW
5	191267HGS	AXLE
6	B4966GS	WHEEL
7	191265GS	E-RING
8	22247GS	WASHER
9	42907GS	SCREW