

M1573001A

Item Numbers: 1573001,1573011 1573021

Owner's Manual


Pressure Washer: Machine that cleans dirty surfaces with high pressure water.



AWARNING

Read this manual.

Serious injury or death can result if safety instructions are not followed.

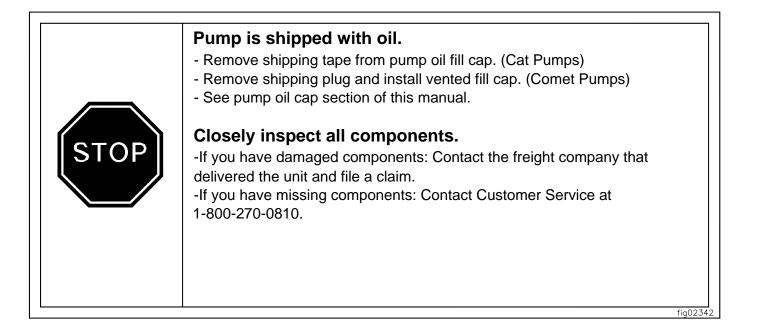

Any Questions, Comments, Problems or Parts Orders

Call NorthStar Product Support 1-800-270-0810

Hazard Signal Word Definitions

	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.		
	DANGER (red) indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.		
	WARNING (orange) indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.		
	CAUTION (yellow) indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.		
CAUTION	CAUTION (yellow) used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.		

Important Safety Instructions	4-5
A Warning Label Locations	6
Assembly Instructions	7-9
Machine Component Identification	10
Pump Oil Cap and Pump Component Identification	11
A Operation Instructions	11-15
Water Supply	11
Start-Up/Shut-Down Instructions	12
Spray Gun Safety Lock and Attaching the Lance	13
Installing Nozzles and Quick Connect hoses	14
Applying Chemicals	15
A Maintenance and Storage	16-18
Maintenance Mode and Maintenance Schedule	16
Pump Oil Change	17
Winter Storage	18
Troubleshooting	19
Specifications	20
Parts Explosions	22

▲ Important Safety Instructions

WARNING -Risk of Injection or Injury to Persons - Do Not Direct Discharge Stream at Persons. - Do not use a hose if exterior damage is evident.
-Risk of explosion. - Do not spray flammable liquids. - Do not operate in a flammable environment.

CAUTION -Gun kicks back. Hold with both hands. -To reduce the risk of injury, read operating instructions carefully before use.

WARNING - When using this product basic precautions should always be followed, including the following: 1.) Read all the instructions before using the product.

- 2.) To reduce the risk of injury, close supervision is necessary when the product is used near children. Do not allow irresponsible use by children. Always stop the product and bleed pressures before leaving unattended, disconnecting hoses or servicing the pump.
- 3.) Know how to stop the product and bleed pressures quickly. Be thoroughly familiar with the controls.
- 4.) Stay alert watch what you are doing.
- 5.) Do not operate the product when fatigued or under the influence of alcohol or drugs.
- 6.) Keep operating area clear of all persons.
- 7.) Do not overreach or stand on unstable support. Keep good footing and balance at all times. Wear footwear capable of maintaining a good grip on wet surfaces Do not place the machine on soft or unstable ground.
- 8.) Follow the maintenance instructions specified in all manuals. Do not run machine without sufficient lubrication or sufficient water to cool the pump.
- 9.) Wear safety glasses, gloves, face protection and appropriate clothing when operating the machine.
- 10.) Do not operate this machine with broken or missing parts. Never alter the manufacturer's original design or deactivate any safety device on the machine.
- 11.) Risk of exposure to dangerous chemicals. Wear protective gloves when handling and cleaning with chemicals. Follow the chemical manufacturer's directions. Understand all safety hazards and first aid for all chemicals being used. Check whether dangerous chemicals have been used and take any precautions that may have been recommended by the supplier of these chemicals when cleaning filters. Do not pump highly abrasive fluids or use with incompatible chemicals or solvents.
- 12.) Know the pressure and temperature limits of your machine. Be sure all high pressure accessories meet or exceed your machine's limits. Do not set the pressure relief valve above the machine's limit.
- 13.) Do not move this machine by pulling on the hose. Do not use the pump to support other items of equipment that impose unacceptable loads on the pump. Do not attempt to use this machine as a prop.
- 14.) To reduce risk of injury, do not secure the spray gun open. Your spray gun is equipped with a built-in trigger safety latch to guard against accidental trigger release and potentially dangerous high pressure spray. Rotate the safety latch to the locked position when not spraying.
- 15.) Do not clean this machine with its own spray. Cleaning should be done with a damp sponge with the motor OFF.
- 16.) Always make sure all switches and controls are in the OFF position prior to plugging in the electrical cord. Do no stand in water while plugging and unplugging electrical cord.
- 17.) This product is provided with a ground fault circuit interrupter built into the power cord plug. If replacement of the plug or cord is needed, use only identical replacement parts.

SAVE THESE INSTRUCTIONS

Grounding Instructions

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electrical shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER - Improper connection of the equipment - grounding conductor can result in a risk of electrocution. Check with a qualified electrician or service personnel if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician. Do not use any type adapter with this product.

1. For a product rated 125 volts or less:

GROUND FAULT CIRCUIT INTERRUPTER PROTECTION

This pressure washer is provided with a ground fault circuit interrupter (GFCI) built into the plug of the power supply cord. This device provides additional protection from the risk of electric shock. Should replacement of the plug or cord become necessary, use only identical replacement parts that include GFCI protection.

2. For a product rated more than 125 volts:

GROUND FAULT CIRCUIT INTERRUPTER PROTECTION

To comply with the National Electric Code (NFPA 70) and to provide additional protection from the risk of electric shock, this pressure washer should only be connected to a receptacle that is protected by a ground fault circuit interrupter (GFCI).


Extension Cords

Use only 3-wire extension cords that have 3 prong grounding-type plugs and 3-pole cord connectors that accept the plug from the product. Use only extension cords that are intended for outdoor use. These extension cords are identified by a marking "Acceptable for use with outdoor appliances; store indoors while not in use." Use only extension cords having an electrical rating not less than the rating of the product. Do not abuse extension cord and do not yank on any cord to disconnect. Keep cord away from heat and sharp edges. Always disconnect the extension cord from the receptacle before disconnecting the product from the extension cord.

Warning - To reduce the risk of electrocution, keep all connections dry and off the ground. do not touch plug with wet hands.

SAVE THESE INSTRUCTIONS


Warning Label Locations

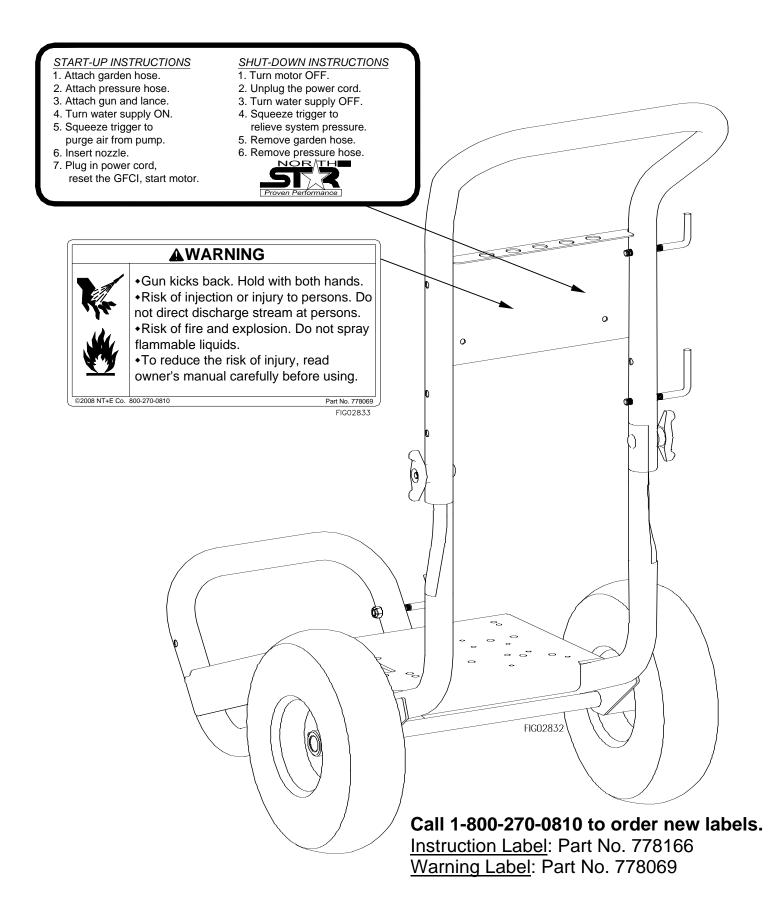

Assembly Instructions

<u>I.) Unpack</u>


Your pressure washer is shipped in one box. Separate and identify the components found in both boxes.

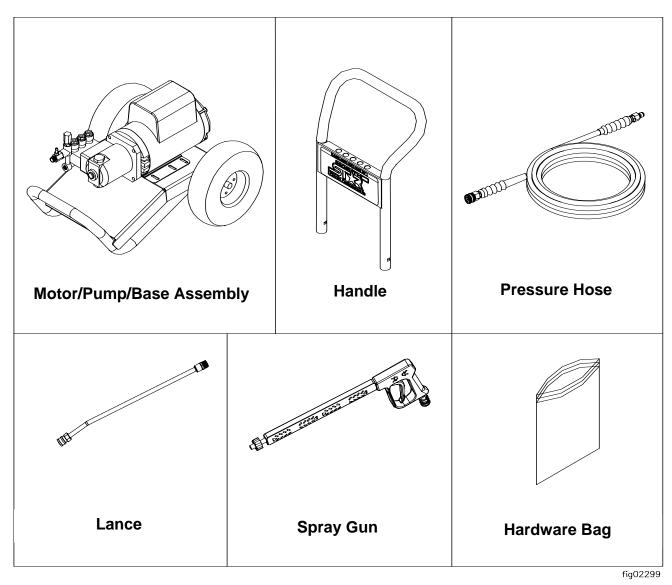

* Figures shown are for representation only. Actual components will vary by model.

Assembly Instructions


I.) Hardware Bag

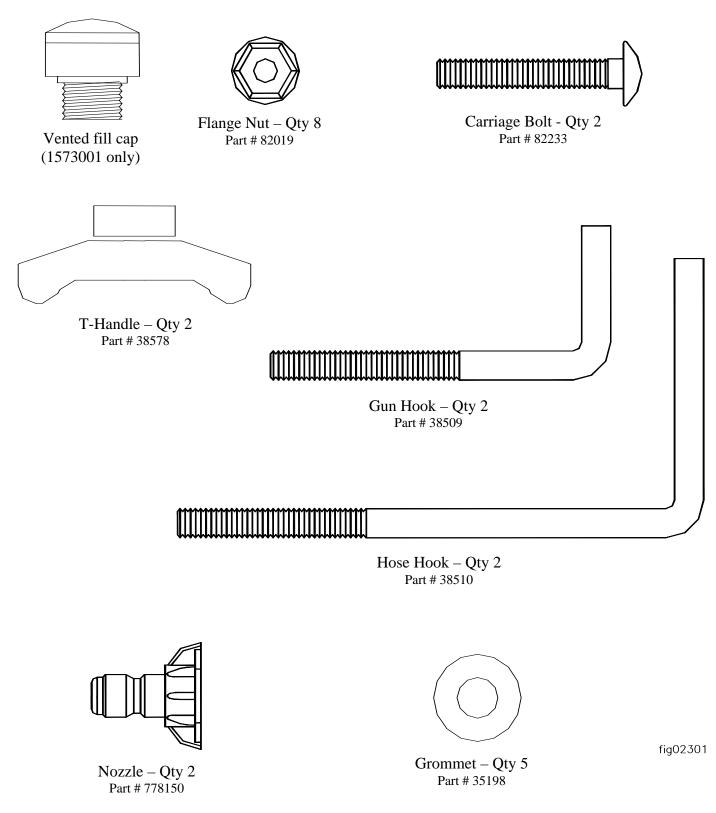


Assembly Instructions

III.) Handle Assembly

- 1.) Attach handle to base with two carriage bolts and t-handle knobs.
- 2.) Spin a flange nut backwards onto two hose hooks and each gun hook. (see hook detail)
- 3.) Mount the hose hooks and gun hooks onto the handle as shown.
- 4.) Insert grommets into the holes on the handle nameplate.
- 5.) Press nozzles into grommets according to the colors indicated on the handle decal.

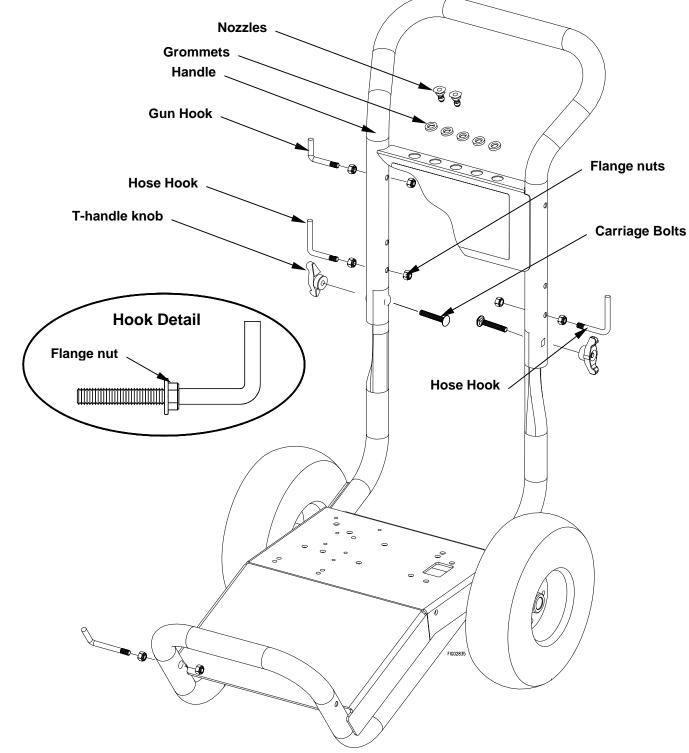


Machine Component Identification

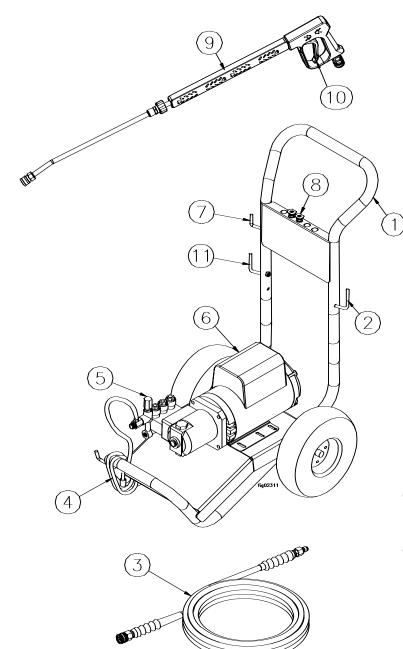

- **1.) Handle**. Designed for easy cart movement.
- 2.) Hose Hook. Store hose on hook.
- **3.) Pressure Hose.** Attach quick couplers to gun and water outlet.
- **4.) Chemical Hose.** Submerge in cleaning solution.
- 5.) Water Pump. Inspect for loose/broken parts prior to each use.
- 6.) Motor. Leeson motor provides years of reliable use.
- 7.) Gun Hook. Store gun on hook.
- 8.) Nozzles.
- **9.) Spray Gun.** Always use two hands for safe operation.
- **10.) Trigger.** Actuate to allow pressurized water to flow out of spray gun.
- **11.)** Cord Hook. Store electrical cord on hook.

* Components shown are for representation only. Actual components will vary by model.

Pump Component Identification

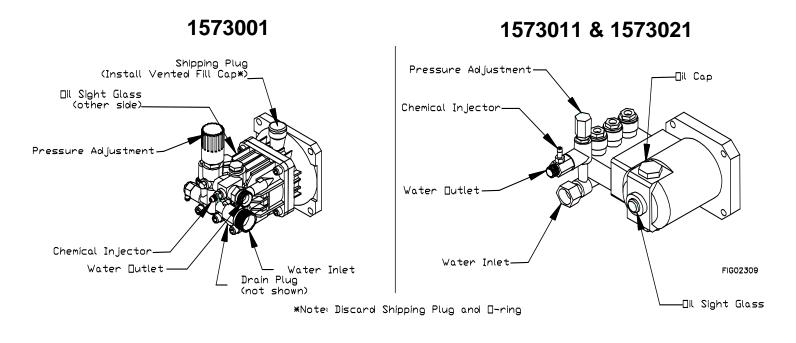

A Operation Instructions

Water Supply

- 1.) Make sure the water supply is clean. Debris can cause excess pump wear and reduce performance.
- 2.) An insufficient water supply will damage your pump. Make sure the water supply is steady and is 20% over the rated flow of your pump. Use a stopwatch to time how long it takes to fill a 5 gallon bucket with your garden hose. The bucket must fill faster than the times listed in the table below.

Model	Time to fill 5 gallon bucket		
1573001	150 seconds		
1573011	160 seconds		
1573021	96 seconds		


- 3.) The water supply garden hose must have an inside diameter of at least 5/8". If the hose is more than 100 ft. long, the diameter must be at least 3/4".
- 4.) Never use a reservoir tank as a water source. Drawing water out of a tank may cause pump cavitation and damage to your pump. This pressure washer is designed for a pressurized water source such as a city water faucet. However, the water source pressure must not exceed 115 psi (8 bar).
- 5.) Always use a flexible rubber hose for your water supply. Do not use rigid piping.

START-UP INSTRUCTIONS

- 1. Attach garden hose.
- 2. Attach pressure hose.
- 3. Attach gun and lance.
- 4. Turn water supply ON.
- 5. Squeeze trigger to purge air from pump.
- 6. Insert nozzle.
- 7. Plug in power cord
- 8. Reset the GFCI button on the cord
- 9. Start motor.


SHUT-DOWN INSTRUCTIONS

- 1. Turn motor OFF.
- 2. Unplug the power cord.
- 3. Turn water supply OFF.
- 4. Squeeze trigger to relieve system pressure.
- 5. Remove garden hose.
- 6. Remove pressure hose.

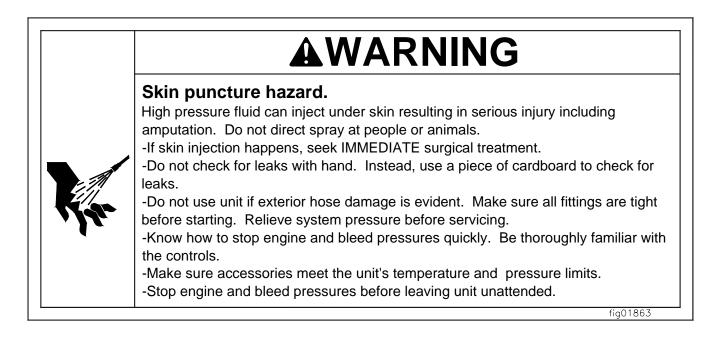


Spray Gun Safety Lock

When not spraying, use the spray gun safety lock to prevent accidental high pressure discharge.

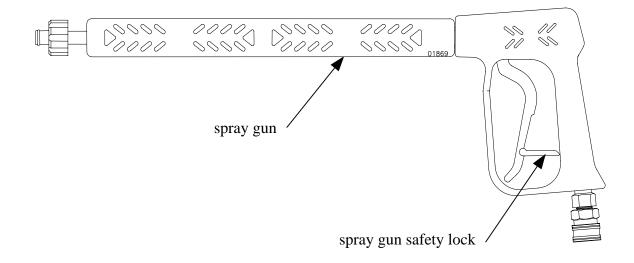

* Note: Depending on model, gun may appear differently.

Attaching the Lance

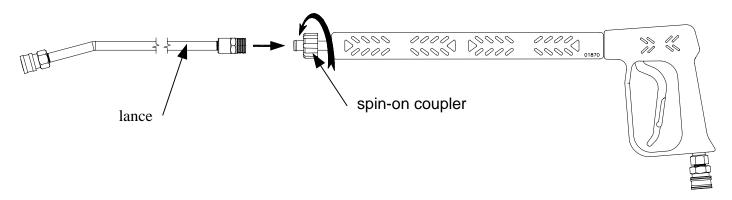


Tighten spin-on coupler hand tight.

Note: The o-rings make the seal so there is no need to tighten with a wrench.

Installing Nozzles


To install a nozzle pull back the collar and push the nozzle into the coupler. Once the connection is made, pull on the nozzle to make sure it is secure.

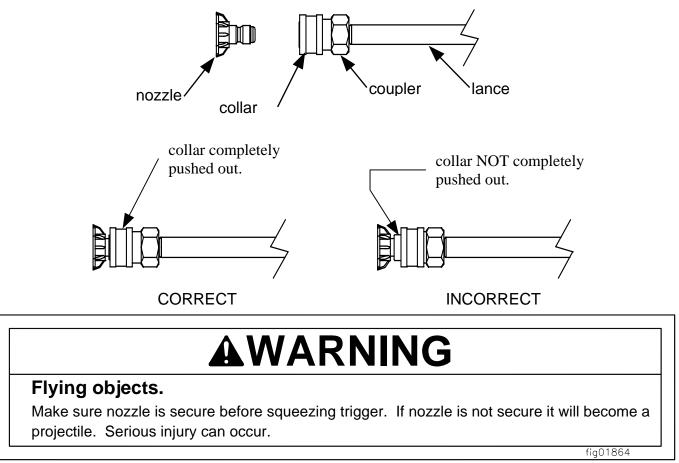

Attach Quick Connect Couplers

-To install the hose onto the pump, pull back the collar and push the hose into the coupler on the pump.


-To install the hose onto the spray gun, pull back the collar on the spray gun and push the hose into the coupler on the spray gun.

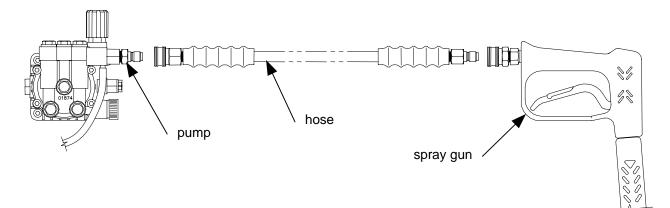


Once the connections are made, pull on the hose to make sure it is secure.

Applying Chemicals

- 1.) Install the black nozzle when applying chemicals onto the cleaning surface.
- 2.) Start the pressure washer according to the start-up instructions.
- 3.) Submerge the chemical hose in cleaning solution. (See Pump Component Identification section for chemical injector location.)
- 4.) Squeeze the spray gun trigger. The chemical injector will draw the chemical into the water stream.
- 5.) Apply chemicals evenly onto the cleaning surface. Allow the chemicals to react with the dirt, then clean at high pressure with high pressure (green or yellow) nozzle.
- 6.) Never use more chemical than is necessary to clean the surface.
- 7.) To clean the chemical injector, draw water through the strainer until all the chemical is purged from the system.

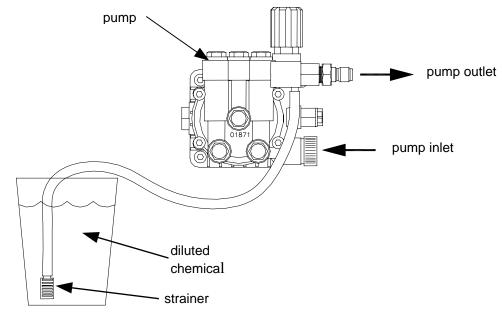

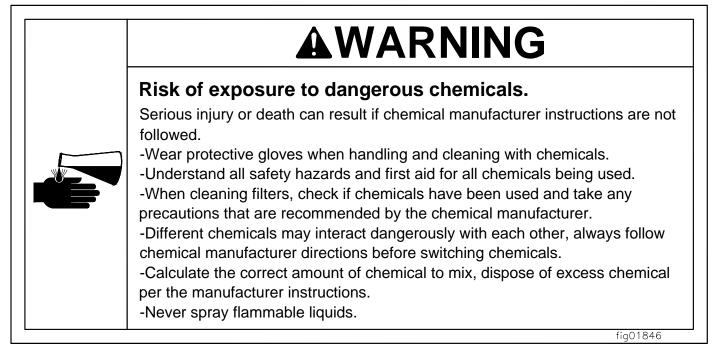

A Maintenance and Storage


Maintenance Mode

Before performing any maintenance on the pressure washer, it must be placed in maintenance mode.

- 1.) Turn off motor and unplug cord.
- 2.) Turn off water supply.
- 3.) Squeeze trigger to relieve system pressure.

Maintenance Schedule


What to Check	When To Check	What to Do		
Inlet Filter	Each Use	Visually inspect and clean inlet filter with clear water.		
Pressure Hose	Each Use	Visually inspect pressure hose and hose couplings. Replace hose if any of the following is evident: hose coupling is damaged, wire mesh is exposed or damaged, hose is permanently kinked or flattened, outer hose cover is blistered or loose.		
Bolts	Each Use	Tighten any loose bolts.		
Pump Oil	After 1 st 50hrs, then 3mo/500hr	Change pump oil. See pump oil change instructions on next page.		

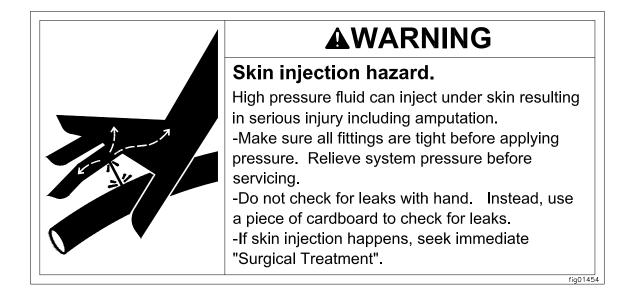

A Maintenance and Storage

Pump Oil Change

- 1.) Place a suitable container below the pump to catch the used oil, then remove the oil fill cap and oil drain plug.
- 2.) Allow the used oil to drain completely, then reinstall the drain plug and tighten securely.
- 3.) Please dispose of used oil in a manner that is compatible with the environment. We suggest you take used oil in a sealed container to your local recycling center or service station for reclamation. Do not throw it in the trash, pour it on the ground or down the drain.
- 4.) With the pump in a level position, fill to the halfway point on the oil sight glass (see pump oil capacities below). For Comet pumps use Universal Tractor Transmission Oil or Mobil 1 15W50 synthetic oil. For Cat pumps use SAE30 non-detergent oil or Cat Pump Oil Item# 22158.

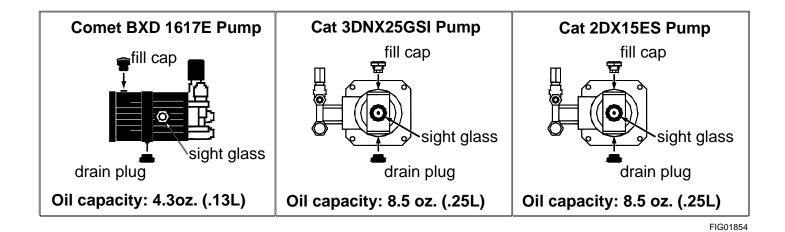

A Maintenance and Storage

Winter Storage

Protect your pump, hose and gun from freezing.


Items needed: 12" piece of garden hose or equivalent, funnel and RV antifreeze (approximately 6 oz.)

- 1.) Follow the storage instructions listed above.
- 2.) Make sure the motor start switch is OFF.

3.) Attach the garden hose with funnel to the pump inlet (see illustration).

4.) Pour RV antifreeze into the funnel, run motor until antifreeze comes out the pump outlet.

5.) Drain all water from the high pressure hose. Depress trigger on gun and drain all water out of gun/lance.

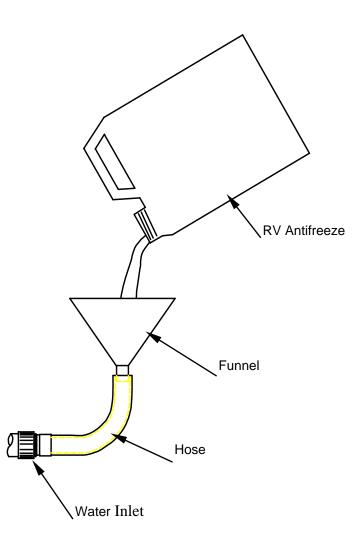

Troubleshooting

Problem		
Motor will not start	SOLUTION: A,B	
Low/Surging pressure or no water flow	SOLUTION: C,D,E,F,G,H	
No chemical injection	SOLUTION: I,J,K,L	
Cause	Solution	
A- Tripped GFCI cord	Reset GFCI cord	
B- Tripped motor relay	Reset motor	
C- Insufficient water supply	See water supply section of this manual	
D- Plugged pump inlet filter	See maintenance section of this manual	
E- Wrong nozzle	Make sure high pressure nozzle is being used	
F- Plugged nozzle	Remove nozzle, check for blockage	
G- Worn nozzle	Replace nozzle	
H- Leak in pressure hose	Replace pressure hose	
I- Wrong nozzle	Make sure chemical nozzle is being used	
J- Back pressure from extra long discharge hose	Try shorter hose	
K- Leak in chemical siphon hose	Replace hose – use hose clamps if necessary	
L- Chemical strainer not submerged	Make sure strainer is completely submerged	

The manufacturer reserves the right to make improvements in design and/or changes in specifications at any time without incurring any obligation to install them on units previously sold.

Any Questions, Comments, Problems or Parts Orders

Call NorthStar Product Support 1-800-270-0810


Specifications


PSI (bar)	1700 (117)		
GPM (I/min)	1.5 (5.7)		
Max Water Temp	140°F (60°C)		
Dimensions	34" x 21" x 38"		
LxWxH	(864mm x 534mm x 965mm)		
Weight	95 lb (44kg)		

PSI (bar)	2750 (190)		
GPM (I/min)	2.5 (9.4)		
Max Water Temp	140°F (60°C)		
Dimensions	34" x 21" x 38"		
LxWxH	(864mm x 534mm x 965mm)		
Weight	139 lb (55kg)		


PSI (bar)	2000 (138)	
GPM (I/min)	1.5 (5.7)	
Max Water Temp	140°F (60°C)	
Dimensions	34" x 21" x 38"	
LxWxH	(864mm x 534mm x 965mm)	
Weight	115 lb (44kg)	


Wiring Diagram

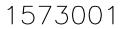

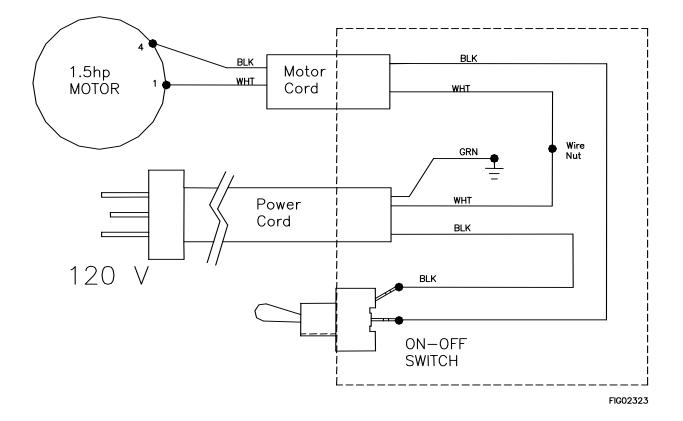


Wiring Diagram

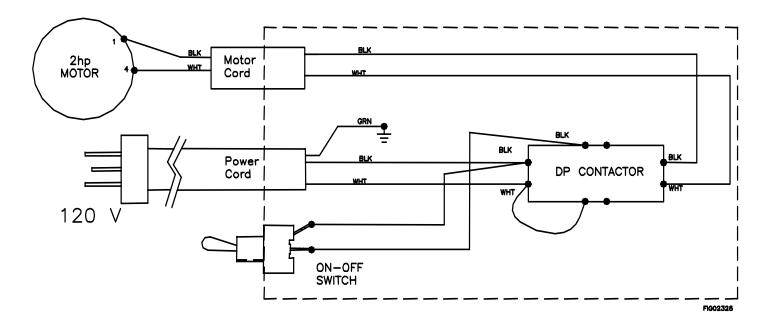

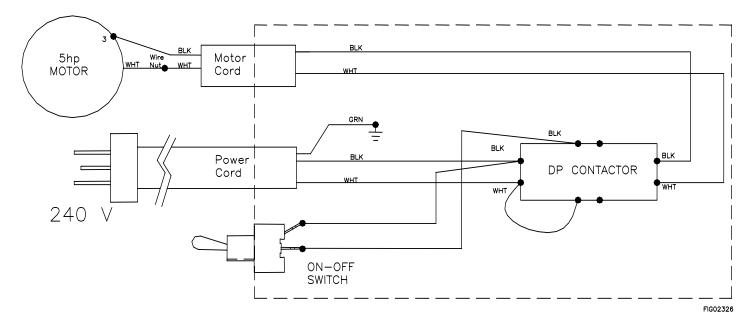


Part Explosion M1573001 Rev - A

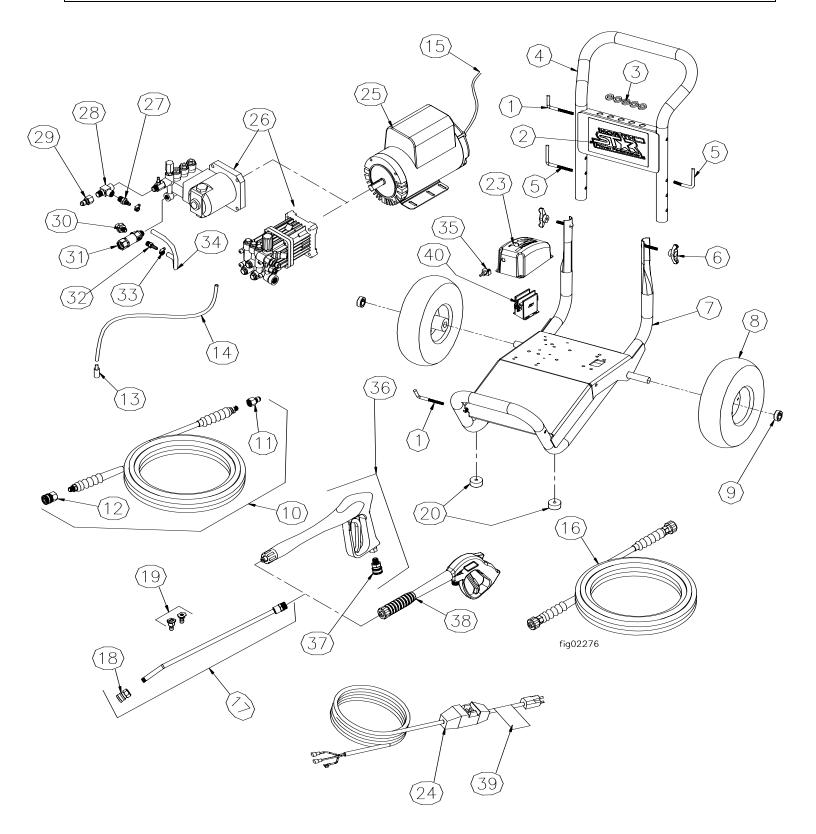

Part Explosion M1573001 Rev - A

ITEM #	PART #	DESCRIPTION	QTY	Models
1	38509	Threaded Gun Hook	2	All
2	778065	NorthStar Decal	1	All
3	35198	7/16 ID Grommet	5	All
4	778059	Handle	1	All
5	38510	Threaded Hose Hook	3	All
6	38578	T-Handle Knob	2	All
-	778125		1	1573001
7	778129	Base	1	1573011,1573021
8	2278	Tire Wheel Assembly	2	All
9	305200	Wheel Retainer	2	All
10	38524	5/16 x 25' Gray Hose	1	1573011,1573021
11	777915	3/8" Quick Connect Nipple	1	1573011,1573021
12	777914	3/8" Quick Connect Coupler	1	1573011,1573021
13	2212	Chemical Strainer	1	All
14	777165	1/4" Braided Chemical Hose	3 ft	All
	778146	Motor Cord, 14-2 AWG SJTW	1	1573001
15	778147	Motor Cord, 12-2 AWG SJTW	1	1573011,1573021
16	38523	1/4 x 25' Blk Hose	1	1573001
17	779166	18.5" Lance	1	All
18	777904	1/4" Quick Connect	1	All
	778150	Nozzle 2 pack #2.0	1	1573001,1573011
19	38530	Nozzle 2 pack #3.0	1	1573021
20	2215	Bumpers	2	All
	778128		1	1573001
23	778132	Electric Control Box Cover	1	1573011,1573021
	778140	GFCI Cord, 120V/15A	1	1573001
24	778141	GFCI Cord 120V/ 20A	1	1573011
	778142	GFCI Cord, 240V/30A	1	1573021
	777616	Motor, 1.5 HP Leeson	1	1573001
25	777617	Motor, 2.0 HP Leeson	1	1573011
	778670	Motor, 5.0 HP Leeson	1	1573021
	779402	Pump, Comet BXD 1617E	1	1573001
26	778154	Pump, Cat 2DX	1	1573011
	38518	Pump, Cat 3DNX	1	1573021
27	38584	3/8' NPT Easy Start Valve	1	1573021
28	777347	6MP-6FP-6FP Tee Forged	1	1573021
29	777915	QC 3/8" Female Nipple	1	1573011,1573021
30	35918	Thermal Protector	1	1573011,1573021
31	38596	Inlet Filter	1	1573011,1573021
32	777340	1/4 MPT x 1/4 Hose Barb	1	1573021
33	777834	Hose Clamp - 1/4"	2	1573021
34	777165	1/4" Braided Bypass Hose	1 ft	1573021
	777855	Toggle Switch	1	All
35	5260	On-Off Plate	1	All
36	38527	Gun, Consumer, QC	1	1573011,1573021
30	313107	3/8" Male NPT Coupler	1	1573011,1573021
38	38526	Gun, 2700 PSI, 22mm	1	1573001
39	778070	Cord Warning	1	All
- 39	778151	DP Contactor 120V/25A	1	1573011
40			-	
	778152	DP Contactor 230V/30A	1	1573021

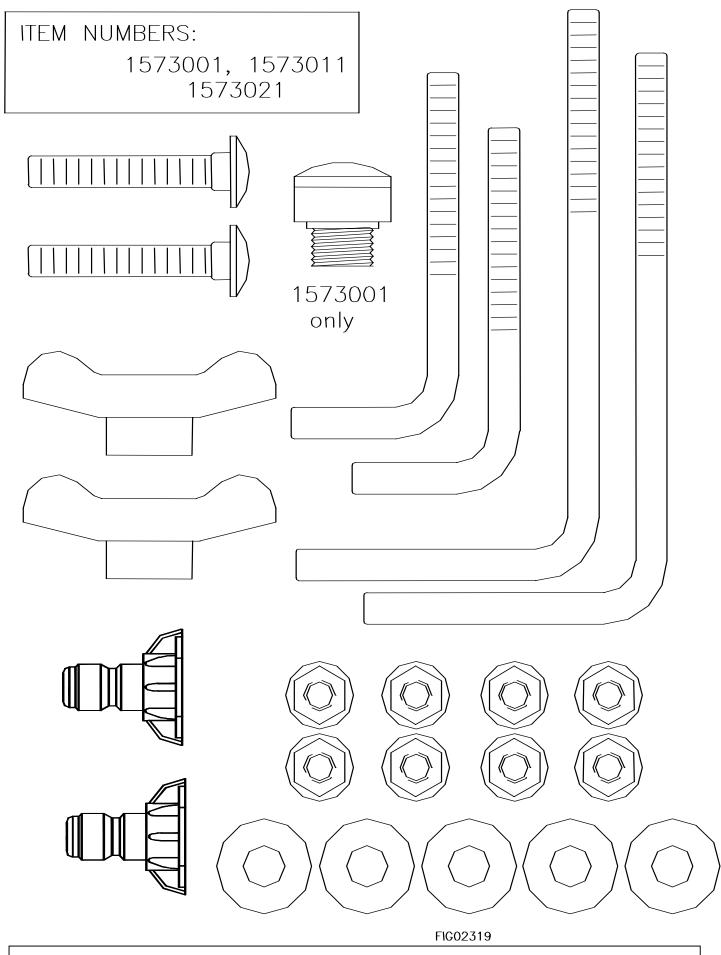

*This page is to help ensure that the factory includes all components in the manual bag.