



1 - Main Housing	JX4.6-001	15 - Spool Spring Washer (2 req.)	JX4.6-015	31 - Dog	JX4.6-031	46 - Drive Washer	JX4.6-046	59 - Knob Washer (optional)	JX4.6-059
2 - Gear cover	JX4.6-002	16 - Spool Spring	JX4.6-016	32 - Dog Cover Screw (2 req.)	JX4.6-032	47 - Preset Washer	JX4.6-047	60 - Spring Washer	JX4.6-060
3 - Cover Screw (2 req.)	JX4.6-003	17 - Brake Bearing	JX4.6-017	33 - Dog Cover	JX4.6-033	48 - Preset Sprin	JX4.6-048	61 - Lock Washer	JX4.6-061
4 - Spool Shaft	JX4.6-004	18 - Brake Disk	JX4.6-018	34 - Stop Pin (2 req.)	JX4.6-034	49A - Preset Knob Detent	JX4.6-049A	62 - Nut	JX4.6-062
4A-Shaft Shoulder	JX4.6-004A	20 - Antireverse Gear	JX4.6-020	35 - Pin Screw (2 req.)	JX4.6-035	49 - Preset Knob	JX4.6-049	63 - Knob Cap	JX4.6-063
4B-Shaft Pin	JX4.6-004B	21 - Disk Ring	JX4.6-021	36 - Handle Knob	JX4.6-036	50 - Crank Arm	JX4.6-050	64 - Knob Cap Screws (2 req.)	JX4.6-064
5 - Belleville Washers (4 req.)	JX4.6-005	22 - Pinion Gear	JX4.6-022	37 - Knob Screw	JX4.6-037	51 - Crank Arm Washer	JX4.6-051	65 - Clicker Pin	JX4.6-065
6 - Pusher Bushing	JX4.6-006	23 - Pinion Bearing	JX4.6-023	38 - End Housing Screw (3 req.)	JX4.6-038	52 - Acorn Nut	JX4.6-052	66 - Pin Support	JX4.6-066
7 - Spool Bearing	JX4.6-007	24 - Drive Shaft	JX4.6-024	39 - Drive Shaft Tube	JX4.6-039	53 - Locking Plate	JX4.6-053	67 - Pin Washer	JX4.6-067
8 - Spool Tube	JX4.6-008	25 - Connection Arm	JX4.6-025	40 - Drive Shaft Washer	JX4.6-040	54 - Locking Plate Screws (2 req.)	JX4.6-054	68 - Clicker Spring (2 req.)	JX4.6-068
9 - Clicker Gear Retainer Ring	JX4.6-009	26 - Friction Ring	JX4.6-026	41 - Male Cam	JX4.6-041	55A- Handle Shaft Washer	JX4.6-055 A	69 - Clicker Arm	JX4.6-069
10 - Clicker Gear	JX4.6-010	27 - Friction Washer	JX4.6-027	42 - Male Cam Pin (2 req.)	JX4.6-042	55 - Handle Knob Shaft	JX4.6-055	70 - Pin E Clip	JX4.6-070
11 - Spool	JX4.6-011	28 - Drive Gear	JX4.6-028	43 - Female Cam	JX4.6-043	56 - Handle Shaft Bearing	JX4.6-056	71 - Reel Foot	JX4.6-071
12 - Brake Pad	JX4.6-012	29 - Drive Shaft Bearing (2 req.)	JX4.6-029	44 - Lever Arm	JX4.6-044	57 - Handle Knob	JX4.6-057	72 - Reel Foot Screw	JX4.6-072
14 - Spool Bearing	JX4.6-014	30 - End Housing	JX4.6-030	45 - Teflon Washer (2 req.)	JX4.6-045	58 - Knob Bearing	JX4.6-058	73 - Clamp	JX4.6-073

74- Clamp Screws (2 req.) JX4.6-074