

CHICAGO  **ELECTRIC**[®]
POWER TOOLS

9" ANGLE GRINDER

Model 93179

SET UP AND OPERATING INSTRUCTIONS



Visit our website at: <http://www.harborfreight.com>



**Read this material before using this product.
Failure to do so can result in serious injury.
SAVE THIS MANUAL.**

Copyright© 2005 by Harbor Freight Tools®. All rights reserved. No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein.

For technical questions or replacement parts, please call 1-800-444-3353.

Save This Manual

You will need the manual for the safety warnings and precautions, assembly instructions, operating and maintenance procedures, parts list and diagram. Keep your invoice with this manual. Write the invoice number on the inside of the front cover. Keep the manual and invoice in a safe and dry place for future reference.

Safety Warnings and Precautions

WARNING: When using tool, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment.

Read all instructions before using this tool!

1. **Keep your work area clean and well lit.** Cluttered benches and dark areas invite accidents.
2. **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.** Power tools create sparks which may ignite the dust or fumes.
3. **Keep bystanders, children, and visitors away while operating a power tool.** Distractions can cause you to lose control. Protect others in the work area from debris such as chips and sparks. Provide barriers or shields as needed.
4. **Grounded tools must be plugged into an outlet properly installed and grounded in accordance with all codes and ordinances. Never remove the grounding prong or modify the plug in any way. Do not use any adapter plugs. Check with a qualified electrician if you are in doubt whether the outlet is properly grounded.** If the tool should electrically malfunction or break down, grounding provides a low resistance path to carry electricity away from the user.
5. **Double insulated tools are equipped with a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a polarized outlet. Do not change the plug in any way.** Double insulation eliminates the need for the three wire grounded power cord and grounded power supply system.
6. **Avoid body contact with grounded surfaces**

such as pipes, radiators, ranges, and refrigerators. There is an increased risk of electric shock if your body is grounded.

7. **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
8. **Do not abuse the Power Cord. Never use the Power Cord to carry the tool or pull the Plug from an outlet. Keep the Power Cord away from heat, oil, sharp edges, or moving parts. Replace damaged Power Cords immediately.** Damaged Power Cords increase the risk of electric shock.
9. **When operating a power tool outside, use an outdoor extension cord marked “W-A” or “W”.** These extension cords are rated for outdoor use, and reduce the risk of electric shock.

Personal Safety

10. **Stay alert. Watch what you are doing, and use common sense when operating a power tool. Do not use a power tool while tired or under the influence of drugs, alcohol, or medication.** A moment of inattention while operating power tools may result in serious personal injury.
11. **Dress properly. Do not wear loose clothing or jewelry. Contain long hair. Keep your hair, clothing, and gloves away from moving parts.** Loose clothes, jewelry, or long hair can be caught in moving parts.
12. **Avoid accidental starting. Be sure the Power Switch is off before plugging in.** Carrying power tools with your finger on the Power Switch, or plugging in power tools with the Power Switch on, invites accidents.
13. **Remove adjusting keys or wrenches before turning the power tool on.** A wrench or a key that is left attached to a rotating part of the power tool may result in personal injury.
14. **Do not overreach. Keep proper footing and balance at all times.** Proper footing and balance enables better control of the power tool in unexpected situations.
15. **Use safety equipment. Always wear eye protection.** Dust mask, nonskid safety shoes, hard hat, or hearing protection must be used for appropriate conditions.
16. **WARNING!** Some dust created by power sanding, sawing, grinding, drilling, and other construction

REV 10a

activities, contain chemicals known (to the State of California) to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are: lead from lead-based paints, crystalline silica from bricks and cement or other masonry products, arsenic and chromium from chemically treated lumber. Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles. *(California Health & Safety Code 25249.5, et seq.)*

Tool Use and Care

16. **Use clamps (not included) or other practical ways to secure and support the work piece to a stable platform.** Holding the work by hand or against your body is unstable and may lead to loss of control.
17. **Do not force the tool. Use the correct tool for your application.** The correct tool will do the job better and safer at the rate for which it is designed.
18. **Do not use the power tool if the Power Switch does not turn it on or off.** Any tool that cannot be controlled with the Power Switch is dangerous and must be replaced.
19. **Disconnect the Power Cord Plug from the power source before making any adjustments, changing accessories, or storing the tool.** Such preventive safety measures reduce the risk of starting the tool accidentally.
20. **Store idle tools out of reach of children and other untrained persons.** Tools are dangerous in the hands of untrained users.
21. **Maintain tools with care. Keep cutting tools maintained and clean.** Properly maintained tools are less likely to bind and are easier to control. Do not use a damaged tool. Tag damaged tools "Do not use" until repaired.
22. **Check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the tool's operation. If damaged, have the tool serviced before using.** Many accidents are caused by poorly maintained tools.

Service

23. **Tool service must be performed only by qualified repair personnel.** Service or maintenance performed by unqualified personnel could result in a risk of injury.
24. **When servicing a tool, use only identical replacement parts.** Use of unauthorized parts or failure to follow maintenance instructions may create a risk of electric shock or injury.

Specific Safety Rules

1. **Maintain labels and nameplates on the tool.** These carry important information. If unreadable or missing, contact Harbor Freight Tools for a replacement.
2. **Always wear ANSI-approved safety impact eye goggles and heavy work gloves when using the tool.** Using personal safety devices reduce the risk for injury. Safety impact eye goggles and heavy work gloves are available from Harbor Freight Tools.
3. **Always use proper guard with grinding wheel. A guard protects operator from broken wheel fragments.**
4. **Make sure to read and understand all instructions and safety precautions as outlined in the manufacturer's manual.**
5. **When starting a handheld power tool, always maintain a firm grip on the tool with both hands to resist starting torque.**
6. **Always keep the extension cord away from moving parts on the tool.**
7. **Hold tool by insulated gripping surfaces when performing an operation where the tool may contact hidden wiring or its own power cord. Contact with a "live" wire will make exposed metal parts of the tool "live" and shock the operator.**
8. **WARNING! All accessories for this tool must be rated for at least 6500 RPM. Grinding wheels and other accessories running over their rated speed can fly apart and cause injury.**
9. **Never lay the tool down until the motor has come to a complete stop.** The tool may create unforeseen risk while the motor cycles down.

10. **Never leave the tool unattended when it is plugged into an electrical outlet.** Turn off the tool, and unplug it from its electrical outlet before leaving.
11. **Use only 9" diameter grinding wheels having a 5/8" or (7/8" if using included arbor adaptor) center mounting hole. Never disable or modify the wheel guard.**
12. **WARNING! Never install a carbide tipped or steel circular saw blade for use in this tool. Never install a wood carving blade, carving disc with chain saw cutters, or a cutting carving disc on this tool.**
13. **For safest operation, it is recommended that only these accessories be used with this tool: Abrasive cutoff discs and wheels, flap wheels, wire brushes, wire wheel brushes.**
14. **WARNING!** People with pacemakers should consult their physician(s) before using this product. Operation of electrical equipment in close proximity to a heart pacemaker could cause interference or failure of the pacemaker.

GROUNDING


⚠️ WARNING TO PREVENT ELECTRIC SHOCK



AND DEATH FROM INCORRECT GROUNDING WIRE CONNECTION:

Check with a qualified electrician if you are in doubt as to whether the outlet is properly grounded. Do not modify the power cord plug provided with the tool. Never remove the grounding prong from the plug. Do not use the tool if the power cord or plug is damaged. If damaged, have it repaired by a service facility before use. If the plug will not fit the outlet, have a proper outlet installed by a qualified electrician.

Double Insulated Tools: Tools with Two Prong Plugs

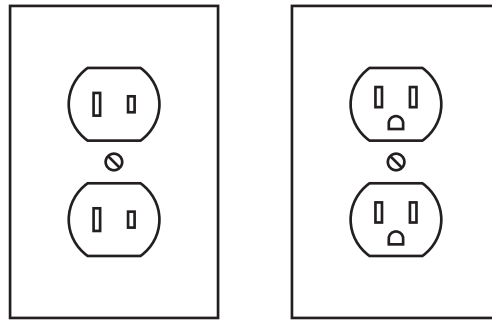

Outlets for 2-Prong Plug






1. Tools marked "Double Insulated" do not require grounding. They have a special double insulation system which satisfies OSHA requirements and complies with the applicable standards of Underwriters Laboratories, Inc., the Canadian Standard Association, and the National Electrical Code.
2. Double insulated tools may be used in either of the 120 volt outlets shown in the preceding illustration. **(See Outlets for 2-Prong Plug.)**

Extension Cords

1. **Grounded** tools require a three wire extension cord. **Double Insulated** tools can use either a two or three wire extension cord.
2. As the distance from the supply outlet increases, you must use a heavier gauge extension cord. Using extension cords with inadequately sized wire causes a serious drop in voltage, resulting in loss of power and possible tool damage. **(See Table A.)**
3. The smaller the gauge number of the wire, the greater the capacity of the cord. For example, a 14 gauge cord can carry a higher current than a 16 gauge cord. **(See Table A.)**

4. When using more than one extension cord to make up the total length, make sure each cord contains at least the minimum wire size required. **(See Table A.)**
5. If you are using one extension cord for more than one tool, add the nameplate amperes and use the sum to determine the required minimum cord size. **(See Table A.)**
6. If you are using an extension cord outdoors, make sure it is marked with the suffix "W-A" ("W" in Canada) to indicate it is acceptable for outdoor use.
7. Make sure the extension cord is properly wired and in good electrical condition. Always replace a damaged extension cord or have it repaired by a qualified electrician before using it.
8. Protect the extension cords from sharp objects, excessive heat, and damp or wet areas.

Symbology

	Double Insulated
	Canadian Standards Association
	Underwriters Laboratories, Inc.
	Volts Alternating Current
	Amperes
n ₀ xxxx/min.	No Load Revolutions per Minute (RPM)

RECOMMENDED MINIMUM WIRE GAUGE FOR EXTENSION CORDS* (120/240 VOLT)					
NAMEPLATE AMPERES (at full load)	EXTENSION CORD LENGTH				
	25'	50'	75'	100'	150'
0 – 2.0	18	18	18	18	16
2.1 – 3.4	18	18	18	16	14
3.5 – 5.0	18	18	16	14	12
5.1 – 7.0	18	16	14	12	12
7.1 – 12.0	18	14	12	10	-
12.1 – 16.0	14	12	10	-	-
16.1 – 20.0	12	10	-	-	-

TABLE A * Based on limiting the line voltage drop to five volts at 150% of the rated amperes.

Specifications

Input	120 V~, 60 Hz, 15 A
Motor Speed	6500 RPM
Power Cord	82"L x 14AWG 2 prong polarized
Construction	Molded ABS Motor Housing Cast Aluminum Gear Housing
Wheel Diameter	9" with 5/8" x 11TPI Arbor Spindle optional 7/8" Arbor Adaptor included
Overall Dimensions	18-1/2"L x 4-3/8"W x 5-1/2"H


Unpacking

When unpacking, check to make sure that the product is intact and undamaged.

If any parts are missing or broken, please call Harbor Freight Tools at the number on the cover of this manual.

Assembly

You must install the Wheel Guard (3) before using your Angle Grinder

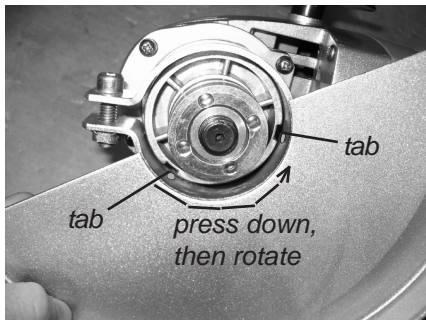

Positioning the Wheel Guard (3)

1. Align the tabs on the Wheel Guard (3) with the indents in the underside of the Gear Housing (19) and press the Guard into place as shown above.




*Tighten the Screw (5)
in the Guard Clamp (4)*

2. Rotate the Wheel Guard (3) into position as shown above.
3. Tighten the Screw (5) in the Guard Clamp (4) to hold the Wheel Guard (3) firmly in place.

You must install the Side Handle (24) before using your Angle Grinder.

1. You can install the Side Handle (24) in either the left or right side or the top of the Gear Housing (19).
2. Decide which position is best for you, providing the firmest grip while working. Pry out the Rubber Plug (23) which is covering the threaded hole you have selected. Place the Rubber Plug in a safe place where you can find it again if you need it.

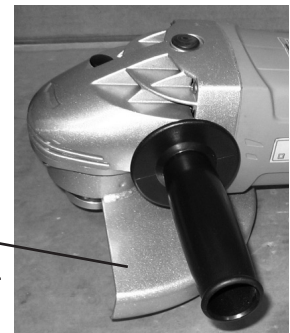


NOTE: The wheel guard is shown in the correct final position.

Installing the Side Handle (24)

3. Align the threaded end of the Side Handle (24) with the threaded hole in the Gear Housing (19) and screw it in clockwise until it is tight.

NOTE: Periodically check to be sure the handle remains tight. Never try to reposition the Side Handle while the tool is running.

You must install the Grinding Wheel (502) before using your tool.

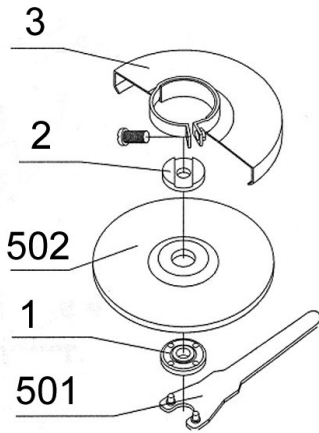

1. Place the Backing Washer (2) on the Arbor Spindle (7) as shown, making sure it fits tight.
2. Place the Grinding Wheel (502) on top of the Backing Washer (2), making sure the bore of the Grinding Wheel fits onto the step of the Arbor Spindle (7).
3. Place the Disc Locking Nut (1) onto the Arbor Spindle (7) with the concave recessed side against the Grinding Wheel (502).
4. Press in and hold the Spindle Lock (22). Be sure that the Spindle Lock has engaged in the Arbor Spindle (7) and is preventing it from turning.
5. While holding in the Spindle Lock (22) tighten the Disc Locking Nut (1) by turning it clockwise with the Spanner (501). Tighten securely.
6. Before using the tool, let it run for a minute, checking to be sure there is no excess vibration. If there is excess vibration, the Grinding Wheel (502) is either not installed properly, or is damaged. Unplug the tool, and reinstall or replace the Grinding Wheel.
7. Removing the Grinding Wheel is the reverse of these steps.

About Power Grinders and Grinding Wheels


While an extremely useful tool, power grinders can be dangerous if damaged or used improperly.

1. Grinding wheels are made of aggregates of a cutting material (grit) such as Aluminum Oxide,

an epoxy binder and usually a fabric matrix. During manufacture, the grit portion of the wheel is bonded to steel flanges which provide an area to slide onto the arbor and fix in place using the arbor nut.

2. Grinding wheels come in dimensional sizes, speed ranges and grit sizes.
3. This grinder is designed to accept 9" diameter grinding wheels, with an arbor hole diameter of 5/8". The included adapter will allow you to use arbor sizes of 7/8". Do not use wheels of any other size.
4. This grinder has a maximum speed of 6500 RPM. **WARNING: Do not use a grinding wheel which is not rated for at least this speed. Using lower speed rated wheels at higher speed may cause the grinding wheel to come apart and be ejected from the grinder at high speed, possibly causing severe personal or property damage.**
5. Grinding wheels are identified by the material which makes up the grit, the recommended work piece material, and a grit number which indicates the coarseness of the grit. Lower numbers are more coarse. Coarse grits cut faster, but leave a rough surface. Finer grits (higher grit numbers) cut more slowly, but leave a more finished surface. Select the grit which is appropriate to the job at hand.
6. During use, grinding wheels may become unevenly worn, cracked or chipped. Wheels which are damaged in this way will usually cause the grinder to vibrate. **WARNING: Damaged grinding wheels may break apart during use, possibly causing injury. Never use a damaged or unevenly worn grinding wheel.**

Rotating the Back Handle

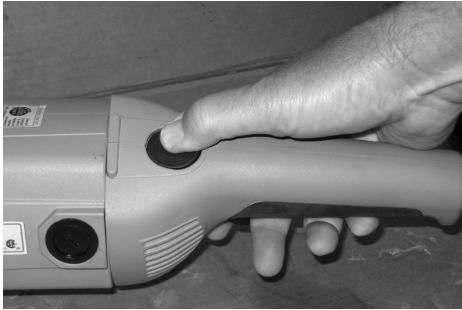


Rotating the Back Handle

You can rotate the Back Handle (41, 48) by pressing the Rotation Button (53).

1. First unplug the tool.
2. Hold the Main Body of the tool with one hand. With the other grip the Back Handle and press in the Rotation Button.
3. Rotate the Back Handle to the desired position. You can rotate the handle up to 90° in either direction. Release the Rotation Button.

WARNING: The Handle must be used at all times to maintain complete control of the tool. Place it on either side or the top where it will afford the best leverage and work visibility.

Operating the Power Switch

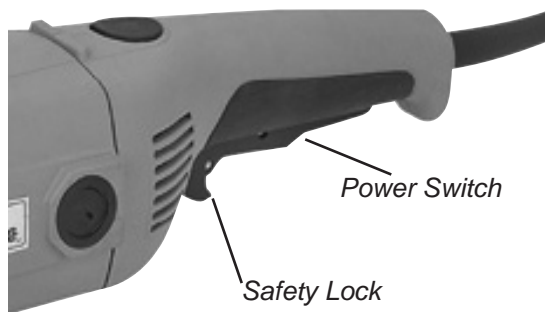

Operating the Power Switch


The Power Switch (42) has a safety lock mechanism.

1. Do not start the tool until you have observed all safety preparations and are ready to work.
2. Slide the Safety Lock of the Power Switch forward.
3. Squeeze the Power Switch. The tool will start to operate.
4. Stop the tool by releasing the Power Switch. The Safety Lock will return to its locked position.

Using the Angle Grinder

Before using the Angle Grinder, be sure all work area safety precautions are being observed. Be sure to wear ANSI approved eye protection.

WARNING: Always use 2 hands during use.

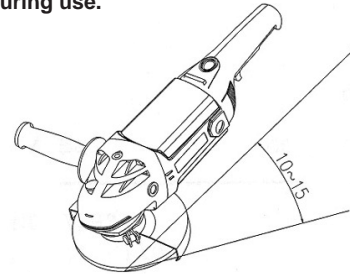

Using the Angle Grinder

1. Start the tool, and place it on the work piece at a 10 to 15° angle.
 2. Guide the tool back and forth over the work piece in a steady motion. Do not press down, but allow the weight of the tool to do the work.
 3. When cutting with the Angle Grinder, first be sure the grinding wheel has a thin cutting edge. Keep the grinding wheel straight in the cut to prevent the wheel from being damaged.
- CAUTION:** This tool is not designed for wet grinding. Do not use water or other lubricants while grinding or cutting with this tool.
- NOTE:** Do not cover the exhaust ports while the tool is in use. This will reduce the efficiency of the tool, and may cause damage.
4. Do not use a cutting wheel for rough grinding. Cutting wheels are thin and may break if used for grinding.

Maintenance and Inspection

1. The Armature (31) and Stator (36) comprise the main part of the tool. Protect these electrical components from moisture or oil intrusion.
2. Inspect the Carbon Brushes (50) regularly. Replace them if they are more than 1/3 worn or are chipped or cracked. When handling them, be careful not to damage them. To reduce wear after inspection, replace them in exactly the same way as they were removed.
3. Regularly inspect all components and fasteners to be sure they are properly installed, not damaged, and tight. Tighten any loose parts. Repair or replace any damaged components.
4. If the tool is damaged or does not function properly, take it to an authorized service technician.
5. Clean the tool after each use, and store it properly. Keep it out of reach of children and other unauthorized persons. Protect it from moisture and corrosive materials.



Inspecting the Carbon Brushes (50)

NOTE: The motor will heat up as it is used. To avoid motor burn out, do not use continually for more than 20 minutes at a time. Allow the tool to cool down for at least 10 minutes before resuming work.

Parts List


PART	DESCRIPTION	PART	DESCRIPTION
1	Disc Locking Nut	29	Bearing Cover
2	Backing Washer	30	Key 2.9x5x13
3	Wheel Guard	31	Armature
4	Guard Clamp	32	Ball Bearing 629.2Z
5	Screw M8x28	33	Bearing Bushing
6	Key 4x5x13	34	Guide Wind Circle
7	Arbor Spindle	35	Screw ST5x80
8	Screw M5x16	36	Stator
9	Spring Washer *5	37	Connection Spring
10	Gear Housing Cover	38	Name Plate
11	Ball Bearing 6202RS	39	Housing
12	Bearing Cover	40	Type Plate
13	Screw M4x10	41	Back Handle (right)
14	Spring Washer *4	42	Power Switch
15	Big Gear	43	Screw ST4x14
16	Circlip for Shaft *15	44	Cord Clip
17	Bronze Bushing	45	Cord
18	Screw ST5x45	46	Rubber Sleeve
19	Gear Housing	47	Screw ST4x18
20	"E" Ring	48	Back Handle (left)
21	Spindle Lock Spring	49	Brush Cap
22	Spindle Lock	50	Carbon Brush
23	Rubber Plug	51	Brush Holder
24	Side Handle	52	Rotation Spring
25	Nut M8x1	53	Rotation Button
26	Pinion	501	Spanner
27	Ball Bearing 6202RS	502	Grinding Wheel

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER NOR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

NOTE: Some parts are listed and shown for illustration purposes only and are not available individually as replacement parts.

Assembly Drawing

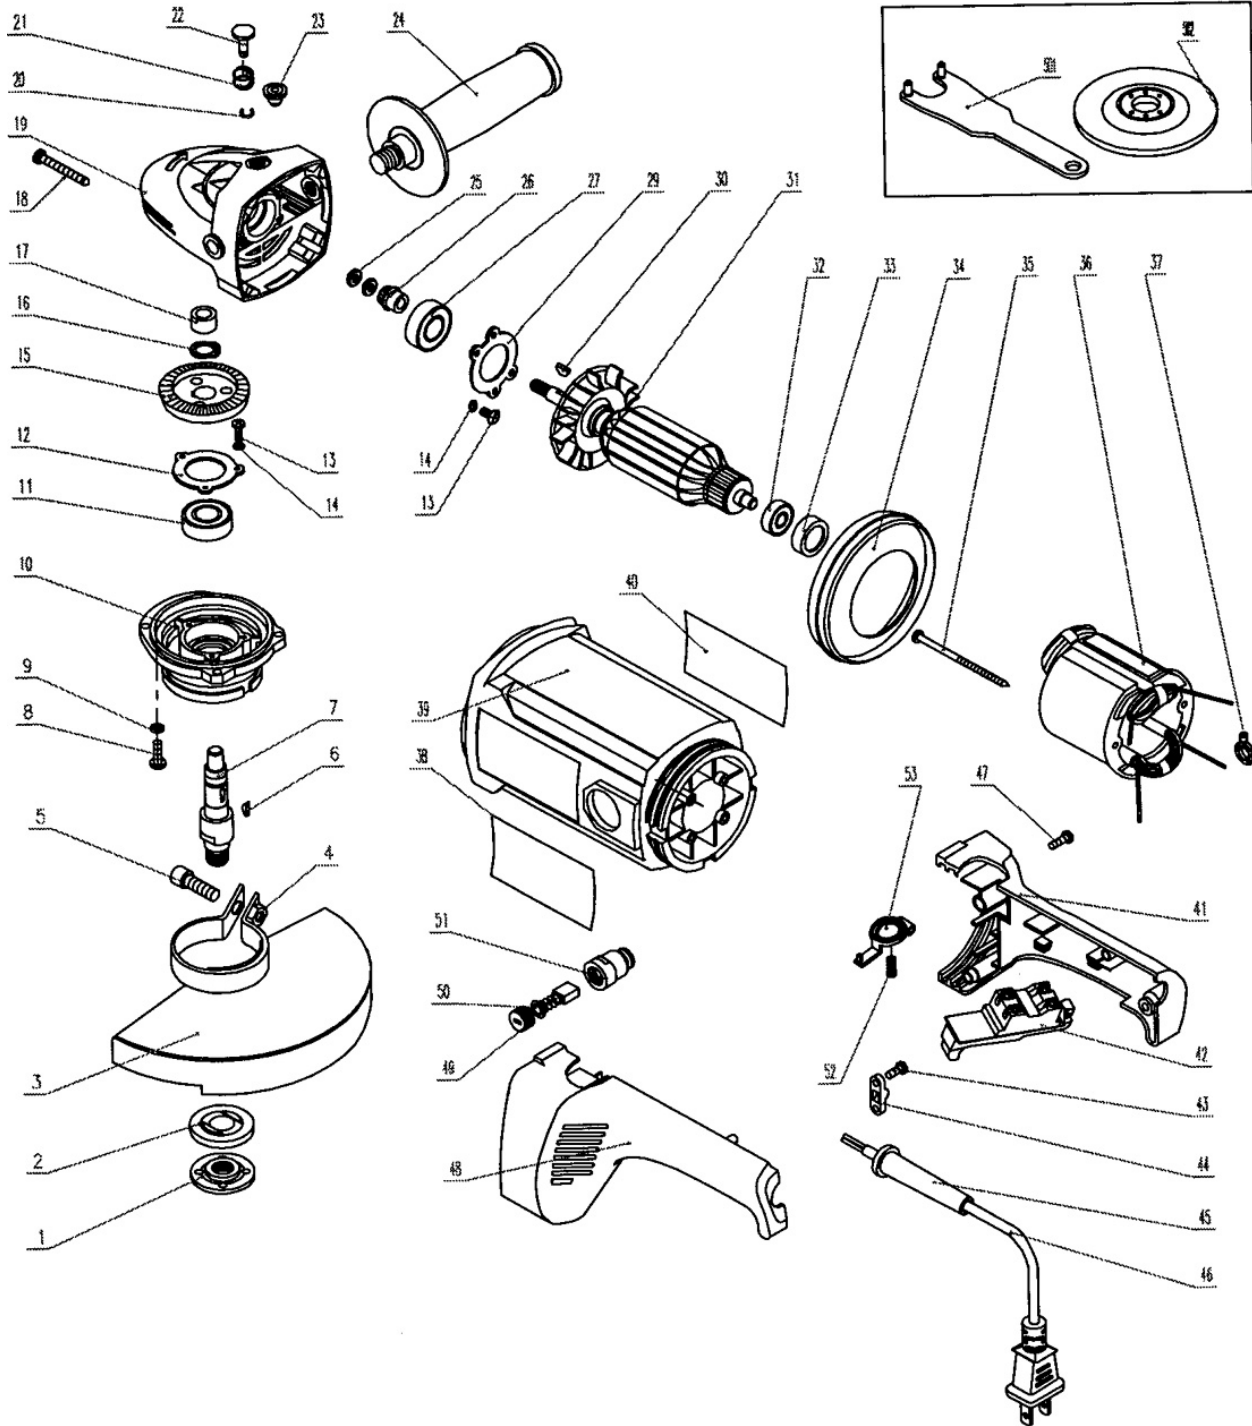

LIMITED 90 DAY WARRANTY

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

3491 Mission Oaks Blvd. • PO Box 6009 • Camarillo, CA 93011 • (800) 444-3353