

# ANGLE GRINDER MODEL G5968/9 INSTRUCTION MANUAL



COPYRIGHT © DECEMBER 2003 BY GRIZZLY INDUSTRIAL, INC.
WARNING: NO PORTION OF THIS MANUAL MAY BE REPRODUCED IN ANY SHAPE
OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC.
#5907 PRINTED IN CHINA

# **WARNING**

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints.
- Crystalline silica from bricks, cement, and other masonry products.
- Arsenic and chromium from chemically treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

# SAFETY

# **AWARNING**

## For Your Own Safety Read Instruction Manual **Before Operating This Equipment**

The purpose of safety symbols is to attract your attention to possible hazardous conditions. This manual uses a series of symbols and signal words which are intended to convey the level of importance of the safety messages. The progression of symbols is described below. Remember that safety messages by themselves do not eliminate danger and are not a substitute for proper accident prevention measures.



Indicates an imminently hazardous situation which, if not avoided, WILL result in death or serious injury.

AWARNING Indicates a potentially nazardous situation willon, in not avoided, <u>COULD</u> result in death or serious injury. Indicates a potentially hazardous situation which, if



Indicates a potentially hazardous situation which, if not avoided, MAY result in minor or moderate injury. It may also be used to alert against unsafe practices.

## NOTICE

This symbol is used to alert the user to useful information about proper operation of the equipment.

# AWARNING

# **Safety Instructions For Power Tools**

- KEEP ALL SAFETY DEVICES IN 1. PLACE and in working order.
- **REMOVE ADJUSTING KEYS AND** 2. WRENCHES. Form habit of checking to see that keys and adjusting wrenches are removed from tool before turning on.
- 3. KEEP WORK AREA CLEAN. Cluttered areas and benches invite accidents.
- DO NOT USE IN DANGEROUS 4. ENVIRONMENT. DO NOT use power tools in damp or wet locations, or where any flammable or noxious fumes may exist. Keep work area well lighted.

- KEEP CHILDREN AND VISITORS AWAY. All children and visitors should be kept at a safe distance from work area.
- MAKE WORK SHOP CHILD PROOF with padlocks, master switches, or by removing starter keys.
- 7 DO NOT FORCE TOOL. It will do the job better and safer at the rate for which it was designed.
- USE RIGHT TOOL. DO NOT force 8. tool or attachment to do a job for which it was not designed.

# **AWARNING**

## **Safety Instructions For Power Tools**

9. USE PROPER EXTENSION CORD for the tool. Make sure your extension cord is in good condition. Conductor size should be in accordance with the chart below. The amperage rating should be listed on the motor or tool nameplate. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. Your extension cord must also contain a ground wire and plug pin. Always repair or replace extension cords if they become damaged.

Minimum Gauge for Extension Cords

AMP	LENGTH		
RATING	25ft	50ft	100ft
0-6	16	16	16
7-10	16	16	14
11-12	16	16	14
13-16	14	12	12
17-20	12	12	10
21-30	10	10	No

- 10. WEAR PROPER APPAREL. DO NOT wear loose clothing, gloves, neckties, rings, bracelets, or other jewelry which may get caught in moving parts. Non-slip footwear is recommended. Wear protective hair covering to contain long hair.
- 11. ALWAYS USE SAFETY GLASSES. Also use face or dust mask if cutting operation is dusty. Everyday eyeglasses only have impact resistant lenses, they are NOT safety glasses
- 12. SECURE WORK. Use clamps or a vise to hold work when practical. It's safer than using your hand and frees both hands to operate tool.
- **13. DO NOT OVERREACH.** Keep proper footing and balance at all times.

- 14. MAINTAIN TOOLS WITH CARE. Keep tools sharp and clean for best and safest performance. Follow instructions for lubricating and changing accessories.
- 15. DISCONNECT TOOLS before servicing and changing accessories, such as blades, bits, cutters, and the like.
- 16. REDUCE THE RISK OF UNIN-TENTIONAL STARTING. Make sure switch is in off position before plugging in.
- 17. USE RECOMMENDED ACCES-SORIES. Consult the owner's manual for recommended accessories. The use of improper accessories may cause risk of injury.
- 18. CHECK DAMAGED PARTS.

  Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced.

# **A**CAUTION

No list of safety guidelines can be complete. Every shop environment is different. Always consider safety first, as it applies to your individual working conditions. Use this and other machinery with caution and respect. Failure to do so could result in serious personal injury, damage to equipment or poor work results.

# INTRODUCTION

#### Commentary

We are proud to offer the Grizzly Model G5968/9. The Model G5968/9 Angle Grinder is part of a growing Grizzly family of fine power tools. When used according to the guidelines set forth in this manual, you can expect years of trouble-free, enjoyable operation and proof of Grizzly's commitment to customer satisfaction.

The Model G5968/9 Angle Grinder is the perfect grinder for detailed grinding tasks in hard to reach places. Cleaning up welds, making bevels, and cutting thin material are just some of the ways the angle grinder can be used. When fitted with attachments, sanding, rust removal, and polishing metal and other materials are a few of the tasks that can be accomplished.

We are pleased to provide this manual with the Model G5968/9. It was written to encourage safety considerations and guide you through general operating procedures and maintenance. It represents our effort to produce the best documentation possible.

The specifications, details, and photographs in this manual represent the Model G5968/9 as supplied when the manual was prepared. However, owing to Grizzly's policy of continuous improvement, changes may be made at any time with no obligation on the part of Grizzly. If you have any comments regarding this manual, please write to us at the address below:

Grizzly Industrial, Inc.

c/o Technical Documentation
P.O. Box 2069

Bellingham, WA 98227-2069

Most importantly, we stand behind our tools. If you have any service questions or parts requests, please call or write us at the location listed below.

Grizzly Industrial, Inc. 1203 Lycoming Mall Circle Muncy, PA 17756 Phone: (570) 546-9663 Fax: (800) 438-5901

E-Mail: techsupport@grizzly.com Web Site: http://www.grizzly.com



To operate this, or any power tool, safely and efficiently, it is essential to become as familiar with its characteristics as possible. The time you invest before you begin to use your Model G5968/9 Angle Grinder will be time well spent. DO NOT operate this equipment until you are completely familiar with the contents of this manual. Make sure you read and understand all of the safety procedures. If you do not understand something, DO NOT operate the equipment.

# **AWARNING**

Damage to your eyes, lungs, and ears could result from failure to wear safety glasses, a respirator and hearing protection while using this equipment. Make sure proper filter is worn while wearing respirator.







# OPERATION INSTRUCTIONS

#### **Selecting Abrasive**

The best results from your Model G5968/9 Angle Grinder will be accomplished using the proper grit abrasive. As a rule, you will want to start with a more coarse grinding or sanding grit for removing large defects or rough spots, then work through finer grits until you achieve the smoothness and quality you desire.

With the disc you have determined to be sufficient for the job, and having a firm grip on the grinder, squeeze the trigger and grind the work evenly. Always keep the grinder moving to prevent gouge marks. If you stay in one place too long, then the grinder will produce a depression in the work that will compromise your finish.

Experiment in a small corner or area that is not very noticeable on your project. Ideally, you want to achieve the balance of removing defects without damaging your work.

# Installing Abrasive Disc or Attachments

Make sure the grinder is disconnected from the power source and remove the spanner nut. Place the grinding disc or attachment over the arbor and secure it with the spanner nut. Using the wrenches provided, hold the arbor with the wrench and tighten the spanner nut with the spanner wrench. To remove abrasive discs, or attachments, follow the steps just performed. Note—Model G5968 has a spindle lock button so a wrench is not necessary on the arbor. Just push the spindle lock button on the top of the grinder to lock the spindle and use the spanner wrench to tighten or loosen the spanner nut.

#### **Using the Grinder**

- Inspect grinding disc for flaws. Never use a chipped or broken disc.
- Use only grinding discs made for this grinder. Never use a disc that requires modifications to the grinder.
- Never operate grinder without the guard in place.
- Pay attention to the direction the sparks are going while grinding. Flamable material must be kept at a safe distance while grinding.
- Make sure workpiece is secure. Use a vice or clamps when working with smaller workpieces.
- Always use two hands to hold the grinder.
- Never apply excessive force while grinding. Your grinder will last longer if you let "it" do the work. Using slight pressure barely greater than the weight of the equipment is ideal because you can still maintain control.
- For added control and comfort, a lockon trigger switch is installed. The lockon trigger switch is easy to operate simply squeeze the trigger and push in the locking pin. To release the trigger, press the trigger in, then release to disengage the trigger lock.

# **MAINTENANCE**

#### General

Regular periodic maintenance on your Model G5968/9 Angle Grinder will ensure its optimum performance. Make a habit of inspecting your grinder each time you use it. Check for the following conditions and repair or replace when necessary:

- Loose fasteners.
- · Worn switch.
- · Worn or damaged cords and plugs.
- Any other condition that could hamper the safe operation of this equipment.

#### **Keeping Tool Clean**

The Model G5968/9 Angle Grinder will give you years of trouble free service if you keep it clean and free of built-up dust or grime. Ensure that no air passages get blocked. If they do, blow them out with compressed air.

Plastic parts can easily be cleaned with a damp cloth, but never use water to clean any electrical parts. Solvents should also be avoided on plastic because of the possibility of damage.

# **AWARNING**

Wear safety glasses when cleaning tool with compressed air.

#### **Brushes**

The brushes need to be checked periodically to ensure optimum performance. If the brushes need to be replaced, simply unscrew the plastic cap on both sides of the grinder back by the trigger. Pull out and inspect the brushes. Either re-install or replace the brushes at this time.

#### Repair and Service

All quality tools will eventually wear from normal use. Since the grinder is encased in a double insulated plastic cover, leave repair and service issues to a qualified service technician.


#### **Technical Data**

Model:	G5968	G5969
Rated Voltage:	110V	110V
Rated Frequency:	60 Hz	60 Hz
Rated Power Input:	450W	700W
No-Load Speed:	11,000 RPM	10,000 RPM

# **A**WARNING

Disassembly and improper reassembly of this device can result in electrical shock danger. Always have this device serviced by a qualified electrical repair technician. Serious injury will result.

## Model G5968 Parts Breakdown

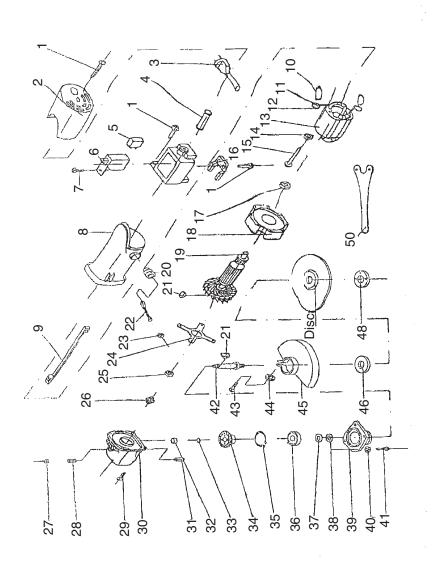

## **Model G5968 Parts List**


#### REF PART # DESCRIPTION

1	PHTEK1/M	TAP SCREW M4 X 6
Ľ.		
2	P5968002	BACK COVER
3	P5968003	CORD
4	P5968004	CORD GUARD
5	P5968005	CAPACITANCE
6	P5968006	SWITCH
7	PHTEK15M	TAP SCREW M4 X 10
8	P5968008	HOUSING
9	P5968009	SWITCH ROD LINK
10	P5968010	CHOKE
11	P5968011	PROTECT RING
12	P5968012	TOUCH SPRING
13	P5968013	STATOR
14	PLW02M	LOCK WASHER 4MM
15	P5968015	TAP SCREW M4 X 70
16	P5968016	CORD CLIP
17	P626	BEARING 626-RS
18	P5968018	FAN GUIDE
19	P5968019	ARMATURE
20	P5968020	BRUSH HOLDER
21	P5968021	WOODRUFF KEY #202
22	P5968022	CARBON BRUSH
23	P5968023	BRUSH CAP
24	P5968024	INNER COVER

#### REF PART # DESCRIPTION

25	P626	BEARING 626-RS
26	P5968026	GEAR
27	P5968027	SPINDLE LOCK
28	P5968028	SPRING
29	PHTEK16M	TAPSCREW M5 X 25
30	P5968030	GEAR HOUSING
31	P5968031	BRAKE PIN
32	P5968032	BEARING 8E8*12*10
33	PR05M	EXT RET RING 15MM
34	P5968034	GEAR
35	P5968035	RETAINING PLATE
36	P6201	BEARING 6201-2RS
37	P5968037	ASPHALT FELT
38	PW05M	FLAT WASHER 4MM
39	P5968039	PACKING GLAND
40	PLW02M	LOCK WASHER 4MM
41	PS02M	PHLP SCR M47 X 12
42	P5968042	SPINDLE
43	PS02M	PHLP SCR M47 X 12
44	PLW02M	LOCK WASHER 4MM
45	P5968045	WHEEL GUARD
46	P5968046	WHEEL FLANGE
48	P5968048	WHEEL NUT
50	P5968050	SPANNER WRENCH

## Model G5969 Parts Breakdown

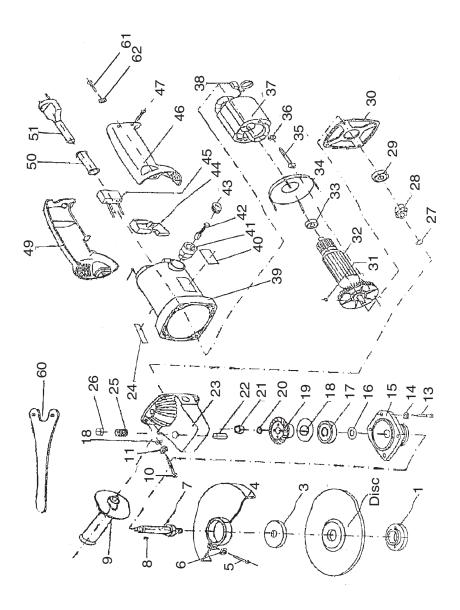

### **Model G5969 Parts List**

## REF PART # DESCRIPTION REF PART # DESCRIPTION

1         P5969001         WHEEL NUT           3         P5969003         WHEEL FLANGE           4         P5969004         WHEEL GUARD           5         PS06M         PHLP SCR M58 X 20           6         PLW01M         LOCK WASHER 5MM           7         P5969007         SPINDLE           8         P5969008         WOODRUFF KEY #202           9         P5969009         SIDE HANDLE           10         PS56M         PHLP SCR M47 X 16           11         PLW01M         LOCK WASHER 5MM           13         PS40M         PHLP SCR M58 X 16           14         PLW01M         LOCK WASHER 5MM           15         P5969015         PACKING GLAND           16         P5969016         ASPHALT FELT           17         P6202         BEARING 6202-RS           18         P5969018         RETAINING PLATE           19         P5969018         RETAINING PLATE           19         P5969019         GEAR           20         PR05M         EXT RET RING 15MM           21         P6000         BALL BEARING 6000           22         P5969022         BRAKE PIN           23         P59690			
4 P5969004 WHEEL GUARD 5 PS06M PHLP SCR M58 X 20 6 PLW01M LOCK WASHER 5MM 7 P5969007 SPINDLE 8 P5969008 WOODRUFF KEY #202 9 P5969009 SIDE HANDLE 10 PS56M PHLP SCR M47 X 16 11 PLW01M LOCK WASHER 5MM 13 PS40M PHLP SCR M58 X 16 14 PLW01M LOCK WASHER 5MM 15 P5969015 PACKING GLAND 16 P5969016 ASPHALT FELT 17 P6202 BEARING 6202-RS 18 P5969018 RETAINING PLATE 19 P5969019 GEAR 20 PR05M EXT RET RING 15MM 21 P6000 BALL BEARING 6000 22 P5969022 BRAKE PIN 23 P5969023 GEAR HOUSING 24 P5969024 GRIZZLY LOGO LABEL 25 P5969025 SPRING 26 P5969026 SPINDLE LOCK 27 PR39M EXT.RETAINING RING 8MM	1	P5969001	WHEEL NUT
5         PS06M         PHLP SCR M58 X 20           6         PLW01M         LOCK WASHER 5MM           7         P5969007         SPINDLE           8         P5969008         WOODRUFF KEY #202           9         P5969009         SIDE HANDLE           10         PS56M         PHLP SCR M47 X 16           11         PLW01M         LOCK WASHER 5MM           13         PS40M         PHLP SCR M58 X 16           14         PLW01M         LOCK WASHER 5MM           15         P5969015         PACKING GLAND           16         P5969016         ASPHALT FELT           17         P6202         BEARING 6202-RS           18         P5969018         RETAINING PLATE           19         P5969019         GEAR           20         PR05M         EXT RET RING 15MM           21         P6000         BALL BEARING 6000           22         P5969022         BRAKE PIN           23         P5969023         GEAR HOUSING           24         P5969024         GRIZZLY LOGO LABEL           25         P5969025         SPRING           26         P5969026         SPINDLE LOCK           27         PR	3	P5969003	WHEEL FLANGE
6 PLW01M LOCK WASHER 5MM 7 P5969007 SPINDLE 8 P5969008 WOODRUFF KEY #202 9 P5969009 SIDE HANDLE 10 PS56M PHLP SCR M47 X 16 11 PLW01M LOCK WASHER 5MM 13 PS40M PHLP SCR M58 X 16 14 PLW01M LOCK WASHER 5MM 15 P5969015 PACKING GLAND 16 P5969016 ASPHALT FELT 17 P6202 BEARING 6202-RS 18 P5969018 RETAINING PLATE 19 P5969019 GEAR 20 PR05M EXT RET RING 15MM 21 P6000 BALL BEARING 6000 22 P5969022 BRAKE PIN 23 P5969023 GEAR HOUSING 24 P5969024 GRIZZLY LOGO LABEL 25 P5969025 SPRING 26 P5969026 SPINDLE LOCK 27 PR39M EXT.RETAINING RING 8MM	4	P5969004	WHEEL GUARD
7         P5969007         SPINDLE           8         P5969008         WOODRUFF KEY #202           9         P5969009         SIDE HANDLE           10         PS56M         PHLP SCR M47 X 16           11         PLW01M         LOCK WASHER 5MM           13         PS40M         PHLP SCR M58 X 16           14         PLW01M         LOCK WASHER 5MM           15         P5969015         PACKING GLAND           16         P5969016         ASPHALT FELT           17         P6202         BEARING 6202-RS           18         P5969018         RETAINING PLATE           19         P5969019         GEAR           20         PR05M         EXT RET RING 15MM           21         P6000         BALL BEARING 6000           22         P5969022         BRAKE PIN           23         P5969023         GEAR HOUSING           24         P5969024         GRIZZLY LOGO LABEL           25         P5969025         SPRING           26         P5969026         SPINDLE LOCK           27         PR39M         EXT.RETAINING RING 8MM	5	PS06M	PHLP SCR M58 X 20
8         P5969008         WOODRUFF KEY #202           9         P5969009         SIDE HANDLE           10         PS56M         PHLP SCR M47 X 16           11         PLW01M         LOCK WASHER 5MM           13         PS40M         PHLP SCR M58 X 16           14         PLW01M         LOCK WASHER 5MM           15         P5969015         PACKING GLAND           16         P5969016         ASPHALT FELT           17         P6202         BEARING 6202-RS           18         P5969018         RETAINING PLATE           19         P5969019         GEAR           20         PR05M         EXT RET RING 15MM           21         P6000         BALL BEARING 6000           22         P5969022         BRAKE PIN           23         P5969023         GEAR HOUSING           24         P5969024         GRIZZLY LOGO LABEL           25         P5969025         SPRING           26         P5969026         SPINDLE LOCK           27         PR39M         EXT.RETAINING RING 8MM	6	PLW01M	LOCK WASHER 5MM
9 P5969009 SIDE HANDLE 10 PS56M PHLP SCR M47 X 16 11 PLW01M LOCK WASHER 5MM 13 PS40M PHLP SCR M58 X 16 14 PLW01M LOCK WASHER 5MM 15 P5969015 PACKING GLAND 16 P5969016 ASPHALT FELT 17 P6202 BEARING 6202-RS 18 P5969018 RETAINING PLATE 19 P5969019 GEAR 20 PR05M EXT RET RING 15MM 21 P6000 BALL BEARING 6000 22 P5969022 BRAKE PIN 23 P5969023 GEAR HOUSING 24 P5969024 GRIZZLY LOGO LABEL 25 P5969025 SPRING 26 P5969026 SPINDLE LOCK 27 PR39M EXT.RETAINING RING 8MM	7	P5969007	SPINDLE
10         PS56M         PHLP SCR M47 X 16           11         PLW01M         LOCK WASHER 5MM           13         PS40M         PHLP SCR M58 X 16           14         PLW01M         LOCK WASHER 5MM           15         P5969015         PACKING GLAND           16         P5969016         ASPHALT FELT           17         P6202         BEARING 6202-RS           18         P5969018         RETAINING PLATE           19         P5969019         GEAR           20         PR05M         EXT RET RING 15MM           21         P6000         BALL BEARING 6000           22         P5969022         BRAKE PIN           23         P5969023         GEAR HOUSING           24         P5969024         GRIZZLY LOGO LABEL           25         P5969025         SPRING           26         P5969026         SPINDLE LOCK           27         PR39M         EXT.RETAINING RING 8MM	8	P5969008	WOODRUFF KEY #202
11         PLW01M         LOCK WASHER 5MM           13         PS40M         PHLP SCR M58 X 16           14         PLW01M         LOCK WASHER 5MM           15         P5969015         PACKING GLAND           16         P5969016         ASPHALT FELT           17         P6202         BEARING 6202-RS           18         P5969018         RETAINING PLATE           19         P5969019         GEAR           20         PR05M         EXT RET RING 15MM           21         P6000         BALL BEARING 6000           22         P5969022         BRAKE PIN           23         P5969023         GEAR HOUSING           24         P5969024         GRIZZLY LOGO LABEL           25         P5969025         SPRING           26         P5969026         SPINDLE LOCK           27         PR39M         EXT.RETAINING RING 8MM	9	P5969009	SIDE HANDLE
13         PS40M         PHLP SCR M58 X 16           14         PLW01M         LOCK WASHER 5MM           15         P5969015         PACKING GLAND           16         P5969016         ASPHALT FELT           17         P6202         BEARING 6202-RS           18         P5969018         RETAINING PLATE           19         P5969019         GEAR           20         PR05M         EXT RET RING 15MM           21         P6000         BALL BEARING 6000           22         P5969022         BRAKE PIN           23         P5969023         GEAR HOUSING           24         P5969024         GRIZZLY LOGO LABEL           25         P5969025         SPRING           26         P5969026         SPINDLE LOCK           27         PR39M         EXT.RETAINING RING 8MM	10	PS56M	PHLP SCR M47 X 16
14       PLW01M       LOCK WASHER 5MM         15       P5969015       PACKING GLAND         16       P5969016       ASPHALT FELT         17       P6202       BEARING 6202-RS         18       P5969018       RETAINING PLATE         19       P5969019       GEAR         20       PR05M       EXT RET RING 15MM         21       P6000       BALL BEARING 6000         22       P5969022       BRAKE PIN         23       P5969023       GEAR HOUSING         24       P5969024       GRIZZLY LOGO LABEL         25       P5969025       SPRING         26       P5969026       SPINDLE LOCK         27       PR39M       EXT.RETAINING RING 8MM	11	PLW01M	LOCK WASHER 5MM
15         P5969015         PACKING GLAND           16         P5969016         ASPHALT FELT           17         P6202         BEARING 6202-RS           18         P5969018         RETAINING PLATE           19         P5969019         GEAR           20         PR05M         EXT RET RING 15MM           21         P6000         BALL BEARING 6000           22         P5969022         BRAKE PIN           23         P5969023         GEAR HOUSING           24         P5969024         GRIZZLY LOGO LABEL           25         P5969025         SPRING           26         P5969026         SPINDLE LOCK           27         PR39M         EXT.RETAINING RING 8MM	13	PS40M	PHLP SCR M58 X 16
16         P5969016         ASPHALT FELT           17         P6202         BEARING 6202-RS           18         P5969018         RETAINING PLATE           19         P5969019         GEAR           20         PR05M         EXT RET RING 15MM           21         P6000         BALL BEARING 6000           22         P5969022         BRAKE PIN           23         P5969023         GEAR HOUSING           24         P5969024         GRIZZLY LOGO LABEL           25         P5969025         SPRING           26         P5969026         SPINDLE LOCK           27         PR39M         EXT.RETAINING RING 8MM	14	PLW01M	LOCK WASHER 5MM
17 P6202 BEARING 6202-RS 18 P5969018 RETAINING PLATE 19 P5969019 GEAR 20 PR05M EXT RET RING 15MM 21 P6000 BALL BEARING 6000 22 P5969022 BRAKE PIN 23 P5969023 GEAR HOUSING 24 P5969024 GRIZZLY LOGO LABEL 25 P5969025 SPRING 26 P5969026 SPINDLE LOCK 27 PR39M EXT.RETAINING RING 8MM	15	P5969015	PACKING GLAND
18       P5969018       RETAINING PLATE         19       P5969019       GEAR         20       PR05M       EXT RET RING 15MM         21       P6000       BALL BEARING 6000         22       P5969022       BRAKE PIN         23       P5969023       GEAR HOUSING         24       P5969024       GRIZZLY LOGO LABEL         25       P5969025       SPRING         26       P5969026       SPINDLE LOCK         27       PR39M       EXT.RETAINING RING 8MM	16	P5969016	ASPHALT FELT
19 P5969019 GEAR 20 PR05M EXT RET RING 15MM 21 P6000 BALL BEARING 6000 22 P5969022 BRAKE PIN 23 P5969023 GEAR HOUSING 24 P5969024 GRIZZLY LOGO LABEL 25 P5969025 SPRING 26 P5969026 SPINDLE LOCK 27 PR39M EXT.RETAINING RING 8MM	17	P6202	BEARING 6202-RS
20 PR05M EXT RET RING 15MM 21 P6000 BALL BEARING 6000 22 P5969022 BRAKE PIN 23 P5969023 GEAR HOUSING 24 P5969024 GRIZZLY LOGO LABEL 25 P5969025 SPRING 26 P5969026 SPINDLE LOCK 27 PR39M EXT.RETAINING RING 8MM	18	P5969018	RETAINING PLATE
21       P6000       BALL BEARING 6000         22       P5969022       BRAKE PIN         23       P5969023       GEAR HOUSING         24       P5969024       GRIZZLY LOGO LABEL         25       P5969025       SPRING         26       P5969026       SPINDLE LOCK         27       PR39M       EXT. RETAINING RING 8MM	19	P5969019	GEAR
22 P5969022 BRAKE PIN 23 P5969023 GEAR HOUSING 24 P5969024 GRIZZLY LOGO LABEL 25 P5969025 SPRING 26 P5969026 SPINDLE LOCK 27 PR39M EXT.RETAINING RING 8MM	20	PR05M	EXT RET RING 15MM
23       P5969023       GEAR HOUSING         24       P5969024       GRIZZLY LOGO LABEL         25       P5969025       SPRING         26       P5969026       SPINDLE LOCK         27       PR39M       EXT. RETAINING RING 8MM	21	P6000	BALL BEARING 6000
24       P5969024       GRIZZLY LOGO LABEL         25       P5969025       SPRING         26       P5969026       SPINDLE LOCK         27       PR39M       EXT. RETAINING RING 8MM	22	P5969022	BRAKE PIN
25 P5969025 SPRING 26 P5969026 SPINDLE LOCK 27 PR39M EXT.RETAINING RING 8MM	23	P5969023	GEAR HOUSING
26         P5969026         SPINDLE LOCK           27         PR39M         EXT. RETAINING RING 8MM	24	P5969024	GRIZZLY LOGO LABEL
27 PR39M EXT. RETAINING RING 8MM	25	P5969025	SPRING
	26	P5969026	SPINDLE LOCK
28 P5969028 GEAR	27	PR39M	EXT. RETAINING RING 8MM
	28	P5969028	GEAR

29	P6204	BEARING 6204-RS
30	P5969030	INNER COVER
31	P5969031	WOODRUFF KEY #202
32	P5969032	ARMATURE
33	P608	BEARING 608-RS
34	P5969034	FAN GUIDE
35	P5969035	TAP SCREW M5 X 65
36	PLW01M	LOCK WASHER 5MM
37	P5969037	STATOR
38	P5969038	CHOKE
39	P5969039	HOUSING
40	P5969040	G5969 ID LABEL
41	P5969041	BRUSH HOLDER
42	P5969042	CARBON BRUSH
43	P5969043	BRUSH CAP
44	P5969044	SWITCH
45	P5969045	CAPACITANCE
46	P5969046	LEFT HANDLE
47	PHTEK17M	TAP SCREW M5 X 20
49	P5969049	RIGHT HANDLE
50	P5969050	CORD GUARD
51	P5969051	CORD
60	P5969060	SPANNER WRENCH
61	PHTEK16M	TAP SCREW M5 X 25
62	PW02M	FLAT WASHER 5MM

## WARRANTY AND RETURNS

Grizzly Industrial, Inc. warrants every product it sells for a period of 1 year to the original purchaser from the date of purchase. This warranty does not apply to defects due directly or indirectly to misuse, abuse, negligence, accidents, repairs or alterations or lack of maintenance. This is Grizzly's sole written warranty and any and all warranties that may be implied by law, including any merchantability or fitness, for any particular purpose, are hereby limited to the duration of this written warranty. We do not warrant or represent that the merchandise complies with the provisions of any law or acts unless the manufacturer so warrants. In no event shall Grizzly's liability under this warranty exceed the purchase price paid for the product and any legal actions brought against Grizzly shall be tried in the State of Washington, County of Whatcom.

We shall in no event be liable for death, injuries to persons or property or for incidental, contingent, special, or consequential damages arising from the use of our products.

To take advantage of this warranty, contact us by mail or phone and give us all the details. We will then issue you a "Return Number," which must be clearly posted on the outside as well as the inside of the carton. We will not accept any item back without this number. Proof of purchase must accompany the merchandise.

The manufacturers reserve the right to change specifications at any time because they constantly strive to achieve better quality equipment. We make every effort to ensure that our products meet high quality and durability standards and we hope you never need to use this warranty.

Please feel free to write or call us if you have any questions about the machine or the manual.

> Grizzly Industrial, Inc. 1203 Lycoming Mall Circle Muncy, PA 17756 Phone: (570) 546-9663

Fax: (800) 438-5901

E-Mail: techsupport@grizzly industrial.com

Web Site: http://www.grizzly.com

Thank you again for your business and continued support. We hope to serve you again soon.

# WARRANTY CARD

N	ame			
		State		
	-	 E-Mail	•	
Th				arketing purposes to help us devel-
		rvices. Of course, all informa		
1.	How did you learn about Advertisement Catalog World Wide Web Other	ut us?FriendCard Deck	Grizzly?	/hand held power tools do you own?
2.	What is your annual hc \$20,000-\$29,999 \$30,000-\$39,999 \$40,000-\$49,999 \$50,000-\$59,999	susehold income? \$60,000-\$69,999 \$70,000-\$79,999 \$80,000-\$89,999 \$90,000 +	Beit Sahder Biscuit Join Circular Sav Detail Sand Drill/Driver Miter Saw Other	erPalm Sander  wPortable Planer  erSaber Saw Reciprocating Saw Router
3.	What is your age group20-2930-3940-49	0? 50-59 60-69 70 +	Industrial to car 12" Table S 12" Jointer	awRadial Arm SawPanel Saw
4.	How long have you bee 0 - 2 Years 2 - 8 Years		Brass Hard	shing Supplies
5.	How would you rank yo Simple	Advanced	Other	
6.	Intermediate  What stationary woodw Check all that applyAir CompressorBand Saw	Master Craftsman vorking tools do you own?Panel SawPlaner	Industrial to car	rdwareHand Tools
	Drill PressDrum Sander _Dust Collector _Spindle Sander _Table Saw _Mortiser _Horiz.Boring MachiVacuum Veneer Pr _Other	ess	and supplies fro	ur purchase represents good value?
7.	How many of your wo Grizzly?	odworking machines are	15. Would you reco	ommend Grizzly to a friend?
8.	Which benchtop tools that apply1"x42" Belt Sander5" - 8" Drill Press8" Table SawScroll SawSpindle/Belt Sande	do you own? Check all 6" - 8" Grinder Mini Lathe 8" - 10" Bandsaw Disc/Belt Sander rMini Jointer	ence for Grizzly	w us to use your name as a refer- customers in your area? Note: We es more than three timesNo
	10"-12"Thickness F	laner		

## Send a Grizzly Catalog to a friend:

Name		
Street		
City	State	Zip

FO	LD ALONG DOTTED LINE	
_		



GRIZZLY INDUSTRIAL, INC. P.O. BOX 2069 BELLINGHAM, WA 98227-2069