I-DRIVE DISCONNECT HANDLE

Supplemental insert

well

This supplemental installation instruction is to be used as a supplement to the main Installation Instruction and Owner's Manual provided with the door. The instructions included in this document are ONLY those which deviate from the standard installation. All WARNINGS and CAUTIONS listed in the main manual are applicable to this supplemental instruction as

www.wayne-dalton.com



Wayne Dalton

© 2009 Wayne-Dalton Corp.

P.O. Box 67 Mt. Hope, OH 44660

Part No. 342295 NEW 5/29/2009

Attaching Disconnect Cable

Tools Needed: #2 Phillips Screwdriver	With the Handle in the up position as shown, rotate the Cable Stop/Pivot so the set screw is facing you. Route the Disconnect Cable behind the Handle and through the hole in the Cable Stop/Pivot (with the Set Screw facing you).	Disco har
Wire Cutters	Position Handle in the full upper position and remove all cable slack between the Opener and the Handle Bracket. Pull the Disconnect Cable only enough to remove the Cable slack. Too much tension could disconnect opener and cause failure to reconnect.	F
	Tighten the set screw using Phillips screwdriver to securely clamp the disconnect cable. Trim off excess cable, as close as you can, beyond bottom of the Cable Stop/Pivot. Apply Emergency Disconnect Label next to the Disconnect Handle Bracket. Use mechanical fasteners if adhesive will not adhere.	Cable sto



(4		
		Disconnect Handle Usage	
	<u>Tools Needed:</u> None	Using the Emergency Disconnect, pull Disconnect Handle downwards and place it in the manual door operated position (disconnects door opener from door). Return handle to the up position to re-connect opener to the door.	
			Motor operated position

