

Congratulations on your purchase of a high-quality Insignia product. Your CD+G portable karaoke system is designed for reliable and trouble-free performance. Use this guide for initial setup. See your *User Guide* for more information.

 
Package contents

- CD+G portable karaoke system
- Microphone
- Power cord
- A/V cable (RCA type)
- User Guide
- Quick Setup Guide


Batteries not included

Features


Front

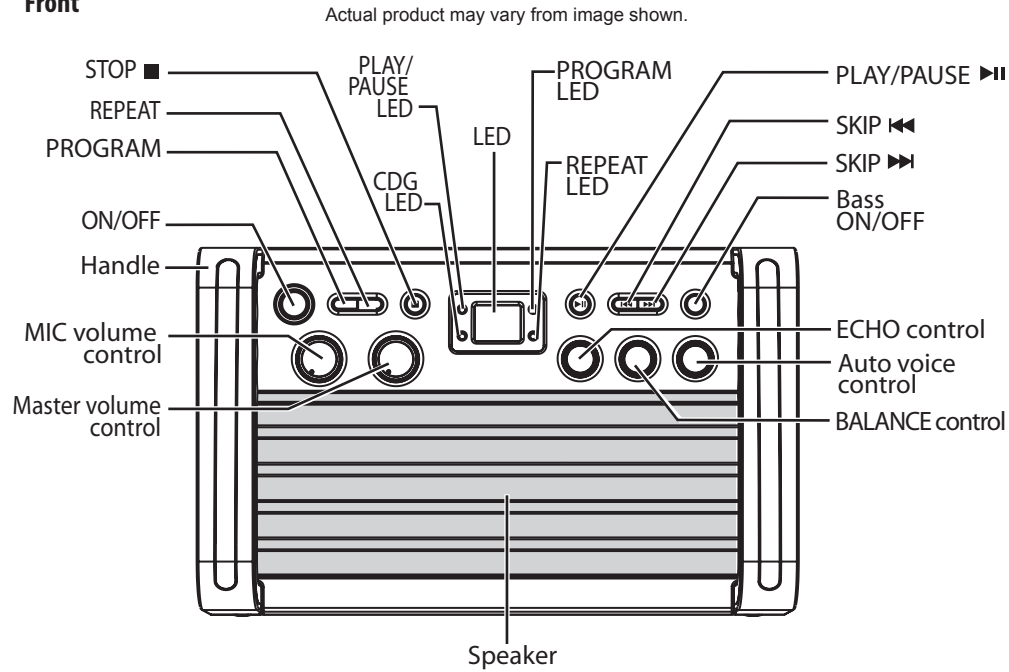

Back

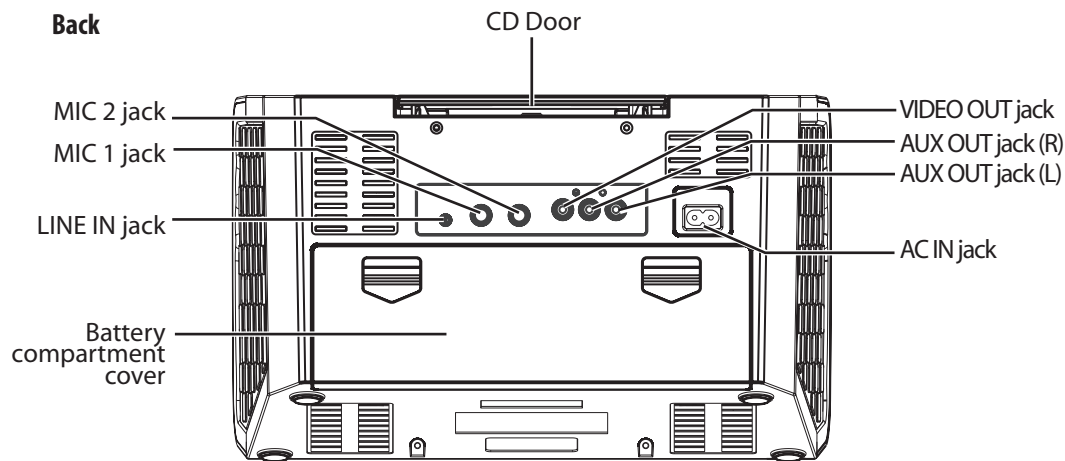 


Installing batteries

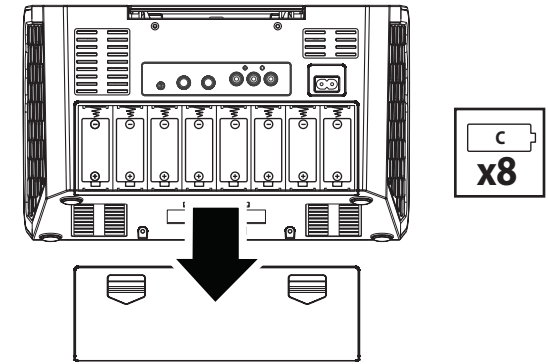 

- 1 Press down on the arrows on the battery compartment cover, then slide the cover to remove it.
- 2 Insert eight C-size batteries into the battery compartment. Make sure that the + and - symbols on the batteries match the + and - symbols in the battery compartment.
- 3 Replace the battery compartment cover.


Connecting the power cord

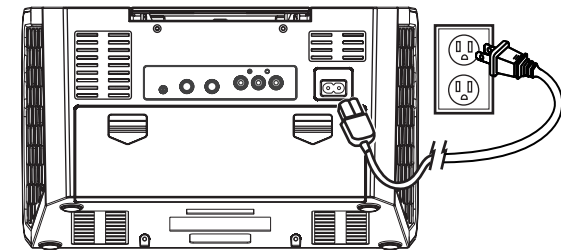

Plug the power cord into the AC IN jack on the back of your karaoke system and into a power outlet.

Connecting to a TV or home theater system

- 1 Connect the yellow connector on the included A/V cable to the **VIDEO OUT** jack on the back of your karaoke system, then connect the other yellow connector on the cable to the video input jack on the TV or home theater system.
- 2 Connect the left (white) and right (red) audio connectors on the included A/V cable to the **AUX OUT** left and **AUX OUT** right jacks on the back of your karaoke system and the audio input jacks on the TV or home theater system.
- 3 On the TV or home theater system, select your karaoke system as the video input source. For instructions, see the documentation that came with your TV or home theater system.

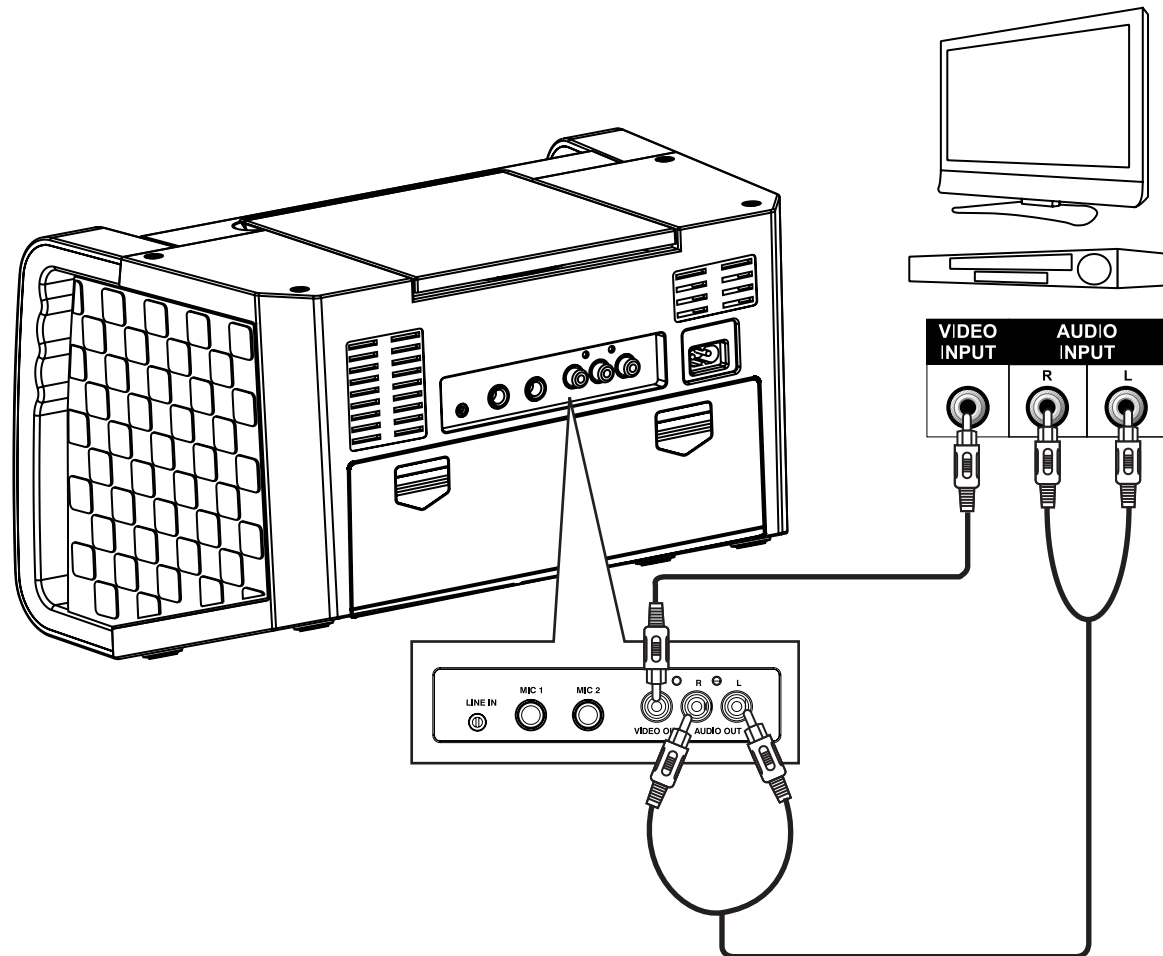

Turning your karaoke system on or off

- 1 Press the ON/OFF button. The ON/OFF LED lights.
- 2 Press this button again to turn off your karaoke system.

Loading a disc

- 1 Lift CD door to open, then place a CD or CD+G in the disc tray with the label facing up.
- 2 Gently press in on the disc tray to close it.

Playing a CD

- 1 Press ►►. The CD starts playing.
- 2 Press ►► again to pause or resume playback.
- 3 Press ■ to stop playback.
- 4 In stop mode, press ◀◀ or ▶▶ to select the track you want to play, then press ►► to start playback.
While a CD is playing, press and hold ◀◀ or ▶▶ to search backward or forward on a CD (for audio CDs only)
While a CD or CD+G is playing, press REPEAT once to repeat the currently playing track. Press REPEAT twice to repeat all the tracks. Press REPEAT a third time to resume normal playback.

Adjusting the volume

Turn the microphone volume control to adjust the microphone volume or turn the master volume control to adjust the overall volume.