

KAMBROOK

Citrus X-press



KAMBROOK SAFETY

Welcome to Kambrook and your new Citrus X-press. At Kambrook we believe that the safe performance of our products is the first priority in any consumer product so that you, our valued customer, can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

READ ALL INSTRUCTIONS THOROUGHLY BEFORE ACTIVATING THE APPLIANCE AND RETAIN THEM FOR FUTURE REFERENCE.

Ensure that the power source to be used is the same as the voltage requirements of the product.

Always switch off at the power outlet and then unplug when not in use, before adding or removing parts, before cleaning and when storing.

Do not immerse the motor base, cord or plug in water or any other liquid.

Always use the Citrus X-press on a dry, level surface.

Always ensure the juice jug is locked in position and the unit is properly and correctly assembled before unit is operated.

Always turn the power off at the power outlet and then remove the plug before disassembling the unit. Wait for the motor to come to a complete standstill before removing the juice jug.

This appliance is not intended for use by young children or infirm persons without supervision.

Do not leave the appliance unattended when in use.

Young children should be supervised to ensure that they do not play with the appliance.

Do not let the power cord hang over the edge of a table or counter, touch hot surfaces or become knotted.

Do not place this appliance on or near a hot gas or electric burner, or where it could touch a heated oven.

This appliance is suitable for domestic use only.


Do not use this appliance for anything other than its intended use.

Do not use outdoors.

Regularly inspect the power cord, plug and actual appliance for any damage. If found damaged in any way, immediately cease use of the appliance and return the entire appliance to the nearest authorised Kambrook Service Centre for examination, replacement or repair.

Please call 1800 800 634 for Service Centre details.

FEATURES OF YOUR KAMBROOK CITRUS X-PRESS

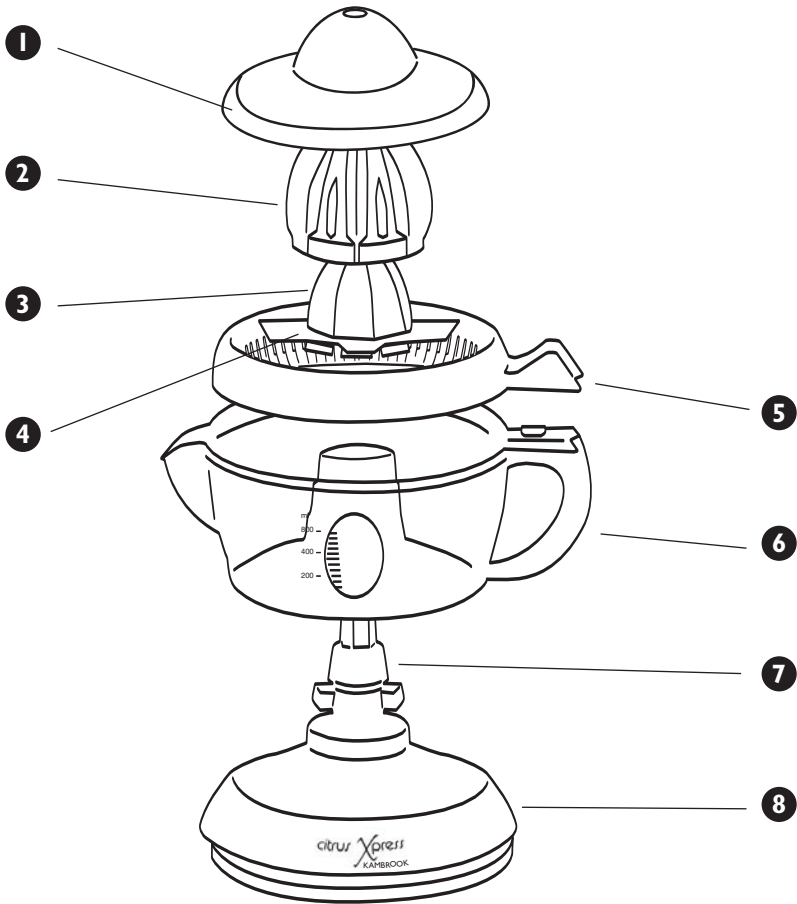

1. Lid for use when storing.
2. Large Cone for extracting maximum juice from large citrus fruits, such as grapefruit and oranges.
3. Small Cone perfect for smaller citrus fruits, such as lemons and limes
4. Scraper Blades at the base of the smaller cone, prevents accumulation of pulp in the strainer dish and helps to extract juice from the pulp.
5. Strainer Dish allows the juice to flow through to the jug, whilst straining the pulp and seeds.
6. Removable Juice Jug with a large 600ml capacity.
7. Reversible Drive Shaft drives the cone in an opposite direction when pressure is applied and reapplied.
8. Motor Base with convenient cord storage.

USING YOUR KAMBROOK CITRUS X-PRESS

Wash all removable parts in hot, soapy water. Rinse and dry thoroughly. It is recommended NOT to wash any parts of the Kambrook Citrus X-press in the dishwasher as the harsh detergents and high water temperature will discolour and distort these parts.



WARNING:

DO NOT IMMERSE THE MOTOR BASE IN WATER OR ANY OTHER LIQUID.

ASSEMBLING

Place the Citrus X-press motor base on a level, flat surface. Place the juice jug over the drive shaft on the motor base and turn clockwise until it locks into position.



Then sit the strainer dish on top of the juice jug, ensuring the protruding piece on the strainer dish is placed correctly on top of the jug handle.

Then fit the small cone onto the drive shaft and push down lightly, a clicking sound will be heard. For larger citrus fruits (grapefruits

and oranges), after the small cone is in place, gently push the larger cone on top. Note: indent piece on the large cone must be placed over the scarper blades.

Important: The smaller cone must be in place first before larger cone can be fitted.



JUICING

Wash your selected citrus fruits and cut in half.

Plug the power cord into a 230/240V power outlet and then turn the power on.

Then press one half of the fruit firmly down onto the cone. The motor will automatically start and the juicing cone will begin to rotate. Lifting fruit off the cone then reapplying pressure may cause the cone to automatically change direction. This is normal and ensures that the fruit is thoroughly juiced.

To stop, lift the fruit from the cone. Juicing will automatically stop.

ALWAYS turn the power off at the power outlet and then unplug power cord, before unlocking juice jug, strainer dish and cones or cleaning.

TIPS:

Move the fruit from side to side against the cone whilst juicing to extract maximum juice.

More juice is also obtained from the fruit juiced if the fruit is at room temperature.

MAINTAINING YOUR KAMBROOK CITRUS X-PRESS

Switch off at the power outlet and then unplug power cord.

Disassemble the unit and wash all removable parts in warm, soapy water. Do not place these parts in the dishwasher as the harsh detergents and high water temperature will discolour and distort these parts. It is best to rinse or wash all removable parts immediately, as dried citrus pulp is difficult to remove and may stain. Dry all parts thoroughly after washing and rinsing them.

Wipe the motor base with a damp cloth. Do not use abrasives, harsh cleaning solutions or hard brushes for cleaning as these may scratch and damage the unit.



WARNING:

**DO NOT IMMERSE THE MOTOR
BASE IN WATER OR ANY OTHER
LIQUID.**

NOTES



KAMBROOK 12 MONTH

REPLACEMENT WARRANTY

KAMBROOK warrants the purchaser against defects in workmanship and material, for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the terms of the KAMBROOK guarantee.

KAMBROOK reserves the right to replace or repair the appliance within the warranty period.

Warranty does not apply to any defect, deterioration, loss or injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable items such as kneading blades.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced.

In the event of KAMBROOK choosing to replace the appliance, the guarantee will expire at the original date, ie. 12 months from the original purchase date.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practises Act 1974 and State Territory legislation.

For service, spare parts or product information in Australia, please call KAMBROOK on the customer Service Line (free call) 1800 800 634.

For service, spare parts or product information in New Zealand, please call KAMBROOK New Zealand, Mono Place, Ellerslie, Auckland.
Phone 0800 253 007, FAX 0800 263 001.

If claiming under this guarantee the product must be returned to freight prepaid.

YOUR PURCHASE RECORD (Please complete)

Attach purchase receipt here.

DATE OF PURCHASE _____

MODEL NUMBER _____

SERIAL NUMBER (If applicable) _____

PURCHASED FROM _____

Please don't return purchase record unless you are making a claim

KAMBROOK

Kambrook 4 Kingston Town Close Oakleigh, Victoria 3166, Australia
Customer Service Line (free call) 1800 800 634 Customer Service Fax 1800 621 337
Kambrook (New Zealand) Mono Place Ellerslie, Auckland, New Zealand
Customer Service Line/Spare Parts 0800 253 007 Customer Service Fax 0800 263 001

